

Stress Relief set-up instruction.

Pre-setup check list

Before beginning the setup process, ensure the last pipe has completely exited the Stress Relief area.

Step 1: Change Operating Mode

1. On the in-line control panel, switch **Zone 1.4** and **Zone 1F** from **AUTO** to **MANUAL**.

Auto Mode




Manual





Step 2: Safety Precautions

1. Engage the **black Emergency Stop (E-Stop)** for **Zone 1.4** and **Zone 1F**.

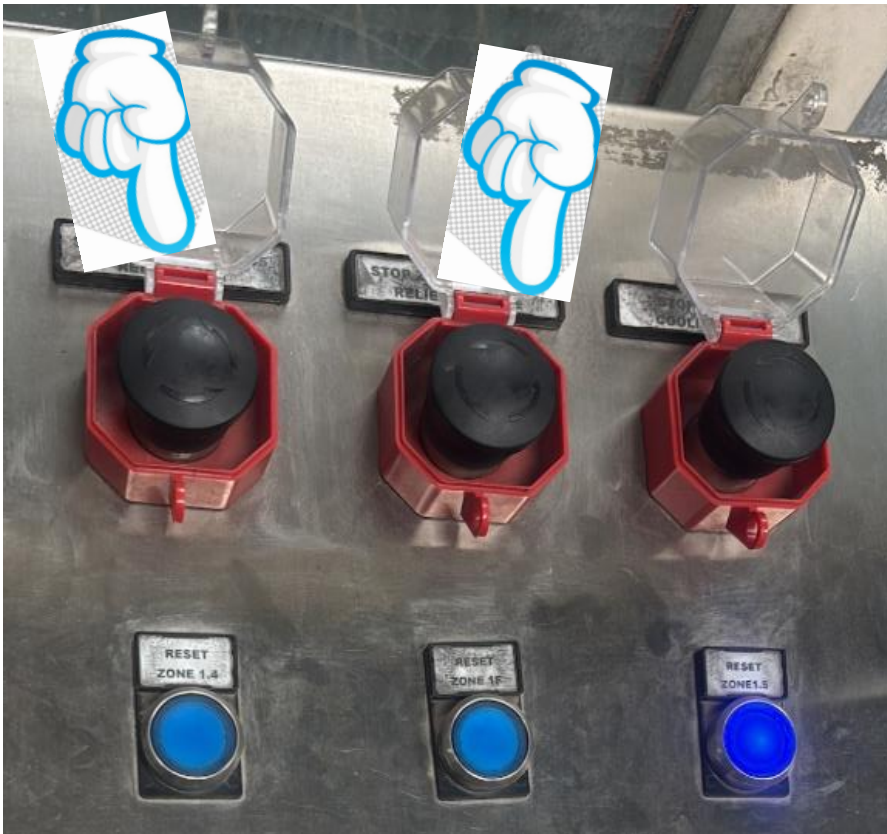

2. On the **Touchscreen Panel**, go to **Main → Gate** and unlock the door by pressing **T.LOCK.04**.

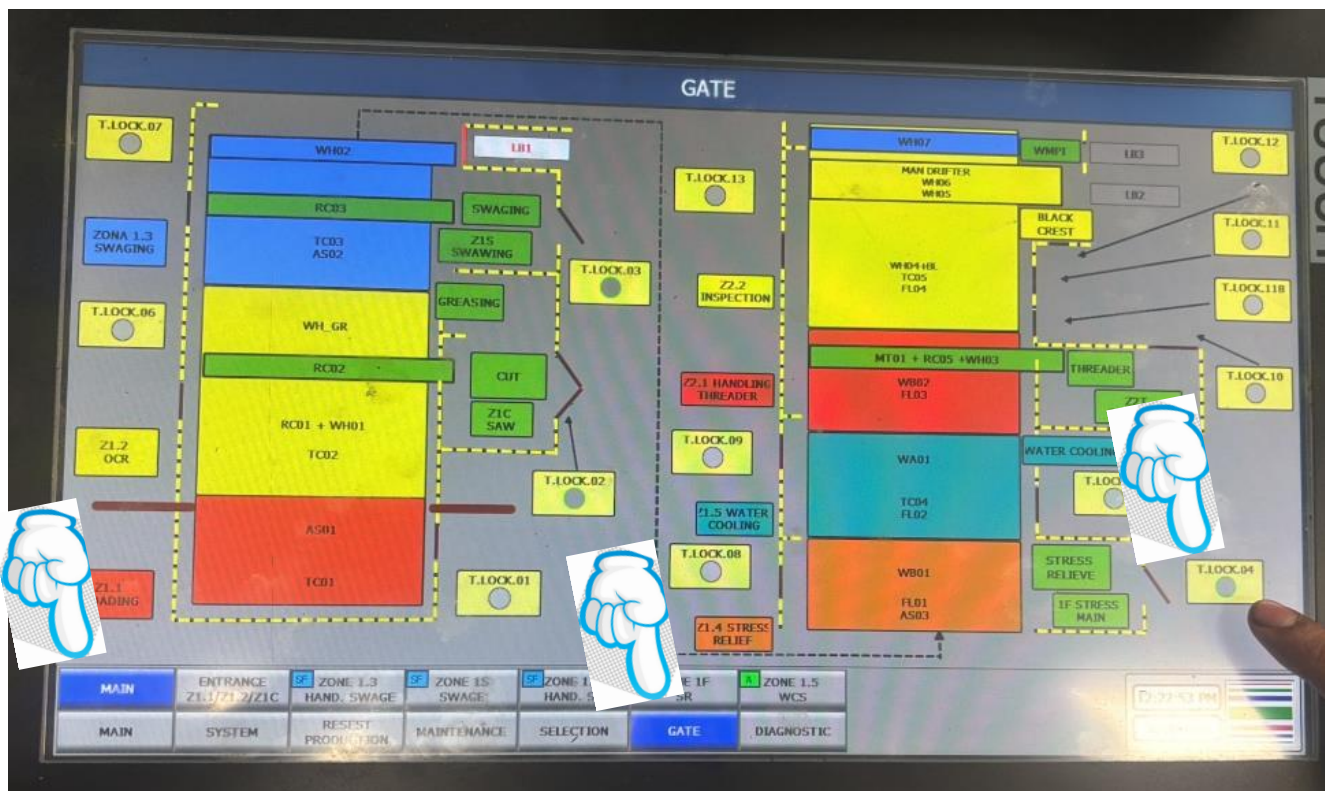

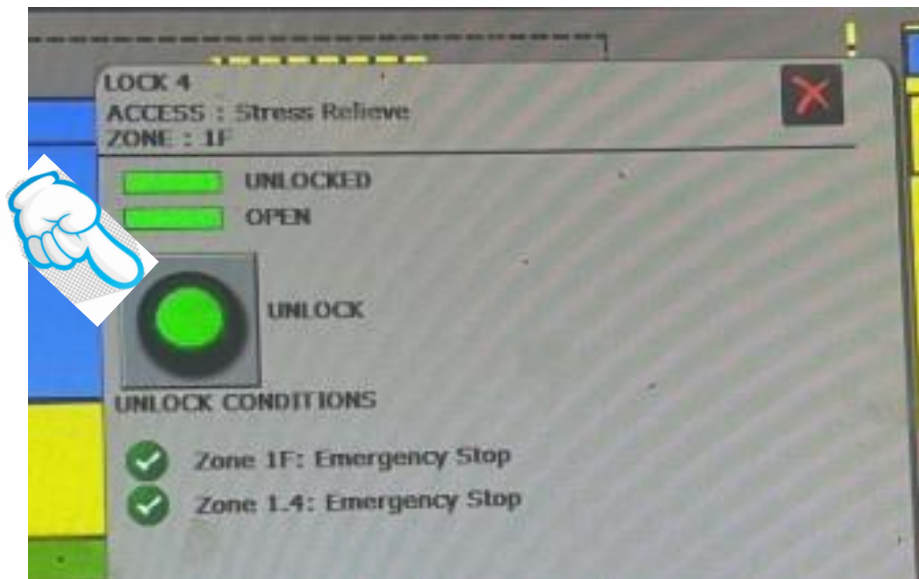


3. Manually open the gate.




Step 3: Disconnect Coil

1. Disable the water coolant system by closing the 4 valves, 2 on each side.

Before disconnecting

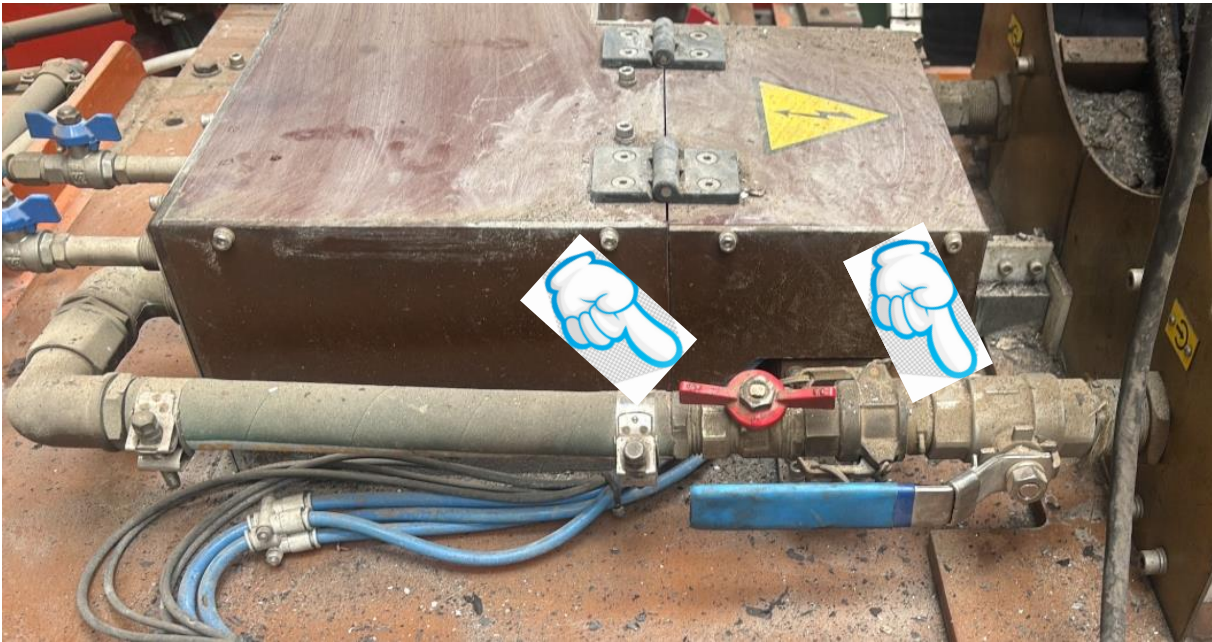


After disconnecting

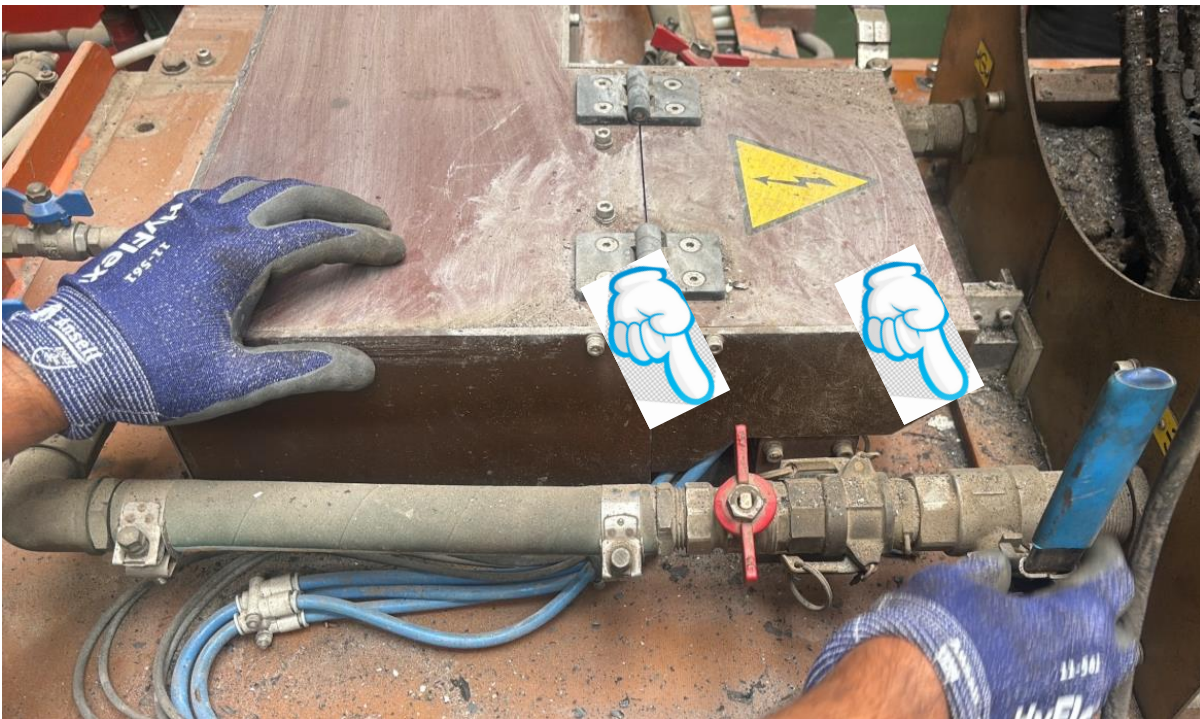

2. Disconnect power supply by turning arrow from **ON** to **OFF**

ON

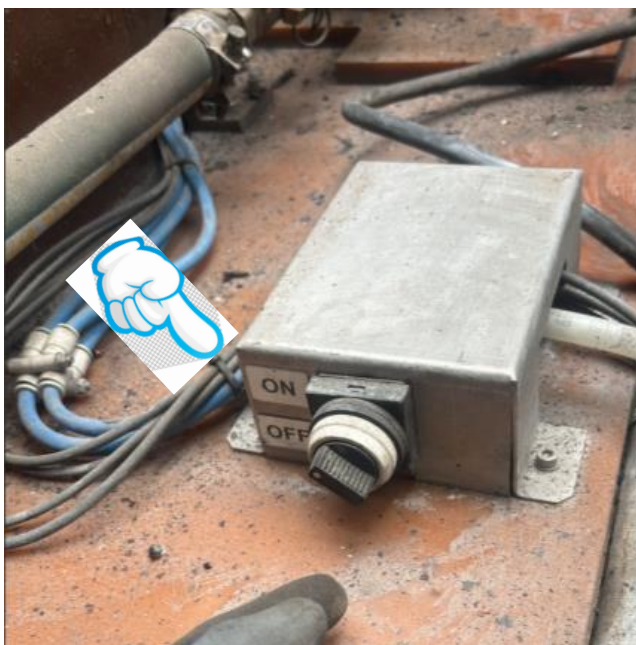


OFF




3. Disconnect water coolant hoses

Remove pins from connections

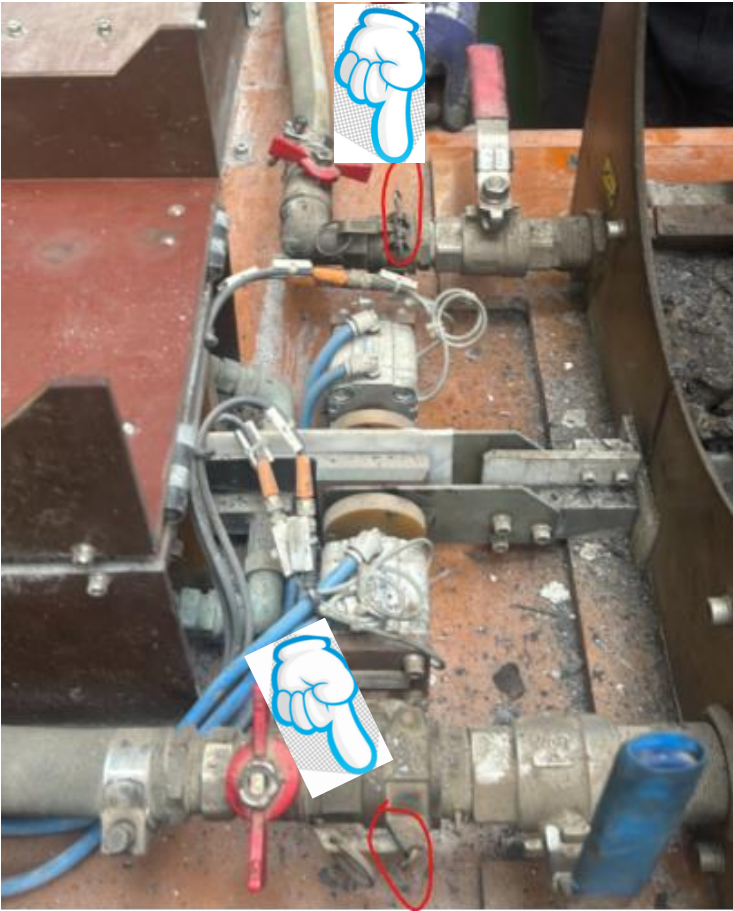


Release hoses

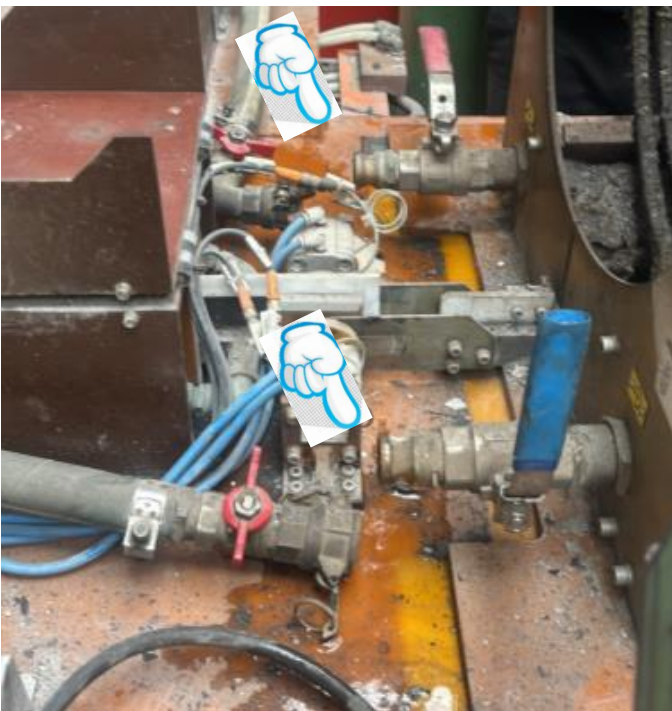

Release bolts of coil



Disconnect wire

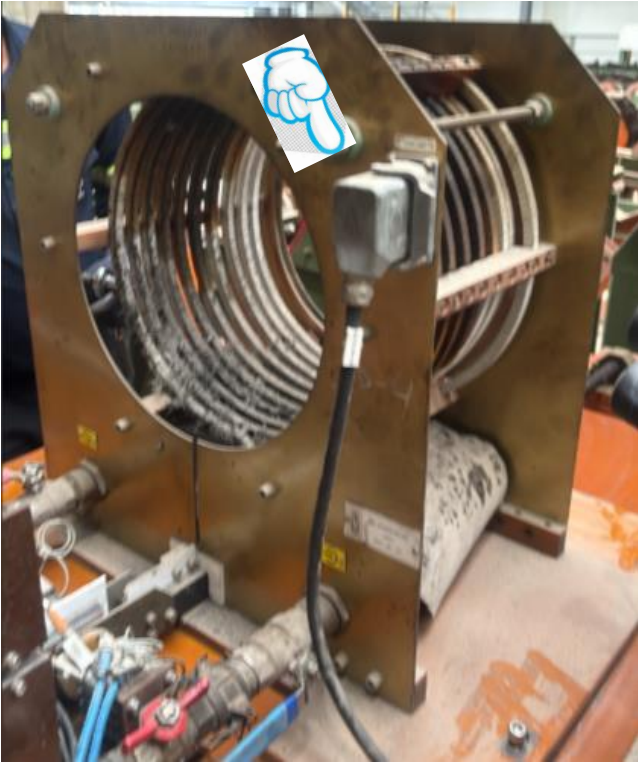


Put eye bolt and slings



Lift the coil by crane



- *Make sure that before lifting the exhaust cover turns to 90 degrees*
- *Check the condition of sling before use*

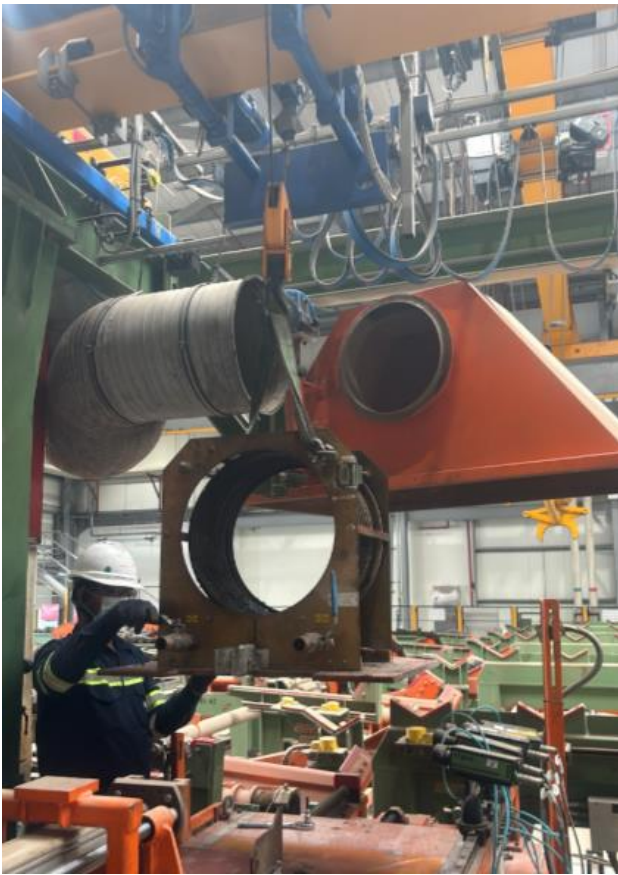

Lift the new coil which will be used to upcoming order



-  Hands Cutting. - Never put your hands near tube in movement.
-  Trip Hazard. - Watch your step while walking
-  When fencing door is open, be sure there is no movement either of the tube before entering

Step 4. Put new coil into table and connect in reverse order

1. Set coil to table and mount bolts




- Make sure that the table is clean before setting new coil

Mount the screws



Connect water coolant hoses and set pins

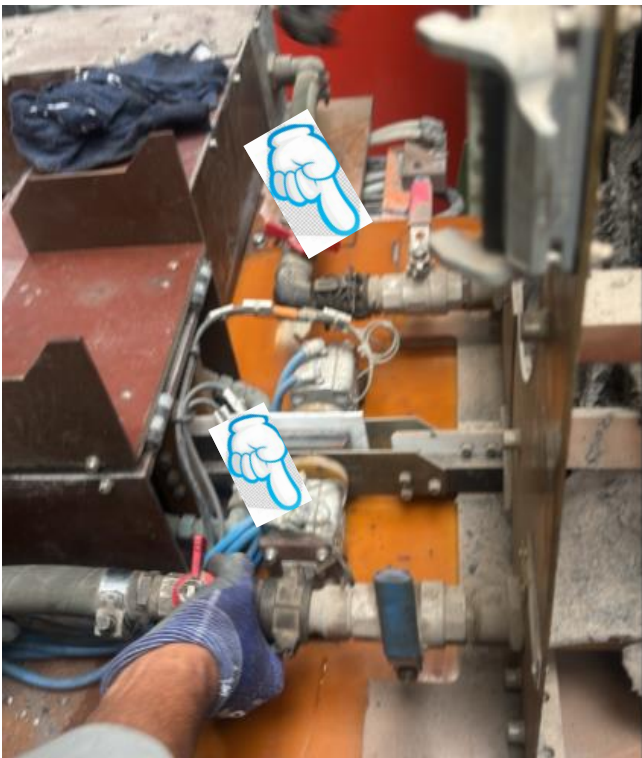

Open the water coolant line



Connect wire



Connect power supply by turning from **OFF** to **ON**

OFF




ON




Step 5. Inductor ID change in GH system and put auto mode in L2.

Go to touch screen of GH and change the Inductor ID by following steps.


Push manual

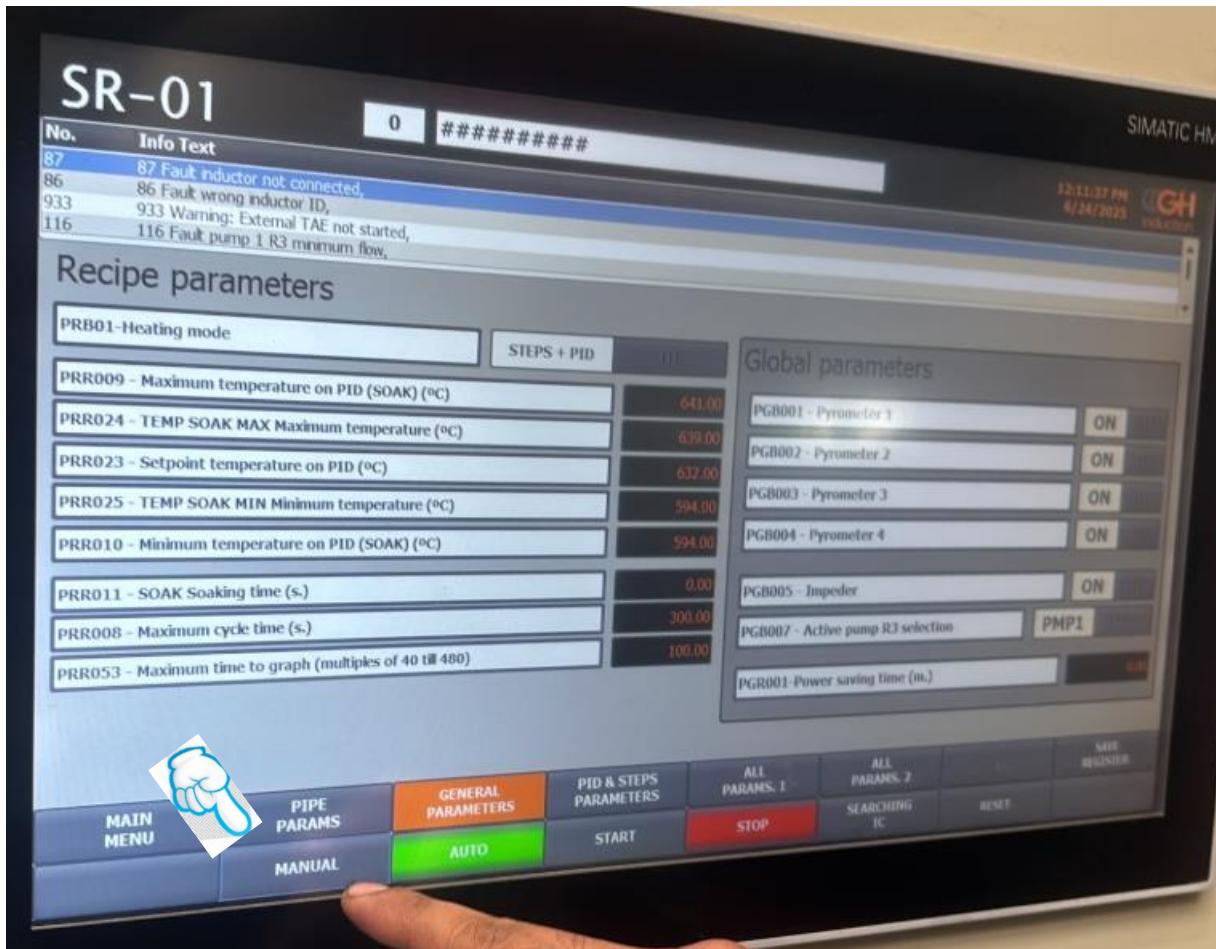

Slide to "Local"

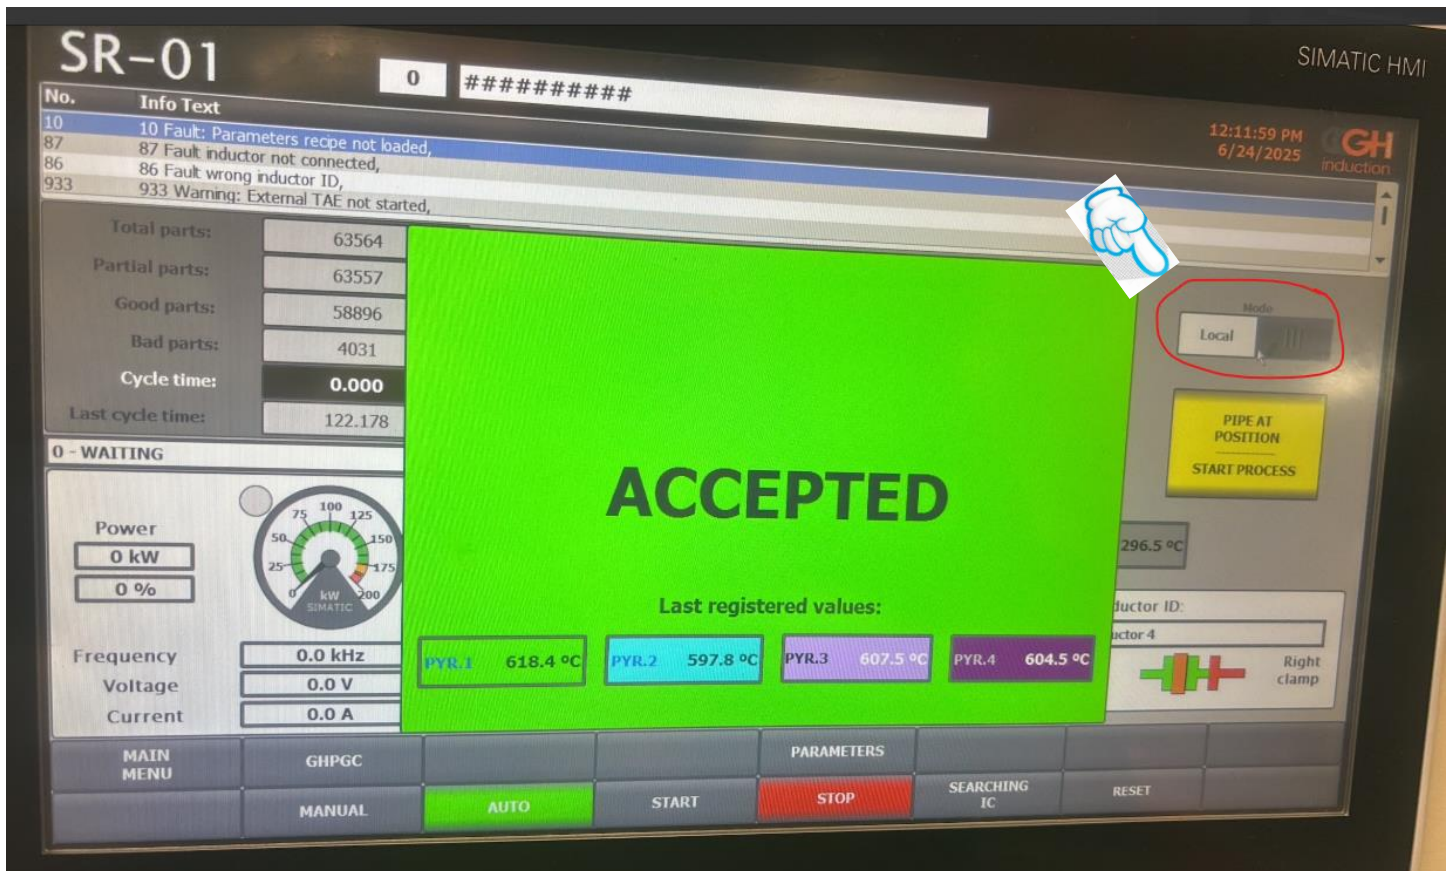

Go to “Pipe Parameters” and change to needed Coil ID.

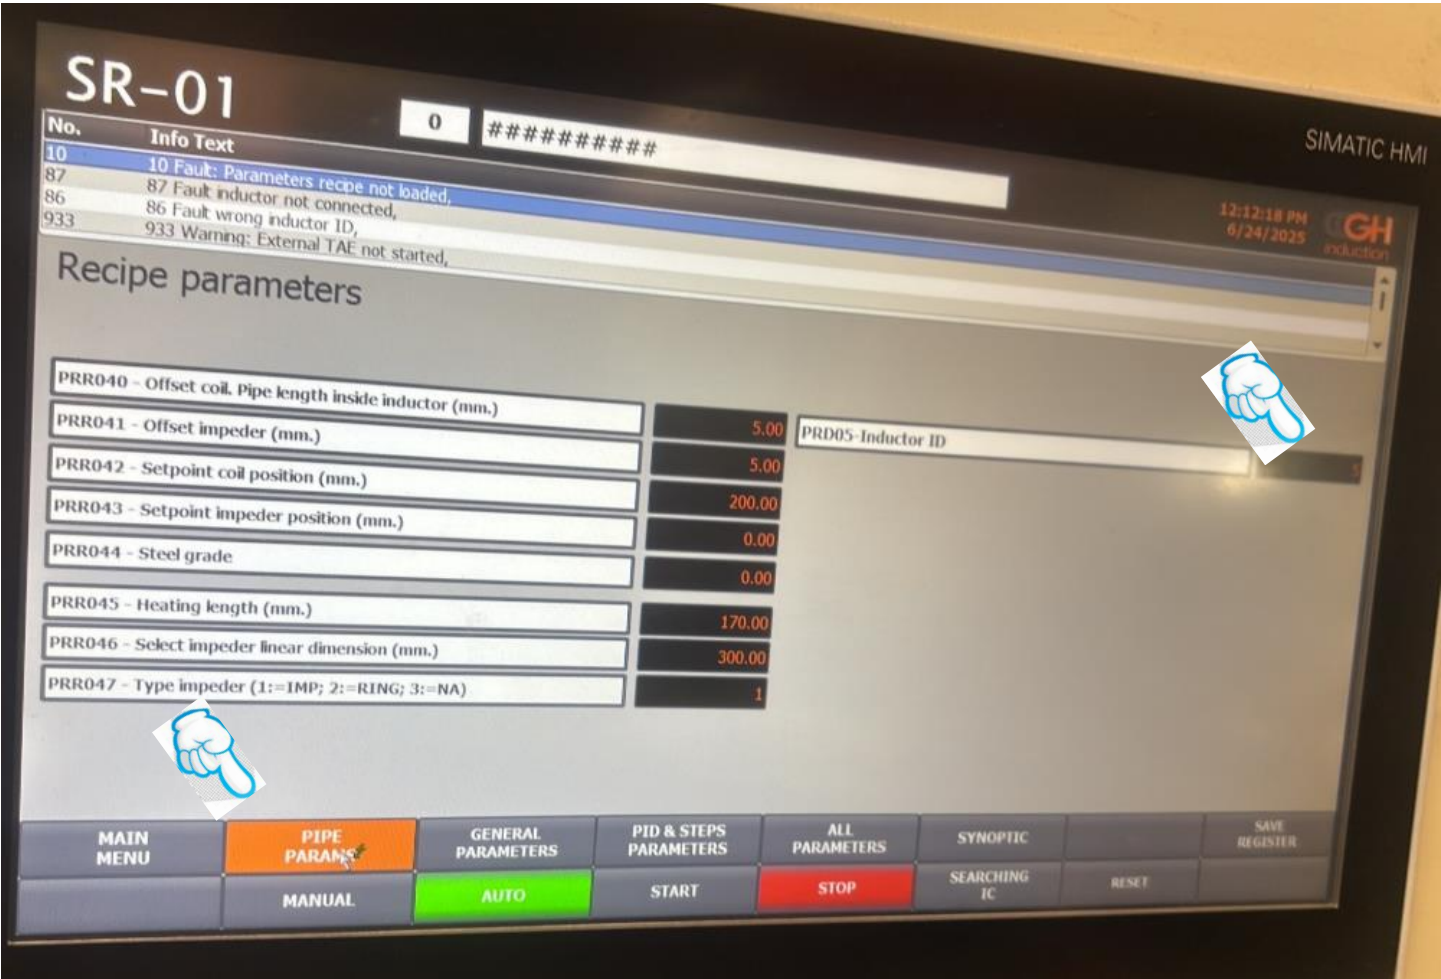

Back to manual and change from Local to Remote.

SR-01

0#####

12:12:33 PM
6/24/2025

GH
induction

No.	Info Text
87	87 Fault inductor not connected,
86	86 Fault wrong inductor ID,
116	116 Fault pump 1 R3 minimum flow,
4	4 Fault external emergency (Line),

Recipe parameters

PRR040 - Offset coil. Pipe length inside inductor (mm.)	5.00	PRD05-Inductor ID	4
PRR041 - Offset impeder (mm.)	5.00		
PRR042 - Setpoint coil position (mm.)	200.00		
PRR043 - Setpoint impeder position (mm.)	0.00		
PRR044 - Steel grade	0.00		
PRR045 - Heating length (mm.)	170.00		
PRR046 - Select impeder linear dimension (mm.)	300.00		
PRR047 - Type impeder (1:=IMP; 2:=RING; 3:=NA)	1		

MAIN MENU

PIPE PARAMS

GENERAL PARAMETERS

PID & STEPS PARAMETERS

ALL PARAMETERS

SYNOPTIC

SAVE REGISTER

MANUAL

AUTO

START

STOP

SEARCHING IC

RESET

SR-01

0#####

12:12:43 PM
6/24/2025

GH
induction

934	934 Warning Pump 1 R3 not started,
933	933 Warning: External TAE not started,
87	87 Fault inductor not connected,
86	86 Fault wrong inductor ID,

Total parts: 63564

Partial parts: 63557

Good parts: 58896

Bad parts: 4031

Cycle time: 0.000

Last cycle time: 122.178

0 - WAITING

Power: 0 kW, 0 %

Frequency: 0.0 kHz

Voltage: 0.0 V

Current: 0.0 A

296.5 °C

Inductor ID: Inductor 4

Right clamp

ACCEPTED

Last registered values:

PYR.1 618.4 °C

PYR.2 597.8 °C

PYR.3 607.5 °C

PYR.4 604.5 °C

MAIN MENU

GHPGC

PARAMETERS

MANUAL

AUTO

START

STOP

SEARCHING IC

RESET

PIPE AT POSITION
START PROCESS

Close the gate.

Switch the **manual mode** back to **AUTO mode** on the control panel.