



NEPTUNE

ELECTRIC THREE WHEELER

**USER MANUAL
&
SERVICE BOOK**

GARUDAN (PVT) LTD



Owner's Name: _____

Address: _____

Colour: _____

Chassis No: _____

Motor No: _____

BMS SN: _____

Dealer Name & Address:

Date of Delivery: _____

Sale Agent/Sales Agent
Stamp & Signature: _____

Registration No: _____

Kilometers at Delivery: _____

Dear Valued Electric Three Wheeler Owner,

We are delighted to welcome you to the Garudan (Pvt) Ltd family and sincerely thank you for choosing our Neptune Electric Three Wheeler. We are confident that your decision will bring you complete satisfaction and a smooth, fuel-free driving experience for many years.

To maintain your vehicle in perfect running condition and to keep your warranty valid, please make sure to use the Service Coupons enclosed in this booklet at our authorized service centers or dealerships.

Like any other vehicle, your Electric Three Wheeler also requires regular service and care to ensure peak performance and long life. Our authorized service centers are equipped with modern tools, genuine parts, and trained technicians to provide you with the best service experience.

Before you begin your journey with your Neptune Electric Three Wheeler, please make sure that:

1. You have carefully read and understood the Operation and Maintenance Manual supplied with the vehicle.
2. You are familiar with traffic rules and road safety regulations.

We wish you many years of safe, fuel-free, and eco-friendly journeys with your Neptune Electric Three Wheeler.

Garudan (Pvt) Ltd



THREE WHEELER SERVICE COUPON

1st SERVICE

NAME OF SERVICE DEALER:

STAMP AND SIGNATURE:

Date: _____

KMS: _____

Vehicle No: _____

1st SERVICE



SERVICE	DATE	KMS
1 st		

**1000 KM OR 60 DAYS FROM THE DATE OF PURCHASE
(WHICHEVER OCCURS EARLIER)**

Owner's Name: _____

Job No: _____ Vehicle Reg No: _____

Selling Dealer Code: _____

Sold No: _____

Servicing Dealer Code: _____

Serviced On: _____

KMS: _____

Motor No: _____

Chassis No: _____

BMS SN: _____





THREE WHEELER SERVICE COUPON

2nd SERVICE

NAME OF SERVICE DEALER:

STAMP AND SIGNATURE:

Date: _____

KMS: _____

Vehicle No: _____



2nd SERVICE



SERVICE	DATE	KMS
2 nd		

2,500KM FROM THE DATE OF PURCHASE.

Owner's Name: _____

Job No: _____ Vehicle Reg No: _____

Selling Dealer Code: _____

Sold No: _____

Servicing Dealer Code: _____

Serviced On: _____

KMS: _____

Motor No: _____

Chassis No: _____

BMS SN: _____



THREE WHEELER SERVICE COUPON

3rd SERVICE

NAME OF SERVICE DEALER:

STAMP AND SIGNATURE:

Date: _____

KMS: _____

Vehicle No: _____

3rd SERVICE



SERVICE	DATE	KMS
3 rd		

5,000 KM FROM THE DATE OF PURCHASE

Owner's Name: _____

Job No: _____ Vehicle Reg No: _____

Selling Dealer Code: _____

Sold No: _____

Servicing Dealer Code: _____

Serviced On: _____

KMS: _____

Motor No: _____

Chassis No: _____

BMS SN: _____



SERVICES CARRIED OUT

திகதி දිනය Date } ----- கீ.மீ.அளவு කි.මී.ගණන KMS } ----- சேர்விஸ் டீலர் සේවා ස්ථානය Dealer } ----- கையொப்பம் අත්සන Signature } -----	விபரம் විස්තර Detail } ----- ----- ----- -----
திகதி දිනය Date } ----- கீ.மீ.அளவு කි.මී.ගණන KMS } ----- சேர்விஸ் டீலர் සේවා ස්ථානය Dealer } ----- கையொப்பம் අත්සන Signature } -----	விபரம் විස්තර Detail } ----- ----- ----- -----
திகதி දිනය Date } ----- கீ.மீ.அளவு කි.මී.ගණන KMS } ----- சேர்விஸ் டீலர் සේවා ස්ථානය Dealer } ----- கையொப்பம் අත්සන Signature } -----	விபரம் විස්තර Detail } ----- ----- ----- -----

SERVICES CARRIED OUT

திகதி } Date } ----- கீ.மீ.அளவு } கி.மீ.மீ.நாள் } KMS } ----- சேர்விஸ் டீலர் } பெர்சன் டீலர் } Dealer } ----- கையொப்பம் } அதிகாரி } Signature } ----- விபரம் } பெர்சன் } Detail } ----- ----- ----- -----	
திகதி } Date } ----- கீ.மீ.அளவு } கி.மீ.மீ.நாள் } KMS } ----- சேர்விஸ் டீலர் } பெர்சன் டீலர் } Dealer } ----- கையொப்பம் } அதிகாரி } Signature } ----- விபரம் } பெர்சன் } Detail } ----- ----- ----- -----	
திகதி } Date } ----- கீ.மீ.அளவு } கி.மீ.மீ.நாள் } KMS } ----- சேர்விஸ் டீலர் } பெர்சன் டீலர் } Dealer } ----- கையொப்பம் } அதிகாரி } Signature } ----- விபரம் } பெர்சன் } Detail } ----- ----- ----- -----	

SERVICES CARRIED OUT

திகதி } Date } ----- கீ.மீ.அளவு } கி.மீ.மீ. } KMS } ----- சேர்விஸ் டீலர் } டீலர் } Dealer } ----- கையொப்பம் } அறிய } Signature } -----	விபரம் } விவர } Detail } ----- ----- ----- ----- -----
திகதி } Date } ----- கீ.மீ.அளவு } கி.மீ.மீ. } KMS } ----- சேர்விஸ் டீலர் } டீலர் } Dealer } ----- கையொப்பம் } அறிய } Signature } -----	விபரம் } விவர } Detail } ----- ----- ----- ----- -----
திகதி } Date } ----- கீ.மீ.அளவு } கி.மீ.மீ. } KMS } ----- சேர்விஸ் டீலர் } டீலர் } Dealer } ----- கையொப்பம் } அறிய } Signature } -----	விபரம் } விவர } Detail } ----- ----- ----- ----- -----

TERMS AND CONDITIONS OF WARRANTY

1. Warranty Period

- (a) The Warranty for your Neptune Electric Three Wheeler is valid for 24 months from the date of delivery or 50,000 km (which ever comes first), subject to these terms and conditions.
- (b) The Main LiFePO₄ Battery Pack is covered by a 5 year manufacturer's warranty with unlimited mileage from the date of vehicle delivery, subject to the terms and conditions of this warranty.

Note: The charging port must be inspected by an authorized GARUDAN technician

2. Manufacturer's Guarantee

Garudan (Pvt) Ltd guarantees that all parts of the Neptune Electric Three Wheeler are free from manufacturing defects and built with proper workmanship. In case of any manufacturing defect, the repair or replacement will be limited to the defective part only.

3. Company Liability

The company's liability is limited strictly to the repair or replacement of defective parts as specified under this warranty.

4. Warranty Not Applicable For:

- Regular maintenance operations such as brake or Controller adjustments, cleaning, lubrication, or tuning.
- Damage due to misuse, accidents, overloading, or negligence.
- Any alteration or modification not authorized by Garudan (Pvt) Ltd.

5. Service Records

Warranty claims will be entertained only if all service records and coupons are properly filled and stamped by an authorized Garudan service dealer.

6. Invalidation of Warranty

The warranty will become void if :

- The odometer is tampered with or disconnected.
- The vehicle has not been serviced at prescribed intervals.
- Non-Garudan spare parts or accessories are used.
- Repairs are done at unauthorized workshops.

7. No Refund or Replacement of Vehicle

Garudan (Pvt) Ltd will not exchange the vehicle, refund payment, or replace the unit once sold and delivered to the customer.

8. Consequential Loss

The company will not be liable for any indirect or consequential damages or losses arising out of the use or inability to use the vehicle.

9. Force Majeure

The company shall not be held responsible for any failure caused by natural disasters, strikes, or any other circumstances beyond its control.

10. Company Rights

Garudan (Pvt) Ltd reserves the right to repair, replace, or modify parts at its discretion during the warranty period.

IMPORTANT MESSAGE

All maintenance and service operations related to your Neptune Electric Three Wheeler must be carried out only at our authorized service workshop or by an authorized Garudan service dealer.

After the first three **services**, your Neptune Electric Three Wheeler requires periodic preventive maintenance and check-ups to ensure smooth operation, safety, and long-term performance.

For your convenience, the recommended service schedule is as follows:

Service No.	Mileage (km)
1	1,000 km
2	2,500 km
3	5,000 km
4	7,500 km
5	10,000 km
6	12,500 km
7	15,000 km and every 2,500 km thereafter

If your Electric Three Wheeler is used in extreme conditions such as dusty environments, steep terrain, heavy loads, or frequent start-stop driving, we recommend that preventive maintenance be performed more frequently than the intervals listed above.

Regular servicing ensures optimal performance, safety, and battery efficiency of your Neptune Electric Three Wheeler.

We strongly advise all Neptune Electric Three Wheeler owners to take full advantage of these scheduled check-ups.

For more details, please contact your nearest authorized Garudan Service Dealer.

Welcome to Our Valued Customer!

We thank you for choosing the Neptune Electric Three Wheeler, powered by Garudan (Pvt) Ltd.

Your vehicle combines modern design, safety, and eco-friendly performance.

This user manual will help you understand your vehicle's features, operation, and maintenance schedule.

Please read it carefully before operating your vehicle.

Enjoy your fuel-free, low-maintenance, and long-lasting electric journey.

Garudan (Pvt) Ltd

TABLE OF CONTENTS

1. Vehicle Specifications.....	12
2. Safety Instructions.....	14
3. Regular Maintenance Schedule.....	15
4. Starting The Vehicle.....	16
5. Instrument Cluster Details.....	18
6. BMS Display.....	20
7. Instrument Cluster Details (Version 2.0).....	21
8. Charging System.....	23
9. Dashboard Switch Panel.....	25
10. Control Switches (LH).....	26
11. Control Switches (RH).....	27
12. Battery Charging Instructions.....	28
13. Tyre & Tyre Pressure.....	29
14. Tyre Rotation.....	30

VEHICLE SPECIFICATIONS



FEATURE	DESCRIPTION
MODEL	NEPTUNE ELECTRIC THREE WHEELER
TYPE	PASSENGER / CARGO
MANUFACTURER	GARUDAN (PVT) LTD
SEATING CAPACITY	DRIVER + 3
GROSS VEHICLE WEIGHT (GVW)	800 KG
KERB WEIGHT	480 KG
PAYLOAD CAPACITY	320 KG
DIMENSIONS (L × W × H)	2780*1275*1700 MM
TYRE SIZE	(4.00 – 12) X 4 IN
WHEELBASE	2100 MM
GROUND CLEARANCE	130 MM
TURNING RADIUS	3000 MM
TOP SPEED	60 KM/H
RANGE PER CHARGE	250 – 300 KM
GRADEABILITY	27.8 %
MOTOR TYPE	PMS MOTOR
MOTOR POWER (RATED/PEAK)	5 KW / 10KW
MOTOR VOLTAGE	60 V
TRANSMISSION TYPE	FIXED GEAR

VEHICLE SPECIFICATIONS



FEATURE	DESCRIPTION
BATTERY TYPE	LiFePo ₄
BATTERY CAPACITY	20 KWh
BATTERY NOMINAL VOLTAGE	64 V
CHARGING TIME / SLOW CHARGING	6 HOURS (20% TO 100%) / 12 HOURS (20% TO 100%)
CHARGER TYPE	ON BOARD CHARGER
SUSPENSION (FRONT / REAR)	DOUBLE ARM BASIC SHOCKS / LEAF SPRING
CHASSIS TYPE	LADDER FRAME
INSTRUMENT CLUSTER	DIGITAL DISPLAY
LIGHTING SYSTEM	LED
IP RATING (MOTOR / BATTERY)	IP67
SAFETY FEATURES	HILL HOLD / COMBINED BRAKE / FIRE EXTINGUISHER / BMS / REGENERATIVE BRAKE/ EMERGENCY BMS OFF SWITCH
FRONT / REAR BRAKE TYPE	HYDRAULIC DRUM BRAKE
PARKING BRAKE	HAND BRAKE
RIM TYPE	IRON WHEEL
DRIVE MODES	ECO, POWER, CLIMB

SAFETY INSTRUCTIONS

- Always obey traffic laws and speed limits.
 - Do not overload the vehicle beyond its rated carrying capacity.
 - Reduce speed to below 15 km/h before driving over speed bumps or rough roads.
 - Avoid driving through deep water (1 foot) or flooded roads.
 - Keep your hands, feet, and all body parts inside the vehicle while driving.
 - Never operate the vehicle under the influence of alcohol, drugs, or medication that may impair driving ability.
 - Do not modify the electrical wiring, motor, controller, or battery system.
 - Use only genuine GARUDAN replacement parts and accessories.
 - Keep children away from the vehicle and charging area.
 - Park the vehicle in a dry, well-ventilated, and shaded location whenever possible.
 - Keep the charging socket clean, dry, and free from dust or moisture.
 - Ensure the charging connector is fully inserted and securely locked before charging. Push the connector firmly until you hear a "Tick" sound.
- ⚠ EMERGENCY FIRE GUIDE: Mount the Fire Extinguisher Spray Can near the driver's seat; in an emergency, remove the cap, point at the base of the fire, and press the nozzle fully down like a regular spray never use water.
- ⚠ TOWING INSTRUCTIONS: Turn off the ignition key and tow the vehicle slowly below 15km/h for short distances only, or ideally transport it on a flatbed truck to protect the motor.

REGULAR MAINTENANCE SCHEDULE

ITEM	INTERVAL	DESCRIPTION
TYRE PRESSURE	WEEKLY	CHECK AND ADJUST TYRE PRESSURE TO 30 PSI OR AS SPECIFIED.
BRAKE SYSTEM	MONTHLY	INSPECT BRAKE ADJUSTMENT, BRAKE LINING WEAR, BRAKE CABLES, AND BRAKING PERFORMANCE.
BATTERY PERCENTAGE	EVERY DAY	BEFORE STARTING THE VEHICLE
CHARGER & CABLE	WEEKLY	CHECK FOR DAMAGE
NUTS AND BOLTS	MONTHLY	TIGHTEN ALL FITTINGS
SUSPENSION	QUARTERLY	CHECK AND LUBRICATE
MOTOR & WIRING	EVERY 6 MONTHS	INSPECT CONNECTIONS
BODY & PAINT	AS NEEDED	CLEAN & POLISH
FULL SERVICE	EVERY 3000 KM	AT AUTHORIZED SERVICE CENTER

STARTING THE VEHICLE

Before Starting

- Battery State of Charge (SOC) is sufficient.
- Main Power Switch is in the ON (I) position.
- Parking Brake is engaged.
- No warning lights remain illuminated after the system self-check.
- Drive/Reverse Selector is in the desired position (D or R).

How to Start the Vehicle

Step 1

- Insert the key into the ignition switch and turn it to the ON position.

Step 2

- Turn the Main Power Switch to the ON (I) position.

Step 3

- Wait a few seconds for the instrument cluster to complete its self-test.

Step 4

- Confirm that the READY indicator appears on the dashboard.

Step 5

- Select D (Drive) for forward movement or R (Reverse) for reversing.

Step 6

- Release the parking brake.

Step 7

- Slowly twist the throttle to move the vehicle.
(Do not accelerate suddenly.)




Step 01



Step 05



Step 02

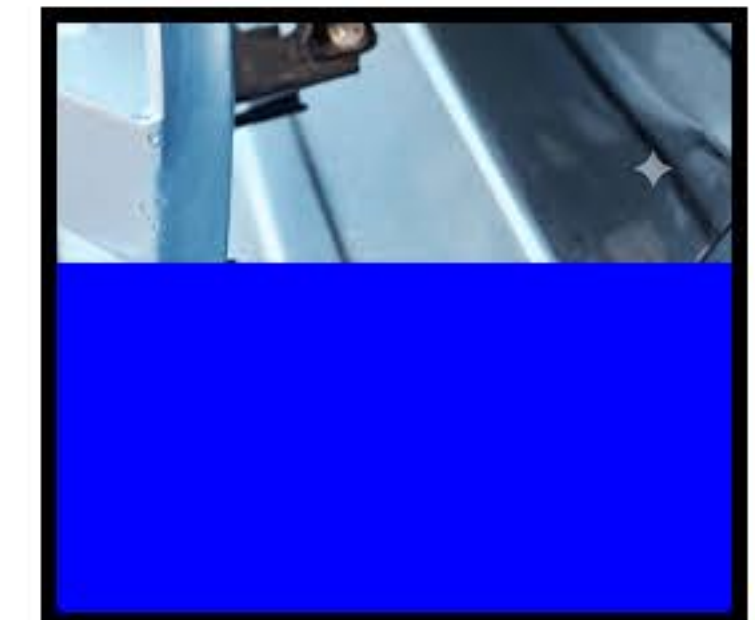


Step 06



Step 03



Step 07

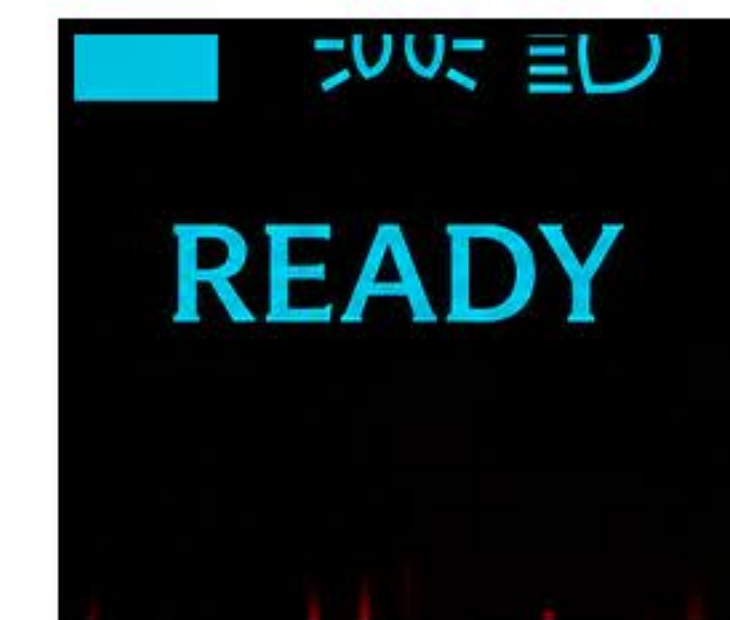

Step 04

STARTING THE VEHICLE


If the Vehicle Does Not Start

PROBLEM	POSSIBLE CAUSE	SOLUTION
Display does not turn ON	Main power switch is OFF	Turn the main power switch ON.
Display remains OFF	Battery is fully discharged	Charge the battery before use.
READY indicator does not appear	System initialization is incomplete	Wait a few seconds and try again.
Vehicle does not move	Drive/Reverse selector not engaged	Select D or R correctly.
Vehicle does not move	Parking brake is still engaged	Release the parking brake completely.
Vehicle does not move	Accelerator pedal not responding	Restart the vehicle. If the problem continues, contact an authorized service center.
Battery is low	Battery State of Charge is below the operating level	Recharge the battery.
Warning light remains ON	Motor, controller, or battery system fault	Do not continue driving. Contact an authorized GARUDAN service center.
Fuse has blown	Electrical circuit protection activated	Inspect and replace the fuse with the correct rating if necessary. If it blows again, seek professional service.

Important Safety Notes

- ⚠ Never press the accelerator while switching between Drive (D) and Reverse (R).
- ⚠ Always bring the vehicle to a complete stop before changing driving direction.
- ⚠ Never attempt to bypass electrical safety devices or modify the starting system.
- ⚠ If unusual sounds, burning smells, smoke, or repeated fault warnings are observed, switch the vehicle OFF immediately and have it inspected by an authorized GARUDAN service center.

INSTRUMENT CLUSTER DETAILS

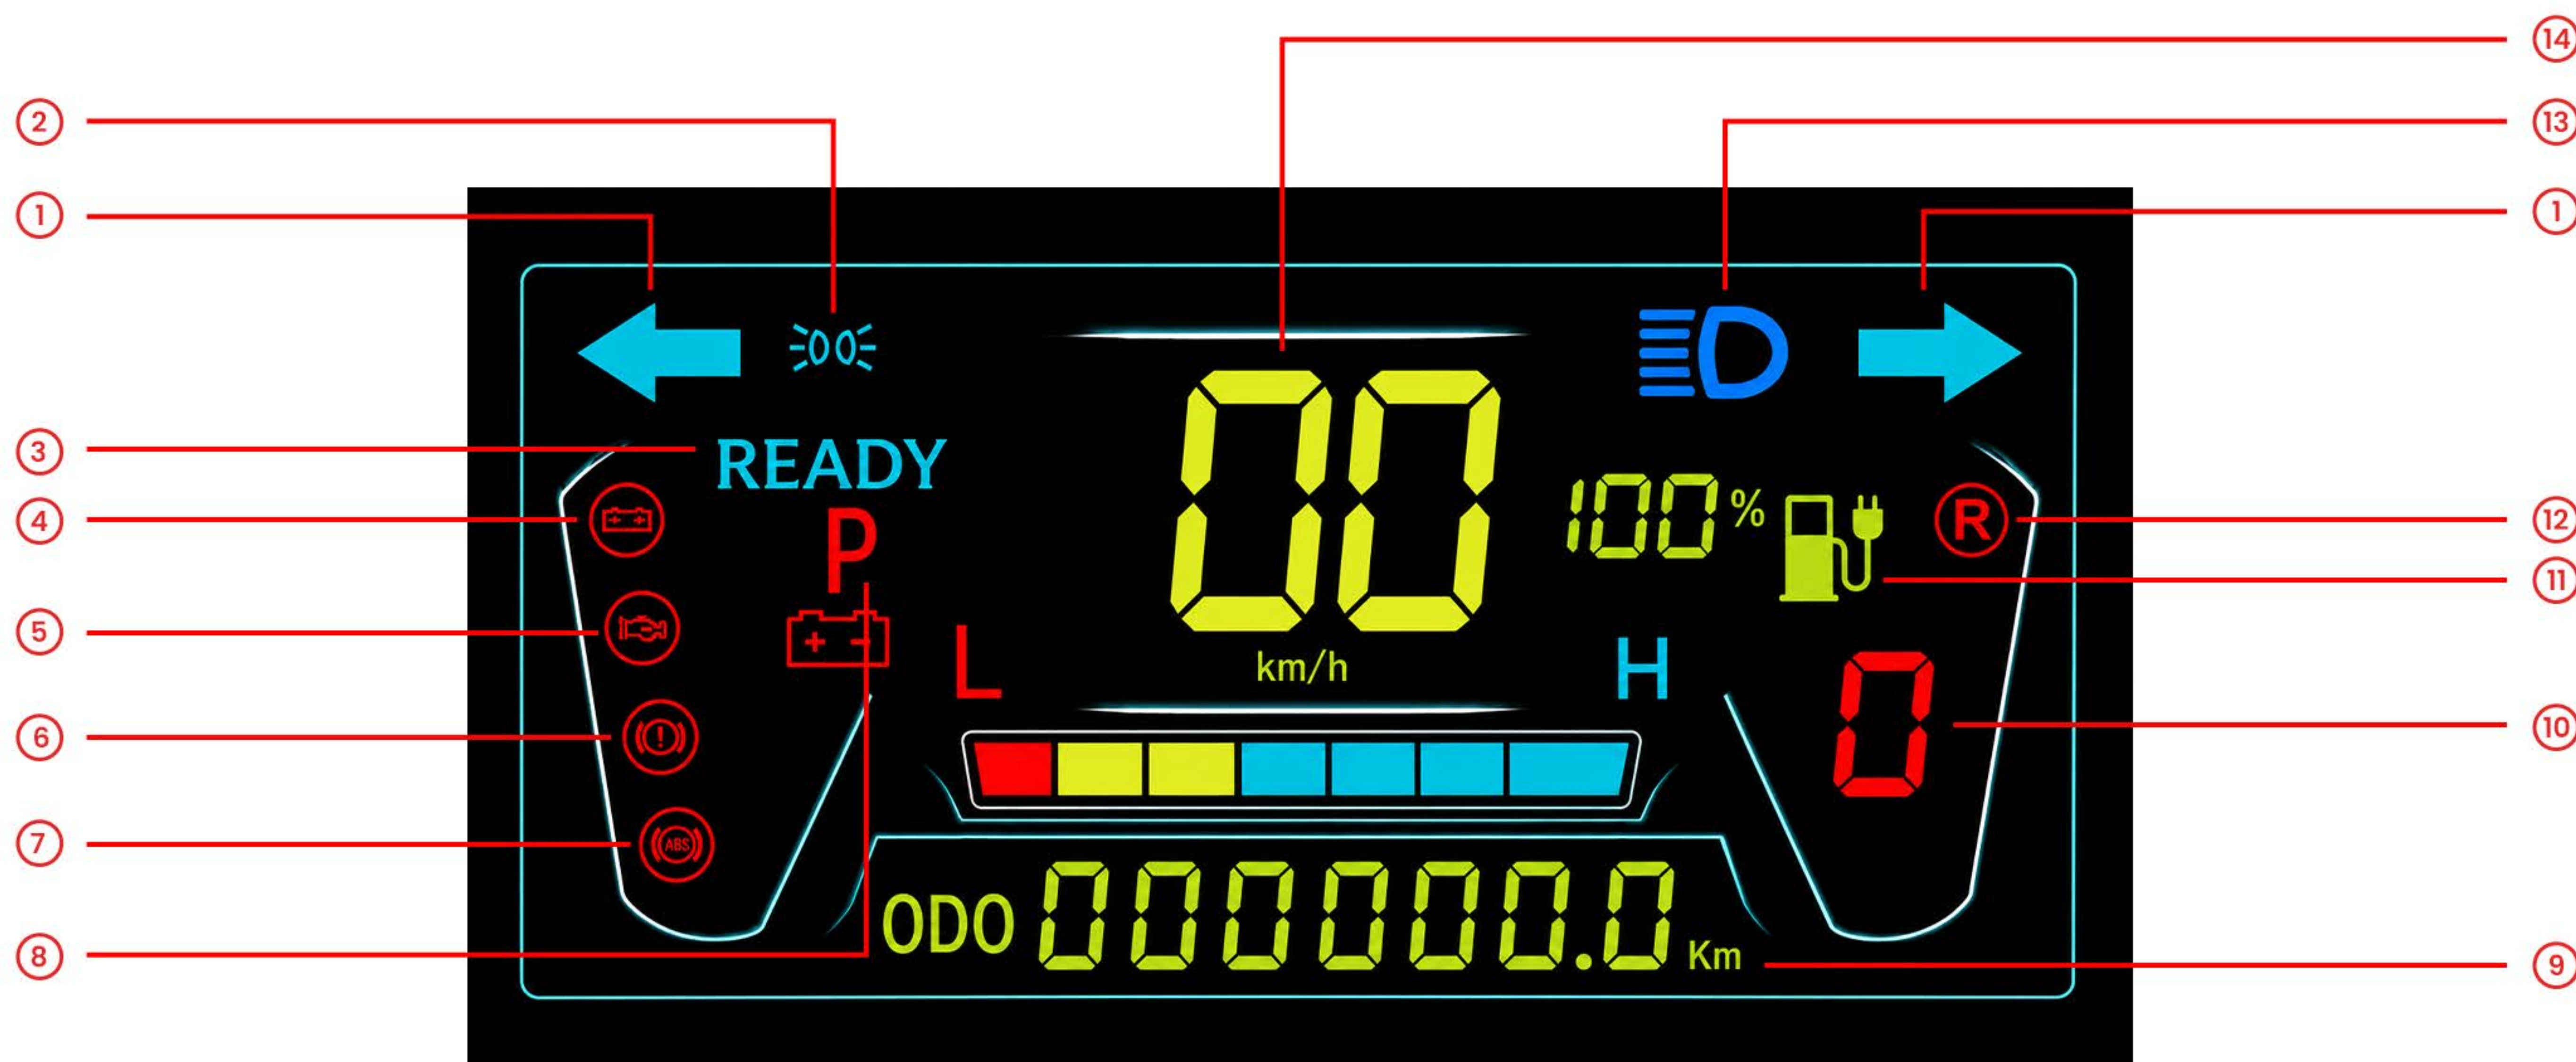

1.LEFT / RIGHT TURN INDICATOR

- Blinks when the left indicator switch is ON.
- Blinks when the right indicator switch is ON.

2.POSITION / PARKING LIGHT INDICATOR

- Shows that position lights / parking lights are ON.
- Used for visibility during parking or low-light conditions.

3.READY INDICATOR

- The vehicle has completed system checks and is ready to drive.

4.BATTERY SYSTEM WARNING

- Illuminates when the Battery Management System (BMS) detects a fault.

5.MOTOR FAULT INDICATOR

- Indicates an abnormal condition in the motor or motor controller.
- Possible causes:
 - 1.Overheating
 - 2.Sensor failure
 - 3.Controller communication error

6.WARNING INDICATOR

- Indicates a system warning or fault.
- If this stays ON, check the error code or contact service.

7.BRAKE INDICATOR

When the brake pedal is pressed, the brake indicator will illuminate.

8.PARKING MODE INDICATOR

- Lights up when Parking (P) mode is engaged.
- Vehicle will not move while this is ON.

9.ODOMETER (ODO) & TRIP METER

When the vehicle is switched ON, the odometer displays the total distance travelled by the vehicle.

After starting the vehicle, the display shows the trip distance for the current journey.

10.SPEED LIMIT

- This display typically indicates the selected drive mode or gear level.

- 1 – Low Speed(30Km/h)
- 2 – Medium Speed(44Km/h)
- 3 – High Speed(60Km/h)

11.CHARGING INDICATOR

- Illuminates while the battery is being charged.

12.REVERSE INDICATOR (R)

- Vehicle is in Reverse gear.
- Drive slowly and check surroundings.


13.HIGH BEAM INDICATOR

- Lights up when the headlight is on High Beam.
- Use only on dark roads or highways.

14.SPEEDOMETER (Km/h)

- Shows current vehicle speed.
- Example shown: 00 km/h.

BMS DISPLAY

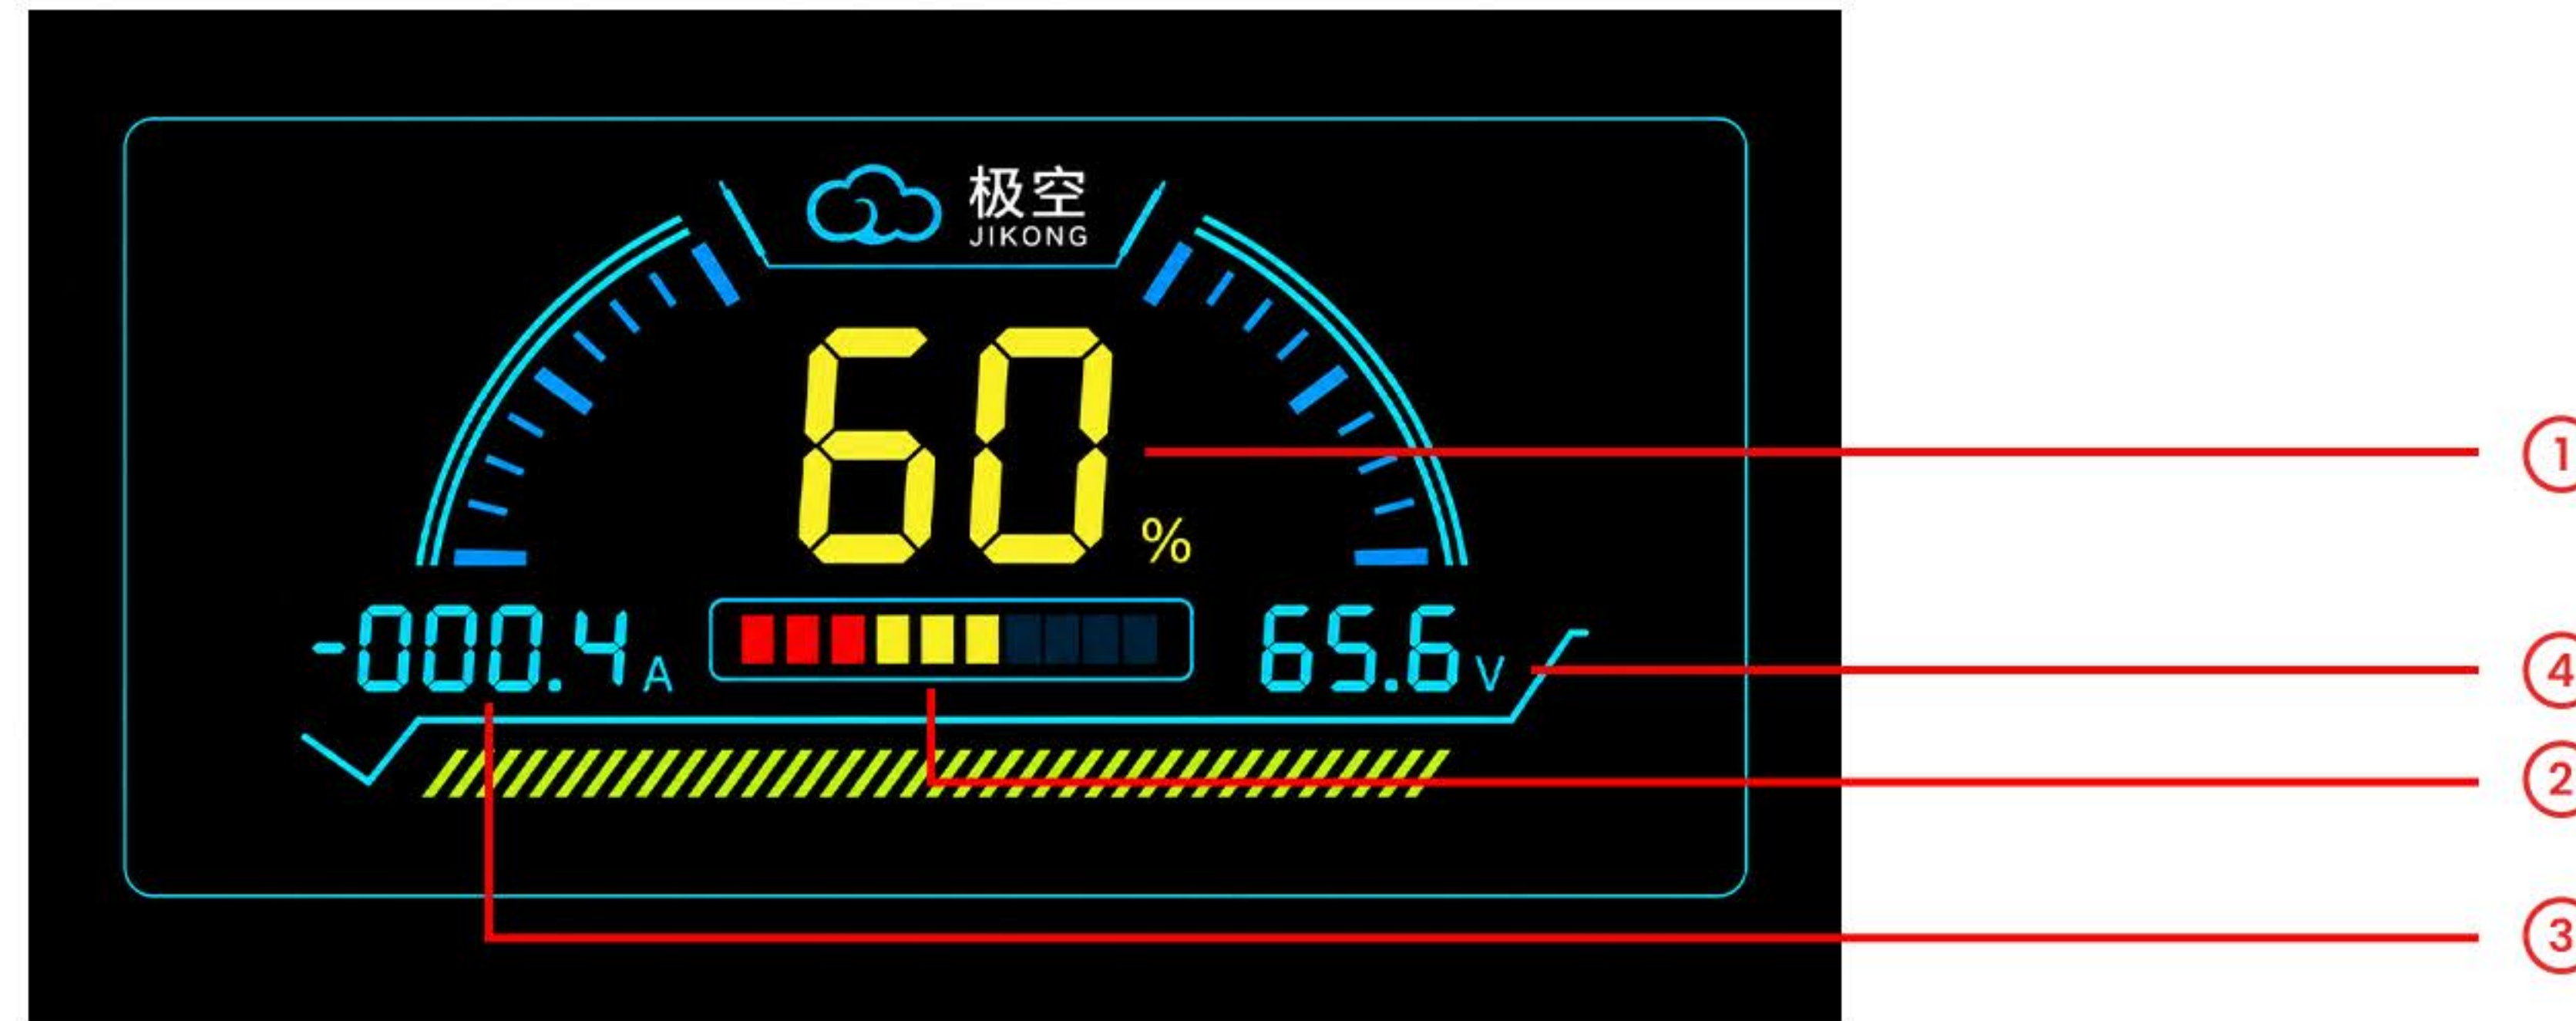

1.STATE OF CHARGE PERCENTAGE (%)

- Indicates that the displayed value represents the battery's remaining charge percentage.

2.BATTERY CAPACITY BAR GRAPH

- Provides a visual representation of the remaining battery capacity.

Red

- Low battery level
- Recharge immediately

Yellow

- Medium battery level
- Continue driving and plan charging

Blue

- Normal battery level
- Battery operating normally

3.BATTERY CURRENT (A)


- Shows the real-time current flowing into or out of the battery.
- Negative (-) Value: Battery is discharging (vehicle is consuming power).
- Positive (+) Value: Battery is charging (charger or regenerative braking is supplying power).
- 0 A: No significant current flow.

4.BATTERY VOLTAGE (V)

- Displays the total battery pack voltage in real time.

INSTRUMENT CLUSTER DETAILS

VERSION 2.0 DISPLAY

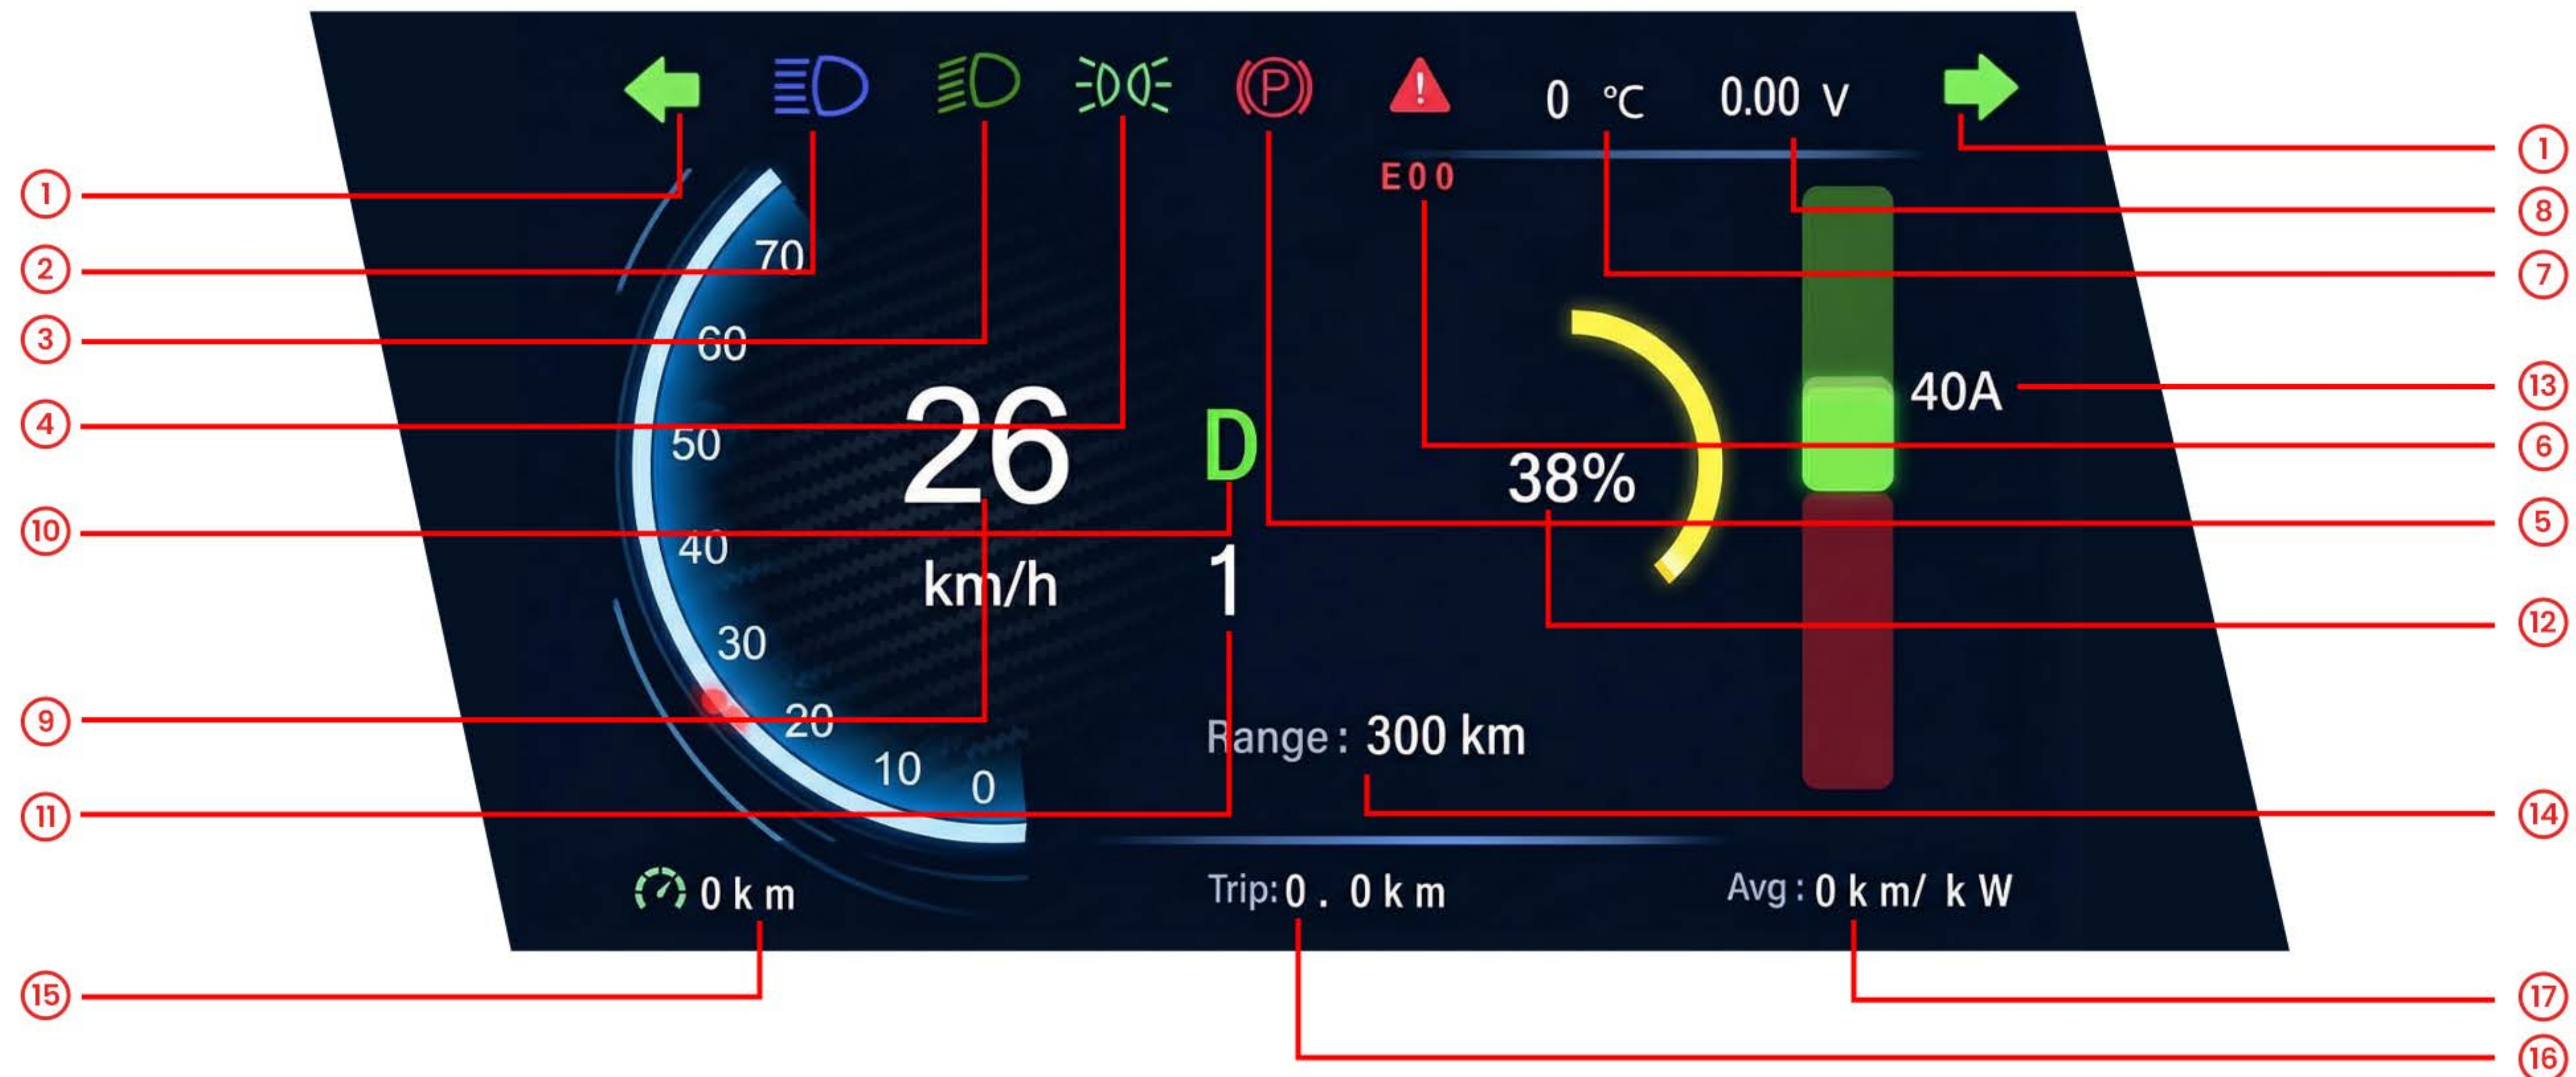

1.LEFT / RIGHT TURN INDICATOR

- Blinks when the left indicator switch is ON.
- Blinks when the right indicator switch is ON.

2.HIGH BEAM INDICATOR

- Lights up when the headlight is on High Beam.
- Use only on dark roads or highways.

3.LOW BEAM INDICATOR

- Indicates low beam is active.
- Recommended for city driving and oncoming traffic.

4.POSITION / PARKING LIGHT INDICATOR

- Shows that position lights / parking lights are ON.
- Used for visibility during parking or low-light conditions.

5. PARKING MODE INDICATOR

- Lights up when Parking (P) mode is engaged.
- Vehicle will not move while this is ON.

6. WARNING INDICATOR

- Indicates a system warning or fault.
- If this stays ON, check the error code or contact service.

7. TEMPERATURE DISPLAY (°C)

- Shows controller or system temperature.
- Normal temperature ensures safe operation.

8. BATTERY VOLTAGE DISPLAY (V)

- Displays current battery voltage level.
- Helps monitor battery health.

9. SPEEDOMETER (KM/H)

- Shows current vehicle speed.
- Example shown: 26 km/h.

10. DRIVE / REVERSE MODE INDICATOR (D/R)

- D (Drive): Vehicle moves forward.
- R (Reverse): Vehicle moves backward at controlled speed.

11. SPEED LEVEL / GEAR MODE

- Shows selected speed level:
 - 1 – Economy / Low power (30Km/h)
 - 2 – Normal (44Km/h)
 - 3 – Power / High torque (60Km/h)

12. BATTERY STATE OF CHARGE

- Displays remaining battery percentage.
- Recharge recommended below 25%.

13. CURRENT CONSUMPTION INDICATOR

- Shows current drawn from the battery.
- Higher current = higher power usage.

14. RANGE INDICATOR (RANGE: 300 KM)

- Estimated distance you can travel with remaining charge.
- Depends on load, speed, and driving mode.

15. ODOMETER

- Shows total distance traveled by the vehicle.

16. TRIP METER

- Measures distance of a single trip.
- Can be reset manually.

17. AVERAGE EFFICIENCY

- Shows average energy efficiency.
- Higher value = better battery usage.

CHARGING SYSTEM

The NEPTUNE Electric Three Wheeler is equipped with a 32A AC charging socket for safe and convenient charging using a standard 220–240V AC household power supply.

SPECIFICATION	
Charging Socket Type	32A AC Socket
Input Voltage	220–240V AC
Frequency	50 Hz
Charger Type	On-board Charger

Charging Safety Precautions

Before charging the vehicle, observe the following safety instructions:

- Park the vehicle on a flat and stable surface.
- Switch the vehicle OFF using the main power switch.
- Apply the parking brake.
- Ensure the charging socket and plug are clean and dry before charging.
- Ensure the charger cable is completely dry before connecting it.
- Use only the original charger supplied with the vehicle.
- Connect the charger to a properly grounded 220–240V AC outlet.
- Keep the charging area well ventilated.
- Ensure the charging connector is fully inserted and securely locked before charging. Push the connector firmly until you hear a "tick" sound. After that turn on the power switch. Turn OFF the power switch and disconnect the charging connector.
- Close the charging socket cover after charging.

Note: While Charging the battery allows enough time to reach 100% (Full charge)

This step is compulsory for view accurate SOC value



If the Vehicle Is Not Charging

Follow these checks before contacting an authorized service center.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Charger does not work	AC power supply is OFF	Switch ON the wall socket and verify power is available.
Electric shock on the vehicle body while charging	Improper grounding (earth) connection	Connect the ground (earth) wire properly.
No charging current	Loose or damaged charging cable or socket	Inspect the cable and replace if damaged.
Charging stops unexpectedly	Battery temperature is too high or too low	Allow the battery to return to a normal operating temperature, then try again.
Charger does not operate	Faulty wall outlet	Test the outlet with another appliance or use a different grounded outlet.
Battery percentage does not increase	Charger malfunction	Check the charger's indicator lights and contact an authorized service center if necessary.
Charging port is wet	Moisture inside the charging socket	Dry the socket completely before charging.
Vehicle does not charge after all checks	Internal charger, BMS, or battery fault	Contact an authorized GARUDAN service center for inspection.

Warning

-  Do not attempt to repair the charger or charging socket yourself.
-  Never use a damaged charging cable or connector.
-  Disconnect the charger immediately if you notice smoke, unusual odors, excessive heat, or abnormal sounds.
-  Keep children away from the charging area during charging.
-  Do not charge the vehicle immediately after driving in rain or through water. Ensure the vehicle and charging port are completely dry before charging.

DASHBOARD SWITCH PANEL



1.12V POWER SOCKET

Provides a 12V DC power output for the driver's compatible accessories.

2.WIPER SWITCH

- Press ON to operate the wiper.
- Press again to switch it OFF.

3.HAZARD WARNING SWITCH

- Activates all left and right turn indicators simultaneously.
- Use When:
 - Vehicle breakdown
 - Emergency stop
 - Parking on the roadside
 - Warning other road users

4.DRIVE / REVERSE SWITCH

- D – Moves the vehicle forward
- R – Moves the vehicle backward

5.MAIN POWER SWITCH

- Turns the vehicle's electrical system ON or OFF.

I(ON)


- Powers the vehicle.
- Activates the instrument cluster.
- Enables driving after the system is ready.

O(OFF)

- Shuts down the electrical system.
- Turns off the display and vehicle controls.

Note: Once the journey is complete, switch the Main Power Switch to the OFF (O) position.

CONTROL SWITCHES – LH

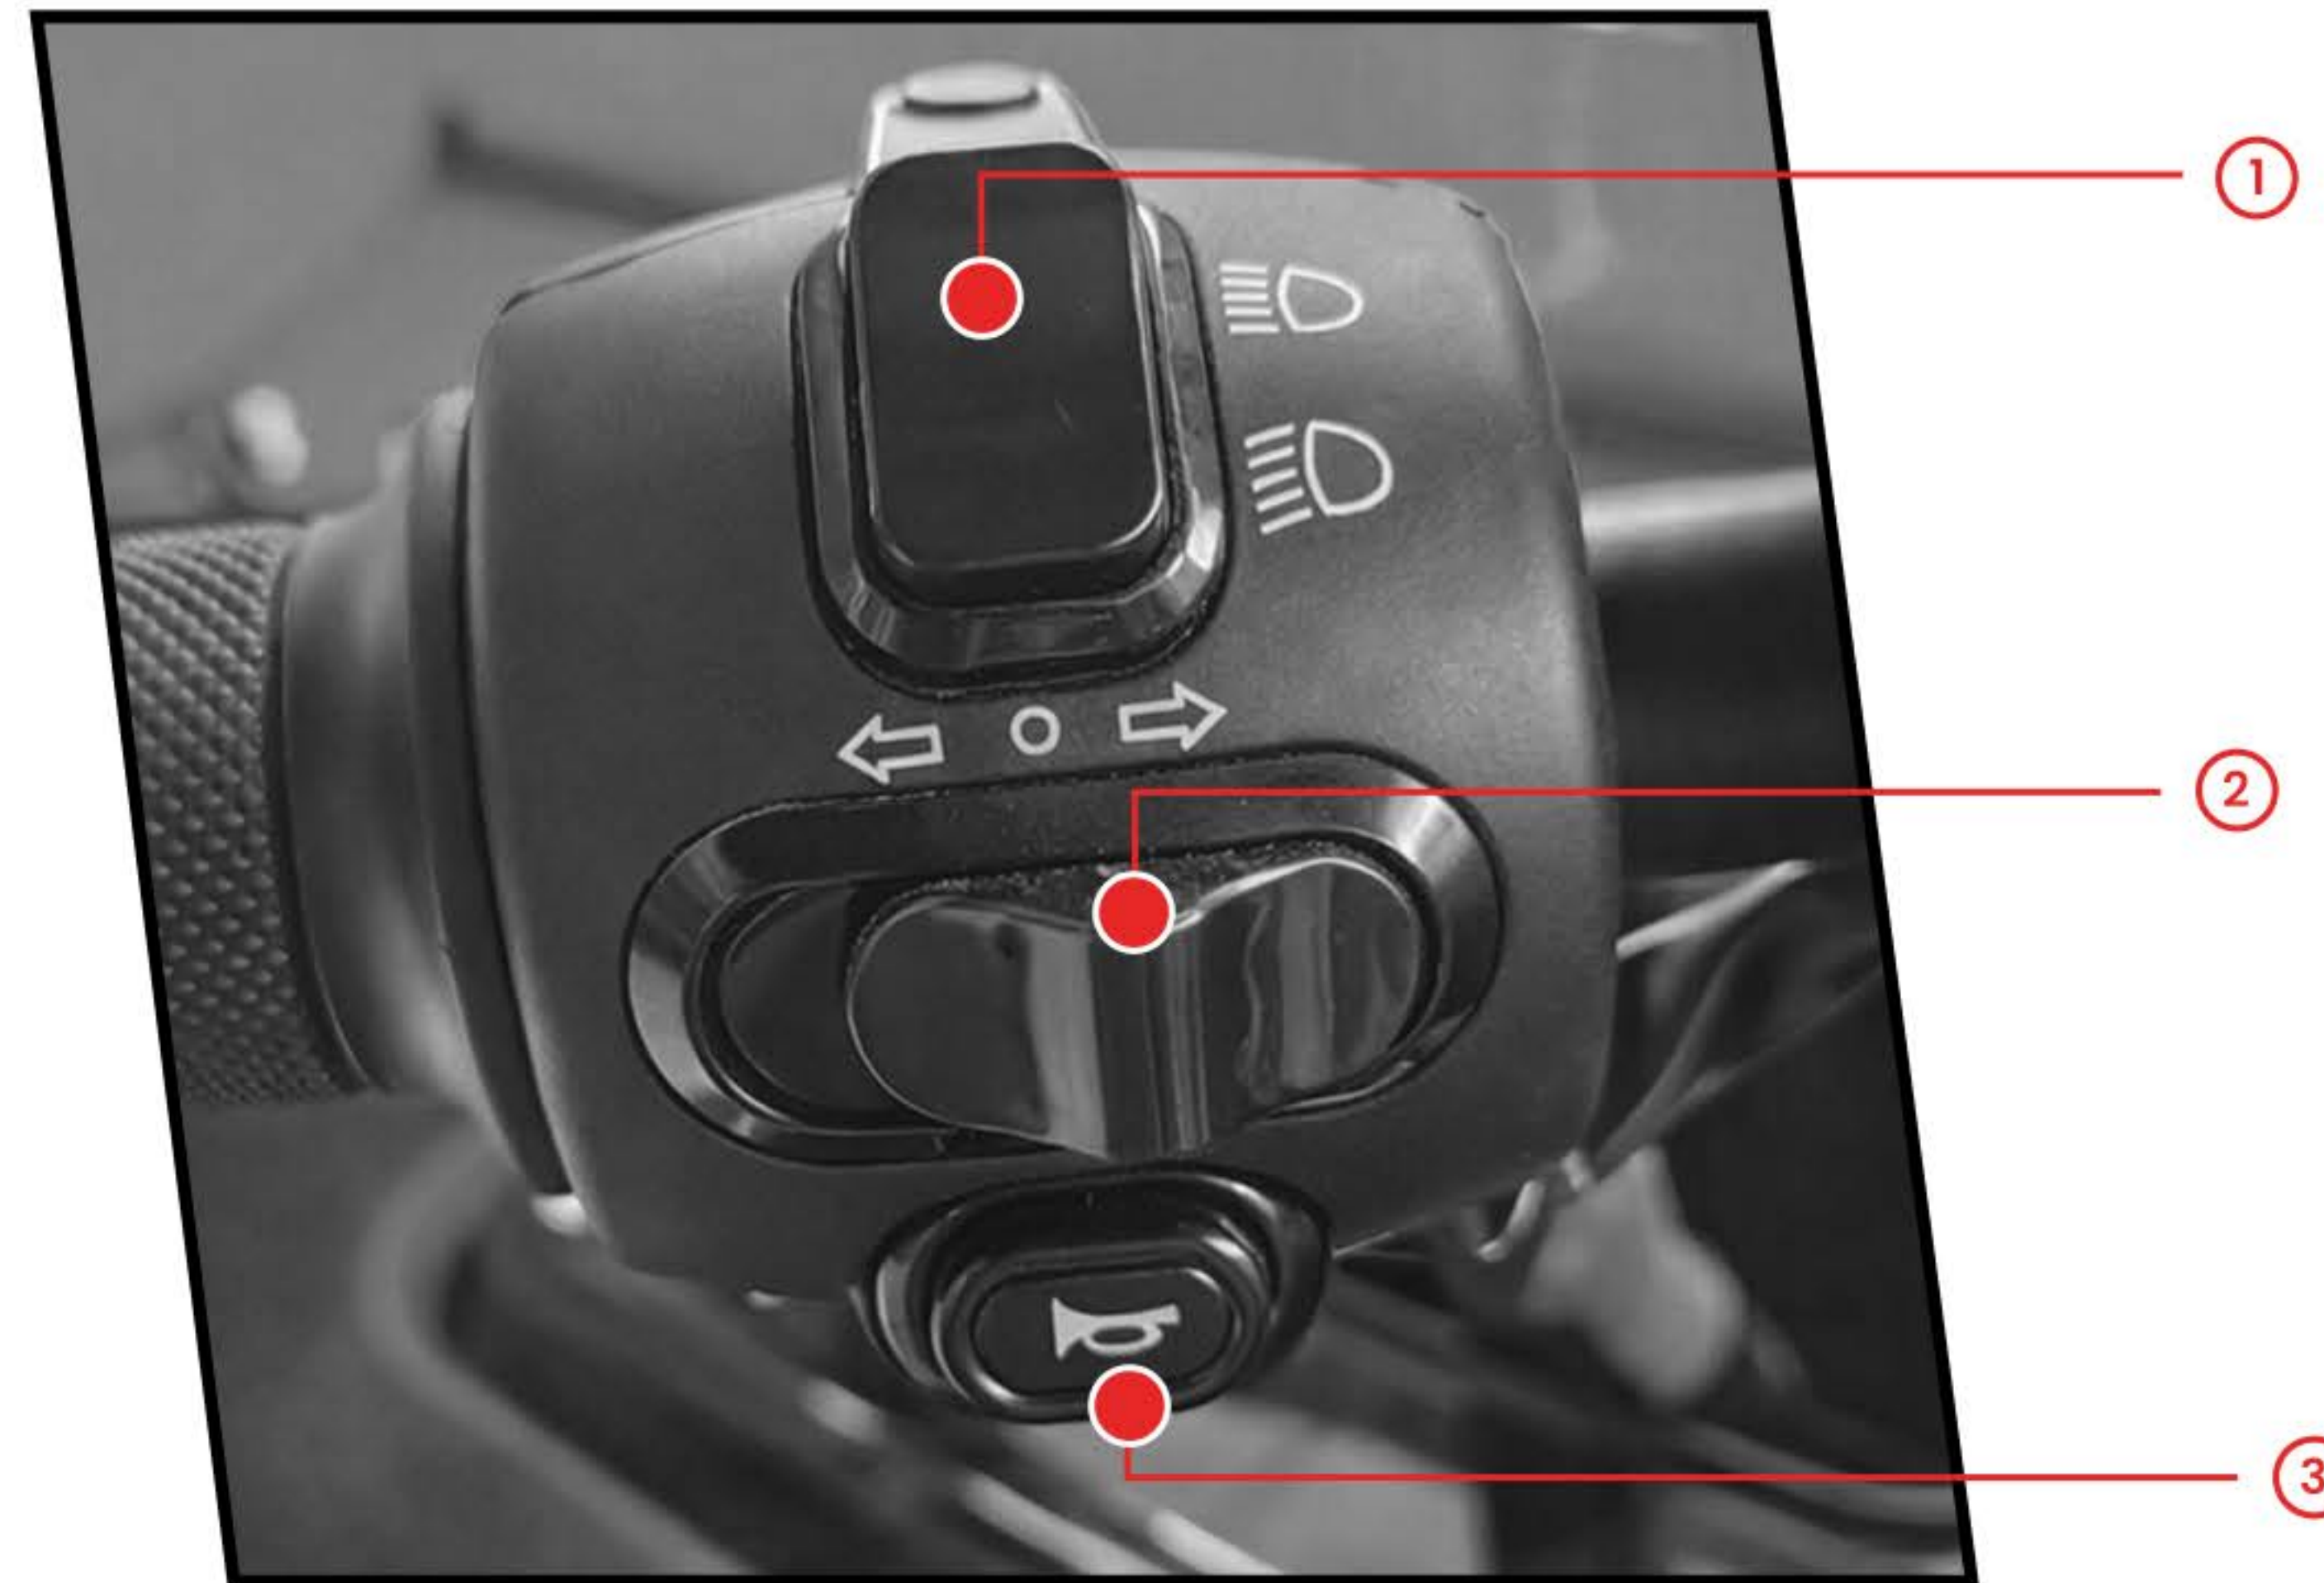

1. HEADLIGHT SWITCH (HIGH / LOW BEAM)

- Push the upper switch up for High Beam and down for Low Beam.
- Use High Beam on highways or poorly lit roads.
- Use Low Beam for city and oncoming traffic conditions.

2. INDICATOR (TURN SIGNAL) SWITCH

- Slide the switch left (<-) for a left turn, and right (->) for a right turn.
- Slide the switch back to the center position to cancel the indicator.

3. HORN BUTTON

- Press the horn button to sound the horn.

Use only when necessary to alert other road user.

⚠ SAFETY NOTES

- Always confirm that indicators and headlight are working before each trip.
- Avoid using high beam continuously in city traffic.
- Do not press the horn button and indicator simultaneously for long durations.



1.SPEED MODE SWITCH (1–2–3)

Selects different power modes depending on road and load conditions:

MODE	USE
1	Economy mode – maximum range, low power(30km/h)
2	Standard mode – balanced performance(44km/h)
3	Power mode – maximum torque for steep roads or full load(60km/h)

2.LIGHT SWITCH

Left bulb icon

•headlight ON/ Automatically turns ON the low beam headlights.

Middle bulb

•Indicates the parking light is ON

Right circle

•Lights OFF / DRL only (depending on regulations)

3.REGENERATIVE BRAKING BUTTON

Press the Regenerative Braking Button to activate regenerative braking. The vehicle will automatically decelerate to approximately 15 km/h.

⚠ SAFETY NOTES

- Never switch between Drive and Reverse while moving.
- Always engage Parking mode before leaving the vehicle.
- Avoid pressing multiple switches at once.
- Switch OFF main power during charging or maintenance.

BATTERY & CHARGING INSTRUCTIONS




BATTERY TYPE	LiFePO₄	CHARGER TYPE	ON BOARD CHARGER
BATTERY CAPACITY	20 KWH	CHARGING TIME	APPROXIMATELY 6 HOURS
BATTERY NOMINAL VOLTAGE	64 V	EXPECTED RANGE PER CHARGE	250 – 300 KM (APPROX)

CHARGING GUIDELINES

- Park on a flat, dry area and switch OFF the ignition.
- Plug the on board charger into a 230 V AC earthed outlet.
- The indicator light shows charging progress; it turns green/off when full.
- Always use the original Garudan charger and ensure proper ventilation.
- Do not charge immediately after long use allow 30 minutes to cool.
- Avoid charging in rain or direct sunlight.
- After fully inserting the charging connector into the charging port, turn on the charging power switch.
- Do not disconnect the charging connector while charging.

BATTERY CARE & SAFETY

- Recharge if the level falls below 20 %.
- Do not open, modify, or repair the battery or charger yourself.
- Keep away from flames and children while charging.
- If unusual heat or smell occurs, disconnect immediately and contact your dealer.
- Disconnect the charger when the battery reaches 100% charge.
- You may charge the battery whenever you have free time.
- Do not park the vehicle near fire or heat sources.
- Water Wading Limit: Maximum Depth: Up to 1 feet from the ground level.
- LONG TERM STORAGE: Maintain battery charge between 50% to 70% and turn OFF the BMS to prevent power drain and ensure battery health.

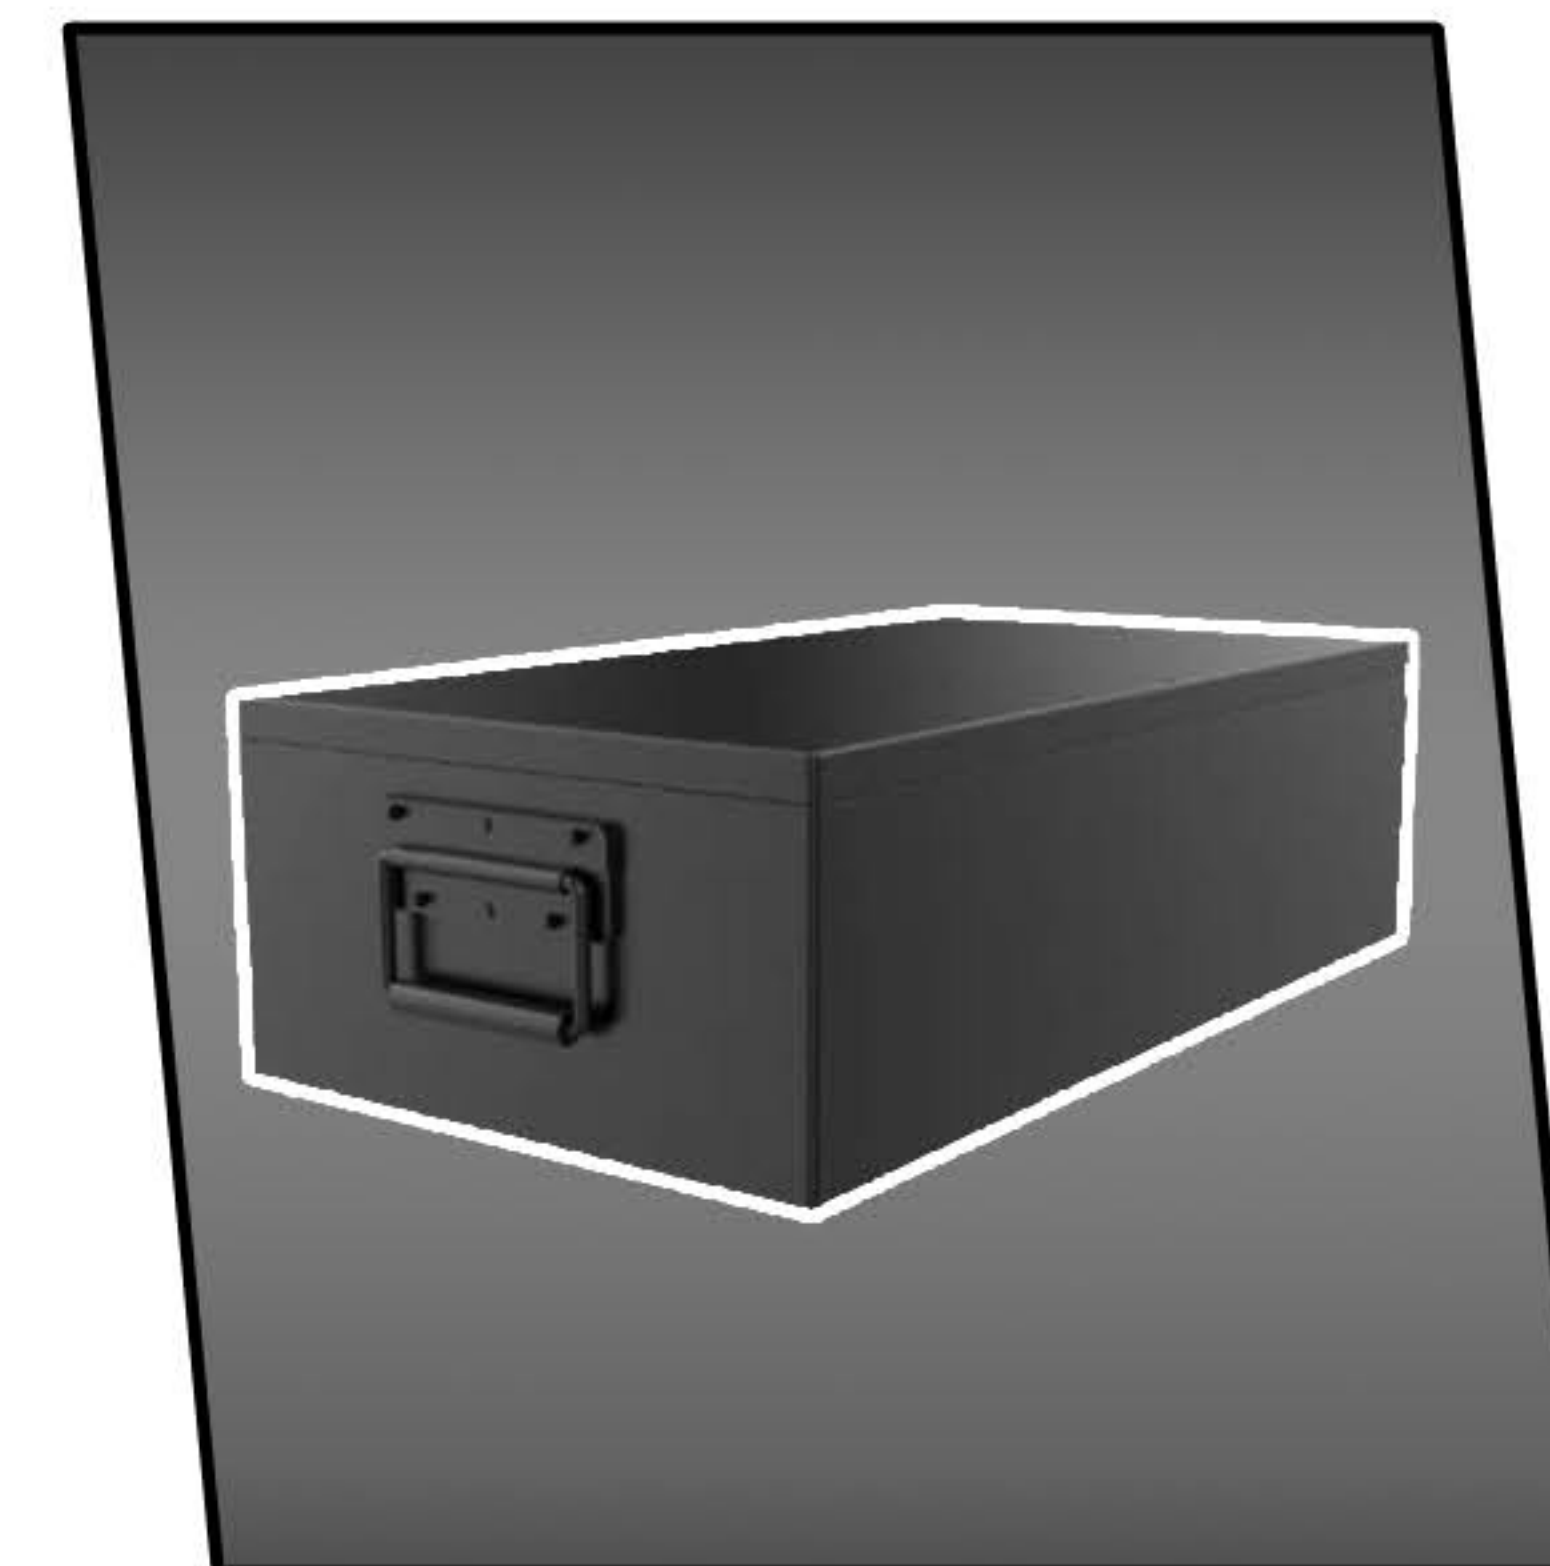

TYRE & TYRE PRESSURE

TUBE TYRE:

Your Neptune Electric Three Wheeler is equipped with durable tube-type tyres designed for stability, load capacity, and long life.

In case of a puncture, air leakage can occur faster than in tubeless tyres, so stop the vehicle safely and visit the nearest tyre repair shop immediately.



WHEEL PUNCTURE:


- Visit the nearest authorized tyre repair shop to repair or replace the tube.
- Use the vulcanizing or patch method only, avoid liquid sealants.
- Inspect the rim and tyre bead area for sharp objects or cracks before refitting.
- Always balance the wheel properly after refitting.

⚠ CAUTION:

- Do not use tyres or tubes with visible damage, bulges, or cuts.
- While removing or refitting tyres, handle carefully to avoid pinching the tube.
- Ensure correct rotation direction (arrow mark on tyre sidewall).
- Maintain specified air pressure for best performance and range.

MODEL	FRONT TYRE	REAR TYRE
NEPTUNE ELECTRIC THREE WHEELER	30 PSI	35 PSI

TYRE ROTATION

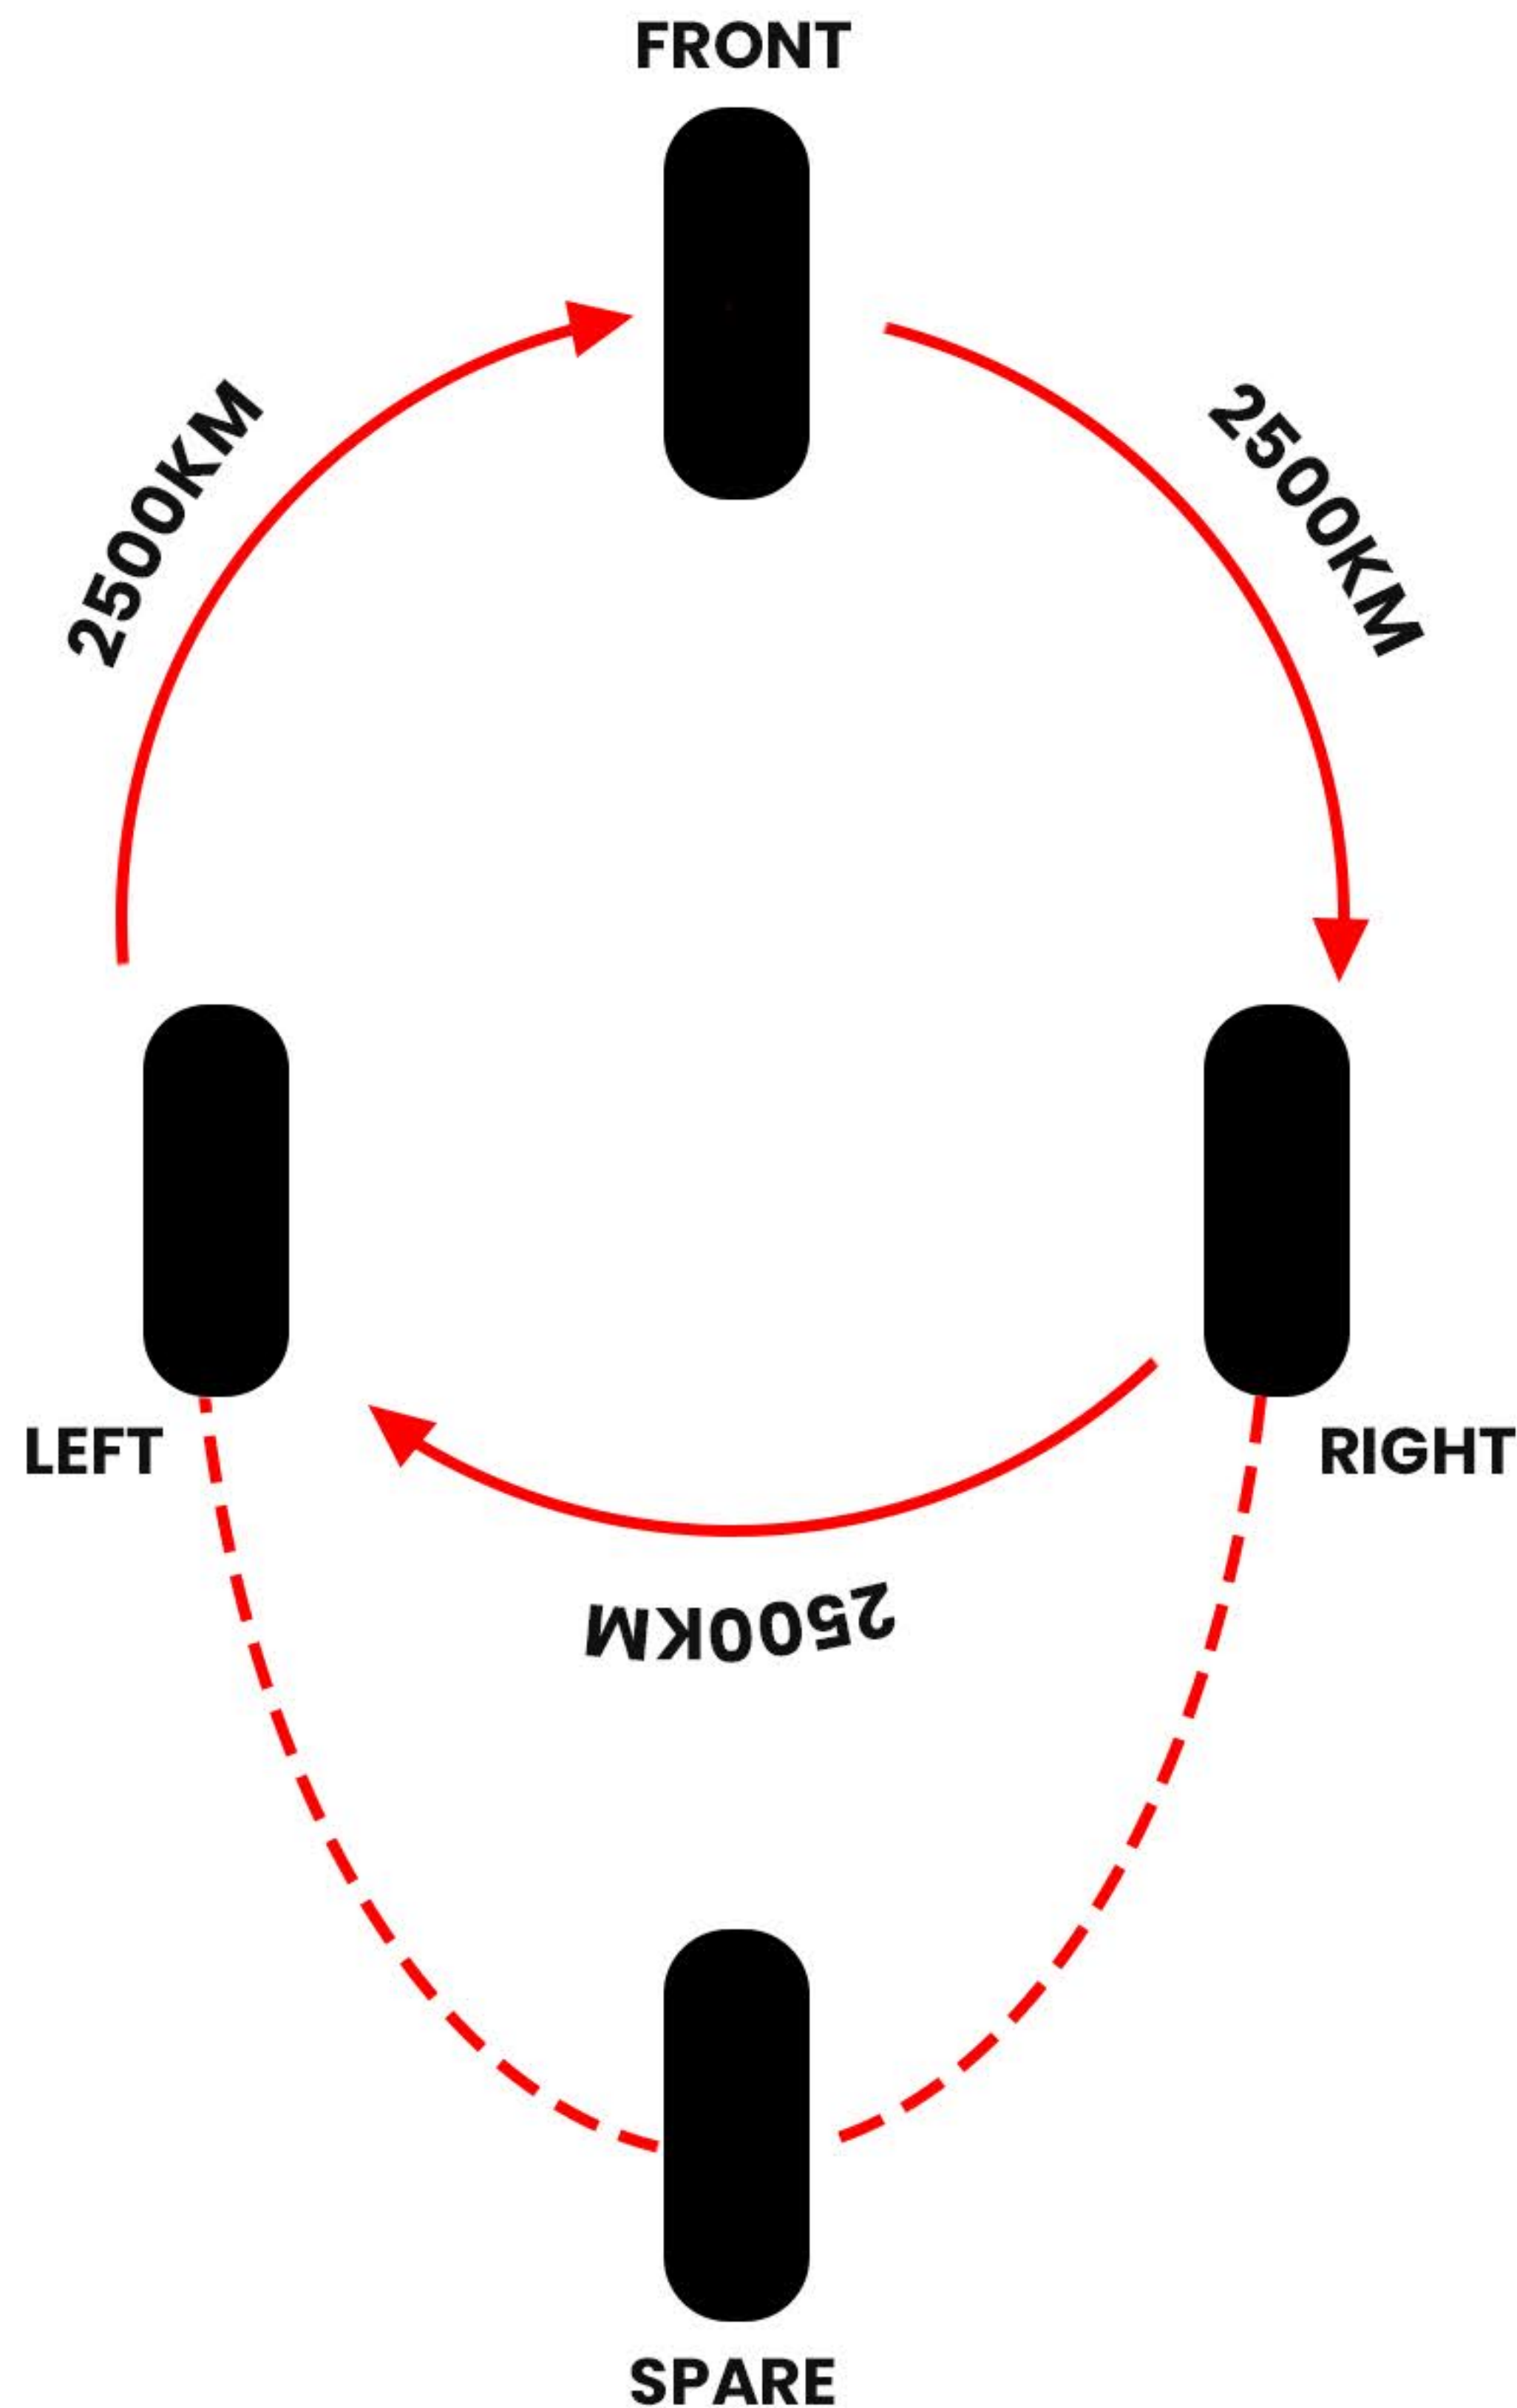

Rotation Method:

1. Move the Front Tyre to the Rear Right position.
 2. Move the Rear Right Tyre to the Rear Left position.
 3. Move the Rear Left Tyre to the Front position.
- (Adjust this pattern if your tyre sizes differ between the front and rear.)

When to Replace the Tyres:

- The tread is worn below the recommended limit.
- The tyre has cuts, cracks, or sidewall damage.
- The tyre has a bulge or deformation.
- The tyre cannot hold the correct air pressure.
- The tyre has been severely damaged by impact.

Safety Precautions:

- Rotate the tyres every 2,500 km.
- Maintain the recommended tyre pressure.
- Replace damaged tyres immediately.
- Tighten wheel nuts to the specified torque after installation.
- After tyre rotation, drive carefully for the first few kilometres and recheck the wheel nut tightness.



GARUDAN (PVT) LTD

**SERVICES & SPARE PARTS: 0773969427, 0217856180
NO 13, GALLE ROAD, MOUNT LAVINIA, COLOMBO 10379.**