


Digital Clock User Manual

Conor Murphy

Gavin MacAonughsa

(who needs a Casio?)

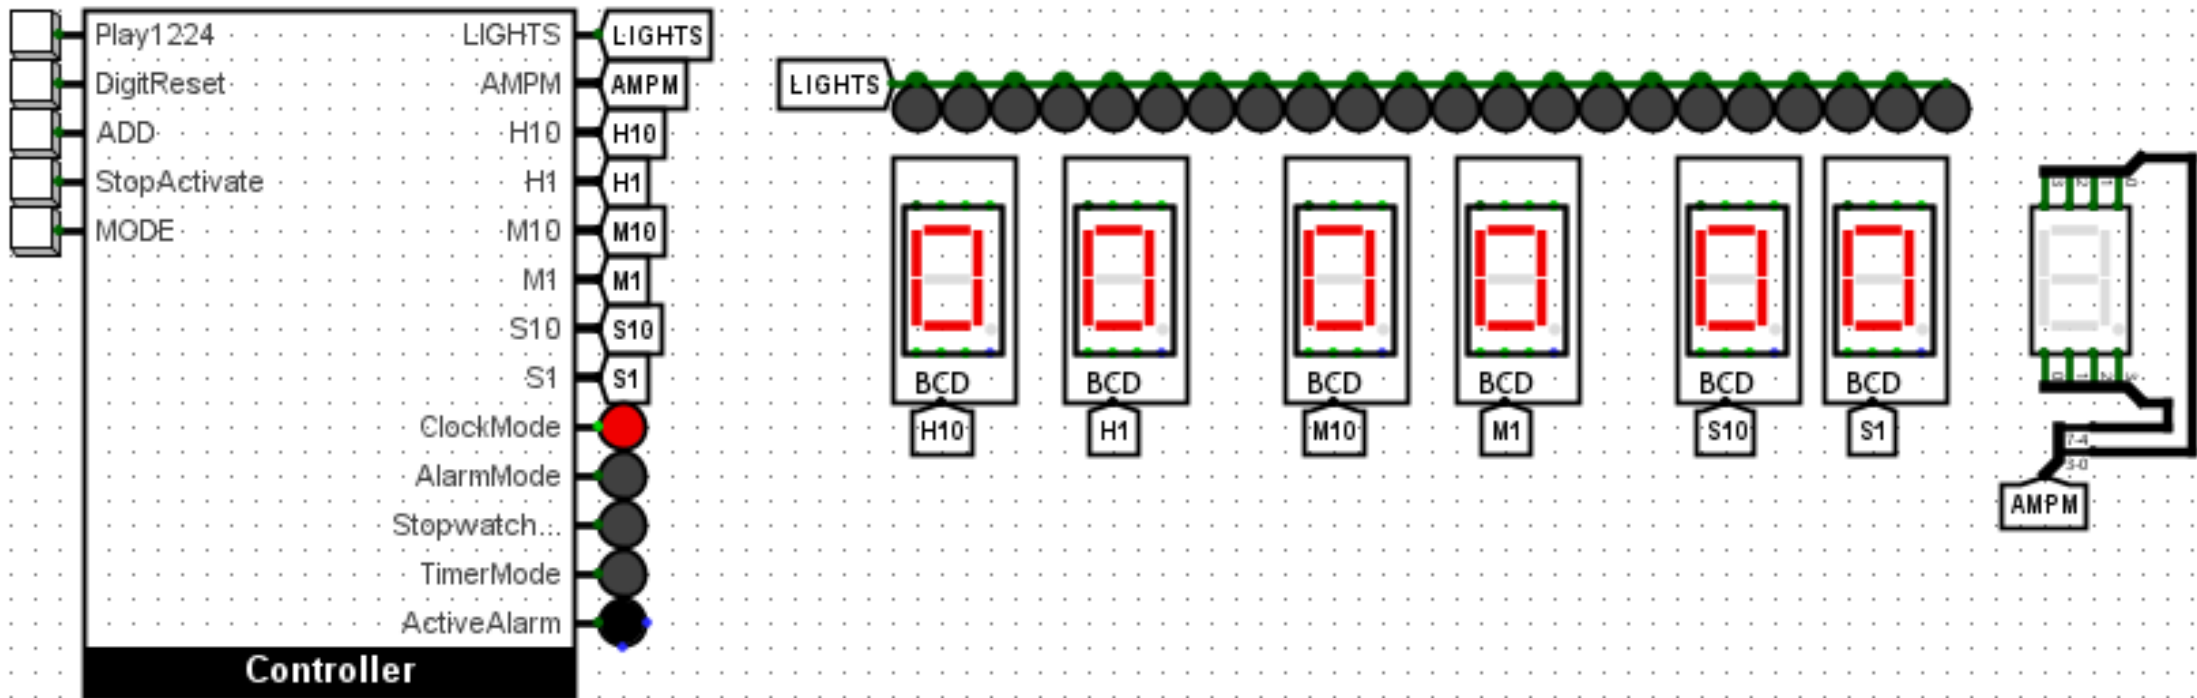



Contents:

1. Changing Mode
2. Set the Time
3. Switching Clock display
4. Using Alarm
5. Using Stopwatch
6. Using Timer

Changing Mode

- When using the Clock for the first time, the Mode should be set to ClockMode.
- This is signified in the bottom Right corner of controller. The LED beside Each Mode is on when this mode is selected.
- To change Mode, press the MODE button.
- In the picture the Mode is set to Alarm as the corresponding LED is on

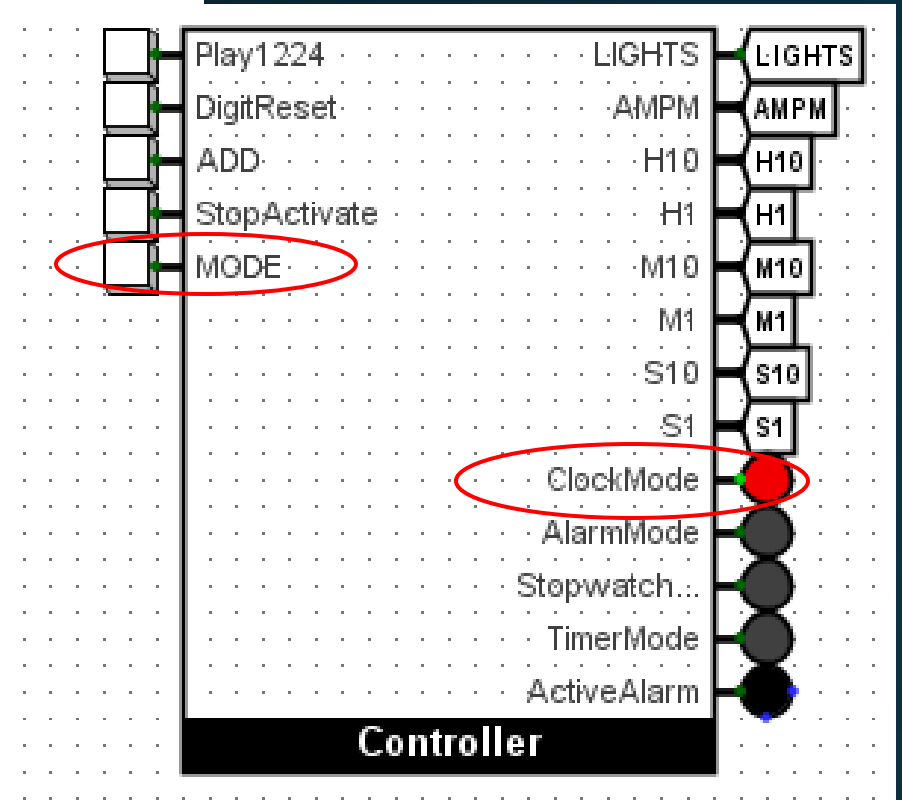

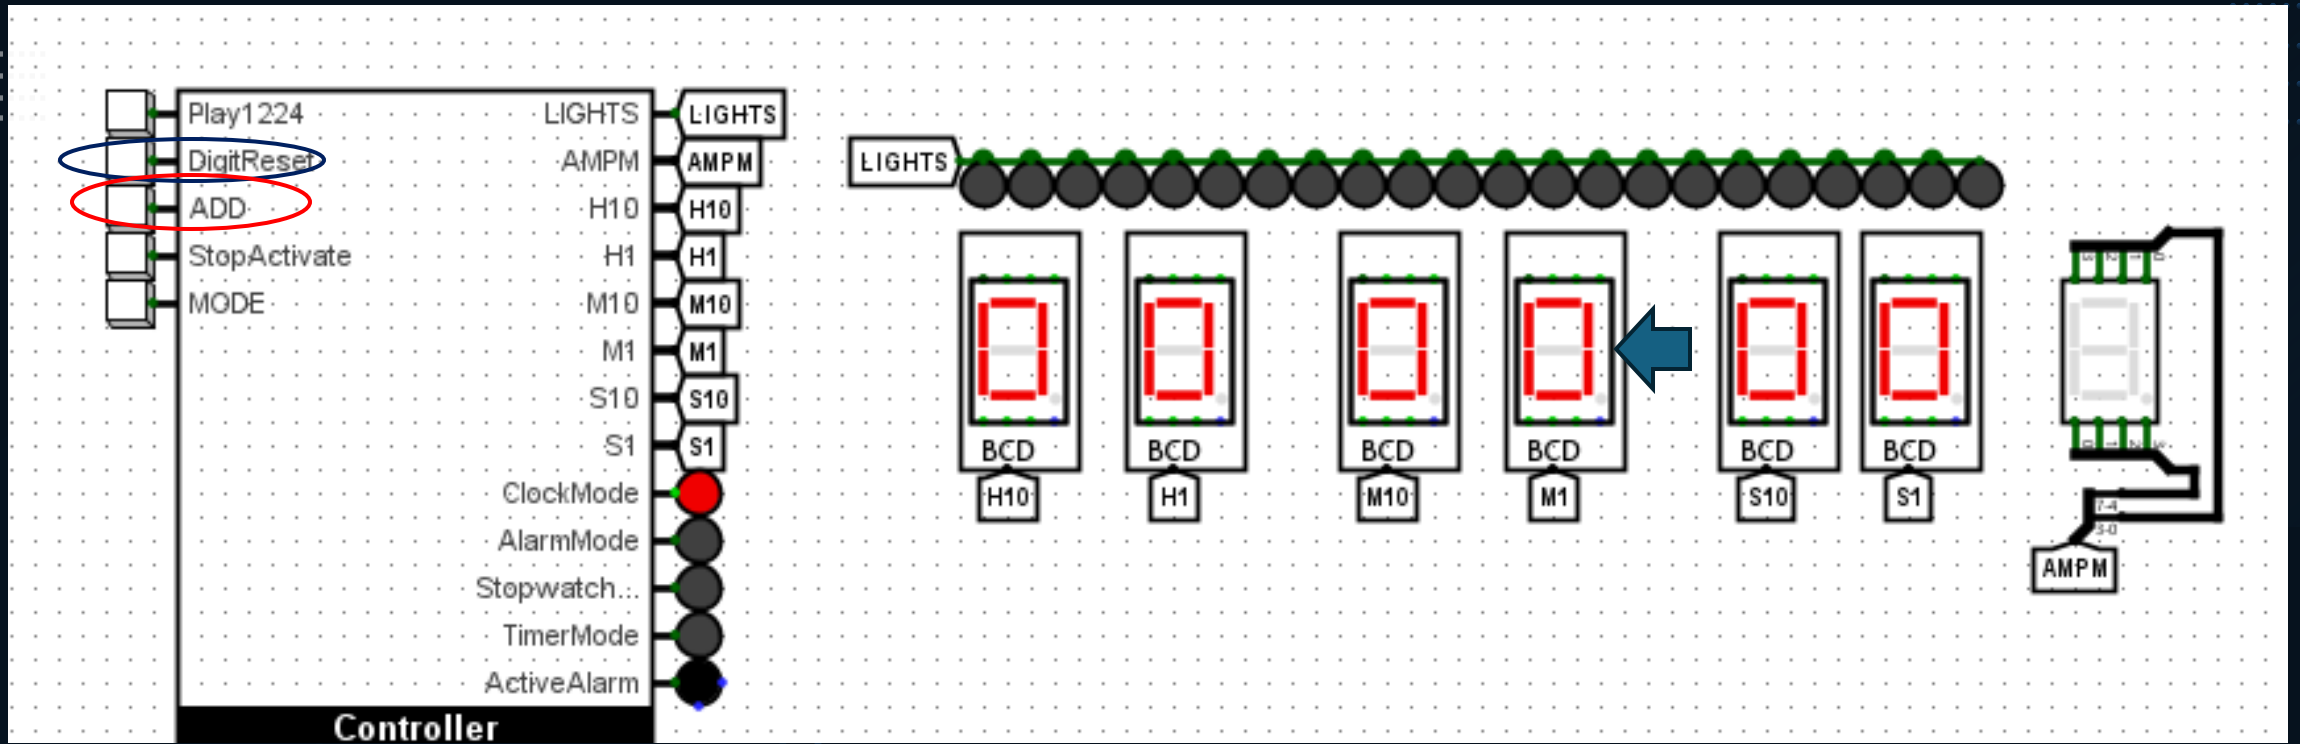

Set the Time

When using the clock for the first time, the time is set to 00.00.00

To Activate your clock, ensure to press Ctrl K to start the flow of time


To change the time, first ensure you are on the Clock MODE use the ADD button to increment the clock

The add button should be set to change the seconds between 0-9

To switch the digit you want to change, press the DigitReset button, this enables you to change the minutes and hours of the clock.



Switching Clock Display

- To change the Clock to display the AMPM display, click the Play1224 Button, the time should adjust automatically.
- You can set the time in this display also.
- The display should have an A or P as shown in the picture, when in AMPM mode. A signifies AM and P signifies PM
- To change the clock display back to 24 Hours simply click Play1224 again.

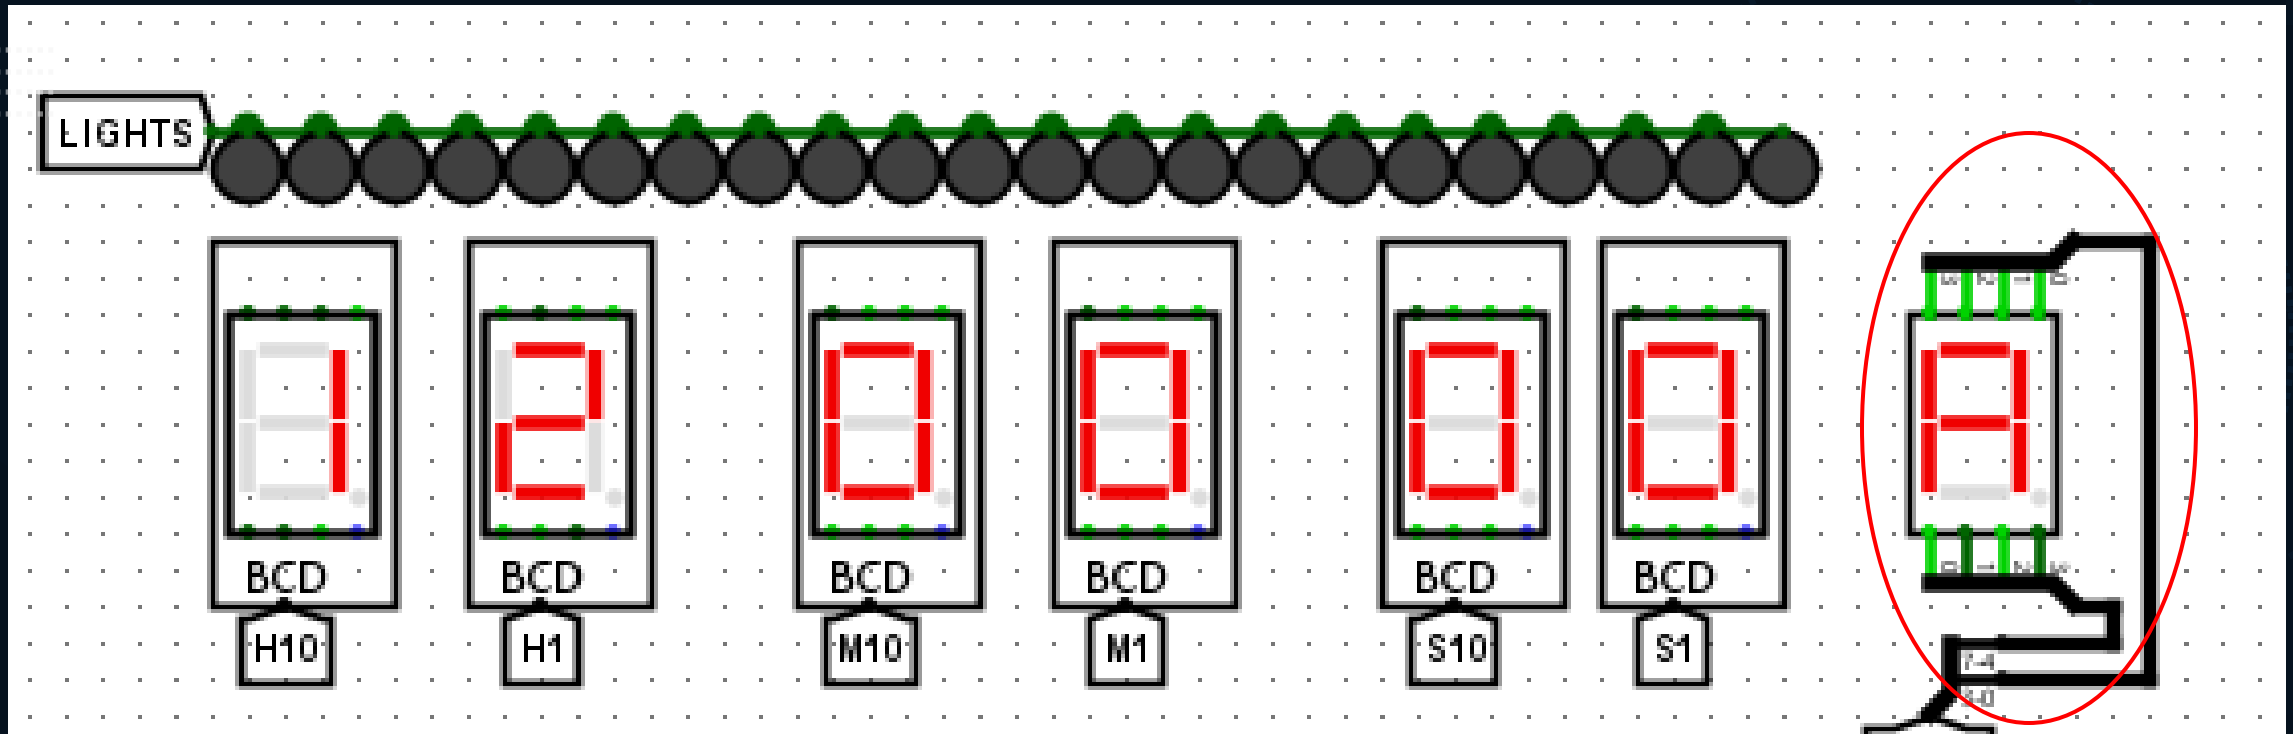

Using Alarm

- First, select the Alarm mode
- The alarm should initially be disabled
- To Activate alarm, press the StopActivate button. Ensure that you are in the alarm mode before doing this.
- The ActiveAlarm LED should display a Green LED when Alarm is Active as shown.
- If you want to Disable the Alarm press StopActive again, the Green LED should switch off again
- To change the Alarm Time, use the ADD button to increment alarm time.
- The add button should be set to change the seconds between 0-9 initially
- To switch the digit you want to change, press the DigitReset button, this enables you to change the minutes and hours of the Alarm.
- You can change the Display of Alarm to AMPM using Play1224 similar to clock.
- When the Alarm is triggered the LED display above the clock display should Flash for 30 seconds,
- To turn the flash off Manually press the StopActivate. (Note that if you are in alarm mode this will also disable the alarm so you must Activate it again. This should not be a problem if you Stop the flash when you are not in Alarm mode.)

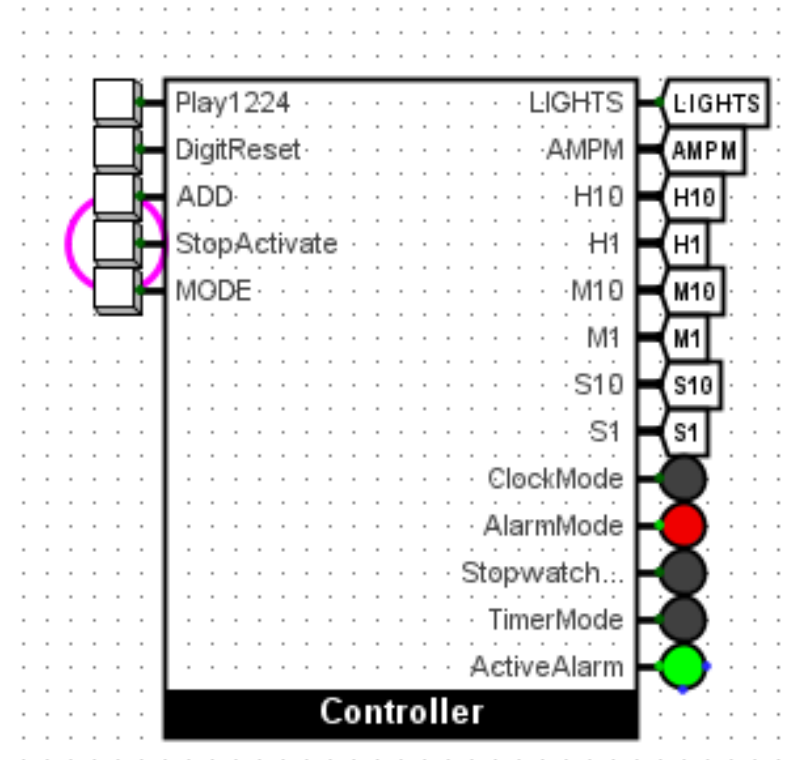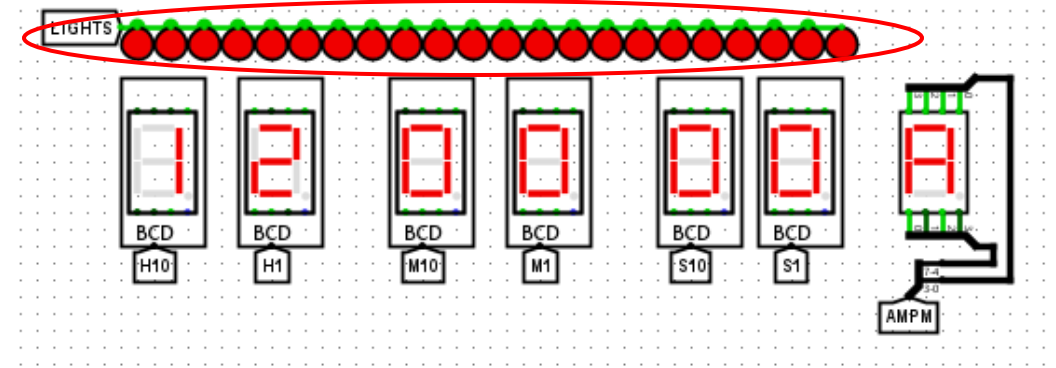

Using Stopwatch


To Use Stopwatch ensure that you are on Stopwatch Mode.

The Stopwatch has a maximum value of 99.59.59. If this amount of time surpasses the stopwatch begins again at 0.

Simply Press the Play1224 Button to start the stopwatch.

To pause the Stopwatch press Play1224 again.

To Reset the stopwatch to 00.00.00, press the DigitReset button.

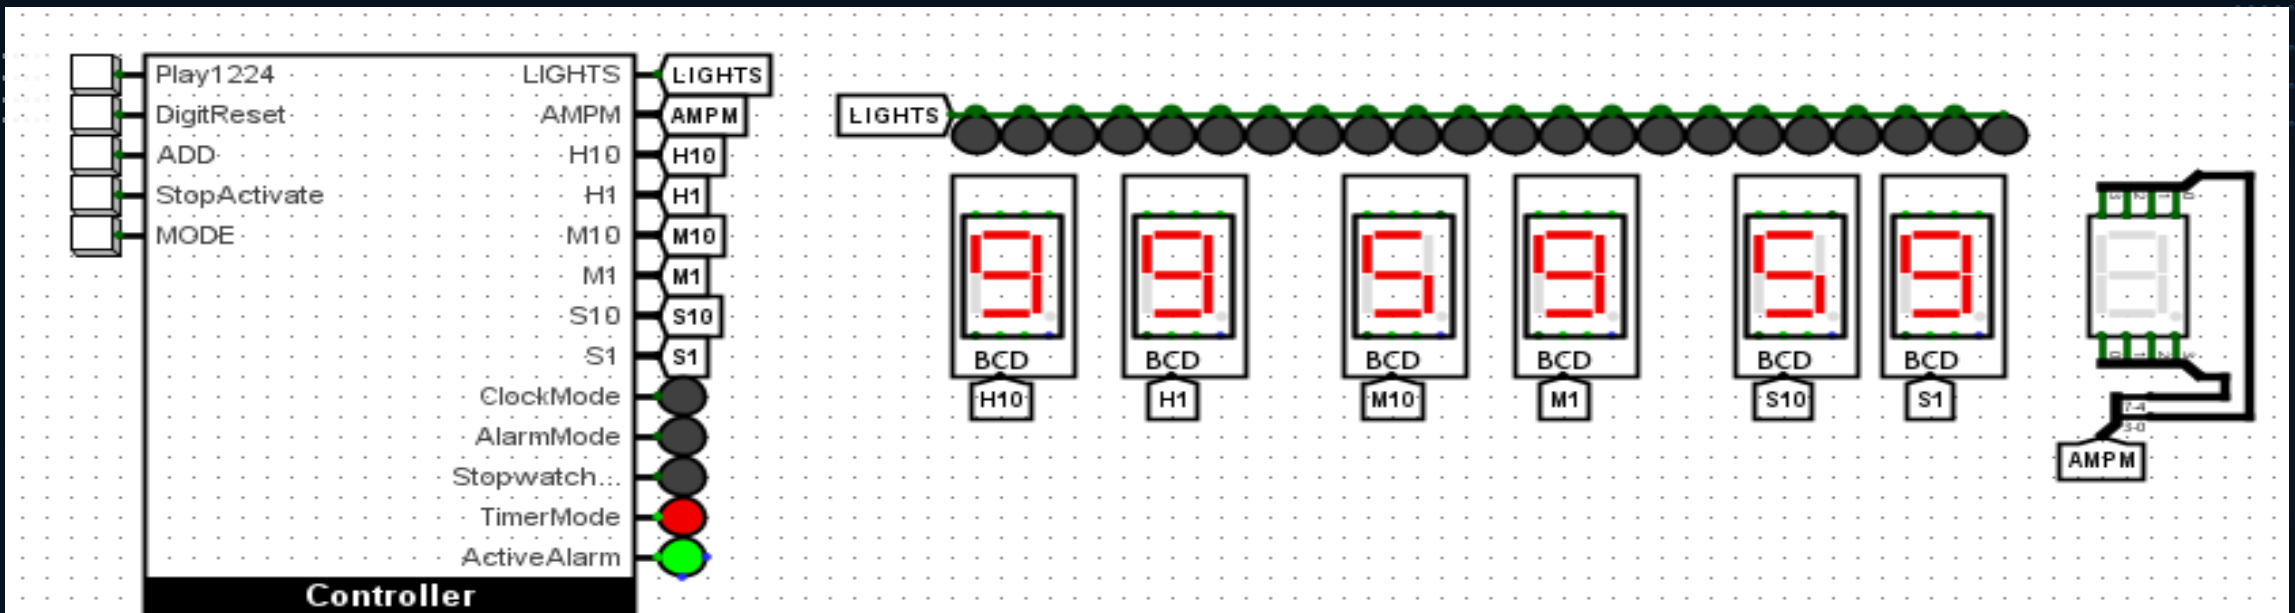

Using Timer

- To set the timer ensure that you are on the TimerMode.
- To change the Timer, use the ADD button to increment timer.
- The add button should be set to change the seconds between 0-9 initially
- To switch the digit you want to change, press the DigitReset button, this enables you to change the minutes and hours of the Timer.
- The timer has a Maximum value of 99.59.59
- To start the timer, press the Play1224 button.
- If you want to pause the timer Press the 1224 button again.
- To reset the timer, Press the StopActivate button. (the timer automatically resets if the time runs out)
- When the timer runs out, the LED display above the clock display should Flash for 30 seconds,
- To turn the flash off Manually press the StopActivate.