

LC-600TM

LOAD CONTROLLER DEVICE



For Business or Industrial Applications

WARNING: HAVE THE LC-600 LOAD CONTROLLER DEVICE INSTALLED BY A LICENSED ELECTRICIAN OR ELECTRICAL CONTRACTOR ONLY! INSTALLING ELECTRICAL EQUIPMENT MAY RESULT IN SHOCK, SERIOUS INJURY, OR EVEN DEATH.

PLEASE READ BEFORE INSTALLING

INSTALLATION GUIDE

Congratulations on your purchase of an Xeco LC-600 LOAD CONTROLLER DEVICE (Model LC-600). Please observe this owners manual and follow the instructions listed herein to insure the most satisfying experience regarding the technology and its capabilities.

The information in this document is believed to be accurate and reliable. However, Xeco Energy Corporation cannot accept any financial or other responsibilities that may result from the use of this information. No warranties are granted or extended by this document. Xeco Energy Corporation reserves the right to change any or all information contained herein without prior written notice. Revisions may be issued at the time of such changes and/or deletions. Any duplication of this manual or any of its parts without expressed written permission from Xeco Energy Corporation is strictly prohibited.

SAFETY

Signal Word Descriptions

All cautions and warnings contain signal words, which call attention to safety messages and designate the degree of hazard seriousness. The following table shows the signal words and their meanings that may be used in this document.

Term Example Definition



CAUTION

A signal word accompanied by a safety shape that indicates a potentially hazardous situation or unsafe practice. If not avoided, the action may result in minor or moderate personal injury or equipment damage. A CAUTION is highlighted in yellow.



CAUTION


A signal word that indicates a situation or unsafe practice, which if not avoided may result in equipment damage. A CAUTION is highlighted in yellow.



WARNING

A signal word accompanied by a safety shape that indicates indicates a potentially hazardous situation. If not avoided, the action may result in serious injury or death. A WARNING is highlighted in orange.

**LC-600
3 Phase System
480 Volt Panel**

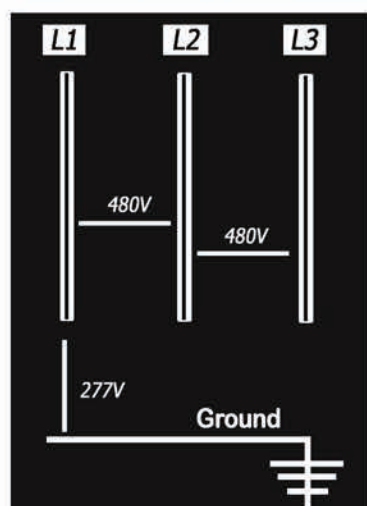

DANGER !!!

Verify voltage and grounding.

L1 to L2 = 480volts

L2 to L3 = 480volts

L1, L2, L3 to ground = Approx. 280 volts

Always verify the GROUND is ISOLATED!

Warning:

HAVE THE LC-600 INSTALLED BY A LICENSED ELECTRICIAN OR ELECTRICAL CONTRACTOR ONLY. INSTALLING ELECTRICAL EQUIPMENT MAY RESULT IN SHOCK, SERIOUS INJURY, OR EVEN DEATH.

BEFORE INSTALLING THE LC-600 UNIT

BEFORE INSTALLING THE LC-600 UNIT

Warning:

To reduce the risk of electrical shock, do not expose the LC-600 to rain or moisture. Dangerous high voltages are present inside the enclosure. Do not remove the cover unless the unit is being installed. There are no user serviceable parts inside. We recommend that this unit be installed by an electrician or qualified electrical contractor.

1. Prior to INSTALLING THE LC-600, MAKE CERTAIN THE VOLTAGE IN THE PANEL IS 480 VOLTS or LESS ONLY (3-Phase).
2. NEVER install the LC-600 into a panel with any voltage higher than 480 VOLTS.
3. The LC-600 can only be installed into a three phase panel.
4. The LC-600 is designed to condition "ALL" power consumed by inductive loads and electric motors.
5. If there are no spaces available at the breaker panel, a sub panel can be installed for a dedicated breaker.
6. The LC-600 may be installed on a 60 amp three pole breaker.
7. The LC-600 MAY BE INSTALLED INDOORS OR OUTDOORS.
8. Read instructions before you install the LC-600 unit.

TOOLS NEEDED TO INSTALL INDOOR OR OUTDOOR

Power drill, 1/4" drill bit, phillips and flat-head screwdriver.

For outdoor installs, the LC-600 is a NEMA 4X rated box, conduit or weather tight connectors must be used with proper mounting screws and anchors.



IMPORTANT INFORMATION BEFORE INSTALLING THE LC-600

You must first understand a 480/277 electrical system!

- ***A 480 Volt system DOES NOT have a neutral in the panel box. This is the correct system for the LC-600 to be installed in. Only a green or base ground wire will be present.***
- ***A 277 Volt system has a neutral bar with neutral wires either white or grey in color. DO NOT install the LC-600 system in this type of panel box. This will result in damage to the LC-600 and will void any warranties.***

INSTALLATION INSTRUCTIONS

INSTRUCTIONS BEFORE CONNECTING THE LC-600.

1. Make sure to check the equipment that the LC-600 is connecting to, to make sure the equipment has an AMP RATING of 60 AMPS or LESS. Although the LC-600 is rated for 60 AMPS, it is preferred to install the LC-600 onto equipment having 60 AMPS or LESS to insure that there are no overloads during operation.
2. Make sure the installation location desired is in an area that does not compromise safety during operation.
3. During installation of the ELC-600, make sure the equipment that the LC-600 is being installed onto is shut off at the main switch before connecting.
4. LOCATE THE BREAKER THAT IS DIRECTLY CONNECTED TO THE EQUIPMENT.

TO BEGIN CONNECTING THE LC-600 DEVICE

NOTE: The LC-600 should be mounted in an open area and at least 4 foot above ground level to insure that the internal radio controls can communicate with the gateway and software controls of the system.

- 1 First mount the Xeco600. Then mount the LC-600 device above the Xeco600 making sure to align both units to the right side.



- 2 Connect the Xeco600 connecting wires to the 'Contactor' located inside the LC-600 device using the supplied 'flex' conduit and connector.



- 3 Run 6-Gauge wire with properly sized conduit and connectors from the 'LOAD-SIDE' of the 'Fused Disconnect or Sub-Panel to the LC-600's internal BREAKER.



- 4 Once connected, turn on the BREAKER to the equipment. Then, turn 'ON' the BREAKER to the LC-600. And last, turn 'ON' the BREAKER to the Sub-Panel or Fused Disconnect.

NOW ITS TIME TO ACTIVATE THE XECO SOFTWARE TO BEGIN ACTIVATING THE SCHEDULING OF YOUR EQUIPMENT USING THE LC-600 DEVICE.

<GO TO THE NEXT PAGE>

SPECIFICATIONS

LC-600 Device Features:

- * Reduces electricity required by existing inductive loads.
- * Manages equipment loads for reducing demand in equipment.
- * Increases circuit vault protection in equipment.
- * Allows for automated use of production equipment.

Commercial Unit Specifications:

- * The unit may be installed in a three phase 480 volt system.
- * Predicted lifespan of 10 plus years
- * Let Through Voltage – 480V Line-to-Line
- * Current rate – 1.3 Amps
- * Load Rating – supports 60 Amps or higher circuit breaker

PRODUCT STATEMENTS



This is a Class A product. In a domestic environment, this product might cause radio interference, and the user might be required to take corrective measures. The standards compliance label on this device contains the CE mark which indicates that this system conforms to the provisions of the following European Council directives, laws, and standards:

*EN61000-6-3:2007 (Electromagnetic compatibility (EMC) Part 6-3: General Standards)
EN61000-6-1:2007 (Electromagnetic compatibility (EMC) Part 6-1: General Standards)*



*This device is certified pursuant to two different Part 15 rules section. For EU, this product is in conformity with the following standards and/or other normative documents: Restriction of Hazardous Substances (RoHS) Directive 2015/863/EU. **SAFETY** (art 3.1.a): IEC 60950-1: 2005 (2nd Edition) and EN 62311: 2008 **EMC** (art 3.1.b): EN 301 489-1/EN 301 489-17 Ver. 3.1.1 (assessed in conjunction with ITE standards EN 55032 and EN 55024 as Class B equipment). **SPECTRUM** (art 3.2): EN 300 328 Ver 2.1.1, EN 301 893 V2.1.1. The WLAN radio technology of this device is designed for use in all countries in the European Union, and Switzerland, Norway and Iceland. In France indoor use only is permitted.*



The components in this device has been recognized by U.L.. Representative samples of the components have been evaluated by U.L. and meet applicable U.L. requirements.

WARRANTY

Xeco offers a five (5) year limited warranty against defects in material and workmanship on the LC-600 device.

There is a 90-day money back satisfaction guarantee on the LC-600 which begins on the date of purchase.

All products returned to Xeco must be accompanied by an assigned Return Merchandise Authorization (RMA) Number. Shipping will not be refunded and a restocking fee may apply.

The LC-600 Product Registration Form must be completed in its entirety and sent to Xeco Energy Corporation within Ten (10) business days of the installation date to activate the product satisfaction guarantee and the warranty.

Other Conditions: The provisions of this warranty are in lieu of any other written warranty, whether express or implied, written or oral, including any warranty of merchantability or fitness for a particular purpose. The manufacturer's maximum liability shall not exceed the actual purchase price paid by you for the product. In no event shall the manufacturer be liable for special, incidental, consequential or indirect damages. This warranty does not cover a defect that resulted from improper or unreasonable use or maintenance, accident, improper packing upon return, unauthorized tampering, alteration or modification as determined solely by us. This warranty is void if the label bearing the serial number has been removed or defaced.

DISCLAIMER

Xeco Energy Corporation disclaims any liability for use of its products in applications other than those for which they are designed. Xeco is not responsible for damaged equipment, panel outages or property damage or any other type of occurrence due to incorrect installation or the manipulation of the recommended installation procedures of the LC-600 unit. The owner of this product assumes all responsibilities herein.



IMPORTANT NOTE: XECO ENERGY CORPORATION RESERVES THE RIGHT TO VOID ALL LC-600 PRODUCT WARRANTIES WITH IMPROPER USE OF XECO'S ENGINEERING PROTOCOL OR INSTALLATIONS PERFORMED BY NON-CERTIFIED ELECTRICIANS.