


STEP/DIR Mode

for example, A4988, DRV8825, LV8729, ST820 Etc.) According to the drive subdivision table, select the short-circuit cap shorting MS0-MS2. High level connection jumper cap, Low level does not require a jumper cap. From left to right, they are RST+SLP,MS2,MS1,MS0.

Note: If the A4988 or DRV8825 driver is used, it must be shorted with a jumper cap RST and Sleep work properly.

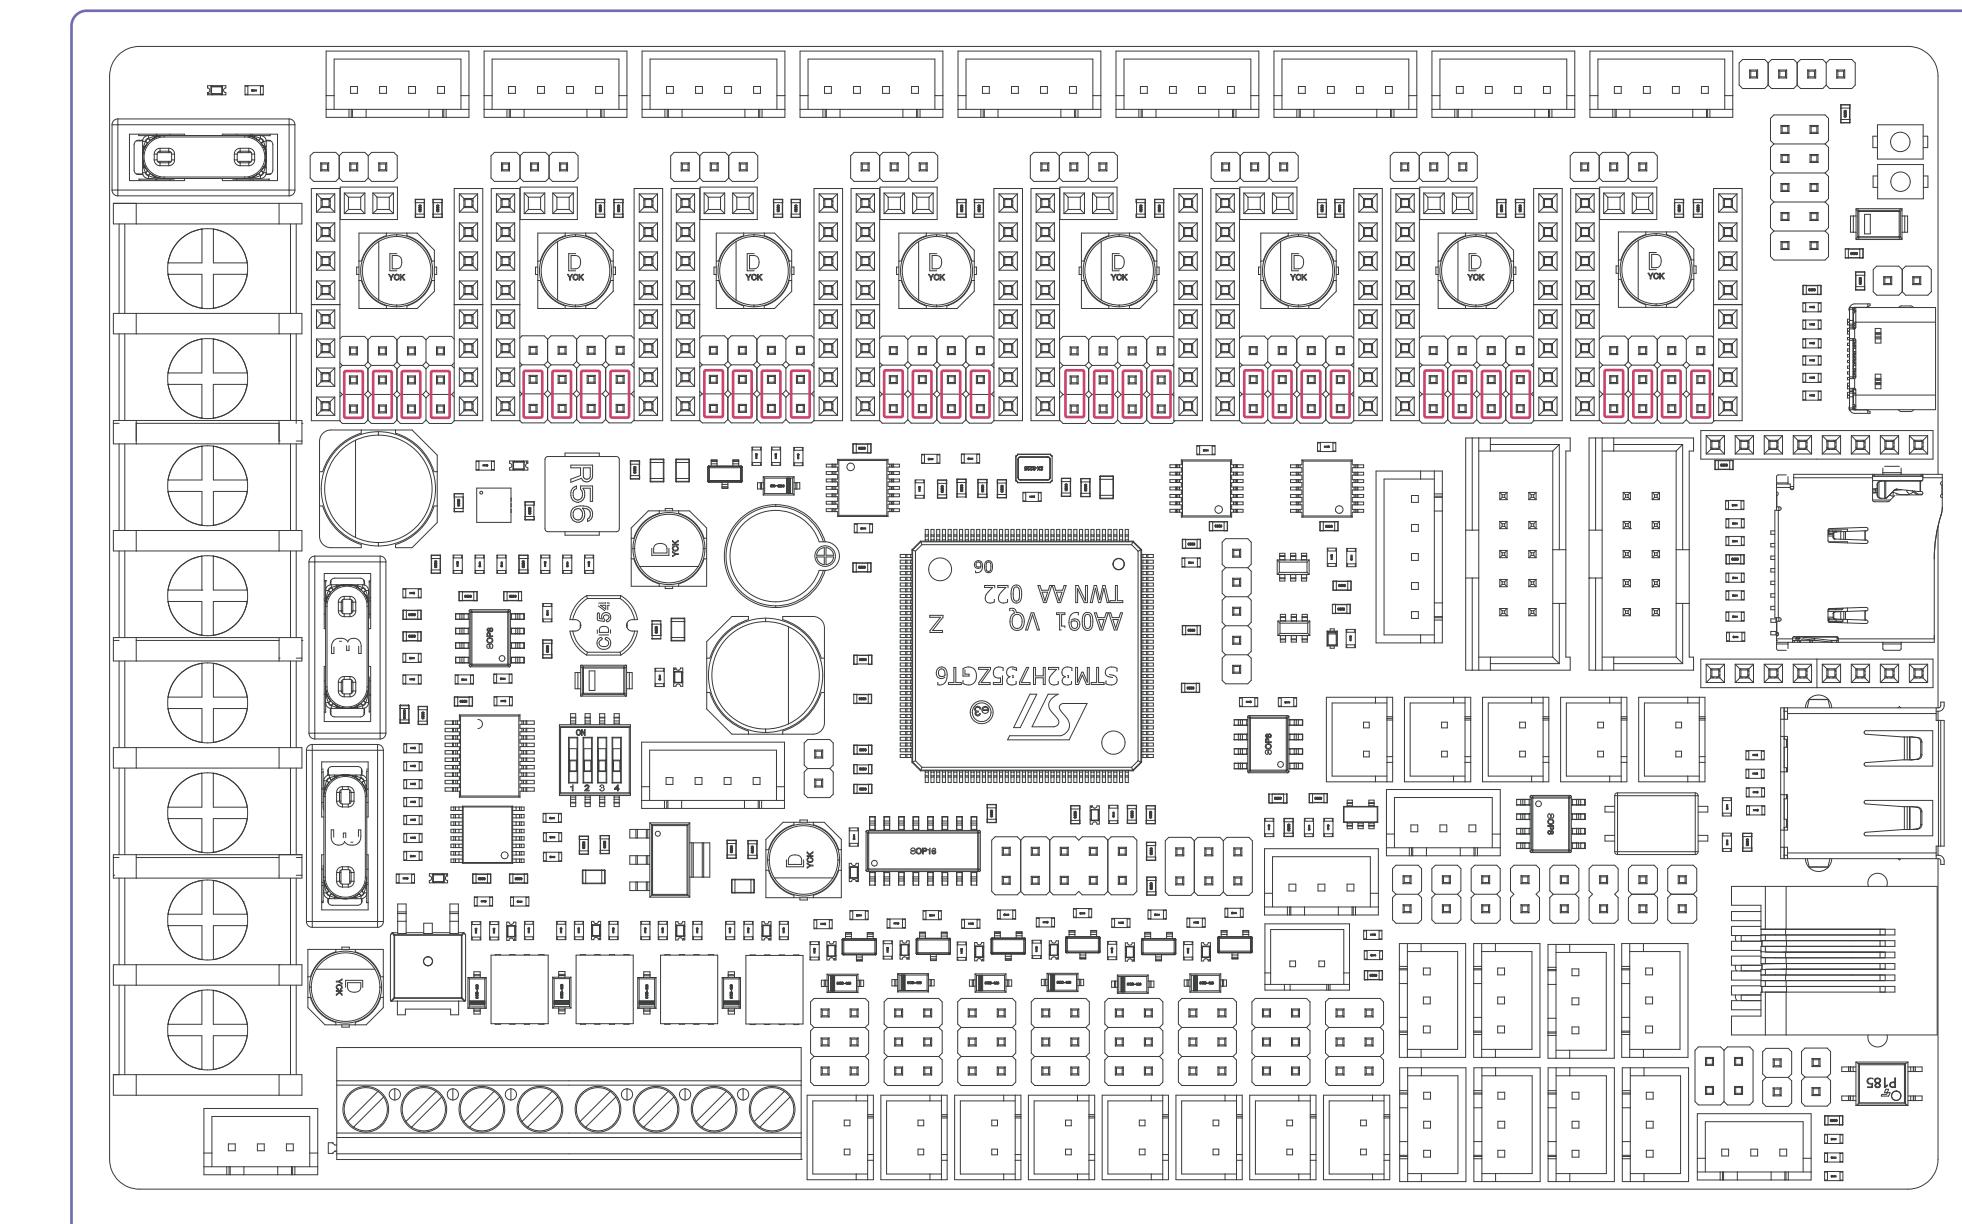

SPI Mode:


When using the SPI mode of the driver module, it is necessary to install the jumper as shown in the figure.

Geeetech Kirin V1.0

Interface Description


Document Version : V1.0

Date: 20230801

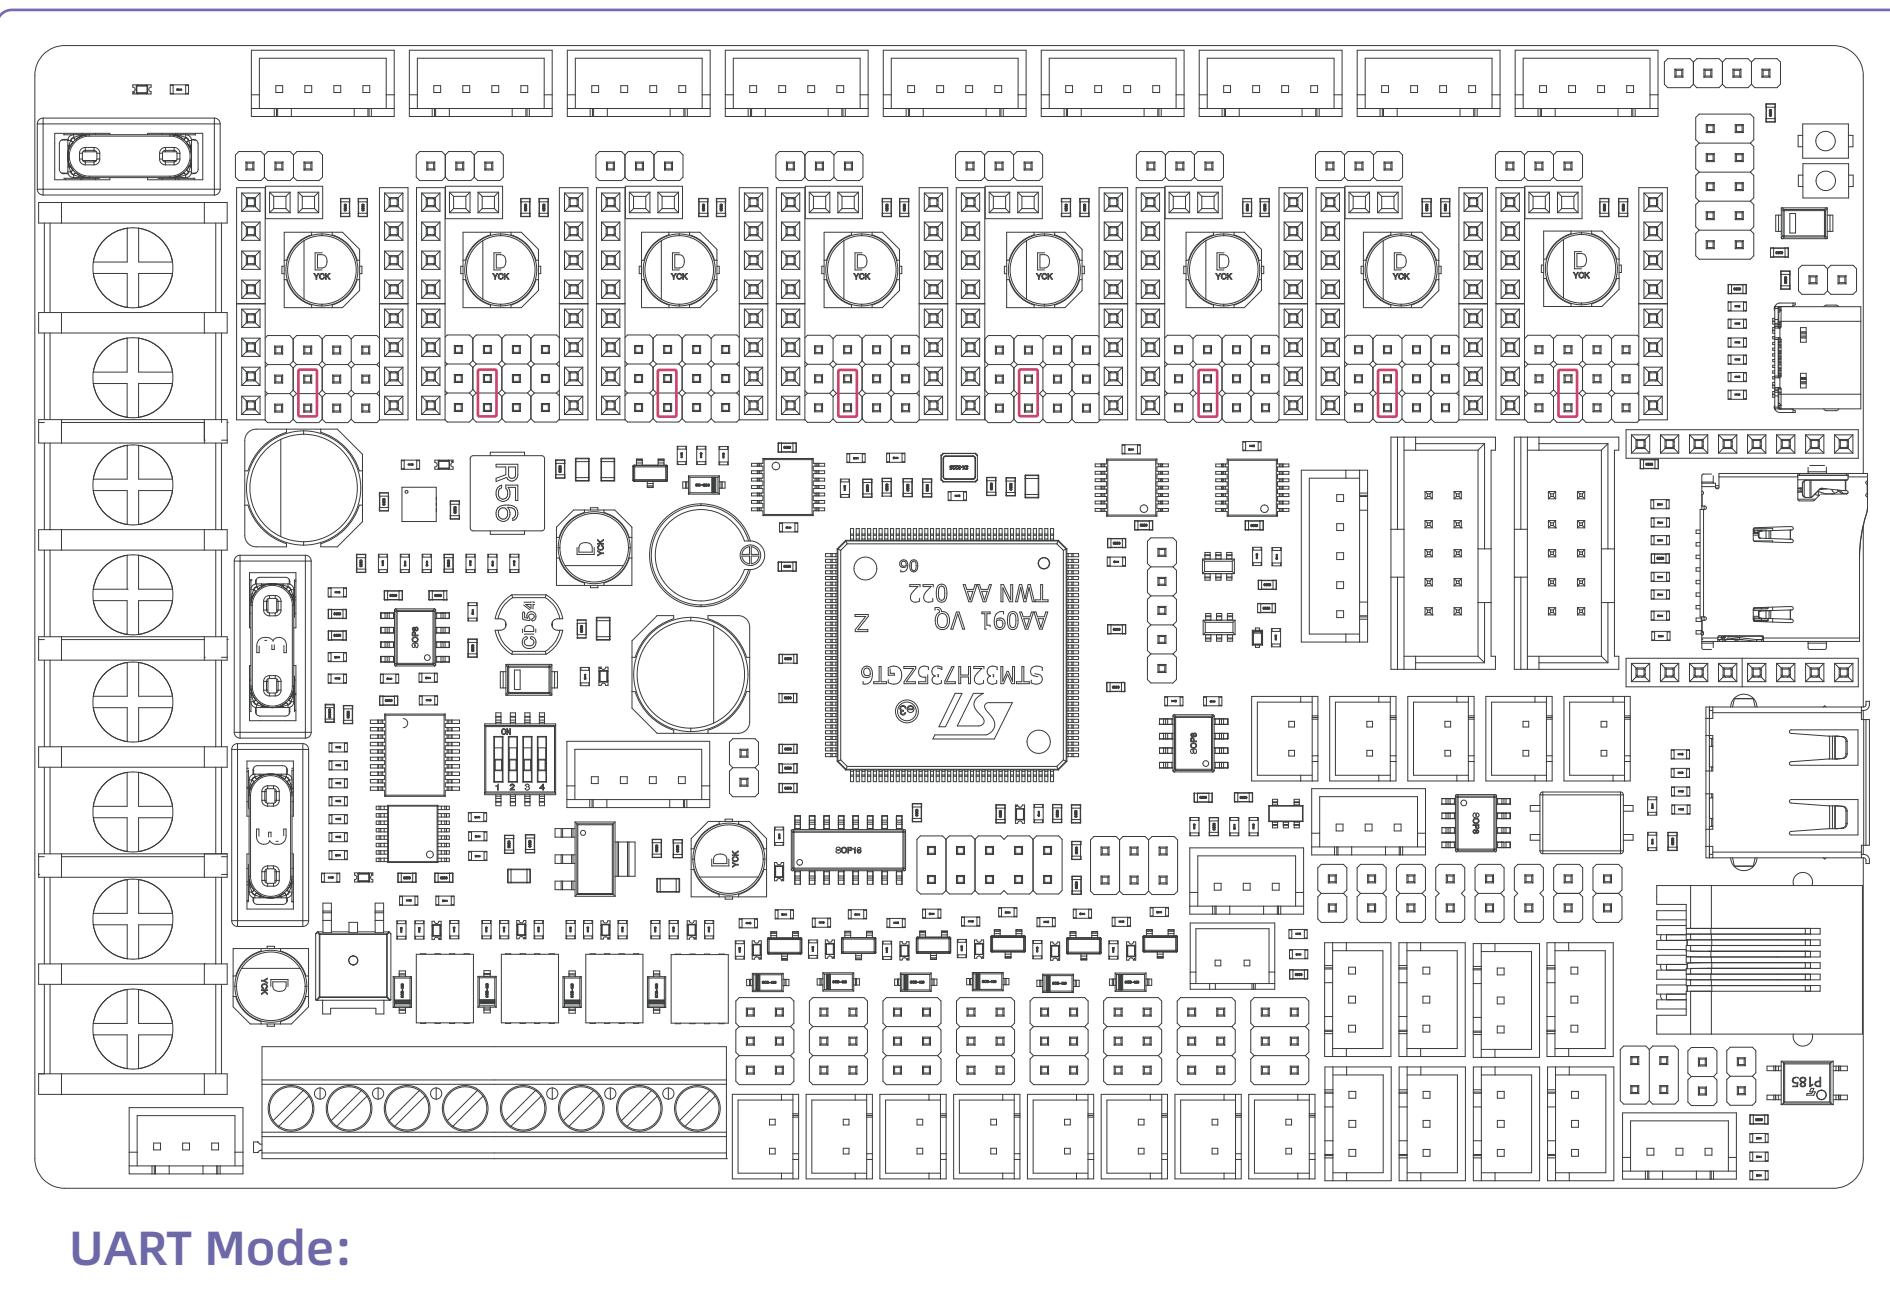

UART Mode

When using the UART mode of the TMC2208/TMC2209 driver module, install the jumper cable as shown in the figure.

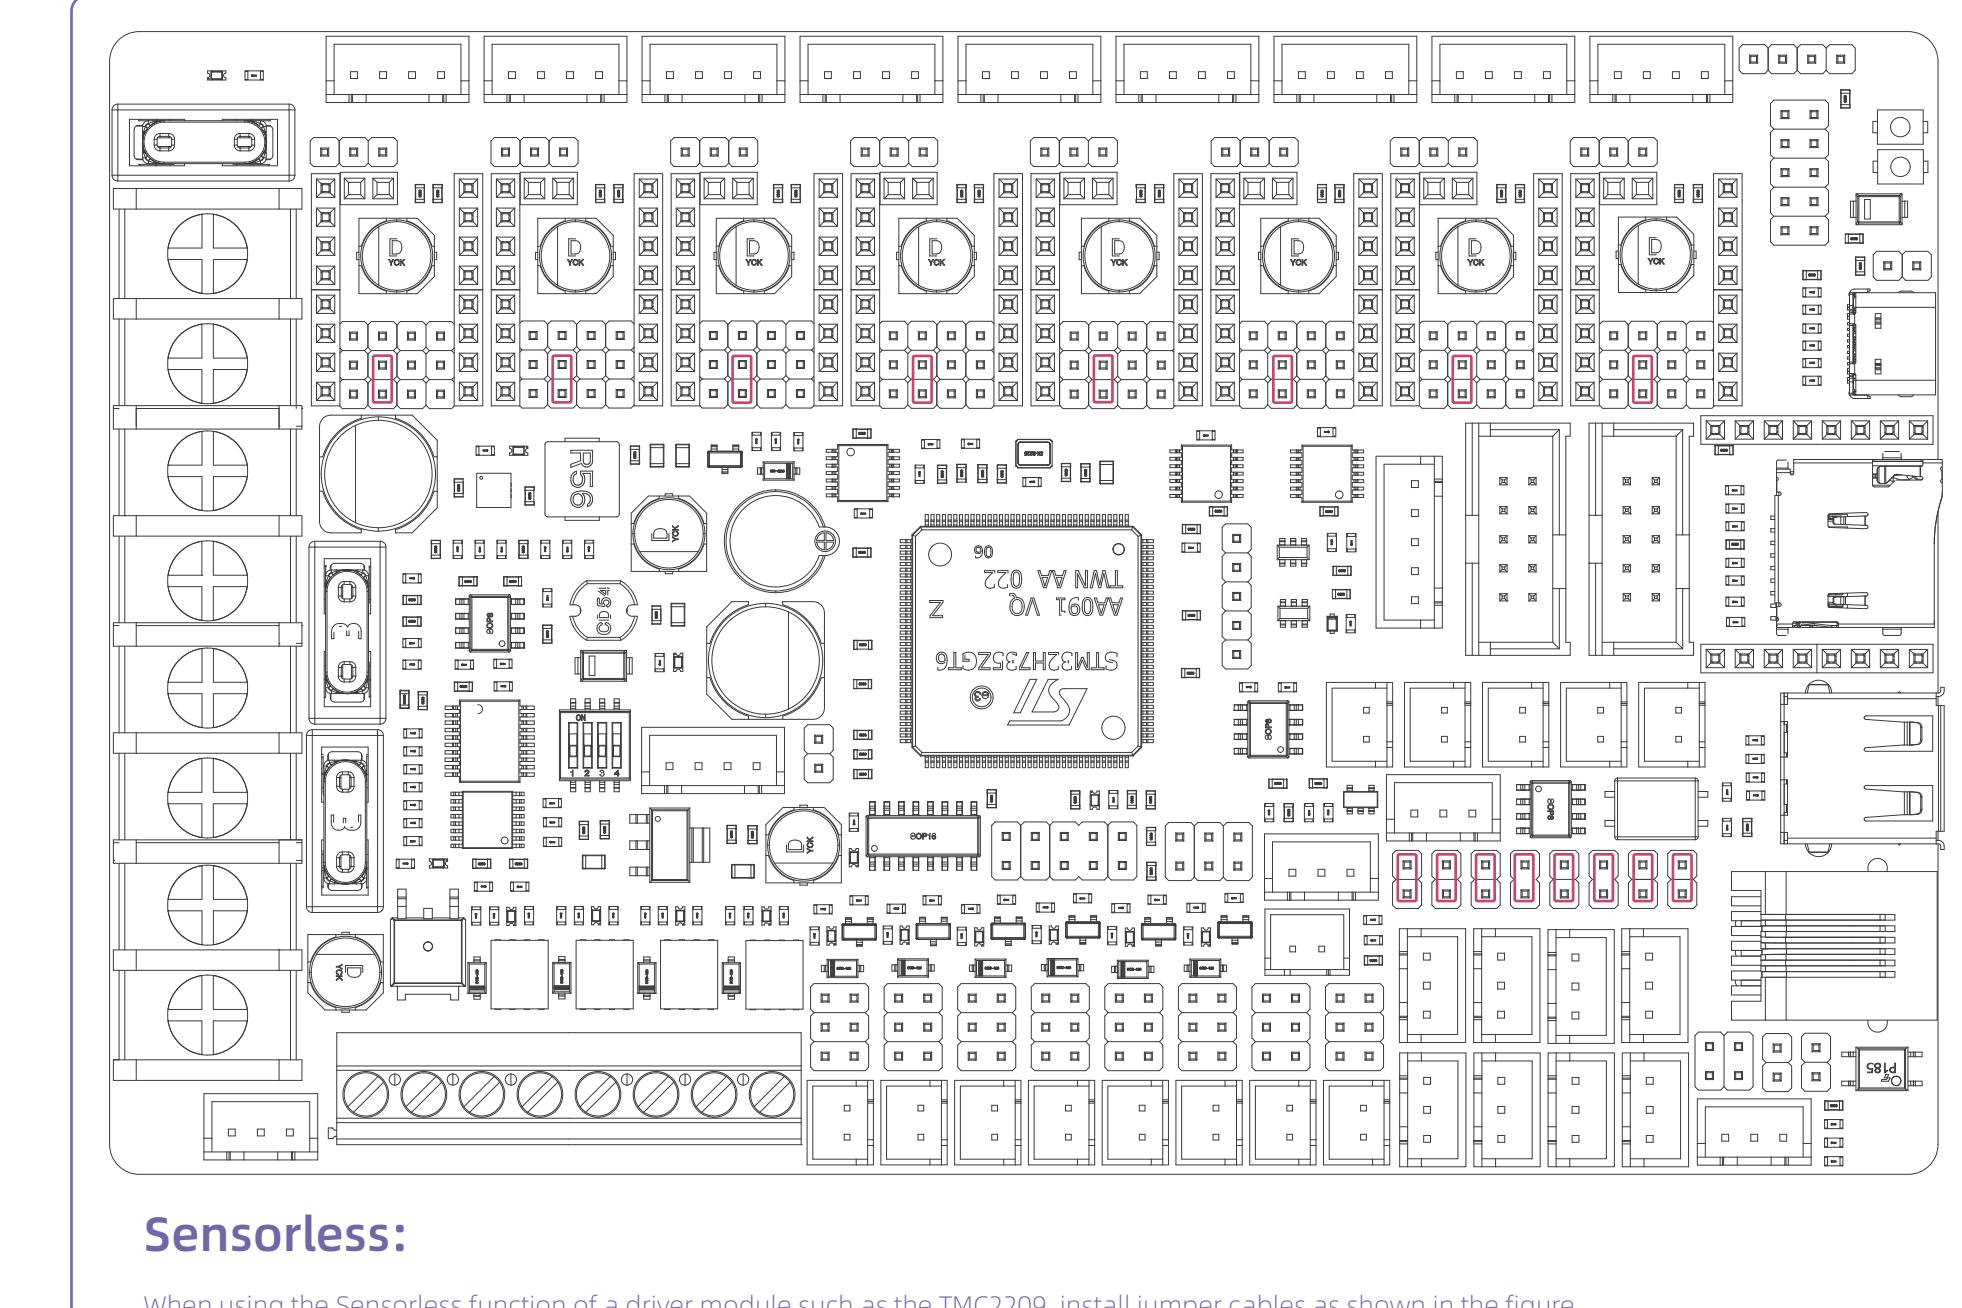

Sensorles

When using the Sensorless function of a driver module such as the TMC2209, install jumper cables as shown in the figure.

