MICROCONTROLLER

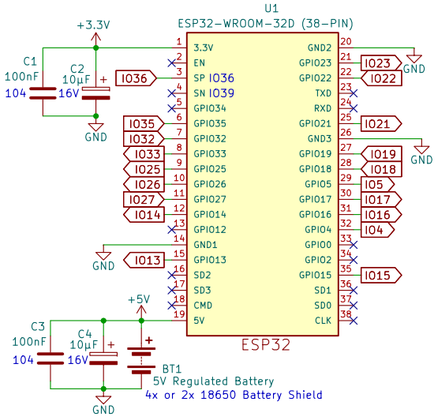

NOTE: don't use battery 5V when uploading code.
Use 5V after uploading code to make this as the source.

PAGE 1/3

ACTUATORS & OUTPUTS

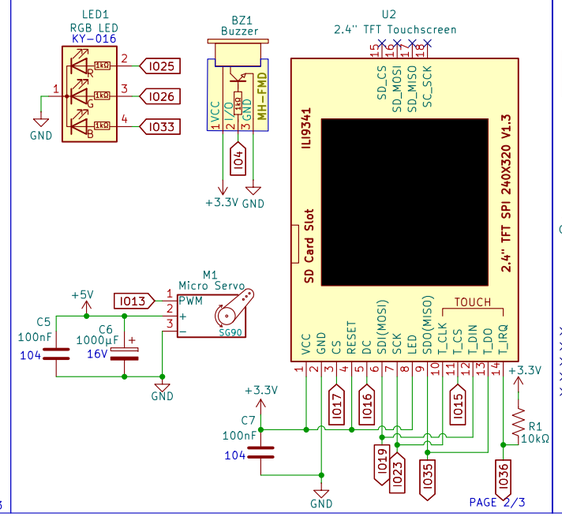

PAGE 2/3

SENSORS & INPUTS

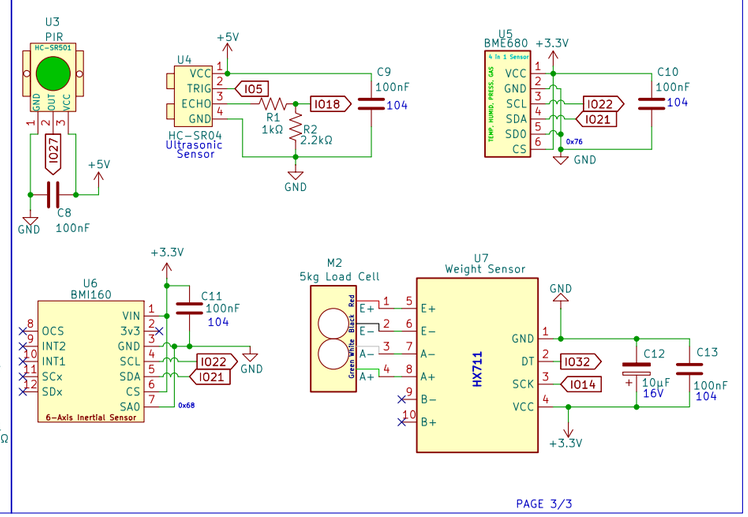

PAGE 3/3