MICROCONTROLLER

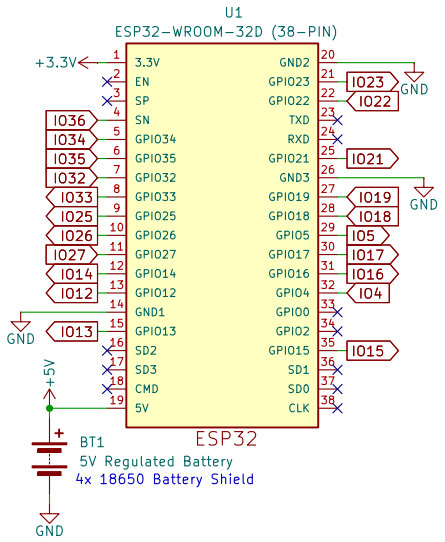

NOTE: don't use battery 5V when uploading code.
Use 5V after uploading code to make this as the source.

ACTUATORS & OUTPUTS

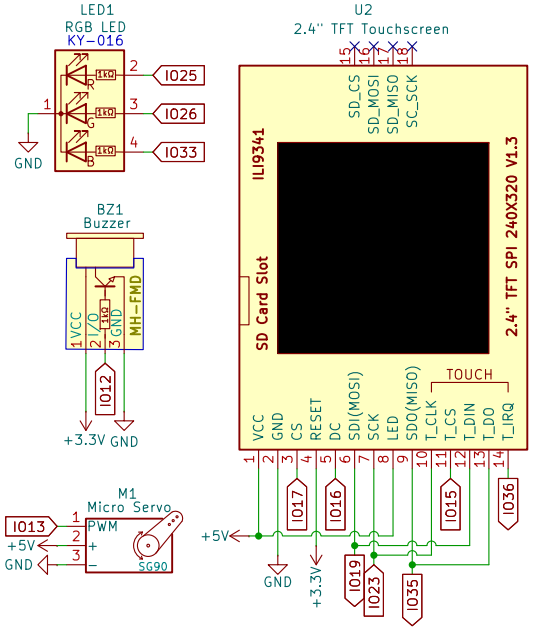
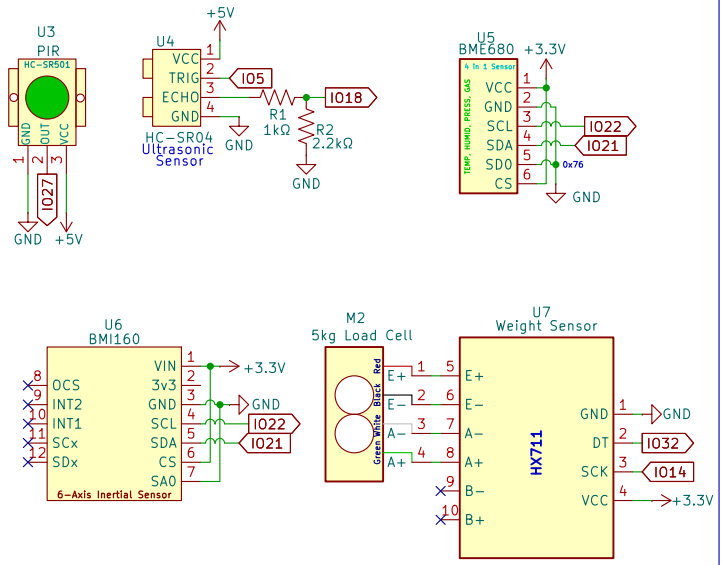
SENSORS & INPUTS