

Name of the document	iStartek Parameter Configuration Software User Manual	releases	2.4
Update Date	2024-02-29	pagination	1 of 15

iStartek Parameter Editor User Manual

V2.4



Name of the document	iStartek Parameter Configuration Software User Manual	releases	2.4
Update Date	2024-02-29	pagination	2 of 15

catalogs

1. Introduction to the software3

2. Hardware and software environment requirements 3

3. Installation and preparation3

4. Configuration parameters 5

 Column 1 Info 5

 Column 2 GPRS 6

 Column 3 Main8

 Column 4 Interface 12

 Column 5 RFID 14

 Column 6 Temp15

 Column 7 WIFI 16

 Column 8 Auth 17

 Column 9 GEO 19

 Column 10 Event20

 Column 11 File 22

Name of the document	iStartek Parameter Configuration Software User Manual	releases	2.4
Update Date	2024-02-29	pagination	3 of 15

1. Software Introduction

The parameter configuration software is a tool used to configure the parameters of the GPS tracker.

2. Hardware and software environment requirements

- Desktop or laptop computer, Windows XP and above.
- A Micro USB cable.
- USB cable driver.
- Parameter configuration software.


3. Installation and preparation

Run the 'PL2303_Prolific_DriverInstaller.exe' installer to install the driver for the USB-232 cable.

Toggle switch on or connect to external power supply to turn on.

Plug the USB-232 cable into the USB port of your computer and connect the GPS tracker to the USB cable.

Run the configuration program "iStartek Parameter Editor" and the following software window will pop up.

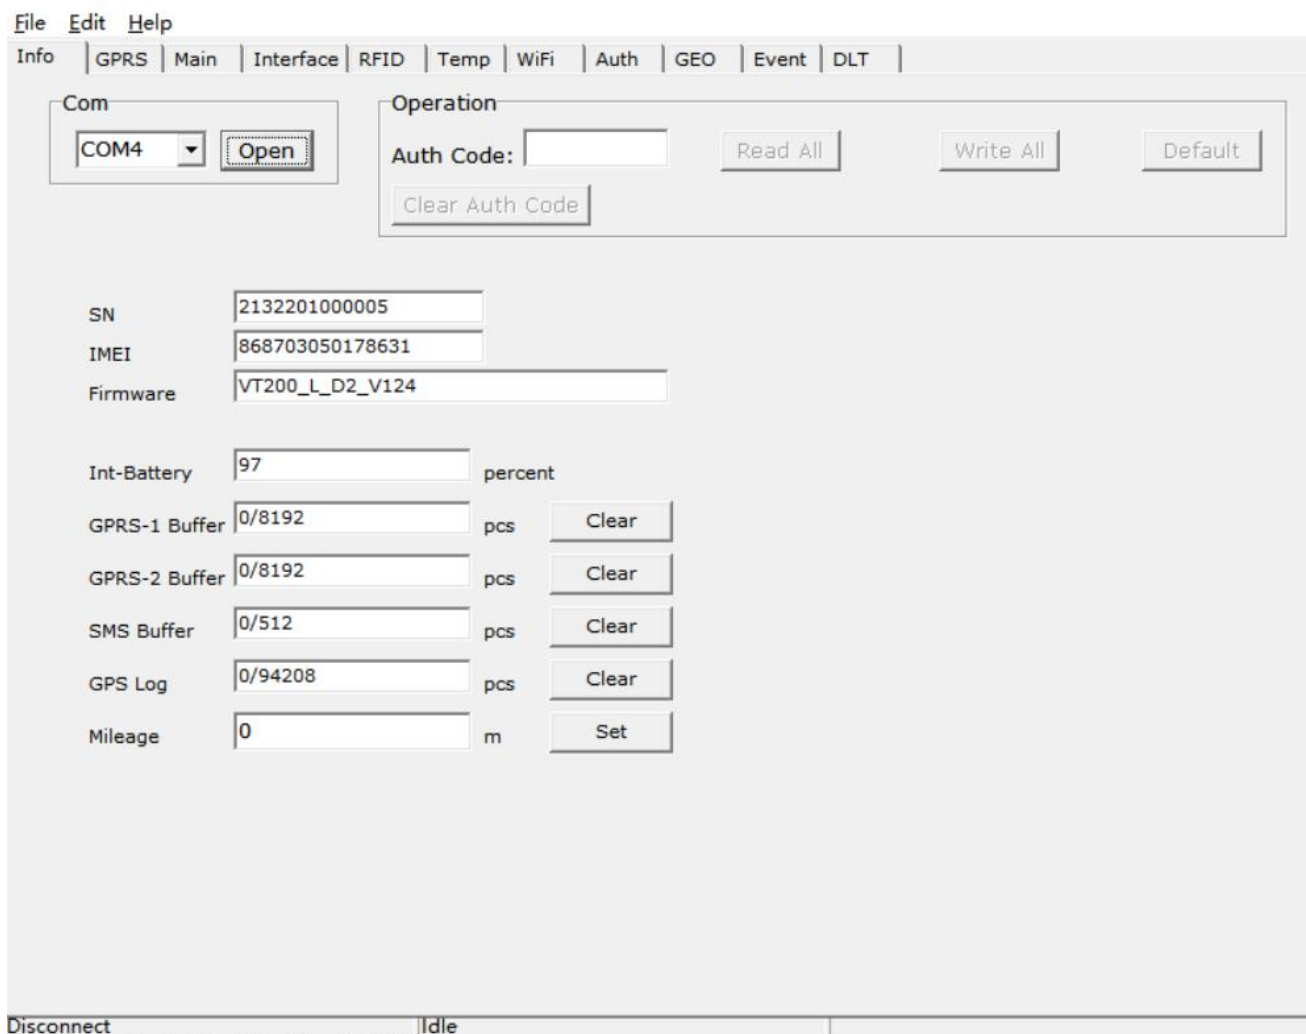

File Edit Help

Info | GPRS | Main | Interface | RFID | Temp | WiFi | Auth | GEO | Event | DLT

Com: COM4 [Open]

Operation: Auth Code: [] [Read All] [Write All] [Default] [Clear Auth Code]

SN: 2132201000005

IMEI: 868703050178631

Firmware: VT200_L_D2_V124

Int-Battery: 97 percent

GPRS-1 Buffer: 0/8192 pcs [Clear]

GPRS-2 Buffer: 0/8192 pcs [Clear]

SMS Buffer: 0/512 pcs [Clear]

GPS Log: 0/94208 pcs [Clear]

Mileage: 0 m [Set]

Disconnect Idle

Click "Open" to open the COM port. As shown in the figure below:

Name of the document	iStartek Parameter Configuration Software User Manual	releases	2.4
Update Date	2024-02-29	pagination	4 of 15

File Edit Help

Info | GPRS | Main | Interface | RFID | Temp | WiFi | Auth | GEO | Event | DLT

Com: COM4 Close

Operation: Auth Code: Read All Write All Default Clear Auth Code

SN: 2132201000005

IMEI: 868703050178631

Firmware: VT200_L_D2_V124

Int-Battery: 96 percent

GPRS-1 Buffer: 0/8192 pcs Clear

GPRS-2 Buffer: 0/8192 pcs Clear

SMS Buffer: 0/512 pcs Clear

GPS Log: 0/94208 pcs Clear

Mileage: 0 m Set

Connected | Idle

The lower left corner of the configuration software will display "Connected", at this time the device enters the configuration mode.

Mileage: 0 m Set

Connected | Idle

Name of the document	iStartek Parameter Configuration Software User Manual	releases	2.4
Update Date	2024-02-29	pagination	5 of 15

4. Configuration parameters

Column 1 Info

File Edit Help

Info | GPRS | Main | Interface | RFID | Temp | WiFi | Auth | GEO | Event | DLT

Com:

Operation:

SN:

IMEI:

Firmware:

Int-Battery: percent

GPRS-1 Buffer: pcs

GPRS-2 Buffer: pcs

SMS Buffer: pcs

GPS Log: pcs

Mileage: m

sports event	descriptive
Auth Code	Configuration parameter authorization code, if the device has set the authorization code at the factory, you need to enter the correct authorization code before configuring the parameters.
Clear Auth Code	Clear Authorization Code
Read All	Read out all the parameters of the terminal
Write All	Write all parameters to the terminal
Default	Initializes all parameters to factory defaults.
SN	SN number of the terminal
IMEI	IMEI number of the terminal
Firmware	software version number
Int-Battery	Percentage of battery power remaining in the terminal's built-in battery
GPRS-1 Buffer	The GPRS cache of Server 1, in "bars". The value on the left is the number of own caches, and the right is the maximum number of caches.
GPRS-2 Buffer	Server 2's GPRS cache in "bars". The value on the left is the number of own caches, and the right is the maximum number of caches.
SMS Buffer	SMS cache in "bars". The value on the left side is the number of items you have cached, and the

Name of the document	iStartek Parameter Configuration Software User Manual	releases	2.4
Update Date	2024-02-29	pagination	6 of 15

	right side is the maximum number of items you can cache.
GPS Log	GPS position record points in "bars". The value on the left is the number of records, and on the right is the maximum number of records.
Mileage	The total mileage of the device operation, which is the number of miles in the GPRS data, in "meters".
Clear	Clear GPRS cache, SMS cache, GPS records
Set	Set the mileage of the device in meters.

Column 2 GPRS

File Edit Help

Info GPRS Main Interface RFID Temp WiFi Auth GEO Event DLT

Device ID
APN
APN Username
APN Password

GPRS-1
IP
Port
Backup IP
Backup Port
GPRS Mode
Report Mode
Buffer Mode
Time Interval s
ACC Off Interval s
Stop Interval s

GPRS-2
IP
Port
GPRS Mode
Report Mode
Buffer Mode
Time Interval s
ACC Off Interval s
Stop Interval s

Read Write

sports event	descriptive
Device ID	GPRS ID number of the terminal, default is the IMEI number of the terminal, can not be set
APN	SIM card APN, maximum 32 characters
APN Username	APN Name of the SIM card, maximum 32 characters, if user name is empty, leave it blank
APN Password	SIM card's APN Password, maximum 32 characters, if the password is empty, then leave it blank
IP	IP or domain name of the server, up to 32 characters
Port	Server port
Backup IP	IP or domain name of the standby server, maximum 32 characters
Backup Port	Port of the standby server

Name of the document	iStartek Parameter Configuration Software User Manual	releases	2.4
Update Date	2024-02-29	pagination	7 of 15

GPRS Mode	Select TCP or UDP communication mode transmission, or disable communication mode transmission.
Report Mode	Reporting model: "No needs server's confirmation" means no need for the platform to reply to receive confirmation; "Needs server's confirmation" means that the platform needs to reply to receive the confirmation.
Buffer Mode	Cache send mode: "FILO" is a first-in-last-out mode, in which new events are sent first and cached data is sent later when the network returns to normal. "FIFO" is a first-in-first-out mode where all events are sent on a first-generated-first-sent basis.
Time Interval	Set the interval value for GPRS tracking. Unit is in seconds, 0 is to cancel the GPRS timer tracking function; Maximum interval time = 65535 seconds
ACC Off Interval	Sets the value of the interval between GPRS timed uploads in the ACC Off state. The unit is second, 0 is to cancel the GPRS timed tracking function in ACC Off state; Maximum interval = 65535 seconds.
Stop Interval	The value of the Time Interval to upload when the device is stopped. When the Time Interval When Stopped is set, the device uploads when it moves at the Time Interval of Time Interval; in seconds, maximum 65535 seconds. When ACC Off Interval is also set, the data is uploaded with the ACC Off Interval condition in priority.
Read	Read the parameter values of the GPRS column from the terminal
Write	Write the parameter values of the GPRS column to the terminal

Name of the document	iStartek Parameter Configuration Software User Manual	releases	2.4
Update Date	2024-02-29	pagination	8 of 15

Column 3 Main

File Edit Help

Info GPRS Main Interface RFID Temp WiFi Auth GEO Event DLT

GPS Log Interval second
Distance Interval meter
Heading Change degree
Heartbeat Interval minute
Speeding km/h
Sleep Mode
Period Time Enter Sleep second
Vibration Sensitivity
Tow Time second
Tow Mode
Idle Time minute
Low Ext-Bat volt
Harsh Accelerate mg
Harsh Braking mg
Harsh Turning
Impact Sensitivity
Fatigue Driving minute
Fatigue Relieve minute
Overtime Driving minute
GSM Jammed second

Car Type
Low Speed km/h
RFID Auth Time s
ACC Off Auth Time s
ACC Off Stop

Work Mode
Work Mode Wakeup Interval minute
Alarm Time(hh:mm):

00:00	00:00	00:00	00:00	00:00	00:00	00:00	00:00
00:00	00:00	00:00	00:00	00:00	00:00	00:00	00:00
00:00	00:00	00:00	00:00	00:00	00:00	00:00	00:00

Camera1
Resolution
Time Interval minute
ACC Off Interval minute
Stop Interval minute

Read Write

sports event	descriptive
GPS Log Interval	GPS Log Timing Interval, in seconds. The range is 0~65535 seconds, 0 disables the function; the default is 0.
Distance Interval	Distance between fixed upload intervals, in meters. The value range is 0~65535 meters, 0 turns off the function; the default is 0.
Heading Change	Set the corner compensation function so that when the angle of the turn exceeds the set value, the terminal will send a GPRS event message to the server. This improves the accuracy of the traveling track. = 0, turn reporting turned off (default). = [1,180], set the angle value for turn reporting
Heartbeat Interval	Set the value of the interval between GPRS heartbeat packets in minutes = 0, cancel GPRS heartbeat function. =[1,255], set the value of the interval between GPRS heartbeat packets (heartbeat packets are only used in the dormant state)
Speeding	Speed alarm threshold in km/h, value range 0~255 km/h, 0 disables the function; default is 0.
Sleep Mode	Sets the hibernation mode of the device: Select "Close" to turn off sleep mode. Select "Nomal Sleep" for normal sleep mode: GPS module power off, GSM module sleep, can

Name of the document	iStartek Parameter Configuration Software User Manual	releases	2.4
Update Date	2024-02-29	pagination	9 of 15

	be triggered by input, vibration, phone SMS activation; Select "Deep Sleep" for deep sleep mode: GPS module power off, GSM module power off, can only be triggered by the input port, vibration activated.
Period Time Enter Sleep	The device will enter sleep mode after the time of no input port triggering, no vibration, no phone SMS and other activation actions reaches the set time in seconds. If you set the sleep mode without setting the Period Time Enter Sleep parameter, the default is 300 seconds.
Vibration Sensitivity	Vibration Sensitivity, the sensitivity of vibration detection. The value range is [3,255], the smaller the value, the more sensitive it is. Default is 3.
Tow Time	The time of continuous vibration (movement), when the time of vibration reaches the set value, the alarm will be generated. The value range is 0~255, the unit is second; =0 is to close the vibration alarm function, the default is 0;
Tow Mode	Select "ACC Off and Tremble" to detect the vibration under the condition of ACC OFF, the default is 0, when set to 0, the device needs to be connected to ACC to detect; Select "Tremble" to detect vibration without ACC.
Idle Time	Idle alarm time, value range 0~255, unit is minutes; =0 is to turn off the function, default is 0;
Low Ext-Bat	Setting the external power supply low voltage alarm
Harsh Accelerate	Acceleration value in mg, default is 450mg, value range [0,65535]; this function is canceled when it is 0; if the acceleration exceeds the set value, it generates an accelerated acceleration alarm
Harsh Braking	Negative acceleration value in mg, default is 800mg, value range [0,65535]; the function is canceled when it is 0; if when the negative acceleration exceeds the set value, it generates plus or minus acceleration alarm.
Harsh Turning	Sharp turn judgment threshold, the smaller the value the more sensitive, value range [0,32], the default is 19; when it is 0 to cancel the function; when the calculated value of the sharp turn exceeds the threshold, the sharp turn alarm is generated.
Impact Sensitivity	Collision sensitivity, value range 0~10, the smaller the value the more sensitive, 0 is to cancel the function, default is 5; When using this function, it is recommended that the unit be installed parallel to a horizontal plane.
Fatigue Driving	Single fatigue driving time in minutes, 0 to cancel the fatigue driving function, default is 0 minutes. When stopping and turning off the engine to rest for more than rest_time, it will automatically clear 0 driving time.
Fatigue Relieve	Minimum rest time, in minutes, value range [0, 255], default is 0 minutes; when the rest time exceeds rest_time, the driving time is automatically cleared to 0.
Overtime Driving	Total driving time, the accumulated driving time in 24 hours exceeds total_drive_time to generate overtime driving alarm, 0 is to cancel the overtime driving function, the default is 0 minutes;
GSM Jammed	Take the value of [0,255] seconds, = 0 to cancel the GSM interference detection alarm function, the default is 0; when the GSM is interfered with for a period of time exceeding the set time, the interference alarm will be generated.
Car Type	car_type: a 4-bit hexadecimal string; the OBDII protocol of each model may be different, when the installation and use of the data can not be read, you need to set the corresponding model

Name of the document	iStartek Parameter Configuration Software User Manual	releases	2.4
Update Date	2024-02-29	pagination	10 of 15

	code
Low Speed	Low-speed alarm threshold in km/h, value range 0~255 km/h, 0 disables the function; default is 0.
RFID Auth Time	Authorized to light the fire after the time, if beyond the time did not light the fire, you need to re-swipe the card to light the fire; unit of seconds, the value range [0, 255], the default is 60 seconds
ACC off Auth Time	After the flame out to retain the authorization can be ignited time, if beyond the time did not ignite the fire, you need to re-swipe the card to ignite the fire; unit is seconds, the value range [0, 255], the default is 5 seconds
ACC off Stop	=1 for positioning position not updated in ACC Off state, =0 to disable the function; default is 0.
Work Mode	There are 5 operating modes: Select "Normal" for the normal mode, the device works according to the parameters of the device in the 102 command to upload the positioning data. / Select "Normal Sport" for normal sport mode, when the device is moving (vibrating), the device will upload the positioning data according to the normal_time of 102 commands. After 3 minutes of motionlessness, the device will enter into hibernation state (GPS power off, GSM module hibernation, MCU hibernation), and then upload heartbeat packet data according to the time of 122 commands, and receive SMS commands and incoming calls under hibernation state. 3、 Select "Saving Sport", it is a power saving mode, when the device is moving (vibrating), the device will upload the positioning data according to the normal_time of 102 instruction. When the device is still for 3 minutes, it will enter the hibernation state (turn off the GPS power, turn off the GSM power, and hibernate the MCU), and then upload the heartbeat packet data according to the time of 122 commands. Under hibernation state, it can not receive SMS command and incoming calls.4. Select "Wakeup Interval", for the timed wake-up mode, the device wakes up to upload positioning data according to interval_time, and then enters into hibernation (turn off the GPS power, turn off the GSM power, and put MCU into hibernation), under the hibernation state, it will enter into hibernation state (turn off the GPS power, turn off the GSM power, and put MCU into hibernation). After sending data, the device will enter hibernation (turn off GPS power, turn off GSM power and MCU hibernation), under hibernation, it can't receive SMS commands and incoming calls, and it can't be woken up by moving (vibration). 5、 Select "Alarm" for the alarm mode, the device wakes up according to the alarm time to upload positioning data, after sending the data into hibernation (turn off the GPS power supply, turn off the GSM power supply, MCU hibernation), the hibernation state can not receive SMS commands and incoming calls, and mobile (vibration) can not wake up the device.
Wakeup Interval	Wakeup Interval, only effective in "Wakeup Interval" mode, set the time interval in minutes, maximum 65535 minutes.
Alarm Time(hh:mm)	Alarm clock parameter is only effective when "Alarm" working mode is selected, at most 24 alarms can be set, the format of alarm clock parameter is hh:mm, if the local time zone has

Name of the document	iStartek Parameter Configuration Software User Manual	releases	2.4
Update Date	2024-02-29	pagination	11 of 15

	been set with 601 instruction, the alarm time will be the local time, if no time zone has been set, the alarm time will be the GMT+0 time.
Camera 1	Camera 1
Resolution	The resolution of the image: 1: 160*128 2: 320*240 3: 640*480
Time Interval	Camera timed photo interval. Unit is minutes, maximum 0~65535 minutes, default is 0
ACC Off Interval	The time interval for taking pictures when ACC off. When ACC_Off_time is set, normal_time is the time interval when ACC on. The unit is minutes, maximum 65535 minutes.
Stop Interval	The time interval for taking pictures when the device is stopped. When stopping_time is set, the device is uploaded at the normal_time interval when it moves. The unit is minutes, maximum 65535 minutes.
Read	Read the parameter values of the Main column from the terminal
Write	Write the parameter values of the Main column to the terminal

Name of the document	iStartek Parameter Configuration Software User Manual	releases	2.4
Update Date	2024-02-29	pagination	12 of 15

Columns 4 Interface

File Edit Help

Info | GPRS | Main | Interface | RFID | Temp | WiFi | Auth | GEO | Event | DLT

Input Mode

Input1 Active Time ms

Input2 Active Time ms

Input3(AD2) Active Time ms

Input4(AD1) Active Time ms

Out1 Mode

Mode

Active Time s

On Time ms

Off Time ms

Speed km/h

Tank1

Name

Source

Lenght mm

Wide mm

High mm

Sensor Type

Steal Liter

Steal Time s

Low Fuel Liter

Out2 Mode

Mode

Active Time s

On Time ms

Off Time ms

Speed km/h

Tank2

Name

Source

Lenght mm

Wide mm

High mm

Sensor Type

Steal Liter

Steal Time s

Low Fuel Liter

Serial Port

RS232-1

RS232-2


Read

Write

sports event	descriptive
Input Mode	input mode
Input1	Input 1, = Low Active for low level trigger; = High Active for high level trigger; default low level.
Input2	Input 2, =Low Active for low level trigger; =High Active for high level trigger; default high.
Input3 (AD2)	Input 3, =Low Active for low level trigger; =High Active for high level trigger; =AD Input for AD2 input (0-6.6V); default high.
Input4 (AD1)	Input 4, = AD Input for AD1 input (0-36V); = High Active for high level trigger; AD2 input (0-6.6V); Default AD1 input.
Active Time	Trigger time of the input port, trigger event is generated when the trigger time exceeds the set value, valid only for high and low level trigger input mode, unit is ms, value [0, 65535], time = 0 for immediate trigger, default is 0.
Out1 Mode/Out2 Mode	Output 1 mode / Output 2 mode

Name of the document	iStartek Parameter Configuration Software User Manual	releases	2.4
Update Date	2024-02-29	pagination	13 of 15

Mode	Output action mode: mode=open, open output (output port is low level state) mode, for long time open state; mode=close, close the output (output port is suspended) mode, for a long time closed state; mode=Pulse, pulse output (generate pulse output with the parameters of on_time and off_time, when on_time and off_time are 0, the current output port state will be output as a flip-flop change);
Active Time	Time to generate output, in s, range 0 to 65535; = 0 for infinite time output
On time	The time to turn on the output (the output port is in low state) in ms, value range 0~65535;
Off time	The time to turn off the output (the output port is in suspended state) in ms, value range 0~65535;
Speed	The speed limit of the output port to generate the action, in km/h, value range 0~255; When safe_speed=0 or is empty, the output port generates an output action immediately; The output action is generated when safe_speed>0, the current GPS speed is less than safe_speed and it is a positioning state;
Tank1 (AD1)/Tank2 (AD2)	Fuel tank 1 (AD1)/Fuel tank 2 (AD2)
Name	Fuel tank name
Sensor Type	Fuel sensor types: =No Sensor is no sensor connected; =Stick is a rod type fuel sensor; =Ultrasonic is an ultrasonic fuel sensor.
Source	Fuel tank data source: AD1, AD2, RS232-1, RS232-2 four data sources
Length	Length of the tank in mm; default is 0
Wide	The width of the tank, or in the case of cylindrical tanks, the diameter of the round shape in mm; the default is 0.
Hight	The height of the tank in mm; when HIGH=0, it is a cylindrical tank. Default is 0.
Steal	Liters change of oil theft alarm, when the oil quantity is reduced more than the set value in Steal time, the unit is liters.
Steal Time	The time for judging the change of oil quantity, when the oil quantity decreases more than the set value in the Steal time, an alarm is generated. Value range [0,255], unit is second.
Low Fuel	The number of liter changes for the low fuel alarm, which generates an alarm when the fuel level is lower than the set value. Value range [0,255], unit is liter
Serial Port	serial port
RS232-1/RS232-2	Docking external device, "None" is empty, "RFID Reader" is RFID card reader, "OBD Decoder" is OBD decoder. "Camera" is the camera, "Ultrasonic Sensor" is the ultrasonic fuel sensor, "WiFi" is the WIFI accessory.
Read	Read the parameter values of the Interface column from the terminal.
Write	Write the parameter values of the Interface column to the terminal



File Edit Help

sports event	descriptive
RFID/iButton	Indicates the number of equipment authorizations in "pcs".
Auth ID	Fill in the blank with the authorized RFID/iButton ID number; RFID card number as a decimal string; ibutton card number as a hexadecimal string, card number with a # sign in front of the number is expressed as a hexadecimal number; the longest length of one performance while authorizing is 255 bytes (including comma); each ID number is separated by English comma " , "
Delete ID	Fill in the blanks with the ID numbers to be deleted; separate each ID number with a comma in English " , "
Check ID	Fill in the blank to query the ID number of the authorization status; a performance at the same time to query the ID number (10-digit) 19; "1" that has been authorized, "0" that is not authorized; each ID number is separated by commas in English " , "

Name of the document	iStartek Parameter Configuration Software User Manual	releases	2.4
Update Date	2024-02-29	pagination	15 of 15

Column 6 Temp

File Edit Help

Info | GPRS | Main | Interface | RFID | Temp | WiFi | Auth | GEO | Event | DLT |

Temperature Sensor Pairing

Index
Name

Index	Name	Sensor ID	High Alarm(*C)	Low Alarm(*C)
1				
2				
3				
4				
5				
6				
7				
8				

sports event	descriptive
Temperature Sensor Pairing	
Index	Serial number of temperature sensor, 1~8, supports up to 8 sensors
Name	Temperature-sensitive name, up to 16 byte characters long
Pair	Serial number and name of paired temperature sensors
Sensor ID	Temperature sensor ID number
High Alarm (*C)	High temperature alarm value, unit is ℃, accurate to one decimal place, if empty, cancel the high temperature alarm
Low Alarm (*C)	Low temperature alarm value, unit is ℃, accurate to one decimal place, if empty, cancel the low temperature alarm
Read	Read the parameter values of the Temp column from the terminal.
Write	Write the parameter value of the Temp column to the terminal.

Name of the document	iStartek Parameter Configuration Software User Manual	releases	2.4
Update Date	2024-02-29	pagination	16 of 15

Column 7 WIFI

File Edit Help

Info | GPRS | Main | Interface | RFID | Temp | WiFi | Auth | GEO | Event | DLT |

Index	SSID	Password	Index	SSID	Password
1			17		
2			18		
3			19		
4			20		
5			21		
6			22		
7			23		
8			24		
9			25		
10			26		
11			27		
12			28		
13			29		
14			30		
15			31		
16			32		

Read Write

sports event	descriptive
Index	Serial number of WiFi AP, 1~32, set up to 32 WIFI APs
SSID	The SSID of the AP, up to 32 characters long;
Password	AP login password, up to 32 characters long
Read	Read the parameter values of the Auth column from the terminal
Write	Write the parameter values of the Auth column to the terminal

Name of the document	iStartek Parameter Configuration Software User Manual	releases	2.4
Update Date	2024-02-29	pagination	17 of 15

Column 8 Auth

File Edit Help

Info | GPRS | Main | Interface | RFID | Temp | WiFi | **Auth** | GEO | Event | DLT

SIM Card PIN

SMS Password

SMS Time Zone minute

Time Interval minute

ACC Off Interval minute

Stop Interval minute

Auth Number

Number 1. 2. 3.

Auto Answer ☐ ☐ ☐

Auto Monitor ☐ ☐ ☐

Auto Hangup ☐ ☐ ☐

SMS Position ☐ ☐ ☐

sports event	descriptive
SIM Card PIN	SIM card PIN, a 4-digit number
SMS Password	SMS command password, 4 characters, can be composed of any numbers, letters, symbols; default is 0000.
SMS Time Zone	The time zone of the location SMS message time in minutes, value range -720~720, default is UTC 0; When the time zone is set, the time in the SMS data will use the time of the time zone; The time in the GPRS data uses UTC0 time and cannot be set.
Time Interval	Common Time Interval. When the condition of ACC_Off_time or stop_time is not satisfied, the device uploads GPRS positioning data at the Time Interval ; the unit is minutes, maximum 65535 minutes.
ACC Off Interval	Time Interval when ACC off. When ACC Off Interval is set, Time Interval is the time interval when ACC on. The unit is minutes and the maximum is 65535 minutes.
Stop Interval	Time Interval when the device is stopped. When Stop Interval is set, the device is uploaded at the Time Interval interval when it moves. The unit is minutes, maximum 65535 minutes.

Name of the document	iStartek Parameter Configuration Software User Manual	releases	2.4
Update Date	2024-02-29	pagination	18 of 15

Auth Number	Authorization Number
Number	Authorized cell phone number, up to 3 authorized numbers; Mobile phone number is up to 16 digits.
Auto Answer	Automatically answer incoming calls from authorized numbers, you can check one or more numbers to answer automatically.
Auto Monitor	Automatically listen when receiving calls from authorized numbers, you can check one or more numbers to listen automatically.
Auto Hangup	Automatically hang up when receiving calls from authorized numbers, you can check one or more numbers to hang up automatically.
SMS Position	Respond to location information when receiving calls from authorized numbers, you can check one or more numbers to automatically respond to location information.
Read	Read the parameter values of the Auth column from the terminal
Write	Write the parameter values of the Auth column to the terminal

Name of the document	iStartek Parameter Configuration Software User Manual	releases	2.4
Update Date	2024-02-29	pagination	19 of 15

Column 9 GEO

File Edit Help

Info | GPRS | Main | Interface | RFID | Temp | WiFi | Auth | **GEO** | Event | DLT |

No.	Name	Out Alarm	In Alarm	Radius(m)	Latitude	Longitude
1		☐	☐	0	0.000000	0.000000
2		☐	☐	0	0.000000	0.000000
3		☐	☐	0	0.000000	0.000000
4		☐	☐	0	0.000000	0.000000
5		☐	☐	0	0.000000	0.000000
6		☐	☐	0	0.000000	0.000000
7		☐	☐	0	0.000000	0.000000
8		☐	☐	0	0.000000	0.000000

sports event	descriptive
Name	Setting the name of the electronic fence, up to 8 electronic fences can be set up
Out Alarm	Exit fence alarm
In Alarm	Entry Fence Alarm
Radius(m)	Radius of the circular electronic fence in meters, max 65535 meters;
Latitude	The longitude of the center of the electronic fence in degrees;
Longitude	Latitude of the center of the electronic fence in degrees;
Read	Read the parameter values of the GEO Fence column from the terminal
Write	Write the parameter values of the GEO Fence column to the terminal

Name of the document	iStartek Parameter Configuration Software User Manual	releases	2.4
Update Date	2024-02-29	pagination	20 of 15

Column 10 Event

File Edit Help

Info GPRS Main Interface RFID Temp WiFi Auth GEO Event DLT

Event	SMS Alarm Name	GPRS 1 2	Auth No.1 sms call moni	Auth No.2 sms call moni	Auth No.3 sms call moni	Output 1 2	Camera 1
(0) Interval tracking	Interval	☒ ☒	☒	☒	☒		☐
(1) Input1 active	SOS	☒ ☒	☐ ☐ ☐	☐ ☐ ☐	☐ ☐ ☐	☐ ☐	☐
(2) Input1 inactive	In1 Inactive	☐ ☐	☐ ☐ ☐	☐ ☐ ☐	☐ ☐ ☐	☐ ☐	☐
(3) Input2 active	Ignition On	☒ ☒	☐ ☐ ☐	☐ ☐ ☐	☐ ☐ ☐	☐ ☐	☐
(4) Input2 inactive	Ignition Off	☒ ☒	☐ ☐ ☐	☐ ☐ ☐	☐ ☐ ☐	☐ ☐	☐
(5) Input3 active	Door Open	☒ ☒	☐ ☐ ☐	☐ ☐ ☐	☐ ☐ ☐	☐ ☐	☐
(6) Input3 inactive	Door Close	☐ ☐	☐ ☐ ☐	☐ ☐ ☐	☐ ☐ ☐	☐ ☐	☐
(7) Input4 active	In4 Active	☒ ☒	☐ ☐ ☐	☐ ☐ ☐	☐ ☐ ☐	☐ ☐	☐
(8) Input4 inactive	In4 Inactive	☐ ☐	☐ ☐ ☐	☐ ☐ ☐	☐ ☐ ☐	☐ ☐	☐
(9) Input5 active	In5 Active	☒ ☒	☐ ☐ ☐	☐ ☐ ☐	☐ ☐ ☐	☐ ☐	☐
(10) Input5 inactive	In5 Inactive	☐ ☐	☐ ☐ ☐	☐ ☐ ☐	☐ ☐ ☐	☐ ☐	☐
(11) Input6 active	In6 Active	☒ ☒	☐ ☐ ☐	☐ ☐ ☐	☐ ☐ ☐	☐ ☐	☐
(12) Input6 inactive	In6 Inactive	☐ ☐	☐ ☐ ☐	☐ ☐ ☐	☐ ☐ ☐	☐ ☐	☐
(17) Ext-power low	Low Ext-Power	☒ ☒	☐ ☐ ☐	☐ ☐ ☐	☐ ☐ ☐		☐
(18) Ext-power lost	Ext-Power Cut	☒ ☒	☐ ☐ ☐	☐ ☐ ☐	☐ ☐ ☐	☐ ☐	☐
(19) Ext-power connect	Ext-Power On	☒ ☒	☐ ☐ ☐	☐ ☐ ☐	☐ ☐ ☐	☐ ☐	☐
(20) Int-battery low	Low Battery	☒ ☒	☐ ☐ ☐	☐ ☐ ☐	☐ ☐ ☐		
(21) GPS antenna cut	GPS Antenna Cut	☒ ☒	☐ ☐ ☐	☐ ☐ ☐	☐ ☐ ☐	☐ ☐	☐
(22) Speeding alarm	Speeding	☒ ☒	☐ ☐ ☐	☐ ☐ ☐	☐ ☐ ☐	☐ ☐	☐
(23) Enter sleep	Enter Sleep	☒ ☒	☐ ☐ ☐	☐ ☐ ☐	☐ ☐ ☐		☐

Read Write

sports event	descriptive
Event	warning event
SMS Alarm Name	SMS alarm message header name
GPRS 1 2	1 is a GPRS event for Server 1 and 2 is a GPRS event for Server 2; Checked for additions, unchecked for deletions.
Auth No.1 sms call moni	Authorize SMS alarm events, two-way call events, and listening events for number 1; Checked for additions, unchecked for deletions.
Auth No.2 sms call moni	Authorize SMS alarm events, two-way call events, and listening events for number 2; Checked for additions, unchecked for deletions.
Auth No.3 sms call moni	Authorize SMS alarm events, two-way call events, and listening events for number 3; Checked for add, unchecked for delete
Output 1 2	1 is the alarm event for output 1 and 2 is the alarm event for output 2; Checked for additions, unchecked for deletions.
Camera 1	1 is an alarm event for camera 1; Checked for additions, unchecked for deletions.

Name of the document	iStartek Parameter Configuration Software User Manual	releases	2.4
Update Date	2024-02-29	pagination	21 of 15

Read	Read the parameter values of the Event column from the terminal
Write	Write the parameter values of the Event column to the terminal

Column 11 DLT: DLT-specific tools only have this interface

File Edit Help

Info | GPRS | Main | Interface | RFID | Temp | WiFi | Auth | GEO | Event | DLT

Licence Type1

Licence Type2

Licence Type3

Licence Type4

Licence Type5

Licence Type6

Licence Type7

Licence Type8

Licence Type9

Licence Type10

Licence Type11

Licence Type12

Licence Type13

Licence Type14

Licence Type15

Licence Type16

Buzzer Alarm Time
 Minute

Magnetic Track Report

Licence Report

Read


Write

sports event	descriptive
Licence Type1	Authorized card number type, driver's license type value range of 0 to 65535, support for up to 16 driver's license type values, all driver's license type default value of 0, that is, empty
Buzzer Alarm Time	The time for the unswiped card alarm prompt, = 0 means no alarm, T = [1,255] number when the number of specific alarm minutes. Default is 10 minutes.
Magnetic Track Report	Upload track data, only TRACK#3 data is uploaded in "Track3", all data of 3 tracks is uploaded in "Track1~3", default is 0.
Licence Report	For authorization reports, swipe data is uploaded only on swiped cards for "Swiping Card Event", and swiped data is uploaded on every data for "Every Event".



Name of the document	iStartek Parameter Configuration Software User Manual	releases	2.4
Update Date	2024-02-29	pagination	22 of 15

Column 12 File

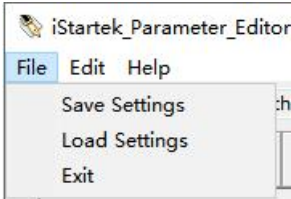

sports event	descriptive
Save Settings	Saves all set parameters.
Load Settings	Import parameters.
Exit	Exit the software

If you have any other questions, please email us at info@istartek.com and we will be happy to serve you.