

---

SalinBloc™

figures/salinbloc-skid.png

**Document control**

---

|                |                 |
|----------------|-----------------|
| Title          |                 |
| Product        | SalinBloc™      |
| Date of issue  | August 31, 2026 |
| Classification |                 |

---

**Manufacturer**

Hydrovolta NV  
Romeinse Straat 18, 3001 Leuven, Belgium  
info@hydrovolta.com | +32 28 800 336  
<https://hydrovolta.com>



---

# Contents

|          |                                       |           |
|----------|---------------------------------------|-----------|
| <b>1</b> | <b>About this manual</b>              | <b>1</b>  |
| 1.1      | Purpose and scope                     | 2         |
| 1.2      | Who this manual is for                | 3         |
| 1.3      | Symbols and signal words              | 4         |
| 1.4      | Online documentation and QR code      | 5         |
| 1.5      | Contact and support                   | 6         |
| <b>2</b> | <b>Safety</b>                         | <b>7</b>  |
| 2.1      | Intended use                          | 8         |
| 2.2      | Qualified personnel                   | 9         |
| 2.3      | Personal protective equipment         | 10        |
| 2.4      | Main hazards                          | 11        |
| 2.5      | First aid and chemical spill response | 12        |
| 2.6      | Safety devices and emergency stop     | 13        |
| 2.7      | Isolating the unit before work        | 14        |
| 2.8      | Safety labels on the container        | 15        |
| <b>3</b> | <b>System overview</b>                | <b>17</b> |
| 3.1      | What the unit does                    | 18        |
| 3.2      | Field performance reference           | 19        |
| 3.3      | Container layout                      | 20        |
| 3.4      | Process flow                          | 21        |
| 3.5      | Main components                       | 22        |
| 3.6      | Control cabinet and HMI               | 23        |
| 3.7      | Nameplate and identification          | 24        |
| <b>4</b> | <b>Installation</b>                   | <b>25</b> |
| 4.1      | Delivery and unloading                | 26        |
| 4.2      | Site requirements                     | 27        |
| 4.3      | Positioning the container             | 28        |
| 4.4      | Water connections                     | 29        |
| 4.5      | Electrical connection                 | 30        |
| 4.6      | Network and telemetry connection      | 31        |
| 4.7      | Installation checklist                | 32        |
| <b>5</b> | <b>Commissioning</b>                  | <b>33</b> |
| 5.1      | Before the first start                | 34        |
| 5.2      | Filling and priming                   | 35        |
| 5.3      | First power-up                        | 36        |
| 5.4      | Setting the operating parameters      | 37        |
| 5.5      | Functional test                       | 38        |
| 5.6      | Handover                              | 39        |
| <b>6</b> | <b>Daily operation</b>                | <b>41</b> |
| 6.1      | Operating elements                    | 42        |
| 6.2      | Plant modes                           | 43        |
| 6.3      | Starting the unit                     | 44        |
| 6.4      | HMI screens                           | 45        |
| 6.5      | Reading the process values            | 46        |
| 6.6      | Changing setpoints                    | 47        |
| 6.7      | Manual mode                           | 48        |
| 6.8      | Stopping the unit                     | 49        |

|           |                                                   |           |
|-----------|---------------------------------------------------|-----------|
| 6.9       | Emergency stop and restart . . . . .              | 50        |
| <b>7</b>  | <b>Maintenance and troubleshooting overview</b>   | <b>51</b> |
| 7.1       | Safety during maintenance . . . . .               | 52        |
| 7.2       | Maintenance schedule . . . . .                    | 53        |
| 7.3       | Maintenance log . . . . .                         | 54        |
| 7.4       | Alarm handling . . . . .                          | 55        |
| 7.5       | How to use the troubleshooting sections . . . . . | 56        |
| 7.6       | When to call service . . . . .                    | 57        |
| <b>8</b>  | <b>Pretreatment and Filtration Skid</b>           | <b>59</b> |
| 8.1       | Overview and function . . . . .                   | 60        |
| 8.2       | Key specifications . . . . .                      | 61        |
| 8.3       | Operation . . . . .                               | 62        |
| 8.4       | Maintenance . . . . .                             | 63        |
| 8.5       | Troubleshooting . . . . .                         | 64        |
| <b>9</b>  | <b>Feed and Process Pumps</b>                     | <b>65</b> |
| 9.1       | Overview and function . . . . .                   | 66        |
| 9.2       | Key specifications . . . . .                      | 67        |
| 9.3       | Operation . . . . .                               | 68        |
| 9.4       | Maintenance . . . . .                             | 69        |
| 9.5       | Troubleshooting . . . . .                         | 70        |
| <b>10</b> | <b>SonixED Stack Modules</b>                      | <b>71</b> |
| 10.1      | Overview and function . . . . .                   | 72        |
| 10.2      | Key specifications . . . . .                      | 73        |
| 10.3      | Operation . . . . .                               | 74        |
| 10.4      | Maintenance . . . . .                             | 75        |
| 10.5      | Troubleshooting . . . . .                         | 76        |
| <b>11</b> | <b>Valves and Manifold</b>                        | <b>77</b> |
| 11.1      | Overview and function . . . . .                   | 78        |
| 11.2      | Key specifications . . . . .                      | 79        |
| 11.3      | Operation . . . . .                               | 80        |
| 11.4      | Maintenance . . . . .                             | 81        |
| 11.5      | Troubleshooting . . . . .                         | 82        |
| <b>12</b> | <b>Dosing System</b>                              | <b>83</b> |
| 12.1      | Overview and function . . . . .                   | 84        |
| 12.2      | Key specifications . . . . .                      | 85        |
| 12.3      | Operation . . . . .                               | 86        |
| 12.4      | Maintenance . . . . .                             | 87        |
| 12.5      | Troubleshooting . . . . .                         | 88        |
| <b>13</b> | <b>Instrumentation and Sensors</b>                | <b>89</b> |
| 13.1      | Overview and function . . . . .                   | 90        |
| 13.2      | Key specifications . . . . .                      | 91        |
| 13.3      | Operation . . . . .                               | 92        |
| 13.4      | Maintenance . . . . .                             | 93        |
| 13.5      | Troubleshooting . . . . .                         | 94        |
| <b>14</b> | <b>Control Cabinet, PLC and HMI</b>               | <b>95</b> |
| 14.1      | Overview and function . . . . .                   | 96        |
| 14.2      | Key specifications . . . . .                      | 97        |
| 14.3      | Operation . . . . .                               | 98        |
| 14.4      | Maintenance . . . . .                             | 99        |

|                                                     |            |
|-----------------------------------------------------|------------|
| 14.5 Troubleshooting . . . . .                      | 100        |
| <b>15 Tanks</b>                                     | <b>101</b> |
| 15.1 Overview and function . . . . .                | 102        |
| 15.2 Key specifications . . . . .                   | 103        |
| 15.3 Operation . . . . .                            | 104        |
| 15.4 Maintenance . . . . .                          | 105        |
| 15.5 Troubleshooting . . . . .                      | 106        |
| <b>16 Telemetry and Remote Connectivity</b>         | <b>107</b> |
| 16.1 Overview and function . . . . .                | 108        |
| 16.2 Key specifications . . . . .                   | 109        |
| 16.3 Operation . . . . .                            | 110        |
| 16.4 Maintenance . . . . .                          | 111        |
| 16.5 Troubleshooting . . . . .                      | 112        |
| <b>17 Shutdown, storage and disposal</b>            | <b>113</b> |
| 17.1 Short shutdown . . . . .                       | 114        |
| 17.2 Long-term storage . . . . .                    | 115        |
| 17.3 Restarting after storage . . . . .             | 116        |
| 17.4 Decommissioning . . . . .                      | 117        |
| 17.5 Disposal and recycling . . . . .               | 118        |
| <b>A Parameter tables</b>                           | <b>119</b> |
| A.1 Default setpoints . . . . .                     | 120        |
| A.2 Site-specific settings . . . . .                | 121        |
| A.3 Alarm limits . . . . .                          | 122        |
| <b>B Drawings</b>                                   | <b>123</b> |
| B.1 P&ID . . . . .                                  | 124        |
| B.2 Electrical schematic . . . . .                  | 125        |
| B.3 Container layout . . . . .                      | 126        |
| <b>C Certificates and datasheets</b>                | <b>127</b> |
| C.1 Declaration of conformity . . . . .             | 128        |
| C.2 Component datasheets . . . . .                  | 129        |
| C.3 Regulatory approvals (drinking water) . . . . . | 130        |
| C.4 Water analysis report . . . . .                 | 131        |
| <b>D Glossary</b>                                   | <b>133</b> |





CHAPTER

# About this manual

IN THIS CHAPTER

---

|       |                                  |   |
|-------|----------------------------------|---|
| 1.1   | Purpose and scope                | 2 |
| <hr/> |                                  |   |
| 1.2   | Who this manual is for           | 3 |
| <hr/> |                                  |   |
| 1.3   | Symbols and signal words         | 4 |
| <hr/> |                                  |   |
| 1.4   | Online documentation and QR code | 5 |
| <hr/> |                                  |   |
| 1.5   | Contact and support              | 6 |
| <hr/> |                                  |   |

## 1.1 Purpose and scope

This manual describes the SalinBloc™ container: a modular SonixED™ electro dialysis unit for water desalination and brine valorization, delivered as one or more standard shipping containers fitted with pretreatment, stack, dosing and control equipment. Part I of this manual covers the unit as a whole (safety, installation, commissioning, day-to-day operation). Part II gives one self-contained chapter per compartment inside the container — pumps, stacks, valves, dosing, sensors, control cabinet, tanks, and telemetry — each with its own specifications, operating notes, maintenance and troubleshooting, so it can be consulted (or printed/exported) on its own. Part III closes with shutdown/storage and reference appendices.

SonixED™ is HydroVolta NV's electro dialysis-reversal (EDR) technology, combined with an integrated ultrasound antifouling stage and a custom ion-selective membrane coating. Hydrovolta NV (Leuven, Belgium, founded 2016) developed SonixED™ over eight years of lab validation with research partners including VITO, and holds a granted European patent (2021) on the combined EDR + ultrasound process. SonixED™/SalinBloc™ units are in active use or pilot deployment at sites in Belgium, Morocco, Australia (Perth), Brazil and Saudi Arabia; see section 3.2 for field performance data published by HydroVolta.



### NOTICE

Several sections in this manual are marked **TODO**. These mark information that was not found in HydroVolta's engineering documentation or public materials at the time of writing (July–August 2026) and must be supplied by HydroVolta engineering, or confirmed by inspection/measurement on an actual unit, before this manual is issued to a customer. Every other statement in this manual is grounded in a specific HydroVolta engineering document, datasheet, or the hydrovolta.com website — but the underlying documents mostly describe pilot/demonstration containers (Farys, Ganzepoot, BASF, Morocco, and others), not a finalized, branded “SalinBloc™” bill of materials. Treat pilot-specific facts as a well-informed engineering basis for the standard product, not as a guaranteed as-shipped specification, until confirmed against a specific unit's documentation. Notably, the **PLC control program itself is out of scope for this edition** of the manual — it is still under development by HydroVolta's automation team, and the relevant sections (HMI screen navigation, exact control logic, full setpoint list) will be completed once that work is finished.

## 1.2 Who this manual is for

This manual is written for the people who take delivery of, install, commission, operate and maintain a SalinBloc™ unit: site engineers, installation contractors, plant operators, and HydroVolta service technicians. Readers are assumed to have basic familiarity with industrial piping, low-voltage electrical systems and PLC-controlled equipment; no prior knowledge of electrodialysis is assumed (see the Glossary, appendix D, for unfamiliar terms).

## 1.3 Symbols and signal words

Hazard and information boxes in this manual follow the signal-word convention below, aligned with ISO 3864 / ANSI Z535 safety-color practice.



### DANGER

Indicates a hazard that, if not avoided, **will** result in death or serious injury.



### WARNING

Indicates a hazard that, if not avoided, **could** result in death or serious injury.



### CAUTION

Indicates a hazard that, if not avoided, could result in minor or moderate injury.



### NOTICE


Indicates a risk of property damage or equipment malfunction, with no personal-injury hazard.

### NOTE

Highlights additional information that helps the reader but is not itself a hazard warning.

## 1.4 Online documentation and QR code

A QR code on the container's control cabinet links to the latest online version of this manual and to the unit's factory quality report.

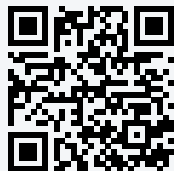

Scan to open the online manual and this unit's quality report at <https://hydrovolta.com/salinbloc-manual>.

## 1.5 Contact and support

Hydrovolta NV, Romeinse Straat 18, 3001 Leuven, Belgium. E-mail: [info@hydrovolta.com](mailto:info@hydrovolta.com). Phone: +32 28 800 336. Web: [hydrovolta.com](http://hydrovolta.com). TODO: no dedicated *service* phone line, out-of-hours escalation path, or service-hours commitment (as opposed to general company contact) was found — see also section 7.6 for when to contact service.

---

## CHAPTER

# Safety

### IN THIS CHAPTER

---

|     |                                       |    |
|-----|---------------------------------------|----|
| 2.1 | Intended use                          | 8  |
| 2.2 | Qualified personnel                   | 9  |
| 2.3 | Personal protective equipment         | 10 |
| 2.4 | Main hazards                          | 11 |
| 2.5 | First aid and chemical spill response | 12 |
| 2.6 | Safety devices and emergency stop     | 13 |
| 2.7 | Isolating the unit before work        | 14 |
| 2.8 | Safety labels on the container        | 15 |

---



#### WARNING

Read this entire chapter before installing, operating or servicing the SalinBloc™ unit. No unit-level hazard analysis, PPE schedule or lockout/tagout procedure specific to SalinBloc™/SonixED™ exists yet in HydroVolta's engineering library — only generic contractor-safety material (tool safety sheets, an electrical risk assessment template, a VCA contractor-competency handbook) and the Safety Data Sheets for the dosing/CIP chemicals. The hazards, PPE and isolation guidance below are derived from those chemical SDSs and from the electrical/pressure/DC figures documented elsewhere in this manual (chapters 10 and 14); they are a defensible starting point, **not** a substitute for a formal hazard analysis, which HydroVolta engineering/EHS must still produce and sign off before this manual is issued to a customer.

## 2.1 Intended use

The SalinBloc™ unit is intended for the electrodialysis desalination or ion reduction of brackish groundwater, industrial process water, or brine, in the total dissolved solids range HydroVolta publishes as the technology's operating envelope — approximately 1,500–20,000 ppm TDS (see section 3.2) — and within the feedwater quality limits stated for the pretreatment and stack stages (chapters 8 and 10). It is not intended for seawater desalination (HydroVolta states seawater, >35,000 ppm, as outside SonixED™'s primary use case) and is **not** currently certified as a drinking-water treatment system: the 03\_UK DWI reg 31 approval folder in HydroVolta's datasheet library contains only generic third-party guidance on how Reg 31 approval works (not an actual approval or application), and the 04\_NSF folder contains only a general NSF/ANSI 60/61/372 adoption survey (not an NSF listing) — confirmed by direct inspection of both folders. Do not make a potable-water regulatory claim to a customer until formal approval is obtained — see appendix C. Foreseeable misuse includes: feeding water outside the documented turbidity/iron/chlorine/pH envelope (chapter 10) without adequate pretreatment; bypassing or defeating interlocks, alarms or the emergency stop; operating with the cabinet doors open; and mixing CIP chemicals outside the sequence in chapter 12 (in particular, never combine NaOH with feed/process water — see the warning in chapter 12).

## 2.2 Qualified personnel

Work on the control cabinet, VFDs and any live electrical circuit, including the SonixED™ stack's DC bus (up to 600 VDC, chapter 10), must only be performed by an electrically qualified person as defined in IEC 60204-1. Chemical dosing tank refilling and CIP chemical handling must only be performed by personnel trained on the relevant Safety Data Sheet for that chemical (section 2.4). HydroVolta's own engineering library uses the Belgian/Dutch **VCA** (Veiligheid, Gezondheid en Milieu Checklist Aannemers) contractor-safety certification as its baseline competency reference for site work; treat VCA-certified (or locally equivalent) status as the expected minimum for any contractor performing installation or maintenance work on the unit. General operators (start/stop, HMI monitoring, routine visual checks) do not need electrical or chemical-handling qualifications but must be trained on this manual and on the local isolation procedure (section 2.7) before working unsupervised.


## 2.3 Personal protective equipment

- **Chemical dosing / CIP work** (antiscalant, HCl, NaOH, NaOCl, H<sub>2</sub>SO<sub>4</sub> — all corrosive per their SDS, section 2.4): chemical-resistant gloves, safety glasses/goggles with a face shield for tank filling or CIP setup, and a chemical-resistant apron. Have an eyewash/emergency shower available wherever CIP or dosing-tank work is performed.
- **Control cabinet / electrical work**: PPE appropriate to the task and the incoming supply voltage (3×400 V AC, chapter 14) per the site's local electrical safety regulation and the qualified person's own risk assessment; always verify isolation (section 2.7) before opening the cabinet.
- **General site / mechanical work** (pumps, valves, piping): safety shoes and, where local site rules require it, hi-vis clothing and hearing protection near running pumps.

TODO: this list is derived from the chemical SDSs and general industrial practice, not from a HydroVolta-authored PPE matrix — none was found.

## 2.4 Main hazards

- **Electrical:** the incoming 3×400 V AC cabinet supply (chapter 14), and — specific to this technology — the SonixED™ stack's own DC bus, which is energized to **60–600 V DC at 3–20 A** during normal operation (chapter 10). This DC bus is a hazard independent of the AC supply and must be isolated and verified dead separately before any stack or manifold work.
- **Chemical:** the antiscalant, HCl, NaOH, NaOCl and H<sub>2</sub>SO<sub>4</sub> used for dosing and CIP (chapter 12) are corrosive per their Safety Data Sheets (Carl Roth SDS on file in HydroVolta's engineering library). **Never mix NaOH with feed or process water** — HydroVolta's own CIP procedure documents this as a scaling hazard, and mixing acid and hypochlorite streams carries a toxic-gas risk common to all such systems; keep chemical dosing lines and procedures strictly separated as described in chapter 12.
- **Pressurized piping:** the hydraulic circuit operates up to 2.5 bar (stack maximum 3 bar, chapter 10) and the pretreatment UF stage's CEB/backwash cycle briefly reaches similar pressures (chapter 8); depressurize before opening any fitting.
- **Moving parts:** process pumps, dosing pumps, and automated valve actuators (chapters 9 and 11) start automatically under PLC control without warning — treat every pump and valve as capable of starting at any time unless the unit is isolated.

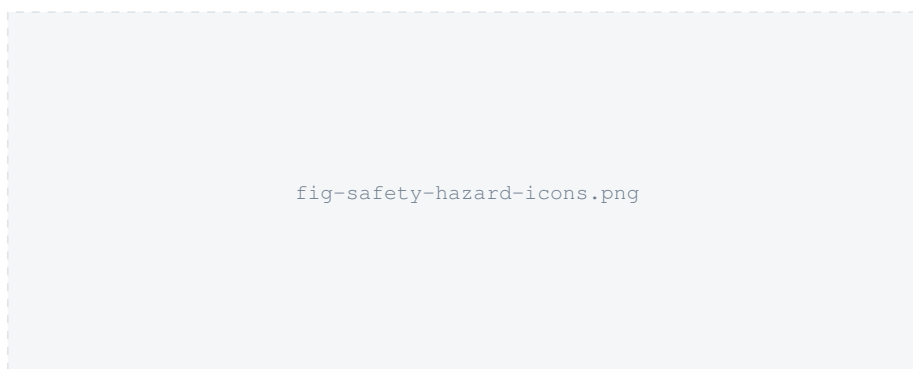

**Figure 2.1.** Suggested figure: a labeled diagram of the container's exterior and interior showing each hazard zone above (electrical cabinet / DC stack bus, chemical dosing area, pressurized piping, pump/valve zones) with its corresponding ISO 7010 warning pictogram.

## 2.5 First aid and chemical spill response

The following is transcribed directly from the manufacturer Safety Data Sheets on file for the dosing/CIP chemicals (Carl Roth SDS, Section 4 “First aid measures” and Section 6 “Accidental release measures”; text is consistent across NaOH, HCl, NaOCl and H<sub>2</sub>SO<sub>4</sub>). Post this section, or an equivalent quick-reference card, wherever chemicals are handled.



**Eye contact:** flush immediately with plenty of flowing water for **10 to 15 minutes**, holding eyelids apart, and consult an ophthalmologist. Protect the uninjured eye. **Skin contact:** take off all contaminated clothing immediately; wash the affected skin immediately with plenty of water (for H<sub>2</sub>SO<sub>4</sub>: first mechanically remove the chemical, e.g. dab away with wadding, then wash with a mild cleansing agent and water); seek immediate medical treatment — corrosive injuries left untreated are hard to cure. **Inhalation:** move to fresh air; seek medical advice if symptoms persist or in any case of doubt. **Ingestion:** rinse the mouth immediately and drink plenty of water; call a physician immediately — risk of gastric/esophageal perforation from the corrosive effect.

**Spill response** (non-emergency personnel only; do not attempt without the PPE in section 2.3): put on PPE, avoid contact with skin, eyes and clothing, and do not breathe vapour/spray. Cover nearby drains to protect surface/ground water — for HCl and H<sub>2</sub>SO<sub>4</sub> specifically, the product must be neutralized before any discharge to a drain or sewage plant. Absorb the spill with a liquid-binding material (sand, diatomaceous earth, or an acid/universal binding agent), then place the absorbed material in an appropriate container for disposal. Ventilate the affected area, especially after an HCl release.

## 2.6 Safety devices and emergency stop

HydroVolta's HMI design specification (chapter 6) confirms a **hardware Emergency Stop button that bypasses the PLC entirely** — see section 6.9 for the full recovery procedure. TODO: its physical location on the control panel/cabinet, and whether more than one E-stop station exists (e.g. one per container, or one per access point), was not confirmed in the documents reviewed — verify against the as-built electrical schematic and IEC 60204-1 on the actual unit before publication. No document describing pressure-relief devices or leak detection was found.

## 2.7 Isolating the unit before work

No HydroVolta-authored lockout/tagout procedure was found; until one exists, apply this general sequence before any maintenance, sensor, or piping work:

1. Stop the process via the normal `Stop` sequence (chapter 6).
2. Isolate and lock out the incoming electrical supply at the main breaker; verify absence of voltage at the cabinet terminals before touching any wiring.
3. Separately verify the SonixED™ stack's DC bus is de-energized — it operates independently of the AC supply isolation point and can present up to 600 V DC (chapter 10); never assume it is safe just because the AC breaker is open.
4. Isolate and depressurize the hydraulic circuit (close feed/product/ drain isolation points, section 4.4) before opening any fitting.
5. Where chemical dosing lines will be disturbed, close the relevant tank isolation valve and follow the PPE guidance in section 2.3.

TODO: this sequence is assembled from the general electrical/hydraulic/DC facts documented elsewhere in this manual, not from a validated HydroVolta LOTO procedure — HydroVolta engineering/EHS must review and formalize it, including lock/tag hardware and a permit-to-work step if required by the customer's site rules.

## 2.8 Safety labels on the container

A folder named `17_Photos/Container stickers` exists in HydroVolta’s engineering library, but on inspection it contains only **brand artwork** (the Hydro-Blue and Volta-Yellow logo marks, the HydroVolta wordmark, a “water desalination” decal, and a door logo) — **no hazard/warning pictogram stickers were found there or anywhere else in the library**. This is a real gap: before a unit ships, it needs a proper ISO 7010 hazard-label set (electrical, DC stack, chemical, pressure — matching section 2.4) actually affixed and photographed, and this section rewritten from those photographs.



**Figure 2.2.** Suggested figure: photograph(s) of the container exterior and control cabinet with each safety/identification label numbered, plus a key table listing what each label means and where it is mounted — to be produced once a real hazard-label set has been designed and affixed to a unit (none currently exists in HydroVolta’s documentation).



# System overview

IN THIS CHAPTER

---

|            |                              |    |
|------------|------------------------------|----|
| <b>3.1</b> | What the unit does           | 18 |
| <hr/>      |                              |    |
| <b>3.2</b> | Field performance reference  | 19 |
| <hr/>      |                              |    |
| <b>3.3</b> | Container layout             | 20 |
| <hr/>      |                              |    |
| <b>3.4</b> | Process flow                 | 21 |
| <hr/>      |                              |    |
| <b>3.5</b> | Main components              | 22 |
| <hr/>      |                              |    |
| <b>3.6</b> | Control cabinet and HMI      | 23 |
| <hr/>      |                              |    |
| <b>3.7</b> | Nameplate and identification | 24 |
| <hr/>      |                              |    |

## 3.1 What the unit does

The SalinBloc™ unit is built around HydroVolta's SonixED™ technology, which combines three mechanisms in one automated platform:

1. **Electrodialysis reversal (EDR):** an applied DC electric field draws dissolved ions — not water — through ion-exchange membranes from the diluate stream into the concentrate stream. Because water itself does not have to be forced through a membrane (unlike reverse osmosis), the process runs at much lower hydraulic pressure. Periodically reversing polarity cleans the membranes in place without chemicals and gives more stable performance as feed salinity varies.
2. **Integrated ultrasound antifouling:** ultrasound transducers built into the stack create acoustic cavitation at the membrane surface, disrupting scale nucleation and helping prevent silica fouling — this is the element of SonixED™ that HydroVolta holds a granted European patent on (2021).
3. **Custom membrane coating:** a proprietary coating gives the membranes monovalent-ion selectivity, so the process can target nitrate, sodium, chloride and fluoride removal while retaining calcium and magnesium in the product water.

The result is a saline feed stream split into a low-salinity product stream (*diluate*) and a concentrated reject stream (*concentrate/brine*), with chemical-free ultrasound antifouling keeping the membrane stack clean and extending electrode/membrane life (chapter 10). Typical applications: groundwater desalination and selective ion (e.g. nitrate) removal, industrial process-water reuse, brine valorization/concentration, and Zero Liquid Discharge (ZLD) support.



**Figure 3.1.** Suggested figure: exterior photograph of a delivered SalinBloc™ container (or container pair) on site, showing the overall footprint and connection points.

## 3.2 Field performance reference

HydroVolta publishes the following performance comparison from a 90-day industrial pilot (February–May 2023, cooling-tower blowdown at a chemical industry facility in Germany, feed TDS  $\approx$ 4,500 ppm, silica 85 mg/l, high hardness), run head-to-head against reverse osmosis (RO) and a standard EDR system on the same feedwater (source: [hydrovolta.com/technology.html](https://hydrovolta.com/technology.html) and [/projects.html](https://hydrovolta.com/projects.html)). These figures describe that specific pilot and HydroVolta's general SonixED™ technology, not a performance guarantee for any individual SalinBloc™ unit; use them as context for what the technology is designed to achieve, and always verify against the site-specific commissioning data recorded in appendix A.


**Table 3.1.** Germany 2023 industrial pilot — SonixED™ vs. RO vs. standard EDR (source: [hydrovolta.com](https://hydrovolta.com))

| Parameter            | SonixED™                        | RO                             | Standard EDR                   |
|----------------------|---------------------------------|--------------------------------|--------------------------------|
| Water recovery       | 90–98%                          | 50–75%                         | 70–85%                         |
| Energy consumption   | 0.19–<br>0.7 kWh/m <sup>3</sup> | 2.0–<br>4.0 kWh/m <sup>3</sup> | 1.0–<br>2.0 kWh/m <sup>3</sup> |
| Operating pressure   | 0.5–2.5 bar                     | 25–35 bar                      | 1–2 bar                        |
| Chemical dosing      | Minimal, no<br>antiscalant      | Required                       | Antiscalant<br>needed          |
| CIP frequency        | 0.6×/month                      | 1×/month                       | 1×/month                       |
| Total treatment cost | \$0.30–<br>0.40/m <sup>3</sup>  | \$0.60–<br>1.00/m <sup>3</sup> | \$0.40–0.80/m <sup>3</sup>     |

HydroVolta states SonixED™'s general operating envelope as feed TDS 1,500–20,000 ppm (“strong fit” also for high silica >30 mg/l and high hardness >300 mg/l Ca+Mg feeds); seawater (>35,000 ppm) is stated as not the primary use case. Active and piloted SonixED™/SalinBloc™ deployments referenced by HydroVolta include a flagship groundwater desalination project in Morocco (seawater-intruded coastal aquifer,  $\approx$ 7,000 ppm feed), a multi-site utility pilot with Water Corporation in Perth, Australia (selective nitrate and salinity removal), the Germany industrial pilot above, and earlier-stage projects in Brazil and Saudi Arabia.

### 3.3 Container layout

The system is delivered as a modular set of skids assembled inside one or more standard shipping containers (20 ft and 40 ft, High-Cube and Standard variants). Larger installations use **two** containers: a *pretreatment container* (filtration stages, chapter 8) and a *treatment container* housing the SonixED™ skid(s) (chapters 9 to 11 and 14), connected hydraulically. A documented 20 ft general-arrangement layout (drawing 2308CA1) shows internal dimensions of 6058 × 2438 × 2896 mm, housing a bank of SonixED™ stack racks, an electrical/control cabinet, a dosing/chemical section, three overhead storage tanks, and interconnecting piping; a companion top-view drawing (2308CA2) lays the skids out along the container floor: chemical skid, pump skid, tank skid, control 1 skid, filter skid, SonixED™ skid, control 2 skid.

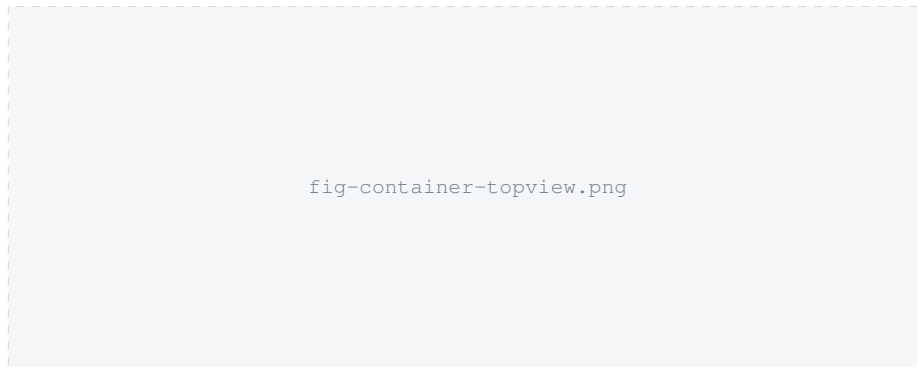

**Figure 3.2.** Suggested figure: the skid top-view layout (based on drawing 2308CA2), redrawn/simplified for this manual, with each skid numbered and cross-referenced to its Part II chapter.

## 3.4 Process flow

1. Feed water enters the pretreatment container (2½" connection from source).
2. Pretreatment (disc filtration and ultrafiltration, chapter 8) conditions the water; filtered water leaves via a 2" connection.
3. Filtered water enters the treatment container (2" connection) and is split and pumped through parallel SonixED™ stacks (chapters 9 and 10), with three internal streams per stack: **diluate** (becomes the product/permeate), **concentrate** (becomes the brine/reject), and **electrolyte** (a separate loop feeding the electrode compartments, chapter 15).
4. Product (permeate) water exits the treatment container via a 2" outlet connection.
5. Reject/concentrate and pretreatment backwash/drainage are combined via a tee piece and routed to a drain tank via 3" drainage connections from both containers.

### NOTE

TODO: a fully tagged P&ID with valve/instrument numbers exists for the BASF pilot (drawing SWHC-001/00, rev. 0.98) — see appendix B — but has not yet been confirmed as representative of the standard SalinBloc™ product configuration.

## 3.5 Main components

This section is a one-page index of every compartment covered in its own chapter later in this manual (Part II) — use it to jump straight to the part you need.

- **Pretreatment and filtration skid** — chapter 8
- **Feed and process pumps** — chapter 9
- **SonixED™ stack modules** — chapter 10
- **Valves and manifold** — chapter 11
- **Dosing system** — chapter 12
- **Instrumentation and sensors** — chapter 13
- **Control cabinet, PLC and HMI** — chapter 14
- **Tanks** — chapter 15
- **Telemetry and remote connectivity** — chapter 16

## 3.6 Control cabinet and HMI

The control system consists of a PLC with a touchscreen HMI, manual/override controls, and RS485 communication, housed in an IP55-rated cabinet. The skid ordering code allows two control-box configurations — **CB0** (PLC only) and **CB1** (PLC + touchscreen HMI) — and three cloud-connectivity tiers: **CL0** (local only), **CL1** (cloud monitoring), **CL2** (full cloud monitoring and control). See chapter 14 for details.

### 3.7 Nameplate and identification

TODO: no nameplate drawing, CE-marking template with filled-in fields, or Declaration of Conformity content was found (the 02\_DoC's and 05\_SonixED\_stack CE-marking folders in HydroVolta's engineering library are confirmed empty — see appendix C). The confirmed identification data is the datasheet labeling convention "Model: SONIXED-SKID, Version: 2025-A7" and the ordering code format SONIXED-SKID-A-S-M-PR-V-CB-CL (application type A0/A1/A2, stack count 1/2/3, measuring points 6/9/12, pressure sensors 6/9/12, valve count 2/4/6, control-box option CB0/CB1, cloud option CL0/CL1/CL2). Each skid physically measures approximately  $3040 \times 1340 \times 2020$  mm (l × b × h), on an aluminum-profile frame with a PVC/thermoplastic-spacer housing, mounted on lockable wheels for in-container mobility. HydroVolta's public SalinBloc™ brochure states container throughput by format: a **20 ft** unit handles 2–30 m<sup>3</sup>/h ( $\approx 44$ –660 m<sup>3</sup>/day at 22 h/day operation); a **40 ft** unit handles 15–60 m<sup>3</sup>/h ( $\approx 330$ –1,320 m<sup>3</sup>/day) — see section 3.2 and appendix A. No container weight figure was found in any source reviewed.



**Figure 3.3.** Suggested figure: photograph of the unit's nameplate once affixed, showing serial number, manufacture date, voltage/power rating, IP rating and CE mark.



CHAPTER

# Installation

IN THIS CHAPTER

|            |                                  |    |
|------------|----------------------------------|----|
| <b>4.1</b> | Delivery and unloading           | 26 |
| <b>4.2</b> | Site requirements                | 27 |
| <b>4.3</b> | Positioning the container        | 28 |
| <b>4.4</b> | Water connections                | 29 |
| <b>4.5</b> | Electrical connection            | 30 |
| <b>4.6</b> | Network and telemetry connection | 31 |
| <b>4.7</b> | Installation checklist           | 32 |

## 4.1 Delivery and unloading

TODO: no document describing crane/forklift unloading, container weight, or lifting-point locations was found. The container general-arrangement drawings (2308CA1/2308CA2, appendix B) likely show lifting points but have not yet been reviewed for this purpose.



**Figure 4.1.** Suggested figure: photograph or diagram of the container being lifted/unloaded on site, with lifting points marked, once the procedure is confirmed.

## 4.2 Site requirements

The system is built around one or two ISO shipping containers (pretreatment + treatment, chapter 3), 20 ft/40 ft, High-Cube or Standard. In HydroVolta's documented BASF pilot, the pretreatment unit used a 10 ft container. The site must provide a water source (the pilot drew from a cooling-tower basin via a submersible pump) and space alongside the containers for a drain tank. TODO: ambient temperature range, ground/ foundation/leveling requirements and clearances beyond what the pilot layout implies were not found in a dedicated site-requirements document.

## 4.3 Positioning the container

TODO: no explicit positioning/orientation document was found. From the piping documented for commissioning (section 4.4), the pretreatment container's filtered-water outlet (2") must be within pipe-run distance of the treatment container's inlet (2"), and both containers' 3" drain outlets should be positioned so they can be tee'd together to a shared drain tank.

## 4.4 Water connections

- **Pretreatment container:** feed inlet 2½" (M) from the raw water source (in the pilot, a submersible pump rated 4.5 m<sup>3</sup>/h at 6 bar); filtered-water outlet 2" (M); drain outlet 3" (M).
- **Treatment container:** inlet 2" (M), fed from the pretreatment filtered-water outlet; product-water outlet 2" (M); drain outlet 3" (M).
- Pump-to-pretreatment feed line: PVCu, 60 mm, terminated 2½" (F).
- Pretreatment-to-treatment line: PVCu, 40 mm.
- Both containers' 3" (M) drain outlets combine via a tee into one line to the shared drain tank.
- Fit O-rings and PTFE tape at every threaded joint.

Key in-line pretreatment components: an ultrafiltration unit (AKKIM APM 80) via 2" Victaulic couplings, and disc filters (AZUD DF100/DF50/DF20) via 2" (F) 63 mm transition pieces.



**Figure 4.2.** Suggested figure: a labeled diagram of the pretreatment/treatment container pair showing every hydraulic connection point (feed, filtered-water, product, drain) with its size and thread type.

## 4.5 Electrical connection

The control cabinet is IP55-rated. Incoming supply on the documented pilot was 3×400 V AC (3P+N+PE, per IEC 60445), max. 25 A, with a 24 V DC control bus for valves and I/O (from the pretreatment electrical schematic, sheet E1/document I2). A separate electrical schematic series exists specifically for a **treatment container** (as opposed to pretreatment) under the BASF pilot project (folder `2_Electrical/ 0_Treatment container`, multiple dated AutoCAD Electrical `.dsn` revisions) — TODO: this series was located but not opened (CAD format); a human with AutoCAD Electrical should open the latest revision for the treatment-container-specific breaker/RCD sizing, since the figures above are from the pretreatment side only. TODO: confirm whether either value set applies to the standard SalinBloc™ product or is pilot-specific.

## 4.6 Network and telemetry connection

See chapter 16 for the router, remote-access gateway and cloud dashboard used for network/telemetry connectivity.

## 4.7 Installation checklist

1. Confirm all hydraulic connections listed in section 4.4 are complete: pretreatment feed/outlet/drain, treatment inlet/outlet/drain, combined drain-to-tank tee.
2. Confirm electrical supply matches the cabinet's rated voltage/current (chapter 14) before energizing.
3. Confirm network/telemetry connection is established (chapter 16).

TODO: no standalone installation checklist document was found; the list above is assembled from the commissioning data sheet and should be reviewed against a real site installation before publishing.



CHAPTER

# Commissioning

IN THIS CHAPTER

|            |                                  |    |
|------------|----------------------------------|----|
| <b>5.1</b> | Before the first start           | 34 |
| <b>5.2</b> | Filling and priming              | 35 |
| <b>5.3</b> | First power-up                   | 36 |
| <b>5.4</b> | Setting the operating parameters | 37 |
| <b>5.5</b> | Functional test                  | 38 |
| <b>5.6</b> | Handover                         | 39 |

## 5.1 Before the first start

Confirm every hydraulic connection in section 4.4 is complete and leak-checked before energizing the cabinet.  
TODO: no document describing a formal pre-start electrical isolation/lockout check or inspection checklist was found beyond the piping steps.

## 5.2 Filling and priming

Install the submersible feed pump in the source water body; connect its outlet to the pretreatment 2½" (F) inlet with 60 mm PVCu pipe; connect the pretreatment filtered-water outlet to the treatment container inlet with 40 mm PVCu pipe; join both containers' drain outlets via a tee to the drain tank; verify the product-water outlet is connected per site requirements. TODO: no document states specific priming steps (venting, air removal, initial fill sequence) beyond making these connections.

## 5.3 First power-up

TODO: no formal first-power-up procedure (breaker/contactor closing order, PLC boot checks, HMI startup) was found. What *does* exist is a real commissioning engineer's log from a pilot startup, which illustrates the general shape of a ramp-up sequence (source: pilot commissioning notes, HydroVolta engineering library) — treat it as an informative example, not a validated procedure for the standard product:

1. Start the feed and process pumps at a low VFD frequency ( $\sim 35$  Hz in the logged example) to establish flow gently rather than at full speed.
2. Increase the dosing-pump VFD frequency in steps (e.g. to  $\sim 60$  Hz) once feed flow is confirmed stable.
3. Confirm each stream reaches a stable pressure and flow reading before proceeding — the log explicitly checks “stable pressure” and “stable flow” at each stack position before applying stack current.
4. Apply DC current to the stack(s) only once hydraulics are stable, and confirm conductivity in the target stream stabilizes at the expected value.
5. Bring additional stacks online one at a time if the skid has more than one — the log notes that current draw on an already-running stack visibly drops as a newly started stack begins drawing current, which is expected stack-to-stack interaction, not a fault.

## 5.4 Setting the operating parameters

Dosing pumps are controlled via a 4–20 mA analog signal from ADAM I/O modules. Default configuration: **SET 1** = 4.0 mA (minimum, pump stopped, 0 impulses/min), **SET 2** = 20.0 mA (maximum, 180 impulses/min); internally, a raw integer of 0 corresponds to 3.8 mA and 4095 to 19.7 mA. Each dosing channel is verified across 4/8/12/16/20 mA. TODO: hydraulic setpoints (target flow/pressure) and stack-voltage setpoints are referenced in HydroVolta's internal user-manual outline but no actual values were found — see also appendix A.

## 5.5 Functional test

A real, filled-in functional test record exists for the BASF pilot's pretreatment dosing pumps and control panel:

1. Verify each dosing channel's SET 1/SET 2 defaults (4.0 mA / 0 impulses/min, 20.0 mA / 180 impulses/min) and confirm out-of-range signals (below 4 mA, above 20 mA) trigger a stop.
2. Test every alarm digital input and dosing digital output for correct read/operate behavior.
3. Drive each dosing pump across 4/8/12/16/20 mA and confirm the correct response at each step.

TODO: no document describes functional tests for the treatment (SonixED™/stack) side, pumps, or sensors beyond pretreatment dosing — see the relevant Part II chapters for what should be tested.

## 5.6 Handover

TODO: no document describing a formal handover procedure, sign-off sheet, or customer training checklist was found.



# Daily operation

IN THIS CHAPTER

|     |                            |    |
|-----|----------------------------|----|
| 6.1 | Operating elements         | 42 |
| 6.2 | Plant modes                | 43 |
| 6.3 | Starting the unit          | 44 |
| 6.4 | HMI screens                | 45 |
| 6.5 | Reading the process values | 46 |
| 6.6 | Changing setpoints         | 47 |
| 6.7 | Manual mode                | 48 |
| 6.8 | Stopping the unit          | 49 |
| 6.9 | Emergency stop and restart | 50 |

**NOTE**

This chapter now draws on HydroVolta's own *HMI Description* specification (revision V5, Morocco project, dated 2026-06-16) — the design document the automation team is building the PLC program against. It describes screens, controls and workflow *as specified*; the PLC program itself was still in development at the time of writing (chapter 1), so exact on-screen wording/layout on a specific delivered unit may differ slightly from what is described here. Where an older pilot's tag names differ from this specification (e.g. TSA-prefixed tags used elsewhere in this manual), both are noted.

## 6.1 Operating elements

The local control panel exposes physical Start, Stop and Reset controls, a Manual/local selector, a feedwater-source selector, and a CIP-mode input (control-system tags `Start`, `Stop`, `Reset`, `Manual`, `FW_Select`, `LS_Select`, `CIP`), alongside a four-color status LED stack (`GREEN_LED`, `BLUE_LED`, `ORANGE_LED`, `RED_LED`). The HMI specification additionally confirms a **hardware Emergency Stop button that bypasses the PLC entirely** — see section 6.9.



**Figure 6.1.** Suggested figure: photograph of the local control panel with each button, selector switch and LED labeled and cross-referenced to the tag names above.

## 6.2 Plant modes

Per the HMI specification, the unit operates in one of nine defined modes, selected from the **Mode Control** screen (section 6.4):

1. **Initial fill** — automatic filling of the system before first production.
2. **Production (forward)** — normal automatic production.
3. *(reversal is a timed sub-state of production, not a separate numbered mode — see Starting the unit below)*
4. **Controlled shutdown** — an orderly stop sequence.
5. **CIP** — automatic clean-in-place, after a CIP-PREP step (High pH/NaOH or Low pH/HCl, chapter 12) has conditioned the loop.
6. **Flush/rinse** — freshwater flush of the process loop.
7. *(reserved)*
8. **Manual** — individual device control, access-gated (see *Manual mode* below).
9. *(reserved)*

A separate **Safe Stop** state exists outside the numbered mode list: it is entered automatically on certain faults and requires the recovery procedure in *Emergency stop and restart* below before the operator can select a new mode.


## 6.3 Starting the unit

Per the HMI specification, starting the unit is a two-step mode selection from the **Mode Control** screen: first **Start AUTO INITIAL FILL**, then, once initial fill completes, **Start AUTO PRODUCTION**. Production runs in *forward* flow with a periodic electro dialysis- reversal step (chapter 10); the Overview screen shows a countdown timer to the next reversal. TODO: the specification confirms the button sequence and mode names but does not itself state numeric pre-start interlocks/permissions (e.g. minimum tank levels) — those are defined in the PLC program, still in development.

## 6.4 HMI screens

Per the HMI specification, the operator interface is organized into six screens:

- **Overview** — current plant mode and Safe Stop indicator; key performance indicators (product conductivity, product flow, recovery); product routing (to customer vs. recirculation); a status badge for each stack (power on/off, current, conductivity, pressure-OK); pump run/fault status; the position of the critical reversal and CIP-loop valves; the reversal countdown timer; and the active alarm count with highest severity.
- **Tank Summary** — level and conductivity for every tank, and the state of every fill/drain valve.
- **Mode Control** — the plant-mode buttons described above, plus *Drain Concentrate Tank*, *Switch to Manual*, *ACK Alarm* and *Reset Trip*.
- **Alarm Summary** — active, acknowledged and historical alarms, each showing its code, severity, cause, effect, timestamp and a recommended action, following the ISA-18.2 alarm-management convention — see *Alarm handling* in chapter 7.
- **Maintenance / Manual** — individual device commands (pumps, valves, dosing pumps, stack power), gated by the access level in *Manual mode* below.
- **Trends** — historical KPI graphs.

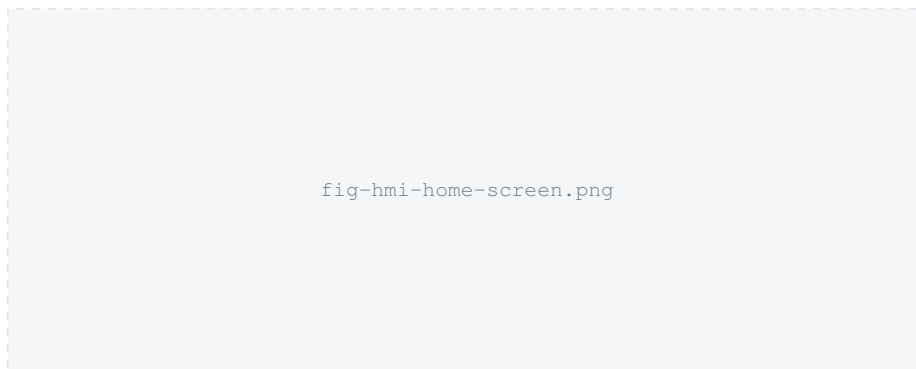

**Figure 6.2.** Suggested figure: screenshot of the HMI Overview screen, once the PLC program is complete and running on an actual unit, annotated with each element's function per the list above.

## 6.5 Reading the process values

Confirmed process readings available to the operator include pH, pressure, flow and conductivity/level for the sensor array (TSA\_pH, TSA\_pressure, TSA\_Flow, TSA\_Cond, TSA\_Level), plus conductivity and level for the TB tank (TB\_Cond, TB\_Level) and level for the TE (electrolyte) tank (TE\_Level) — see chapters 13 and 15. Additional electrical metering is available via power-meter tags (PM3150).

### NOTE

HydroVolta's I/O tag lists follow a readable naming convention that helps when reading raw tag names on an HMI or historian trend: a leading letter indicates the measurement type (P = pressure, FL = flow), followed by c/d/e for concentrate/diluate/electrolyte, and S1–S4 for the stack number when the tag is per-stack. Tank tags use T plus a capital letter for the tank's role (TD = diluate/feed tank, TC = concentrate loop tank, TE = electrolyte tank, TB = product/breaking tank). Valve tags use VA plus a functional group number. TODO: confirm whether the standard SalinBloc™ product uses this exact convention or the TSA-prefixed scheme seen elsewhere in this manual — both appear in HydroVolta's pilot projects, and the finished PLC program (still in development, see chapter 1) will determine which applies to a given unit.

## 6.6 Changing setpoints

Per the HMI specification, every setpoint, threshold, timer, dose and recipe value is adjustable directly from the HMI at runtime, without re-downloading the PLC program. Which parameters a given user can change is governed by a three-level access hierarchy:

- **Operator:** monitor screens, acknowledge alarms, start/stop production, drain the concentrate tank, run a manual flush, view trends. Cannot change setpoints.
- **Maintenance:** everything an Operator can do, plus individual pump/valve/dosing-pump control, manual fills/drains, and non-recipe parameter changes.
- **Admin/Engineer:** everything Maintenance can do, plus stack-power control (as a set, not individually), recipe parameters, cloud command flags, and user-account management.

TODO: the specific PIN/login mechanism for each access level, and the numeric default/range for every adjustable parameter, are defined in the full HMI specification's parameter table but were not transcribed into this manual — consult HydroVolta engineering for the complete parameter table if commissioning a unit before this manual's next revision.

## 6.7 Manual mode

A `Manual` digital input and `LS_Select/FW_Select` mode-selection inputs exist in the control I/O map, and the HMI specification confirms **Manual** as Mode 8, reached via *Switch to Manual* on the Mode Control screen and gated to the Maintenance/Admin access levels above — an Operator-level user cannot enter Manual mode. In Manual mode, the Maintenance/Manual screen exposes direct command of every process pump, every 2-way and 3-way valve, all five dosing pumps, and stack power (as a set only, even in Manual). One routing valve (`VAR.S.5` in the specification's tag scheme) is explicitly **AUTO-only** and cannot be operated from Manual mode under any access level — do not attempt to command it manually.

## 6.8 Stopping the unit

A `Stop` digital input exists on the local control panel, and the HMI specification's **Controlled Shutdown** (Mode 4) is the normal, orderly way to stop production from the Mode Control screen — prefer it over simply removing power, so the system can close valves and stop pumps in a defined sequence rather than an uncontrolled one. TODO: the exact step-by-step shutdown sequence executed by Mode 4 is internal to the PLC program and was not itself transcribed into this manual.

## 6.9 Emergency stop and restart

The HMI specification confirms a **hardware Emergency Stop button that bypasses the PLC entirely** — pressing it removes power/motion directly, independent of software state. TODO: its physical location on the control panel/cabinet was not confirmed in the documents reviewed; verify on the actual unit and update fig. 6.1 accordingly. Certain faults also trip the system into a software **Safe Stop** state (distinct from the hardware E-stop) — both require the following recovery sequence before production can resume, per the HMI specification:

1. Investigate the cause using the Alarm Summary screen (section 6.4) — each entry shows its cause, effect and a recommended action.
2. Physically inspect and resolve the underlying condition.
3. Press **ACK Alarm** on the Mode Control screen.
4. Press **Reset Trip** — this button is only enabled once the fault condition has actually cleared.
5. Select the next mode (e.g. Production). The PLC re-validates all permissives before allowing the mode to start, and will reject the request with a message if a required condition is still not met.



Never attempt to defeat, bridge, or otherwise bypass the hardware Emergency Stop button. If the E-stop has been pressed, do not restart the unit until the cause has been fully investigated and resolved.

# Maintenance and troubleshooting overview

General schedule and fault-finding approach — for a specific compartment’s checks, specifications and fault table, see its own chapter in Part II.

IN THIS CHAPTER

|     |                                         |    |
|-----|-----------------------------------------|----|
| 7.1 | Safety during maintenance               | 52 |
| 7.2 | Maintenance schedule                    | 53 |
| 7.3 | Maintenance log                         | 54 |
| 7.4 | Alarm handling                          | 55 |
| 7.5 | How to use the troubleshooting sections | 56 |
| 7.6 | When to call service                    | 57 |

## 7.1 Safety during maintenance

Before performing any wiring or sensor checks, isolate and verify the control circuit: control voltage is referenced to ground at 24 V DC — confirm 24 V DC is present between the terminal and PE before assuming a wiring fault, and never connect a sensor to the PLC before bench-testing it (chapter 13). TODO: no dedicated safety document (lockout/tagout, PPE, chemical/electrode handling) specific to SalinBloc™ maintenance was found — see chapter 2.

## 7.2 Maintenance schedule

No complete maintenance interval table (daily/weekly/monthly/annual) was found for the SalinBloc™ system as a whole. The one concrete, recurring interval documented anywhere in HydroVolta's engineering library is the CIP (clean-in-place) cycle described in chapter 12, which ran approximately **weekly** in the documented pilot; the pretreatment UF stage is otherwise cleaned on a TMP-triggered basis rather than a fixed interval (chapter 8).



### NOTICE

The table below is a **recommended starting schedule**, not a HydroVolta-issued one. The two rows marked "Confirmed" come directly from source documents cited elsewhere in this manual; every other row is this manual's synthesis of general good practice for equipment of this type (visual/level checks, periodic sensor verification, periodic actuator exercise, annual inspection), pending review and correction by HydroVolta engineering once real field data exists. Do not treat the unconfirmed rows as validated intervals.

**Table 7.1.** Recommended starting maintenance schedule

| Task                                                                                      | Interval                                    | Source / basis                                      |
|-------------------------------------------------------------------------------------------|---------------------------------------------|-----------------------------------------------------|
| Visual walk-round: check for leaks, unusual noise/vibration, tank levels, HMI alarm state | Daily                                       | Recommended practice (unconfirmed)                  |
| Record process values in maintenance log (appendix A ranges)                              | Daily                                       | Recommended practice (unconfirmed)                  |
| CIP cycle (acid + hypochlorite steps, chapter 12)                                         | Weekly                                      | <b>Confirmed</b> — documented pilot interval        |
| Check dosing chemical tank levels and top up                                              | Weekly                                      | Recommended practice (unconfirmed)                  |
| UF chemically enhanced backwash (CEB)                                                     | When TMP rises $\geq 0.9$ bar above initial | <b>Confirmed</b> — UF manufacturer spec (chapter 8) |
| Bench-verify each 4–20 mA sensor loop (section 13.4)                                      | Quarterly, or on any suspect reading        | Recommended practice (unconfirmed)                  |
| Exercise/inspect valve actuators (manual override, seat wear)                             | Quarterly                                   | Recommended practice (unconfirmed)                  |
| Inspect control cabinet (dust ingress on IP55 enclosure, terminal torque)                 | Semi-annually                               | Recommended practice (unconfirmed)                  |
| Full system inspection and log review                                                     | Annually                                    | Recommended practice (unconfirmed)                  |

TODO: every compartment's *Maintenance* section in Part II should be reviewed by HydroVolta engineering and this table corrected/expanded with real intervals as field data accumulates.

### 7.3 Maintenance log

A maintenance log should record, per event: date, technician, equipment/asset ID (e.g. stack, pump, sensor tag), the check or service performed, readings taken (pressure, flow, pH, conductivity, etc.) versus expected range, parts replaced (with part number), and any follow-up action required. Its purpose is a traceable per-unit service history so recurring faults, consumable replacement intervals and warranty-relevant events can be reviewed over the system’s lifetime.

**Table 7.3.** Maintenance log template

| Date | Technician | Equipment / tag | Check / service performed | Result |
|------|------------|-----------------|---------------------------|--------|
|      |            |                 |                           |        |
|      |            |                 |                           |        |

## 7.4 Alarm handling

Per HydroVolta's HMI design specification (chapter 6), alarms follow the ISA-18.2 alarm-management convention and always resolve the same way, regardless of which alarm fired:

1. The PLC raises the alarm; it appears on the **Alarm Summary** screen with its code, severity, cause, effect, timestamp and a recommended action.
2. The operator investigates using that information and this manual's Troubleshooting section for the relevant compartment (below).
3. Once the operator has acknowledged they are aware of it, press **ACK Alarm** (Mode Control screen) — the alarm moves to the acknowledged list.
4. Physically resolve the underlying condition.
5. Press **Reset Trip** — only enabled once the condition has actually cleared, so a reset that won't take is itself informative: it means the underlying condition has not actually gone away yet.
6. Resolved alarms remain in the alarm *history* with their full timestamp trail, for the maintenance log (chapter 7).

A fault severe enough to trip **Safe Stop** needs the fuller recovery sequence in section 6.9, not just ACK + Reset.

## 7.5 How to use the troubleshooting sections

Each Part II chapter ends with a *Troubleshooting* section scoped to that compartment: symptom, likely cause, and remedy. Start with the compartment most closely tied to the symptom (e.g. a conductivity alarm → chapter 13 or chapter 15; a communication timeout → chapter 14 or chapter 16). If the fault spans several compartments or persists after following the relevant section, escalate per section 7.6.

## 7.6 When to call service

Escalate to HydroVolta service when: a sensor fails its bench test (chapter 13) and no spare is available on site; a remote-access device (e.g. the ADAM-3600 RTU) remains unreachable after the documented recovery steps (chapter 14) and is not even pingable; or process readings remain outside the documented operating envelope after checking feedwater quality, pump duty point and pipe sizing. TODO: no source document defines formal escalation criteria, response-time commitments, or service contact information — see also chapter 1 (Contact and support).





CHAPTER

# Pretreatment and Filtration Skid

Disc filters, ultrafiltration unit and pretreatment piping

IN THIS CHAPTER

|            |                       |    |
|------------|-----------------------|----|
| <b>8.1</b> | Overview and function | 60 |
| <b>8.2</b> | Key specifications    | 61 |
| <b>8.3</b> | Operation             | 62 |
| <b>8.4</b> | Maintenance           | 63 |
| <b>8.5</b> | Troubleshooting       | 64 |

## 8.1 Overview and function

The pretreatment container conditions raw feed water before it reaches the SonixED™ stacks: disc filtration removes coarse suspended solids, and an ultrafiltration (UF) stage removes fine particulates and reduces fouling potential. Filtered water passes to the treatment container (chapter 3); rejected solids and backwash water are routed to the drain tank.



**Figure 8.1.** Suggested figure: photograph of the assembled pretreatment skid inside the container, with the disc filters, UF unit and main piping runs labeled.

## 8.2 Key specifications

- **Ultrafiltration:** Akualys/AKKIM APM 80 hollow-fiber UF module(s), 2" Victaulic connections. Two modules are confirmed ordered for HydroVolta (160 m<sup>2</sup> total membrane area). Membrane: modified PVDF hollow fiber, outside-to-inside flow, fiber OD/ID 1.4/0.8 mm, nominal MWCO ≤150,000 Da (≈30 nm pore size), 80 m<sup>2</sup> active area per module.
- **UF feedwater limits:** temperature ≤40 °C (typ. 25 °C); turbidity ≤250 NTU (typ. 50 NTU); TSS ≤80 mg/l; TOC ≤30 mg/l; pH 6–9; instantaneous free chlorine ≤150 mg/l.
- **UF operation:** dead-end/crossflow, filtrate flux 45–180 l/m<sup>2</sup>h at 25 °C, flow capacity 3.60–14.40 m<sup>3</sup>/h per module, feed inlet pressure 2–3 bar (instantaneous max. 5 bar), transmembrane pressure (TMP) 0.4–2 bar, filtrate SDI ≤2.5, filtrate turbidity ≤0.2 NTU.
- **Disc filtration:** AZUD Helix Automatic self-cleaning disc filters (FT-series, automatic backwash), 100-micron mesh discs; the documented BASF pilot P&ID additionally references disc-filter positions DF100/DF50/DF20 by micron rating — TODO confirm which AZUD Helix model number(s) map to the standard SalinBloc™ pretreatment train.
- Feed inlet: 2½" (M); filtered-water outlet: 2" (M); drain: 3" (M).
- Feed pump (pilot configuration): submersible, 4.5 m<sup>3</sup>/h at 6 bar.

TODO: confirm whether the AKKIM/AZUD models above are the standard SalinBloc™ bill-of-materials or pilot-specific; a finalized pretreatment BOM was not found. Several other filtration technologies (hydrocyclone separator, automatic screen filters, high-efficiency sand filters, microfilters) exist as vendor catalogs in HydroVolta's component library but are not confirmed as installed on any SonixED™ pretreatment train.

## 8.3 Operation

No dedicated pretreatment-specific operating procedure beyond the general startup/shutdown described in chapter 6 was found, but the UF module manufacturer documents the following normal operating cycle, which is the closest available reference for the standard SalinBloc™ pretreatment skid:

1. **Production:** a brief forward-flush step, then filtration (dead-end or crossflow) until the trigger for backwash is reached.
2. **Backwash:** drain, then air-scour (max. 20 Nm<sup>3</sup>/h at 600–800 mbar) to loosen the fouling layer, then backwash bottom-to-top and top-to-bottom (backwash pressure max. 2.5 bar) to flush it out.


TODO: confirm the actual backwash trigger used on SalinBloc™ (pressure differential vs. timer) and the cycle duration/frequency; the manufacturer spec above describes the module's capability, not HydroVolta's configured setpoint.

## 8.4 Maintenance

The UF manufacturer documents a Chemically Enhanced Backwash (CEB) / CIP cycle, triggered when TMP rises  $\geq 0.9$  bar above its initial value:

1. Run an extended backwash cycle (as in *Operation* above), then soak the module in cleaning chemical for part of the cycle.
2. CEB chemical concentrations: NaOCl 1000 mg/l, NaOH 500 mg/l, HCl 1000 mg/l, or citric acid 1–2% — select per the fouling type (organic/biological vs. scale) per chapter 12.
3. Total CIP duration  $\approx 2$  hours, at a cleaning flow of 1–2 m<sup>3</sup>/h per module.

For extended shutdowns (chapter 17), the manufacturer specifies a glycerol/sodium-metabisulfite preservation soak, and requires a minimum 4-hour flush with  $\geq 14$  m<sup>3</sup> of feed water before restart. Before returning a preserved or newly installed module to service, disinfect with 100 ppm NaOCl circulated for 10 minutes, held for 1 hour, then drained until the filtrate runs chlorine-free. TODO: no document gives a routine cleaning-interval schedule (as opposed to the TMP-triggered CEB above) — see chapter 7 for the general log template.

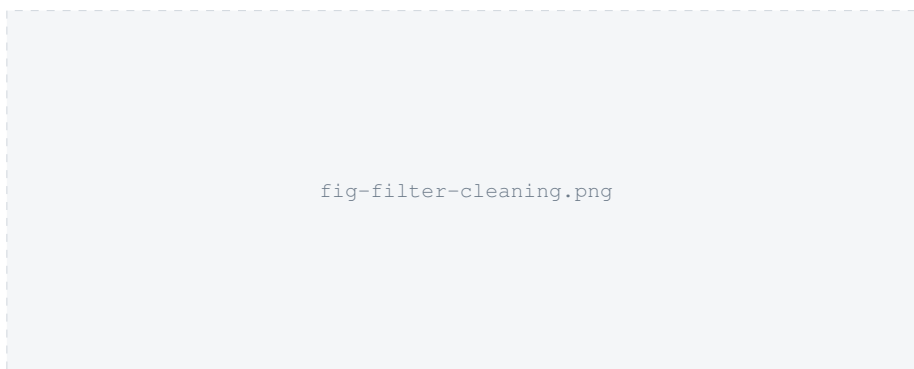

**Figure 8.2.** Suggested figure: step-by-step photos of the disc-filter backwash and UF CEB/CIP procedure above, once photographed on an actual unit.

## 8.5 Troubleshooting

- **Low filtered-water flow / high pressure drop:** check pump duty point against the 4.5 m<sup>3</sup>/h @ 6 bar rating and pipe sizing (60 mm feed line, 40 mm filtered-water line) before suspecting the filters themselves.
- **Rising transmembrane pressure (TMP):** if TMP has risen  $\geq 0.9$  bar above its initial value, run the CEB/CIP cycle above rather than waiting for a scheduled cleaning.
- **Poor downstream water quality:** verify feed water against the operating envelope in chapter 10 (turbidity, iron, SDI) and against the UF feedwater limits above — an out-of-envelope feed is a likely root cause on either stage.

TODO: no documented fault table (e.g. specific alarm codes) for the disc filters or UF unit was found beyond the operating-envelope figures above.



CHAPTER

# Feed and Process Pumps


Feed, diluate and concentrate pumps on each SonixED skid

IN THIS CHAPTER

|            |                       |    |
|------------|-----------------------|----|
| <b>9.1</b> | Overview and function | 66 |
| <b>9.2</b> | Key specifications    | 67 |
| <b>9.3</b> | Operation             | 68 |
| <b>9.4</b> | Maintenance           | 69 |
| <b>9.5</b> | Troubleshooting       | 70 |

## 9.1 Overview and function

Each SonixED™ skid carries three process pumps — feed, diluate and concentrate — that circulate water through the stack(s) at the required flow and pressure. Pumps are magnetic-driven (sealless) and inverter-(VFD-)controlled so flow can be adjusted without throttling valves.

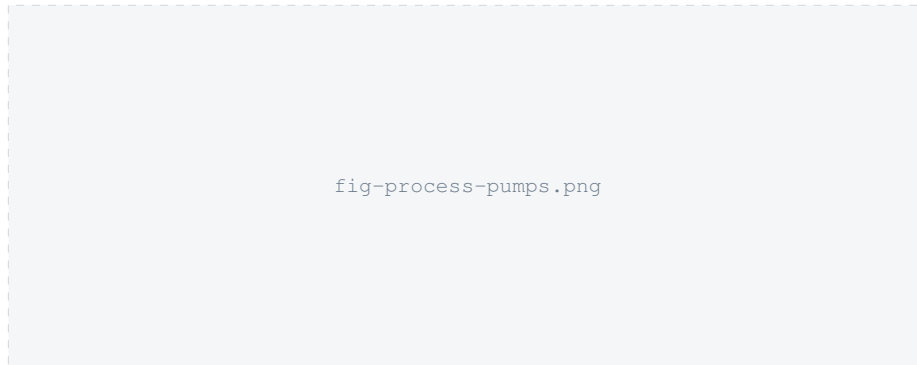

**Figure 9.1.** Suggested figure: photograph of the three process pumps on a skid, labeled feed/diluate/concentrate, with their VFD units visible.

## 9.2 Key specifications

- Always 3 pumps per skid (feed, diluate, concentrate).
- Magnetic-driven, inverter-driven, polypropylene/stainless-steel construction, seawater-compatible.
- Pretreatment feed pump (pilot): Grundfos CRN 10-5 A-FGJ-A-E-HQQE, flanged connections.
- Rated hydraulic flow per stack: 24 m<sup>3</sup>/day (SonixED-S datasheet).
- Each pump is driven by its own VFD (control tags VFD\_1\_D1...VFD\_6\_E2 in the pilot configuration).

## 9.3 Operation

Pump speed is set by the PLC via the VFDs to hold the process at its target flow/pressure; TODO no document confirms the exact control loop (open-loop speed vs. closed-loop flow/pressure control). Manual speed override, if available, is reached via the `Manual` mode described in chapter 6.

## 9.4 Maintenance

TODO: no pump-specific maintenance schedule (bearing/seal inspection, impeller check interval) was found. Magnetic-driven pumps have no shaft seal to replace, which reduces routine maintenance versus a conventional centrifugal pump, but confirm this against the actual pump model fitted.

## 9.5 Troubleshooting

Each pump's VFD reports a `FaultWord` that should be checked first on any pump-related alarm. Typical causes to check, in order:

- **Pump not running / VFD fault:** check `FaultWord` on the relevant VFD tag; check incoming supply and control-voltage presence (chapter 14).
- **Low flow / high pressure:** check for blockage upstream (chapter 8) or downstream (stack fouling, chapter 10) before assuming a pump fault.
- **Pump running but no output:** check for air lock (magnetic- driven pumps are not self-priming) — TODO confirm priming procedure.



CHAPTER

# SonixED Stack Modules

The electro dialysis stacks at the heart of the unit

IN THIS CHAPTER

|             |                       |    |
|-------------|-----------------------|----|
| <b>10.1</b> | Overview and function | 72 |
| <b>10.2</b> | Key specifications    | 73 |
| <b>10.3</b> | Operation             | 74 |
| <b>10.4</b> | Maintenance           | 75 |
| <b>10.5</b> | Troubleshooting       | 76 |

## 10.1 Overview and function

The SonixED™ stack is the unit's core: an assembly of alternating cation- and anion-exchange membranes, titanium electrodes and spacers, with integrated ultrasound transducers for chemical-free antifouling. Under an applied DC voltage, ions migrate across the membranes from the diluate stream into the concentrate stream, desalinating the diluate. Each skid carries 1–3 stacks (standard configurations 1SS/2SS/3SS).



**Figure 10.1.** Suggested figure: labeled photograph of a single SonixED™ stack module, showing the electrode housings, membrane stack, ultrasound transducers and 1" BSP connections.



**Figure 10.2.** Suggested figure: a cutaway/exploded diagram of one cell pair, showing the diluate/concentrate/electrolyte flow paths through alternating membranes — useful for explaining the process to a new operator.

## 10.2 Key specifications

- Module dimensions (l×b×h): 300 × 400 × 1060 mm; weight ~150 kg; connection 1" BSP.
- Flowrate per stack: 0.5–10 m<sup>3</sup>/h (skid datasheet); 24 m<sup>3</sup>/day (stack datasheet).
- Salt rejection: up to 90%; water recovery: up to 98%.
- Operating pressure: 0.5–2.5 bar (typical 0.5–1 bar); maximum 3 bar.
- Temperature: 5–40 °C (stack datasheet) / 5–55 °C (skid datasheet) — TODO reconcile which applies to the finished product.
- DC voltage across stack: 60–600 V; DC current: 3–20 A.
- Cell pairs per stack: 50–250; effective membrane area: 10–50 m<sup>2</sup> ("long" variant) or 20–100 m<sup>2</sup> ("square" variant).
- Membrane: Fujifilm Type 10, polyolefin.
- Feed water requirements: salinity ≤90,000 ppm; pH 5–8.5 typical (tolerable 2–13); turbidity <1 NTU; suspended solids <20 µm; SDI(5 min) 10; iron <0.5 mg/l; free chlorine 0.5 ppm continuous / 30 ppm intermittent tolerance.

## 10.3 Operation

Stacks operate continuously under PLC control once commissioned (chapter 5); electrodialysis *reversal* periodically swaps stream polarity as part of the ultrasound antifouling strategy — TODO confirm the reversal interval/trigger. Process values (pressure, flow, conductivity per stream) are monitored via the sensors described in chapter 13.

## 10.4 Maintenance

The membrane is the stack's principal wear item (weight ~150 kg, dimensions and connection as in *Key specifications* above). TODO: part number, reorder code and recommended replacement interval were not found; no CIP or cleaning procedure specific to the SonixED™ stack was found among the documents reviewed.

## 10.5 Troubleshooting

If salt rejection or recovery drops noticeably below the rated ranges above, check feedwater against the operating envelope in *Key specifications* first — turbidity, iron and free chlorine excursions are the most likely root causes of fouling-related performance loss. TODO: no documented fault table linking specific water-quality deviations to specific symptoms (e.g. “high iron causes X”) was found beyond the acceptable operating envelope itself.



CHAPTER

# Valves and Manifold

Automated 3-way valves and the feed distribution manifold

IN THIS CHAPTER

|      |                       |    |
|------|-----------------------|----|
| 11.1 | Overview and function | 78 |
| 11.2 | Key specifications    | 79 |
| 11.3 | Operation             | 80 |
| 11.4 | Maintenance           | 81 |
| 11.5 | Troubleshooting       | 82 |

## 11.1 Overview and function

Automated 3-way valves direct flow between feed, product and recirculation paths (e.g. for electrodialysis reversal, chapter 10), while the manifold assembly distributes feed water evenly to every stack on a skid.



**Figure 11.1.** Suggested figure: photograph of the manifold assembly with its 3-way valves, labeled by function (feed, product, recirculation).

## 11.2 Key specifications

- 3-way automated valves: PVC construction.
- Manifold: DN25–DN63, PVC and stainless-steel fittings.

Two actuated-valve product lines are confirmed present in HydroVolta's component library as candidates for this duty (TODO: confirm which is actually fitted on the standard SalinBloc™ BOM):

- **Georg Fischer (+GF+) e-DIASTAR Type 514** actuated ball valve: PVC-U body, 24 V AC/DC multiturn actuator with integrated open/closed position feedback, built-in heating element and manual emergency override. Available in DN25 (1", PN10) and DN50 (2", PN6) sizes matching this manual's connection sizes elsewhere; seal options EPDM or PTFE/EPDM.
- **Bürkert Type 3003** electric rotary actuator, fitted to quarter-turn ball/butterfly valves: available as on/off or proportional control (accepting/outputting 4–20 mA, 0–20 mA or 0–10 V); standard manual override, adjustable limit switches, integrated heating resistor and torque limiter; UL 94 V0 flame-resistant housing.

Both product lines run on the same 24 V DC control bus documented for the cabinet (chapter 14), consistent with the troubleshooting guidance below.

## 11.3 Operation

Valves are switched automatically by the PLC as part of the stream- reversal and CIP sequences (chapters 6 and 10). TODO: no document describes manual valve override procedure or fail-safe position on power loss — both candidate actuator families above include a manual override lever, but the fail-safe (last-position vs. defined) behavior on power loss has not been confirmed.

## 11.4 Maintenance

TODO: no valve-specific maintenance schedule (actuator lubrication, seat wear inspection interval) was found. See chapter 7 for the general schedule and log template.

## 11.5 Troubleshooting

- **Valve not switching:** check 24 V DC control voltage at the valve terminal against PE before assuming a valve fault (chapter 14).
- **Flow imbalance across stacks:** check manifold for blockage or a partially closed valve before suspecting a pump or stack issue.



CHAPTER

# Dosing System


Antiscalant, pH correction and CIP dosing pumps

IN THIS CHAPTER

|             |                       |    |
|-------------|-----------------------|----|
| <b>12.1</b> | Overview and function | 84 |
| <b>12.2</b> | Key specifications    | 85 |
| <b>12.3</b> | Operation             | 86 |
| <b>12.4</b> | Maintenance           | 87 |
| <b>12.5</b> | Troubleshooting       | 88 |

## 12.1 Overview and function

Dosing pumps inject antiscalant and pH-correction chemicals (NaOH, HCl, and in the pilot configuration also H<sub>2</sub>SO<sub>4</sub>) into the feed stream, and supply CIP (clean-in-place) chemicals for periodic cleaning. The documented pilot configuration used 5 dosing channels.

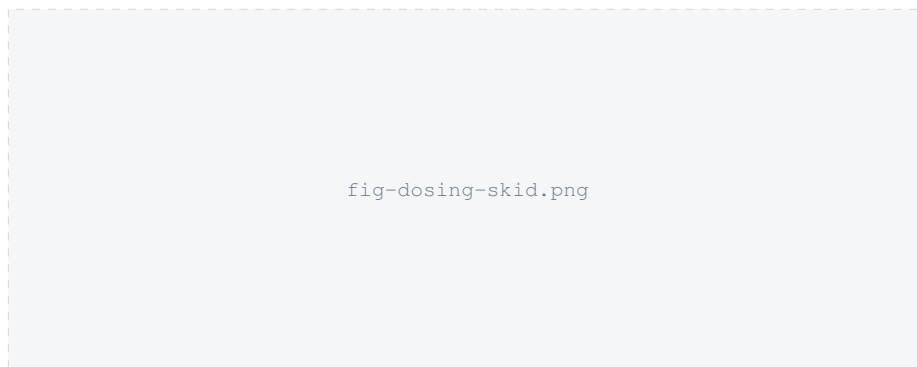

**Figure 12.1.** Suggested figure: photograph of the dosing skid, with each chemical tank and pump labeled (antiscalant, NaOH, HCl, CIP).

## 12.2 Key specifications

- 5 dosing channels (pilot configuration), each controlled via a 4–20 mA signal from ADAM I/O modules.
- Signal range: SET 1 = 4.0 mA (0 impulses/min, pump stopped), SET 2 = 20.0 mA (180 impulses/min).
- Chemicals confirmed in the pilot tag list and in Safety Data Sheets held by HydroVolta: antiscalant (AS), NaOH, HCl, NaOCl (sodium hypochlorite) and, in some configurations, H<sub>2</sub>SO<sub>4</sub> as an alternative acid.
- Candidate dosing pump: **Etatron GB eOne** series — flow rate 1–30 l/h, max. pressure 20 bar, 100–250 V AC 50/60 Hz supply, max. 300 pulses/min, PVDF pump head with double ceramic ball valves and PTFE diaphragm. The **MF** (multifunction) variant adds proportional dosing, 4–20 mA control, level-switch input and failure alarms; the **PLUS** variant integrates a pH/ORP/Cl controller. TODO: confirm which variant, and which alternative (Lutz-Jesco MEMDOS Smart / EasyChlorGen also appear in HydroVolta's component library), is fitted to the standard SalinBloc™ product.

## 12.3 Operation

See section 5.4 in chapter 5 for the default 4–20 mA signal configuration and functional-test procedure used to verify each dosing channel. Setting a dosing pump's frequency from a 4–20 mA signal uses two settings: the **pulse amplitude** (mL per stroke, set manually at the pump) and the **pulse frequency** (set remotely as a % of the pump's maximum, via the 4–20 mA signal). Worked example from a real HydroVolta dosing calculation (antiscalant, 10 ppm target): dilution factor 1333, pulse amplitude 0.01–0.1 mL, giving a dose rate of  $\approx 0.167$  mL/min (36 mL/h).



### WARNING

**Never dose NaOH into feed or process water** — HydroVolta's own CIP procedure documents this explicitly as a scaling risk. NaOH is only used against pure (permeate-quality) water during CIP.

A documented weekly CIP cycle (source: HydroVolta pilot CIP procedure) runs as follows:

1. **Acid step:** dose HCl to pH 2.5 in the CIP loop, circulating 30 minutes forward-flow then 30 minutes reverse-flow through the stack, using pretreated feedwater.
2. Drain the CIP loop to the concentrate tank, then flush with fresh feed water for 15–20 minutes.
3. **Hypochlorite step:** dose NaOCl to 2 ppm (effective only near pH 7–7.5 — check/correct pH before this step), circulating 30 minutes forward then 30 minutes reverse.
4. Drain 5 minutes, then flush with fresh feed water for 30 minutes.
5. A variant of this cycle that also treats the electrolyte compartment uses NaOH instead of/alongside HCl — **only ever with pure water**, per the warning above.

Typical HCl/NaOH CIP dose rates from a real pilot's dosing calculation sheet (pure, low-alkalinity water): HCl  $\approx 5.5$  mL/min at 1000 l/h CIP flow, pulse amplitude 0.1 mL,  $\approx 31\%$  of max. pump frequency; NaOH  $\approx 17.4$  mL/min, pulse amplitude 0.3 mL,  $\approx 32\%$  of max. frequency. For natural (higher-alkalinity) feed water, acid demand scales with the water's total alkalinity (TA) — a seawater-range feed (TA 25–30 °f) needs roughly 3–4 $\times$  the acid dose of a low-alkalinity feed. TODO: confirm the CIP interval and dose rates that apply to the standard SalinBloc™ product; the figures above are a real, sourced pilot example, not a general specification.

## 12.4 Maintenance

TODO: no chemical replenishment interval, tubing/diaphragm replacement schedule, or dosing-pump calibration procedure specific to the standard product was found. The CIP cycle above ran approximately weekly in the documented pilot — use this as a starting reference for the maintenance schedule in chapter 7 until a formal interval is confirmed. Per the chemicals' Safety Data Sheets, store all dosing chemicals in their original, tightly closed containers, away from food/drink, at a recommended **15–25 °C**; keep incompatible chemicals (acids vs. NaOH vs. NaOCl) in separate secondary containment. See section 2.5 for first-aid and spill-response guidance.

## 12.5 Troubleshooting

Low-level alarms exist per chemical: LL\_Alarm\_AS (antiscalant), LL\_Alarm\_NaOH, LL\_Alarm\_HCl, plus per-channel Dosing1\_Alarm...Dosing5\_Alarm. On any dosing alarm, check chemical tank level first, then verify the 4–20 mA signal at the pump terminal using the bench-test method in chapter 13. If a CIP cycle fails to reach its target pH (2.5 for the acid step), verify the dosing pump's pulse amplitude/frequency setting against the worked example above before suspecting a pump fault.



CHAPTER

# Instrumentation and Sensors

Pressure, flow, pH and conductivity measurement

IN THIS CHAPTER

|             |                       |    |
|-------------|-----------------------|----|
| <b>13.1</b> | Overview and function | 90 |
| <b>13.2</b> | Key specifications    | 91 |
| <b>13.3</b> | Operation             | 92 |
| <b>13.4</b> | Maintenance           | 93 |
| <b>13.5</b> | Troubleshooting       | 94 |

## 13.1 Overview and function

Inline sensors give the PLC (and the operator, via the HMI) a continuous read of the process: pressure, flow, pH and conductivity/level at key points in the pretreatment and treatment trains, plus a pressure gauge on each stack. All sensors use a standard 2-wire, loop-powered 4–20 mA output.



**Figure 13.1.** Suggested figure: photograph of the inline sensor array on a skid, with each sensor type (pressure, flow, pH, conductivity) labeled.

## 13.2 Key specifications

- Signal type: 2-wire, loop-powered, 4–20 mA.
- Confirmed sensor types in the pilot tag list: pressure (TSA\_pressure), flow (TSA\_Flow), pH (TSA\_pH), conductivity/level (TSA\_Cond, TSA\_Level, TB\_Cond, TB\_Level, TE\_Level).
- **Pressure:** WIKA A-10 pressure transmitter (gauge pressure, 4 mA = 0 bar; 2-wire, IP65/IP67, wetted parts 316L stainless steel, non-repeatability  $\leq \pm 0.2\%$  of span). Stated maintenance-free by the manufacturer; clean only with water/mild detergent and a soft cloth — repairs are manufacturer-only.
- **pH/ORP:** candidate model GF DryLoc 2751 smart pH/ORP sensor electronics (2-wire, 4–20 mA).
- **Conductivity:** candidate GF 9900 transmitter with Type 2881–2884 conductivity electrodes.
- **Level:** 80 GHz radar level transmitters are under evaluation for tank level (e.g. Holykell HR2000, MDS-AM15) — TODO confirm whether radar or another level-sensing method is fitted on the standard product; these appear to be recent vendor quotes rather than a confirmed as-built spec.
- **Optional accessory:** HydroVolta's SonixED skid datasheet lists a **Cloud Multi-Parameter Water Analyzer (SUP-MPP1000)** as an available option — a 7-inch touchscreen instrument measuring turbidity, pH, conductivity, dissolved oxygen and residual chlorine, with RS485/4–20 mA output, for more detailed product-water quality monitoring than the standard sensor array.

TODO: confirm exact make/model per sensor type in the standard product.

## 13.3 Operation

Sensor readings feed the process-value displays described in chapter 6 and the alarm limits in appendix A.

## 13.4 Maintenance

No formal calibration-to-reference procedure (e.g. pH 4/7/10 buffer calibration) was found; what *is* documented is a real bench verification procedure used before commissioning any 2-wire 4–20 mA sensor:

1. Connect the sensor per the electrical schematic up to the terminal strip — **do not** connect to the PLC yet.
2. Insert a test resistor ( $\sim 250\ \Omega$ , giving a safe 1–5 V signal from the loop) and measure voltage with a voltage-only multimeter (e.g. Fluke 116).
3. For a pressure sensor (4 mA = 0 bar):  $\sim 0.88\text{ V}$  across the test resistor confirms a normal 0 bar signal before connecting to the PLC.
4. For a pH sensor (0–14 pH, 4–20 mA) in a 7 pH reference solution:  $\sim 2.64\text{ V}$  across a  $220\ \Omega$  resistor (12 mA at mid-scale) is expected.
5. If the sensor checks out on the bench but still misbehaves once installed, the fault is in the field wiring, not the sensor.

TODO: this is a wiring/signal-integrity check, not a full calibration procedure — a genuine calibration interval/method for pH, conductivity and pressure sensors was not located.

## 13.5 Troubleshooting

**Table 13.1.** 4–20 mA sensor fault table

| Symptom (bench test)                            | Likely cause                                              | Remedy                                                                                             |
|-------------------------------------------------|-----------------------------------------------------------|----------------------------------------------------------------------------------------------------|
| 0 V reading                                     | No control voltage reaching sensor loop                   | Check DIN connector; confirm 24 V DC between terminal and PE; check polarity; confirm supply is on |
| Reading below 4 mA                              | Reversed polarity                                         | Check polarity at the sensor connections                                                           |
| Reading stuck near 4 mA                         | Sensor connection contamination                           | Check the connection is dry and clean                                                              |
| Reading above 20 mA                             | Wiring fault / short                                      | Check connections                                                                                  |
| No output signal at all (installed)             | Cable break                                               | Check loop continuity                                                                              |
| Zero point has drifted                          | Overpressure limit exceeded, or wrong working temperature | Check against rated span and temperature range; recalibrate zero if within spec                    |
| Constant output despite pressure/process change | Mechanical fault in the sensor                            | Replace the sensor                                                                                 |
| Signal span varies over time                    | EMC interference                                          | Shield the instrument/cable; remove the interference source                                        |
| Signal span has dropped                         | Mechanical overload from an overpressure event            | Replace the instrument                                                                             |
| Fails on the bench too                          | Defective sensor                                          | Replace the sensor                                                                                 |
| Passes bench test, fails installed              | Field wiring fault                                        | Inspect and repair wiring in the container                                                         |

The first four rows above are from the real HydroVolta bench verification procedure; the following five are from the WIKA A-10 OEM manual's own fault-finding section and apply directly to pressure sensors, and by the same 2-wire 4–20 mA principle, are a reasonable first check for the pH and conductivity sensors as well.



CHAPTER

# Control Cabinet, PLC and HMI


The IP55 control cabinet, PLC I/O and operator touchscreen

IN THIS CHAPTER

|             |                       |     |
|-------------|-----------------------|-----|
| <b>14.1</b> | Overview and function | 96  |
| <b>14.2</b> | Key specifications    | 97  |
| <b>14.3</b> | Operation             | 98  |
| <b>14.4</b> | Maintenance           | 99  |
| <b>14.5</b> | Troubleshooting       | 100 |

## 14.1 Overview and function

The control cabinet houses the PLC, I/O modules, VFDs and terminal wiring that supervise the whole unit: a Weidmüller UC20-WL2000-AC controller (CODESYS/u-OS based) coordinates distributed ADAM I/O modules (ADAM-4024/4050/4017+/5000), the process VFDs (chapter 9), and the dosing subsystem (chapter 12), with an optional touchscreen HMI for local operation.

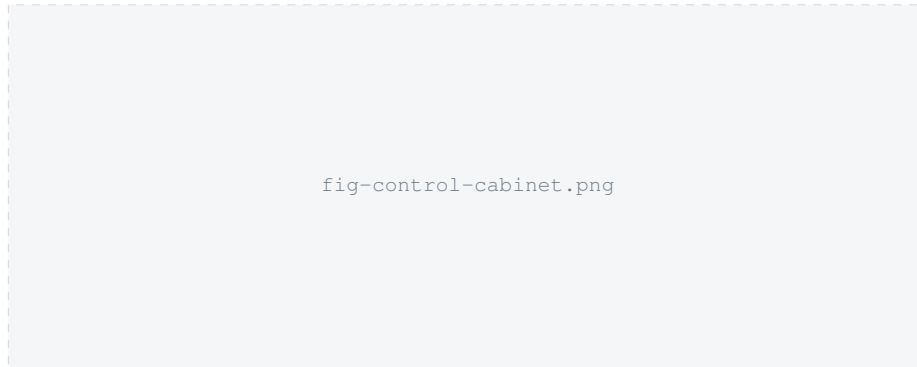

**Figure 14.1.** Suggested figure: photograph of the open control cabinet with the PLC, I/O modules and terminal strips labeled.

## 14.2 Key specifications

- Cabinet ingress protection: IP55.
- Controller: Weidmüller UC20-WL2000-AC (CODESYS/u-OS).
- Distributed I/O: Advantech ADAM series. The **ADAM-3600-C2G** Wireless Intelligent RTU (also usable as the main controller) is fully datasheeted in HydroVolta's library: Cortex-A8 AM3352 @600 MHz, 256 MB DDR3L RAM, RT-Linux 3.12; onboard 8AI/8DI/4DO plus a 4-slot I/O expansion bay (compatible modules: ADAM-3613/3617/3618/3624/3651/3656); 1×RS232/485 (DB9) + 2×RS485 (terminal block), 2×RJ-45 10/100 Ethernet; protocols Modbus/TCP, DNP3 L2, IEC 104, MQTT; power 10–30 V DC (24 V @ 5 W typical); operating temperature –40 to 70 °C; DIN-rail or wall mount. ADAM-4024 (analog output, used for dosing pump control), ADAM-4050/4017+ and the ADAM-5000-series backplane (analog I/O cards ADAM-5017P, ADAM-5024) are confirmed in real pilot I/O wiring documentation alongside the ADAM-3600. A more recent (2023) confirmed remote-I/O bill of materials uses **Weidmüller UR20** modular I/O instead: a UR20-FBC-MOD-TCP-V2 Modbus/TCP fieldbus coupler, one UR20-16DI-P (16-channel digital input), one UR20-16DO-P (16-channel digital output), and six UR20-4AI-UI-16 (4-channel universal analog input) modules on a DIN rail — i.e. a Modbus/TCP-based I/O station with analog input as the dominant channel count, consistent with the many 4–20 mA sensors described in chapter 13. TODO: confirm whether the standard SalinBloc™ product uses the ADAM family, the Weidmüller UR20 family, or both depending on configuration — both are confirmed purchases in HydroVolta's history, from different projects/years.
- Control-box ordering options: **CB0** (PLC only), **CB1** (PLC + touchscreen HMI).
- Cloud-connectivity tiers: **CL0** (local only), **CL1** (cloud monitoring), **CL2** (full cloud monitoring and control) — see chapter 16.
- Incoming supply (pilot): 3×400 V AC (3P+N+PE), max. 25 A; 24 V DC control bus.

## 14.3 Operation

The PLC drives the automatic sequencing described throughout Part II (pump speed, valve switching, dosing) and surfaces process values and alarms to the HMI/dashboard (chapter 6).

## 14.4 Maintenance

TODO: no cabinet-specific maintenance (dust/filter check on the IP55 enclosure, terminal torque check) was found.

## 14.5 Troubleshooting

- **ADAM-3600 timeout / cannot reconnect after uploading a new PLC program:** browse to the device's IP address, log in to its web UI (default password 00000000), go to *Configuration* → *Reboot*. After reboot, retry the stop/connect sequence. Precondition: the device must respond to `ping` — if it does not, the fault is network/ power related, not a program-upload timeout.
- **Modbus-RTU communication issue:** use qModMaster with a CH340 USB-to-Modbus-RTU adapter to verify communication directly: confirm the assigned COM port, set RTU options to match the device (e.g. 9600 baud, 8 data bits, 1 stop bit, no parity), set the correct slave address, use FC1/FC2/FC3, set Base Address to 0, then read a known register to confirm communication. The built-in bus monitor can inspect Tx/Rx traffic for deeper diagnosis.
- **Analog signal fault (any 4–20 mA device wired through this cabinet):** see the bench-test procedure in section 13.4.

# Tanks


Diluate, concentrate, electrolyte and drain tanks

IN THIS CHAPTER

|      |                       |     |
|------|-----------------------|-----|
| 15.1 | Overview and function | 102 |
| 15.2 | Key specifications    | 103 |
| 15.3 | Operation             | 104 |
| 15.4 | Maintenance           | 105 |
| 15.5 | Troubleshooting       | 106 |

## 15.1 Overview and function

Overhead/skid-mounted tanks buffer the diluate, concentrate and electrolyte streams (chapter 3) and collect drainage from both containers before it leaves the unit. In the pilot configuration these are tagged TSA (a sensor/buffer tank), TB and TE (electrolyte) — see chapter 13 for the level/conductivity instrumentation on each.

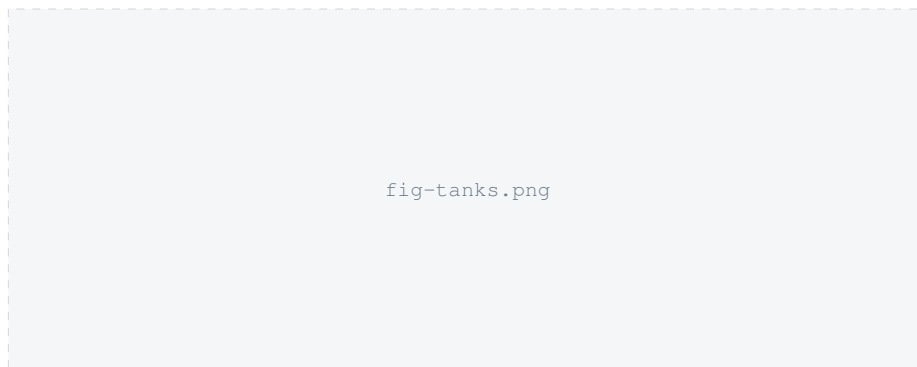

**Figure 15.1.** Suggested figure: photograph of the tank bank inside the treatment container, each tank labeled with its stream (diluate/ concentrate/electrolyte/drain).

## 15.2 Key specifications

No tank capacity/material specification exists yet for a finalized standard SalinBloc™ bill of materials, but two real, recent tank orders placed by HydroVolta give a concrete sense of the sizes used:

- Rotterdam Plastics order (Oct. 2025): one 800-litre vertical polyethylene tank (closed outlet, unvented lid) and one 450-litre polyethylene tank (open outlet, vented lid).
- Boralit/Galo Tanks order: two 1000-litre rectangular polyethylene tanks (RT1000RH ZW series), supplied with PVC coupling sets.

TODO: which physical tank (diluate/feed, concentrate, electrolyte, or drain) each of the above corresponds to was not confirmed in the order documents — do not assume a mapping without checking the as-built P&ID for the specific unit. The pilot configuration referenced elsewhere in this manual used a 1000 l IBC as an auxiliary/drain tank.

## 15.3 Operation

Tank levels are monitored continuously (TSA\_Level, TB\_Level, TE\_Level) with high/low alarm limits — see appendix A.

## 15.4 Maintenance

TODO: no tank cleaning/inspection schedule was found.

## 15.5 Troubleshooting

High/low level alarms are confirmed for every tank: HL\_Alarm\_TD/LL\_Alarm\_TD (diluate), HL\_Alarm\_TC/LL\_Alarm\_TC (concentrate), HL\_Alarm\_TB/LL\_Alarm\_TB, HL\_Alarm\_TSA/LL\_Alarm\_TSA, HL\_Alarm\_TE/LL\_Alarm\_TE, plus a level alarm M050\_Level\_Alarm. On any level alarm, check the relevant level sensor per the bench-test procedure in section 13.4 before assuming a process fault.



CHAPTER

# Telemetry and Remote Connectivity

Router, remote-access gateway and cloud monitoring

IN THIS CHAPTER

|             |                       |     |
|-------------|-----------------------|-----|
| <b>16.1</b> | Overview and function | 108 |
| <b>16.2</b> | Key specifications    | 109 |
| <b>16.3</b> | Operation             | 110 |
| <b>16.4</b> | Maintenance           | 111 |
| <b>16.5</b> | Troubleshooting       | 112 |

## 16.1 Overview and function

A cellular router and cloud dashboard give operators and HydroVolta service remote visibility into the unit's process values and alarms, independent of the local HMI (chapter 14).



**Figure 16.1.** Suggested figure: photograph of the router/gateway mounted in the cabinet, with antenna and SIM slot visible.

## 16.2 Key specifications

- **Confirmed deployed remote access:** real OpenVPN client configuration files exist in HydroVolta's engineering library for at least two pilot containers (Farys, BASF/CAGECE demo), following a router-based “meeting point” VPN architecture (Weidmüller IE-SR-2GT-LAN / IE-SR-2GT-UMTS routers, per the vendor tech note on file) — this is the one telemetry element confirmed as *actually used*, not just evaluated.
- **Confirmed deployed dashboard: ThingsBoard**, with a real MQTT parameter list and full tag list captured from the BASF pilot deployment.
- A real 2023 requirements-workshop record (source: 08\_IT/00\_OQuila progress) describes an **actually running 4-container pilot fleet** at that time: **Advantech ADAM-3600** connecting directly to **Azure IoT Hub**, piped through **Azure Stream Analytics** into a SQL database and visualized in **Power BI**; connectivity via a **4G Teltonika router**, with HydroVolta noting a possible future switch to Ewon “for a better SLA” due to past Teltonika stability issues. Each container sent a telemetry message roughly every 10 seconds ( $\approx 8,000$  messages/container/day: connectivity, pressure, flow, temperature, energy). Parameter changes at that time were only possible via VPN, not from the cloud dashboard.
- **OQuila** was a third-party IoT consultancy HydroVolta held a 2023 requirements workshop with, to evaluate a longer-term telemetry platform (long-term storage, a graphical P&ID front-end, configurable alarm thresholds, role-based access). HydroVolta's own workshop notes state ThingsBoard was assessed as “ok” for the dashboard need on its own. **No document confirms OQuila's proposal was ultimately adopted or built** — treat the Azure IoT Hub/Power BI pipeline above and the ThingsBoard/ Weidmüller-OpenVPN pipeline elsewhere in this manual as two telemetry architectures documented at different points in HydroVolta's history, not necessarily the same one. TODO: confirm which architecture (if either, unchanged) is used on the current standard SalinBloc™ product.
- Controller reached over the network: Weidmüller UC20-WL2000-AC (chapter 14).

## 16.3 Operation

Process values available on the cloud dashboard mirror those on the local HMI (chapter 6). TODO: no document describes ThingsBoard dashboard login/navigation for an end customer.

## 16.4 Maintenance

TODO: no router/SIM maintenance procedure (data plan renewal, firmware update schedule) was found.

## 16.5 Troubleshooting

- **Router unreachable:** confirm the device is powered and check its cellular signal/SIM status before assuming a software fault.
- **Cloud dashboard shows stale data:** check the router's connection to the controller first; if the controller itself is reachable locally but not remotely, the fault is likely in the router/network path rather than the controller.

See also the ADAM-3600 and Modbus-RTU troubleshooting steps in chapter 14, which apply to field-device connectivity issues more broadly.



CHAPTER

# Shutdown, storage and disposal

IN THIS CHAPTER

|             |                          |     |
|-------------|--------------------------|-----|
| <b>17.1</b> | Short shutdown           | 114 |
| <b>17.2</b> | Long-term storage        | 115 |
| <b>17.3</b> | Restarting after storage | 116 |
| <b>17.4</b> | Decommissioning          | 117 |
| <b>17.5</b> | Disposal and recycling   | 118 |

## 17.1 Short shutdown

Use **Controlled Shutdown** (Mode 4) from the Mode Control HMI screen (chapter 6) rather than simply removing power, so pumps and valves stop in a defined sequence. TODO: no document describes a written de-energization procedure beyond mode selection; the incoming-supply breaker layout (main isolator, MCBs, RCDs) documented on the pretreatment electrical schematic would be the basis for one if the unit is to be fully powered down (as opposed to left in Controlled Shutdown/standby).

## 17.2 Long-term storage

No storage/preservation procedure specific to the whole SalinBloc™ unit was found, but the UF membrane manufacturer's preservation procedure (chapter 8) is directly applicable to the pretreatment stage and is the best-documented reference available: soak the UF module in a glycerol/sodium-metabisulfite preservation solution before an extended shutdown, and flush with  $\geq 14 \text{ m}^3$  of feed water for at least 4 hours before restart. TODO: no equivalent preservation guidance (membrane wetting, antifouling flush, dosing-system winterization) was found for the SonixED™ stack itself or the dosing system — for the dosing system, at minimum follow the chemical storage guidance in chapter 12 (15–25 °C, tightly closed original containers) for the duration of the shutdown.

## 17.3 Restarting after storage

TODO: no start-up/recommissioning-after-storage procedure was found; treat as a fresh commissioning (chapter 5) until a dedicated procedure exists.

## 17.4 Decommissioning

TODO: no decommissioning procedure was found.

## 17.5 Disposal and recycling

TODO: no disposal/recycling procedure or waste-stream document was found. Component datasheets (e.g. dosing pumps, chapter 12) may carry manufacturer disposal notes that have not yet been reviewed for this section.

# Parameter tables

IN THIS CHAPTER

|            |                        |     |
|------------|------------------------|-----|
| <b>A.1</b> | Default setpoints      | 120 |
| <b>A.2</b> | Site-specific settings | 121 |
| <b>A.3</b> | Alarm limits           | 122 |

## A.1 Default setpoints

**Table A.1.** System performance defaults (SonixED skid v2025-A7)

| Parameter                | Value                          |
|--------------------------|--------------------------------|
| Flowrate per stack       | 0.5–10 m <sup>3</sup> /h       |
| System flow per skid     | up to 30 m <sup>3</sup> /h     |
| Recovery rate            | up to 98%                      |
| Operating pressure       | 0.5–2.5 bar                    |
| Temperature range        | 5–55 °C                        |
| Specific energy          | 0.6–<br>2.0 kWh/m <sup>3</sup> |
| Skid dimensions (l×b×h)  | 3040×1340×2020 mm              |
| Incoming line voltage    | 3×400 V AC                     |
| Max. current             | 25 A                           |
| Valve voltage            | 24 V DC                        |
| Control voltage (DC bus) | 24 V DC                        |
| Dosing SET 1 (min)       | 4.0 mA / 0<br>impulses/min     |
| Dosing SET 2 (max)       | 20.0 mA / 180<br>impulses/min  |

**Table A.3.** SalinBloc™ container throughput by format (source: HydroVolta brochure)

| Parameter                                     | 20 ft unit                     | 40 ft unit                        |
|-----------------------------------------------|--------------------------------|-----------------------------------|
| Flow rate                                     | 2–30 m <sup>3</sup> /h         | 15–60 m <sup>3</sup> /h           |
| Approx. daily throughput (22 h/day operation) | 44–<br>660 m <sup>3</sup> /day | 330–<br>1,320 m <sup>3</sup> /day |

Feed range for both formats: brackish groundwater, 1,500–20,000 ppm TDS. TODO: no container weight figure was found in any source reviewed, including the container general-arrangement drawings themselves (their title blocks carry no weight/dimension text field, and any dimension lines are vector geometry, not extractable text — a human must open these drawings visually). Obtain the weight from the container manufacturer or a loaded-unit weighbridge reading before publishing lifting/foundation guidance.

## A.2 Site-specific settings

TODO: no site-specific commissioning/setpoint record was found; use this table to capture the as-commissioned values for a specific installation.

**Table A.5.** Site-specific settings template

| Parameter | Value |
|-----------|-------|
|           |       |
|           |       |

## A.3 Alarm limits

The P&ID (appendix B) shows instrument spans used as default alarm spans at each skid position: pressure 0–2.5 bar, conductivity 0–200 mS/cm, with high/low alarm tags (PSA, CEA) at every position. HydroVolta's ThingsBoard warning-code table (a real, deployed alarm definition list, source: 08\_IT/01\_Thingsboard/Warning table) gives concrete numeric examples for several alarm classes:

**Table A.7.** Representative alarm/warning codes (source: HydroVolta ThingsBoard warning table)

| Code      | Class      | Condition                                                                                                                                                     |
|-----------|------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| W001      | General    | HV-Skid not powered                                                                                                                                           |
| W002      | General    | Ventilation off                                                                                                                                               |
| W011–W013 | Chemical   | Antiscalant / H <sub>2</sub> SO <sub>4</sub> / HCl tank empty                                                                                                 |
| W101–W110 | Level      | Main diluate/concentrate/electrolyte/breaking/client tank level low or high (e.g. diluate below 40 cm or above 90 cm; electrolyte below 20 cm or above 80 cm) |
| W111–W118 | Level      | Buffer tank low-low / high level                                                                                                                              |
| W201–W214 | Electrical | Stack stage 1–7 voltage below or above system specification                                                                                                   |
| W300      | Flow       | Diluate flow below 500 l/hr                                                                                                                                   |
| W301      | Flow       | Concentrate flow below 500 l/hr                                                                                                                               |

TODO: this table only samples the documented code ranges; the full warning table has ~57 defined codes and should be transcribed in full by HydroVolta engineering, together with the exact level/pressure setpoints per tank size, once the standard SalinBloc™ tank configuration (chapter 15) is finalized — these codes come from a specific pilot project's tank/stage configuration and the numeric thresholds may not transfer directly. See the alarm tag list in chapters 6, 12 and 15 for additional alarms.

# Drawings

IN THIS CHAPTER

|            |                      |     |
|------------|----------------------|-----|
| <b>B.1</b> | P&ID                 | 124 |
| <b>B.2</b> | Electrical schematic | 125 |
| <b>B.3</b> | Container layout     | 126 |

## B.1 P&ID

Piping & instrumentation diagram for the containerized BASF pilot water treatment system: drawing no. SWHC-001/00, rev. 0.98, dated 11-11-2022, “BASF WATER Container” (Grant Agreement 969116 — SonixED, H2020-EIC-SMEInst). Shows pretreatment filtration skids (SP-01–SP-4), dosing units for antiscalant/NaOCl/NaOH/HCl/H<sub>2</sub>SO<sub>4</sub> (CIP), tanks, and instrumentation with alarm tags across the treatment train.




**Figure B.1.** Insert the full P&ID drawing here (source: SWHC-001/00, rev. 0.98) once confirmed representative of the standard SalinBloc™ product, or the product-specific P&ID once available.

HydroVolta’s standardization library includes an ANSI/ISA-5.1 P&ID symbol legend, which is the reference standard the symbols on this and other project-specific P&IDs (BASF, Saudi, Australia demo, Morocco) are drawn against.

## B.2 Electrical schematic


Circuit diagram set “Pretreatment EP” for the pretreatment container, document series C1/I1/I2/E1–E17 (file 31-01-2023 Pretreatment.dsn). Covers the 3-phase incoming supply and breaker/RCD protection (sheet E1), 24 VDC power/control distribution (E2–E3), PLC I/O wiring (E4–E5), terminal wiring (E6–E8), valve/sensor junction boxes (E9–E13), VFD control (E14), sensor/valve wiring standards (E15), dosing pump wiring (E16), and Modbus COM2 wiring (E17).

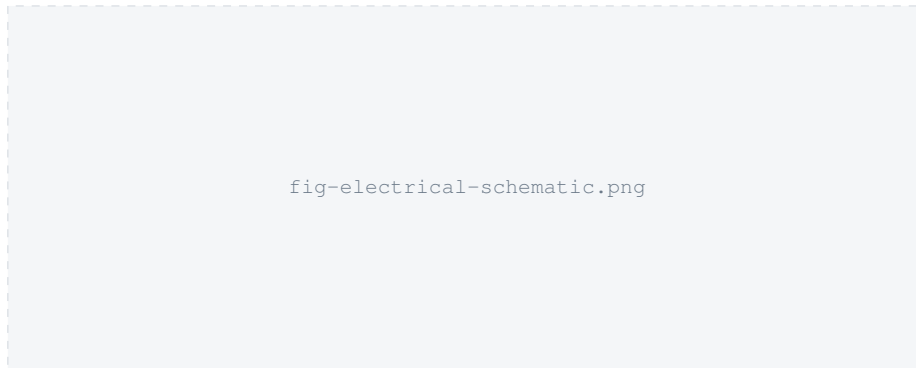

**Figure B.2.** Insert the relevant electrical schematic sheet(s) here (source: 31-01-2023 Pretreatment.dsn, sheets E1–E17) once confirmed representative of the standard SalinBloc™ product.

### B.3 Container layout

20 ft general-arrangement drawing “2023\_08\_21 SonixED container BASF\_2308CA1” (6058 × 2438 × 2896 mm), and companion skid top-view layout “2023\_08\_22 BASF Skids Top View\_2308CA2” — see chapter 3 for the summary description.

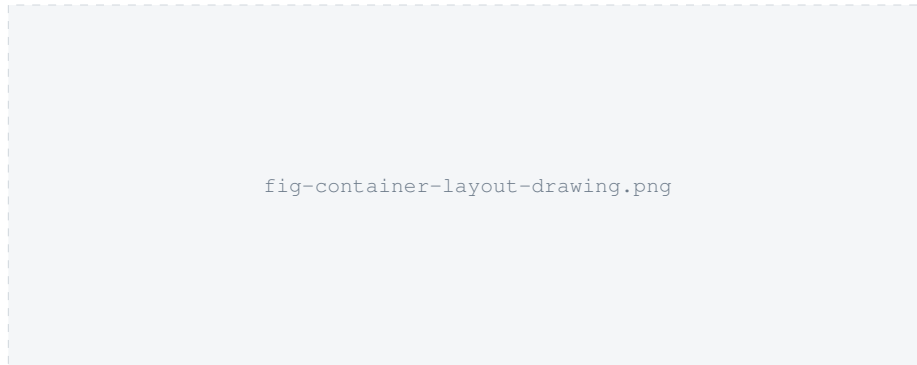

**Figure B.3.** Insert drawings 2308CA1 (general arrangement) and 2308CA2 (skid top view) here, or the standard-product equivalents once available.

APPENDIX

# Certificates and datasheets

IN THIS CHAPTER

|            |                                       |     |
|------------|---------------------------------------|-----|
| <b>C.1</b> | Declaration of conformity             | 128 |
| <b>C.2</b> | Component datasheets                  | 129 |
| <b>C.3</b> | Regulatory approvals (drinking water) | 130 |
| <b>C.4</b> | Water analysis report                 | 131 |

## C.1 Declaration of conformity

TODO: only a blank EU Machinery Directive DoC template was found (“EU declaration of conformity-en”, Ref. Ares(2015)1600946), not a signed, product-specific Declaration of Conformity — HydroVolta’s 02\_DoC’s CE-marking folder is currently empty. A signed DoC must be inserted here before this manual is issued to a customer.

HydroVolta’s legal/legislation library holds reference texts for the EU directives and regulations most likely to apply to a CE-marked SalinBloc™ unit, which a future DoC should be checked against: the Machinery Directive (2006/42/EC), EMC Directive (2014/30/EU), Low Voltage Directive (2014/35/EU), RoHS, WEEE, the EU Drinking Water Directive (2020/2184) if a potable-water claim is made, and REACH/CLP for the dosing chemicals (chapter 12). A component-level DoC exists for at least one purchased part (the WIKA A-10 pressure sensor, chapter 13) — this is normal for a CE-marked assembly (component conformity feeds the assembly-level DoC) but is not itself a substitute for the unit’s own Declaration of Conformity.

## C.2 Component datasheets

The SonixED™ Skid System datasheet (Model SONIXED-SKID, Version 2025-A7) is the primary component reference used throughout Part II of this manual. Individual component-level datasheets (I/O modules, dosing pumps, pumps, pneumatics) exist in HydroVolta's engineering library and should be attached here per shipped configuration.

### C.3 Regulatory approvals (drinking water)

No UK DWI Regulation 31 approval and no NSF/ANSI listing (e.g. NSF/ANSI 61 or 372) exists yet for SalinBloc™/SonixED™— HydroVolta's datasheet library holds only generic reference/guidance material on how those approval processes work, not an application or approval record (see section 2.1 in chapter 2). TODO: pursue formal approval before offering the unit for potable-water use in a regulated market, or clearly disclaim potable-water suitability until then.

## C.4 Water analysis report

TODO: no formal water-analysis lab report/certificate of analysis was found for the standard product; the closest material found (third-party pretreatment-component water-quality questionnaires from earlier pilot projects) is not a substitute. A per-unit water analysis report should be attached here once available — see also the "Find your unit's quality report" lookup on the online container guide page (chapter 1).



## Glossary

| Term                  | Definition                                                                                                                                   |
|-----------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| TDS                   | Total Dissolved Solids — the concentration of dissolved minerals/salts in water.                                                             |
| SonixED™              | HydroVolta's electrodialysis-based desalination technology/product line.                                                                     |
| ED                    | Electrodialysis — a membrane process using an electric field to move ions through selective membranes.                                       |
| EDR                   | Electrodialysis Reversal — periodically reversing the applied DC field's polarity to clean the membranes in place and stabilize performance. |
| TMP                   | Transmembrane Pressure — the pressure difference across a filtration membrane; a rising TMP indicates fouling and triggers cleaning.         |
| CEB                   | Chemically Enhanced Backwash — a backwash cycle that includes a chemical cleaning soak, used on the ultrafiltration stage.                   |
| VCA                   | Veiligheid, Gezondheid en Milieu Checklist Aannemers — a Benelux contractor health/safety/environment competency certification.              |
| Stack                 | The assembly of alternating ion-exchange membranes, electrodes and spacers that performs electrodialysis.                                    |
| Skid                  | A pre-assembled equipment module (pumps, valves, instrumentation) on a common frame.                                                         |
| Diluate               | The desalinated water stream leaving the stack.                                                                                              |
| Concentrate           | The brine/reject stream leaving the stack, carrying the removed ions.                                                                        |
| Electrolyte           | A separate circulating stream feeding the stack's electrode compartments.                                                                    |
| Ion-exchange membrane | A selective membrane that passes either cations or anions, blocking the other.                                                               |
| PLC                   | Programmable Logic Controller — the industrial controller running the unit's automatic logic.                                                |
| HMI                   | Human-Machine Interface — the operator touchscreen/display.                                                                                  |
| VFD                   | Variable-Frequency Drive — controls pump/motor speed.                                                                                        |
| RTU                   | Remote Terminal Unit — a networked I/O/communication device (e.g. the ADAM-3600).                                                            |
| CIP                   | Clean-In-Place — an automated cleaning cycle using dosed chemicals.                                                                          |
| P&ID                  | Piping & Instrumentation Diagram.                                                                                                            |
| DoC                   | Declaration of Conformity — the manufacturer's statement of regulatory compliance (e.g. CE marking).                                         |
| PPE                   | Personal Protective Equipment.                                                                                                               |
| E-stop                | Emergency stop — a manually operated device that immediately halts machine operation.                                                        |

**Hydrovolta NV**

Romeinse Straat 18, 3001 Leuven, Belgium

info@hydrovolta.com | +32 28 800 336

<https://hydrovolta.com>

| Rev. | August 31, 2026