


Drawn by Gary S. Silver, s/v Liahona SM # 335
22 April 2014

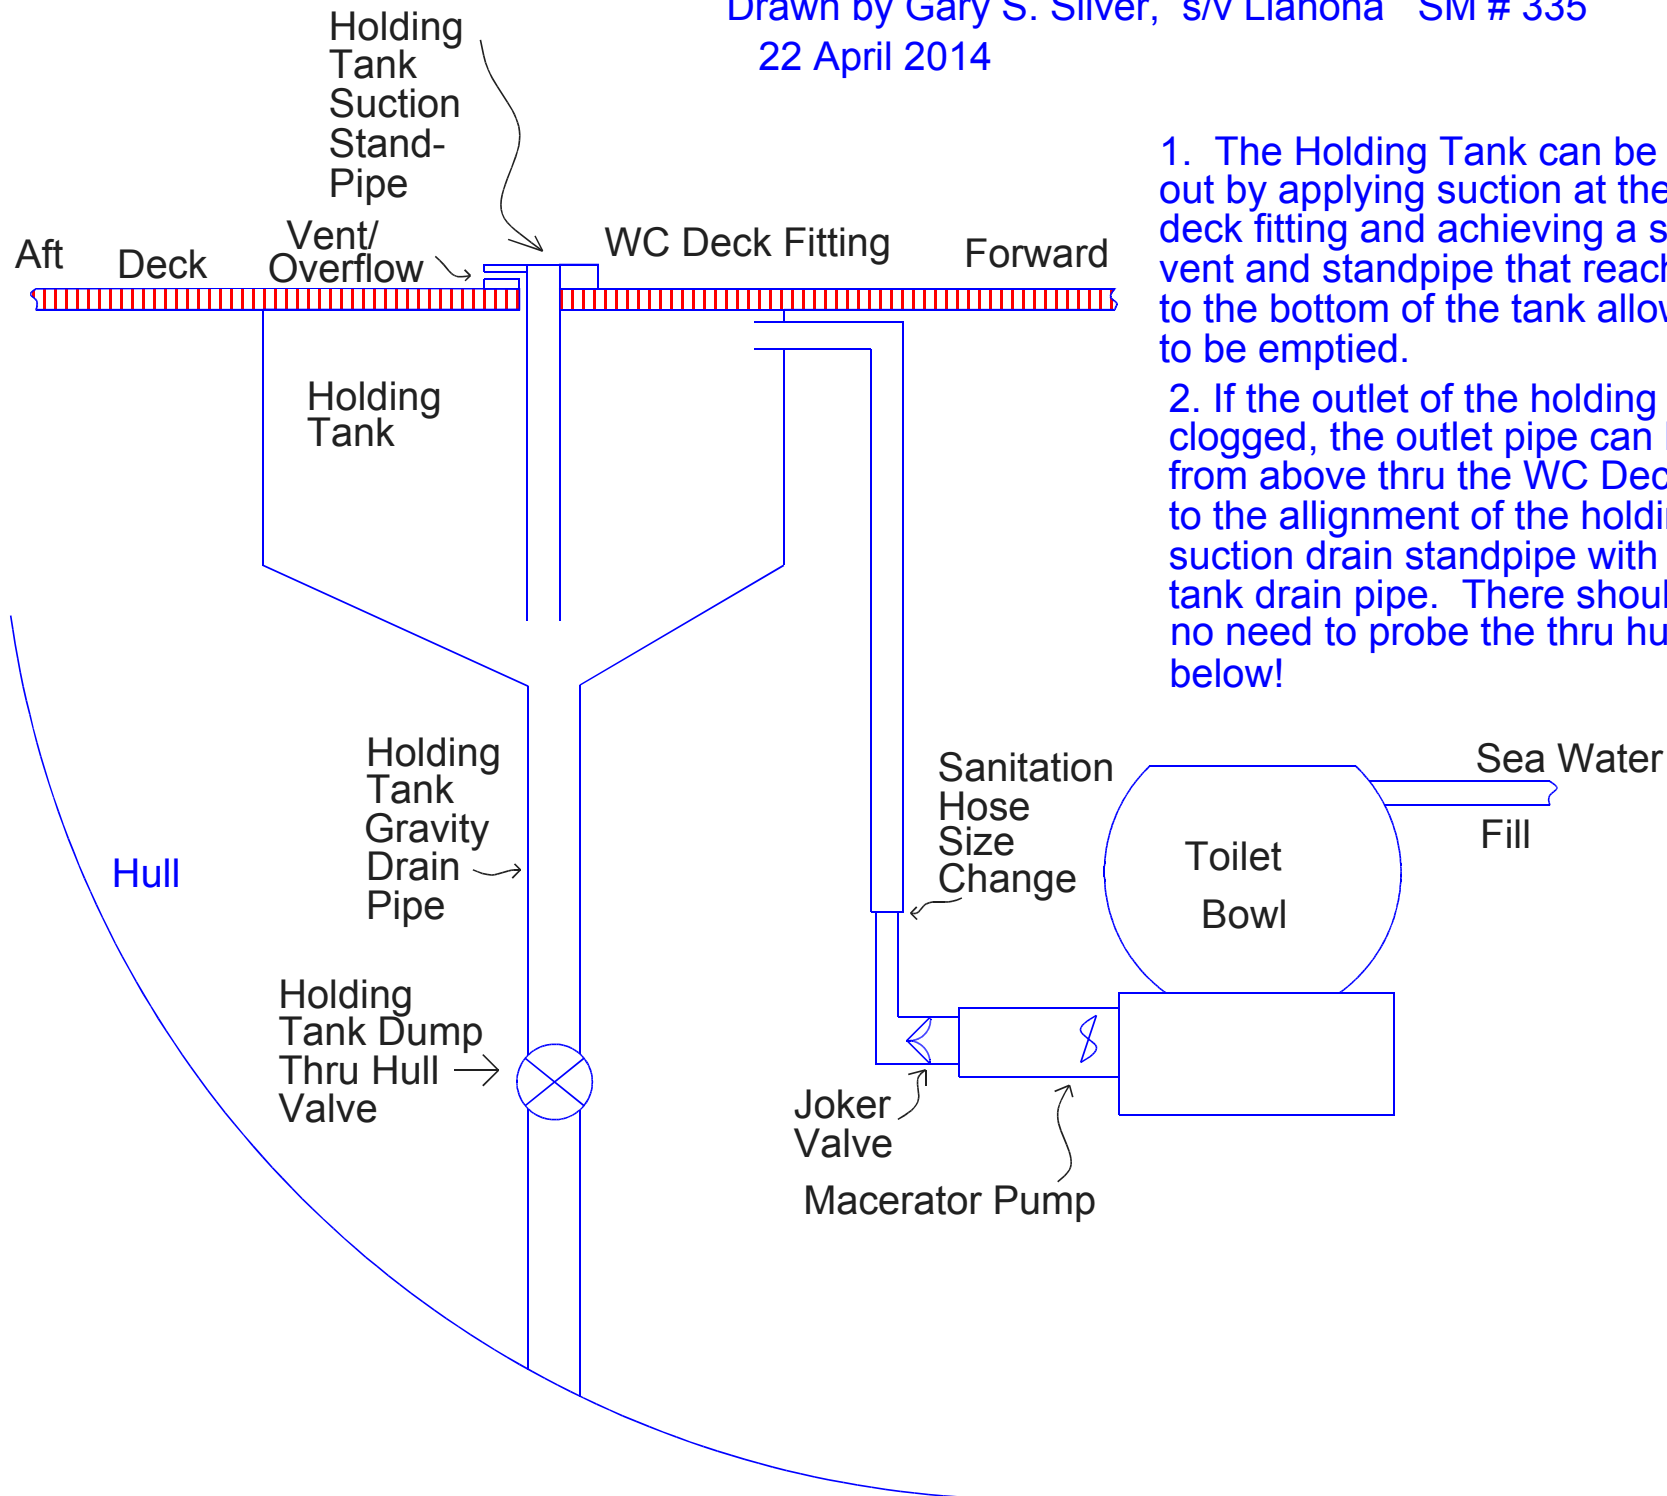

1. The Holding Tank can be pumped out by applying suction at the WC deck fitting and achieving a seal. The vent and standpipe that reaches nearly to the bottom of the tank allows the tank to be emptied.

2. If the outlet of the holding tank becomes clogged, the outlet pipe can be probed from above thru the WC Deck fitting due to the alignment of the holding tank suction drain standpipe with the holding tank drain pipe. There should be no need to probe the thru hull from below!