


AGE 14+

EVA COMBAT FIGHTER

FUNCTION OPERATING MANUAL

EVA战斗歼击机

使用说明书

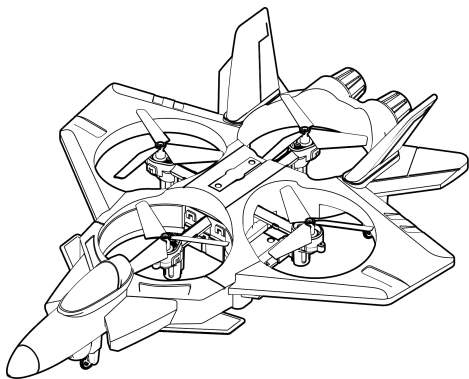


*Please read this manual carefully before operation and keep it properly for future reference.

*请在飞行前仔细阅读说明书并妥善保管以便日后参考。


ACCESSORIES 配件表




DRONE x1
(Battery Included)
无人机 x1 (内含电池)



Remote Control x1
遥控器 x1



Backup Propellers ABx2
备用风叶 ABx2



USB Charger x1
USB充电器 x1



Screwdriver x1
十字螺丝刀 x1



User Manual x1
说明书 x1


Notes 注意:

Please check the number of accessories carefully (as shown above). Please provide proof of purchase and contact the store for replacement if any missing parts.


请仔细清点各配件及数量（如配件表），如果发现不全，请提供购买凭证，及时联系销售商家补换货。

OPTIONAL ACCESSORIES LIST


可另购配件表

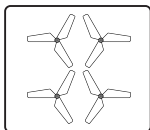


Propellers
风叶

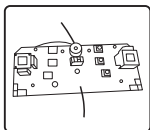


Launch board
发射板

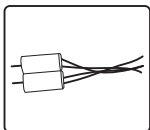


Motor
电机

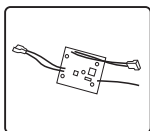


Receiving board
接收板

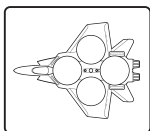


Body
机身

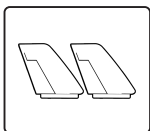

Tail wing
尾翼

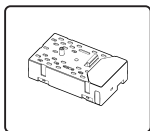

Battery
电池

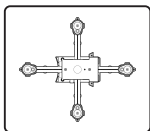

Frame
机架

Notes 注意:

If any of the above accessories are damaged during operation, you can contact the seller to purchase.

操作过程中，如有以上配件损坏，可自行联系卖家购买。

PRE-FLIGHT PREPARATION

飞行前准备

1.FLIGHT ENVIRONMENT 选择飞行环境



Indoor: Spacious spaces away from barriers, crowds or pets are preferred.

在室内飞行：请选择附近无障碍物、人群和宠物的开阔空间飞行。



Outdoor: Sunny, windless and breezy weathers are preferred.

在室外飞行：请选择晴朗无风的天气或微风的天气飞行。



Please keep the drone in sight during the flight and keep it away from barriers, high-tension cables, trees and people.

飞行时请保持飞行器在视线范围之内，并远离障碍物、高压线、树木、人群等。





Do not fly in extreme environment, such as hotness, coldness, strong wind or heavy rain.

切勿在极端恶劣的环境下飞行，如过冷、过热、强风、暴雨等。


BATTERY CHARGING FOR DRONE

机身充电方法

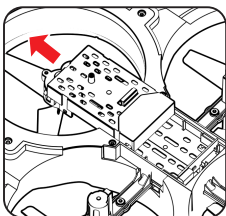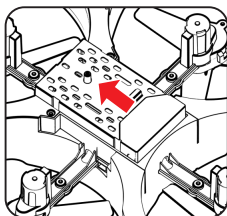

A. Press the position indicated by the arrow, push the battery box upward, and take out the battery.

按下箭头指示的位置，把电池箱向上推，取出电池。

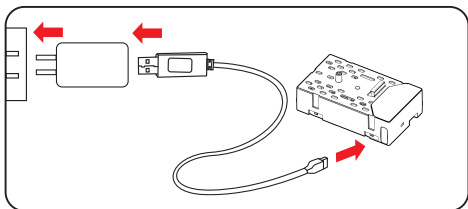

B. Connect USB charging cable with the charging interface of the lithium battery.

USB充电器连接电池与USB充电接口

Notes 注意:

The LED light is red on when charging, and the LED light is green when charging is finished.

Charging time is about 160–180 minutes.

The aircraft flies for about two and a half minutes, and the roll function is suspended to save power and make the flight last longer;



充电时LED红灯亮，充电结束时LED灯显示绿灯。

充电时间约160–180分钟。

飞行器飞行约两分半钟左右，翻滚功能暂停使用，节约用电，使飞行更持久；

BULLET LAUNCHER INSTALLATION INSTRUCTIONS

子弹发射器安装说明

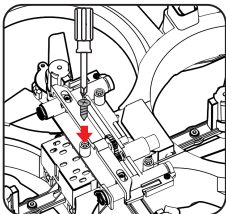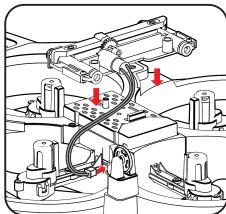


Insert the bullet launcher plug into the power socket of the fuselage, then install the bullet launcher into the fuselage and tighten the screws.


将子弹发射器插头插入机身电源插口，然后将子弹发射器装入机身，并打上螺丝。

BULLET LAUNCHER OPERATING INSTRUCTIONS



子弹发射器操作说明

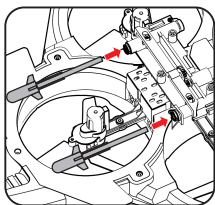

load bullets 装入子弹



Press the button to fire bullets
按下按键发射子弹

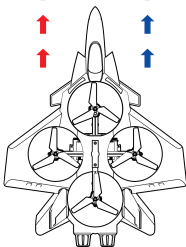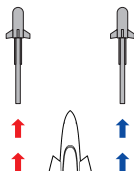

Do not shoot bullets into people's eyes, faces, or animals. To avoid injury, please use bullets designed by our factory. Do not modify bullets and their launchers indiscriminately.

请勿将子弹射向人的眼睛和脸部或动物，为避免受伤请使用本厂设计的子弹，请勿乱改装子弹及其发射器。

BATTERY INSTRUCTIONS 电池使用注意

- There is a certain risk when using lithium battery. It may cause fire, body injury or property loss. Users must be aware of the risks and take full responsibility of using battery improperly.

使用锂电池有一定风险，可能对人和财产造成重大损失，请谨慎使用，自行承担所有相关责任。

- If battery leakage occurs, please avoid contacting your eyes or skin with electrolyte. Once it happens, please wash your eyes with clean water and seek medical care immediately.

如果电池发生泄漏，请避免液体与皮肤和眼睛接触。若接触到皮肤，请立即以香皂和清水清洗。若接触到眼睛，请立即以大量冷水冲洗并立即就医。

- Please remove the plug immediately if you sense any peculiar smell, noise or smog.

如果充电器发出可疑异味、噪音或者烟雾，请立即拔除电源。

Battery Charging 充电

- Please use the charger from original factory to ensure your safe usage.

请使用原厂配送的专用充电器充电，严禁使用破损或其他品牌充电器。

- Do not charge dilatant or outworn battery.

请勿对膨胀、泄漏或破损的电池充电。

- Do not over charge battery. Please unplug the charger once fully charged.

请勿对电池过度充电。当电池完全充满后，请拔出充电器。

- Do not charge the battery next to inflammables, such as carpet, timber floor or wood furniture or on the surface of electro-conductive objects.

Please always keep an eye on the battery when charging.

请勿在靠近易燃物（地毯、木地板、实木家具等）或导电的物体表面上充电。充电时请保持电池在视线范围内。

- Do not charge battery which not cool down yet.

切勿在使用产品后电池尚热时立即充电。

- The charging temperature should be between 0°C to 40°C.

电池充电的温度应该介于0°C到40°C之间。


Battery Recycling 回收

- Do not dispose the battery as daily rubbish. Please familiarize yourself with the local garbage disposal method and dispose it according to the special requirement.

此设备由电子元件和电池构成。关于电子电器垃圾，请按照当地垃圾处理要求，进行特殊处理。

KNOW YOUR REMOTE CONTROL

认识你的遥控器

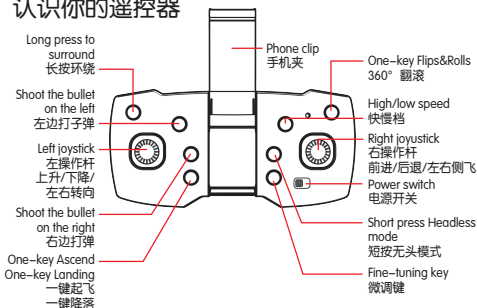

LITHIUM BATTERY INSTRUCTION

电池安装及充电方法


① Open the remote control battery cover

遥控器电池盖的开启



② Remote control battery installation

遥控器电池的安裝



Open the battery cover and insert the 3 AA batteries correctly according to the electrode instructions.(Batteries not included)

打开电池盖，依照电极指示正确放入3粒AA电池。（电池需另购）


Notes 注意:

1. Make sure the battery are loaded correctly according to the polarity indications on the battery compartment.
2. Please do not mix old and new batteries together.
3. Please do not mix different types of batteries together.

1. 装入电池时必须认准电池正负极，且不能装反。
2. 请勿混合使用新旧电池。
3. 请勿混合使用不同类型的电池。

SIGNAL CONNECTION OF TRANSMITTER AND RECEIVER 遥控器与无人机对频

- ① Turn on the drone and place it on a level surface, the indicator light of transmitter and the LED of drone flashing.
开启机身电源开关后将无人机放置在水平面，遥控器指示灯和无人机LED灯闪烁。
- ② Push the throttle joystick to the highest point then push back to the lowest point, and when you hear two beeps, the indicator light of transmitter and the LED of drone become normally on, the signal connection as completed.
将油门杆推到顶部再拉回到最低点，滴滴两声，遥控器指示灯和无人机LED灯变常亮，则完成对频。

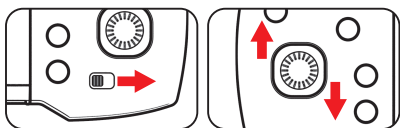


TRANSMITTER CALIBRATION 遥控器校准

Apply transmitter calibration when the drone fails to take off vertically.

Move the left and right joysticks to the lower left at the same time and hear a beep, then move the left and right joysticks to the lower right to hear a beep. At this time, the UAV indicator light flashes quickly, wait until the indicator light is always on, the calibration is completed. When executing the correction command, it must be executed in a stable state parallel to the horizontal line, otherwise the correction effect will be affected.

若无人机起飞不能垂直上升，可对无人机校正。
将左右操控杆同时拨向左下方，听到“滴”一声，然后将左右操控杆拨向右下方，听到“滴”一声，此时无人机指示灯快速闪烁，待指示灯常亮，校正完成。
在执行校正命令时，必须在与水平线平行的平稳状态下执行，否则会影响校正效果。



START YOUR FLIGHT 开始飞行

1. One-key Ascend 一键起飞

Press the "One-key Ascend" button, the drone blades rotate and automatically fly to a height of 1.5 meters.


按下“一键起飞”按键，无人机风叶转动，自动飞到1.5米的高度。

2. Basic Flight 基本飞行


Use the left joystick to control the flight altitude and turn left/right, and the right joystick to control the forward, backward, left and right side flight directions.

左操纵杆控制飞行高度与左右转方向，右操纵杆控制前进、后退以及左右侧飞方向。

Left joystick 左操纵杆



Right joystick 右操纵杆


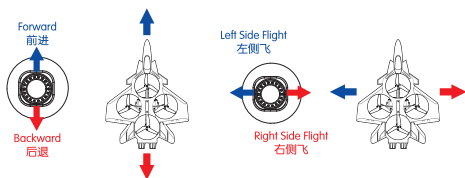


Flips & Rolls 翻滚

When the drone is reaching more than 3 meters high, click "360° flips and rolls" and move the right joystick to a certain direction, the drone will rotate in that direction.

无人机飞到3米以上高度后，点击翻滚键并将右操纵杆（方向舵）向一个方向移动，可实现往此方向的翻滚动作。

Right joystick 右操纵杆

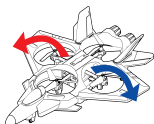

Note: The aircraft is equipped with a camera version. When the camera is connected to the aircraft and starts working, the roll function is automatically deactivated.

注意：飞行器带摄像版本，当摄像头连接飞行器并开始时，翻滚功能自动停用。

Headless Mode 无头模式

The flight direction of drone is subjected to the direction of remote control.

1. When drone adjust the frequency, the drone is default as common mode. Then the indication light of drone is normally on. When you press the headless function key of remote control, the remote control beeps once and enters headless state. When you press the headless function key again, you listen to a long beep sound and the drone exits the headless mode.
2. In the headless state, operator doesn't need to identify the direction of nose, but control the drone according to the operating lever of remote control.

当无人机对完频后，无人机默认为普通模式，此时无人机的指示灯为长亮状态，当按下遥控器上无头功能键后，遥控器发出“滴”一声表示进入无头状态，再按下无头功能键后听到“滴”长声响为退出无头状态。



在无头状态下，操控者无需去辨认无人机的机头方向，只需根据遥控器的操作杆方向来控制飞行器。

Hover 悬停


When you release the left joystick (throttle) after the ascent/descent action, the drone will hover at a certain height.

用左操纵杆让无人机上升后，松开左操纵杆，无人机仍会悬停在松开操纵杆时的高度。

Left joystick 左操纵杆




Surround 环绕

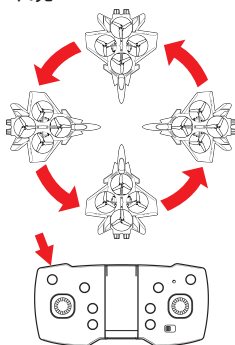

Long press the orbit button and the aircraft will circle. Release the button and the aircraft will stop orbiting.

长按环绕键，飞机盘旋环绕，松开按键后飞机停止环绕。

Gliding and taking off 滑翔起飞

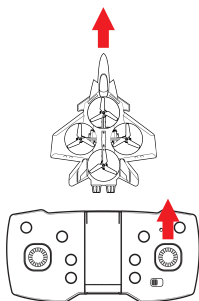

Push the push rod to the maximum and glide to take off in about 2 seconds.

Note: Gliding takeoff requires smooth ground and no wind.

推杆推到最大，2秒左右滑翔起飞。

注意：滑翔起飞需在地面光滑、无风的情况下。

FINE-TUNING FUNCTION

微调功能


When the aircraft spins in the air or tilts in different directions, you can use fine-tuning to correct the action. Press the fine-tuning button and hear a beep, then move the joystick in the opposite direction to adjust and calibrate until the aircraft does not deviate.

If there is no operation for 5-6 seconds after entering the fine-tuning, the fine-tuning function will automatically exit.

当飞行器在空中打转或倾向不同方向时，可使用微调修正动作。

按下微调按键听到“滴”一声后，然后反方向拨动操作杆进行调节校准，直至飞行器不会偏飞为止。

进入微调后如果5-6秒没有进行操作，微调功能就会自动退出。

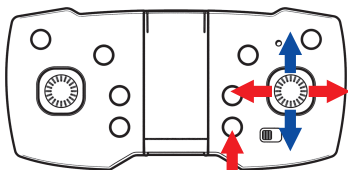

① Forward/Backward


Fine-tuning

① 前进/后退微调

② Left/Right Side

Fly Fine-tuning

② 左/右侧飞微调

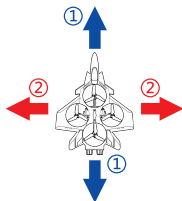

Notes 注意:

When the drone is within 30cm from the ground, it will be affected by the blade vortex made by itself and become unstable. This is "ground effect". The lower the drone is, the greater the effect will be.

“地效反应”指当无人机飞行越低时，地面反应影响则越大。当无人机在距离地面 30 cm 以内的位置，无人机会受到自身桨叶涡流的影响而变得不稳定。

FAQ

遇到问题不用慌

PROBLEMS 问题	CAUSES 原因	SOLUTIONS 处理方法
Control failure 遥控器失灵	Not connect with the quadcopter battery. 无人机电池没连接	Connect the quadcopter battery in right way. 把无人机电池按正确方向连接
	Too strong wind force. 风力太大	Do not fly in windy days. The performance and the control of the quadcopter will be affected by the strong winds. 切勿在有风的情况下飞行，有风会对无人机造成局限，或会妨碍你的控制飞行
Fail to ascend 无人机不能升高	The rotation speed of main blades is too slow. 旋翼转动速度太慢	Push up the throttle joystick. 动力操纵杆向上推
	The battery of the quadcopter is not fully charged. 无人机未完成充电	Please full charge the quadcopter. 为无人机完全充电
Landing too soon 无人机很快跌落	The throttle stick is pulled down too fast. 过快将动力操纵杆回拉	Pull down the throttle stick slowly to perform a smooth landing. 慢慢的回拉动力操纵杆让无人机慢慢着陆
Out of control 失控	Beyond the effective controlling distance. 超出有效遥控距离	Ensure operation within the controllable distance: remote control of 100 meters and WIFI control of 40-50 meters. 确保遥控距离在100m内，WIFI操控在40-50m内