



ESP-32 WROOM-32E


Power Input Selection




Power LED




User LED

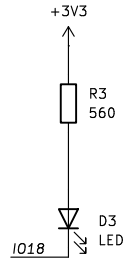


ESP 32 Module

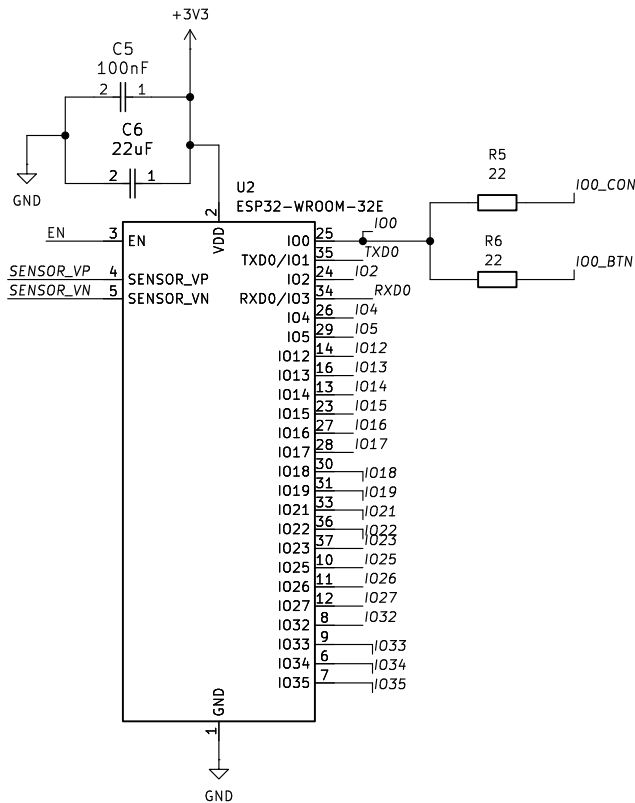


USB to Serial

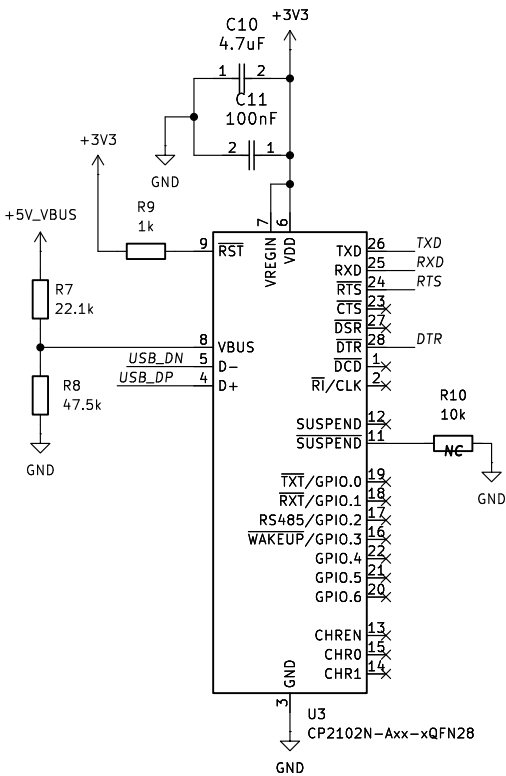


Serial Signals Handling

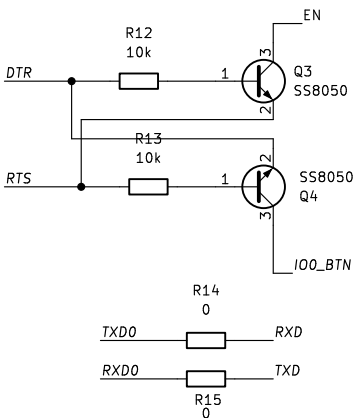



5V to 3.3V

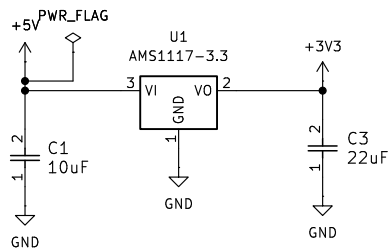


USB Connector

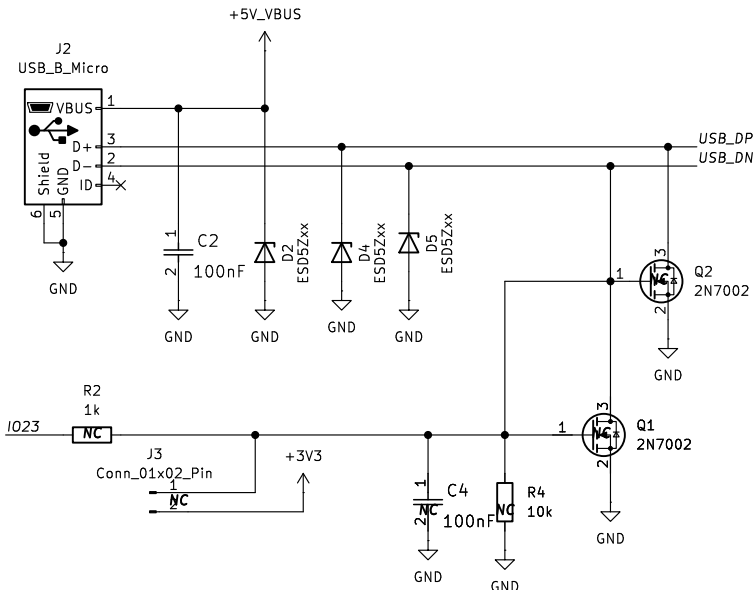

Connectors

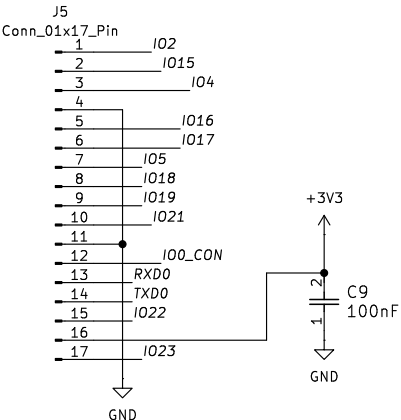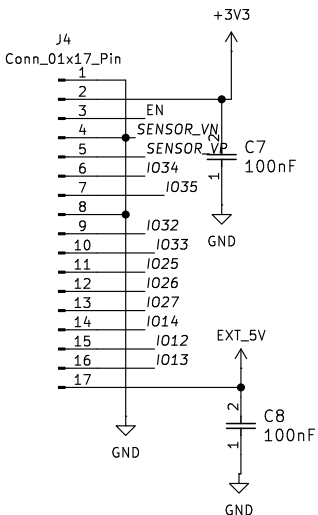

Reset Pin

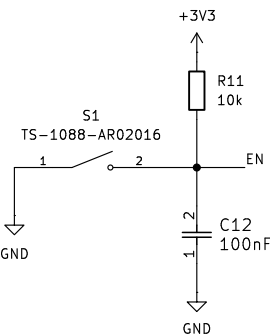

Boot/User Pin

