

Softness apparatus BLC ST300




20mm for gloving leathers.

25mm for moderate softness leather such as CGL,FGL

35mm for shoe uppers.

Circular test plate for calibration.

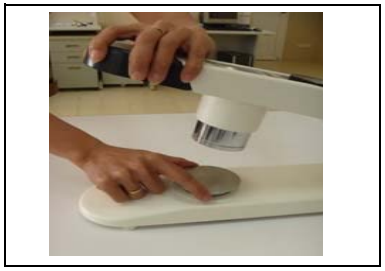

Use Circular test plate to calibration




To release top arm apple a downward pressure to the operating lever and press the release button.



Zero the gauge



Put the specimen on reducing ring.

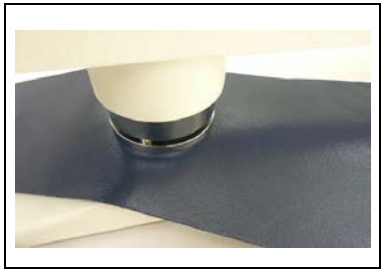

Insert the test leather.

Pressing down on the operating lever.



Reading the Score on the gauge.

Prepared by	Approved by	REVISION		DATE	