
STANDARD OPERATING PROCEDURE OF BURSTING VF-B02

Lab /SOP/ 14



Bursting strength tester

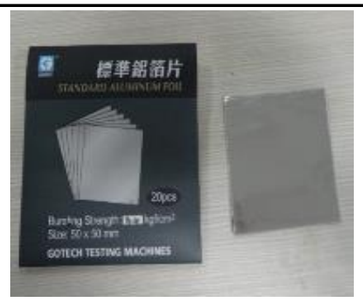

Aluminum foil for calibrating the bursting strength



Change oil regularly . Use GLYCERIN OIL only
change rubber film when it already inflated
beyond 2 mm of the regular concave height/
always compare with the regular.




every 2 weeks (minimum) by lab technician
with the use of aluminum foil .
tolerance is ± 0.3 kgf/cm2
must attach the printed value if printer not
available take picture and attach.



Test three (3) samples per material.
Sample size 10cmX10cm



Return the pointer on the pressure gauge to zero.
Place the test sample between the compression
discs of the bursting strength tester.
Pull the test material taut and clamp the test
material firmly between the compression discs
of the bursting strength tester.
For machines with clamping pressure gauge,
a clamping pressure of 5-7kgf/cm2 is recommended.

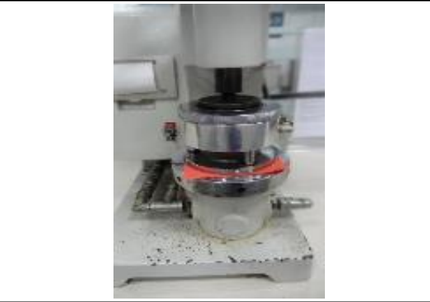

Inflate the diaphragm until the material ruptures.
Return the inflation handle to neutral immediately
after the material ruptures to avoid machine damage.



Record the maximum pressure required to
rupture the material to the nearest 0.5kgf/cm2.

Prepared by	Approved by	REVISION		DATE	