
STANDARD OPERATING PROCEDURE OF TROUSER TEAR FOR LEATHER VF-B07

Lab /SOP/ 05-01




1. Tensile testing machine with chart recorder
2. Clamps
3. Steel scale or calipers

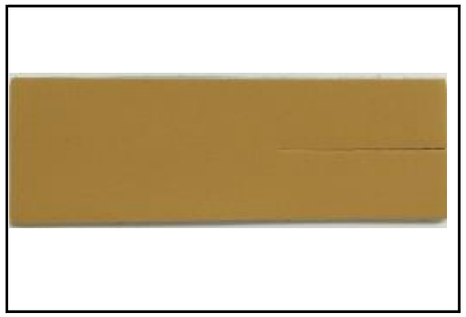

Test three materials in each direction.



Zero and calibration the tensile testing machine.

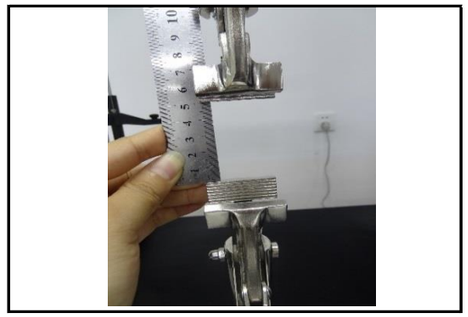


3. Set the tensile testing machine at the specified crosshead speed and Jaw gap.
Crosshead speed = 250mm/min
Jaw gap =50 ± 5mm



4. Place the test sample in the jaws such that the slit is centered in the jaws and one of the “legs” is held in each of the jaws. There should be no tension on the sample but it must be taught in the jaws (no slack) and equal portions of the test material should be positioned in the top and bottom jaws.



The test should be conducted until the sample has been torn for the complete 60mm.

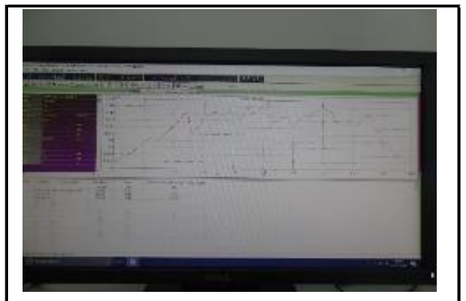

The tearing strength is measured as the average of the five (5) highest peak loads
Trouser tear strength is simply reported in kgf.

Prepared by	Approved by	REVISION		DATE	