
STANDARD OPERATING PROCEDURE OF BAUMANN TEAR VF-B09


Lab /SOP/ 07



1. Tensile testing machine with chart recorder
2. Clamps
3. Steel scale or calipers

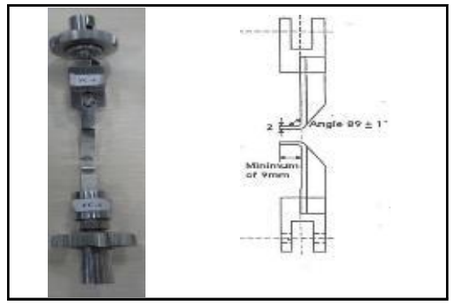

Clamp for Baumann tear the angle is 89+/-1 degree

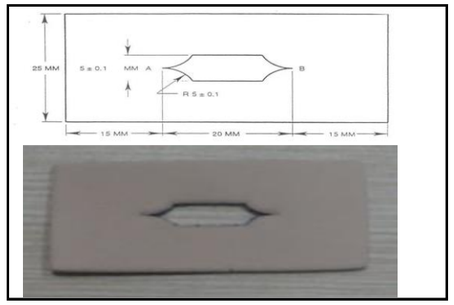

Test three (3) samples in each direction per material.



Zero and calibrate the tensile testing machine.




Set the tensile testing machine to the specified load range, crosshead speed and jaw gap.
Crosshead speed =100 mm/minute
Jaw gap =1-3mm



Mount a test sample onto the “hooks” of the Baumann attachment, such that the long axis is horizontal.
Operate the tensile testing machine at a crosshead speed of 100mm/minute.



Stop the test when a tear reaches an edge of the test sample.
Record the maximum tearing load to the nearest 0.1kgf.

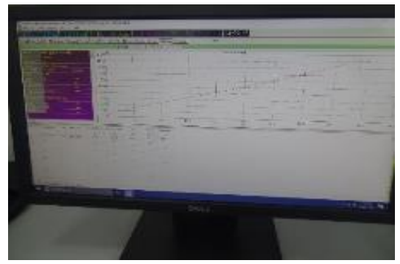

The average of the three measurements to the nearest 0.1kgf.

Prepared by	Approved by	REVISION		DATE	