STANDARD OPERATING PROCEDURE OF STRAP PULL STRENGTH VF-F06

Lab /SOP/40



Tensile testing machine with chart recorder

Razor or sharp knife.




Testing jigs for toe fixed sandals

Fix the tool into the lower clamp of the tensile machine.

Zero and calibrate the tensile testing machine

Set the crosshead speed to 100mm/minute

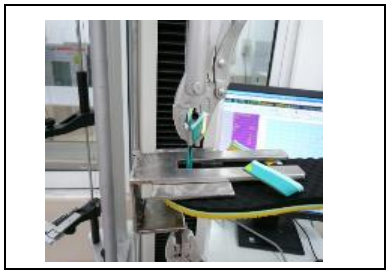

When pulling the toe post, remove the lateral and medial straps, then place the toe post at the center of the hole on the plate.

Fix the jig under, ensure the toe post is parallel from the clamps



When pulling the side straps (lateral and medial straps), remove the toe post and one of the side straps. Align the hole with the strap.

Fix the jig under, ensure the strap is parallel from the clamps. Start pulling test.

Stop the test until the toe post or the strap is broken or separates from the foot-bed / sole.



Insert the vamp to the shoe last type of jig then clamp to the upper clamp


Clamp the outsole to the lower clamp of the tensile machine.

Ensure that the upper jig is parallel to the lower clamp.



Zero and calibrate the tensile testing machine .Set the crosshead speed to 100mm/minute.

Start pulling test. Stop the test until the vamp is broken or separates from the foot-bed /sole.

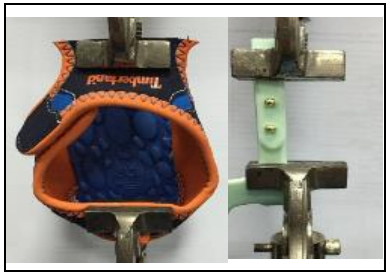

Clamp one side of wrap strap to the lower clamp and the other side to the upper clamp of the tensile machine.

Ensure that the 2 ends of wrap strap specimens are parallel.



Zero and calibrate the tensile testing machine .Set the crosshead speed to 100mm/minute.

Start pulling test. Stop the test until the back wrap strap is broken or the 2 ends separate from each other.

Prepared by	Approved by	REVISION		DATE	