VF Asia Footwear Laboratory Testing Manual

Test Method for Baumann Tear	Test Method # : VF- B09 REF # : TM-R- 064 Page 1 of 3
Date Issued: May, 2019 Revision #: 1 Reason for revision : Rectify the unit of measure from kg to kgf for material strength.	Created by: Nila Babia Erazo

PURPOSE AND SCOPE: To measure the load required to tear Leather perpendicular to its thickness, simultaneously along two lines at either end of a slit.


REFERENCES: SATRA TM162

EQUIPMENT AND MATERIAL:

1. Tensile testing machine, meeting the requirements of ASTM D638
2. Leather

Baumann tear testing attachment (SATRA STD 199).***Note: All dimensions in millimeter***

Figure A

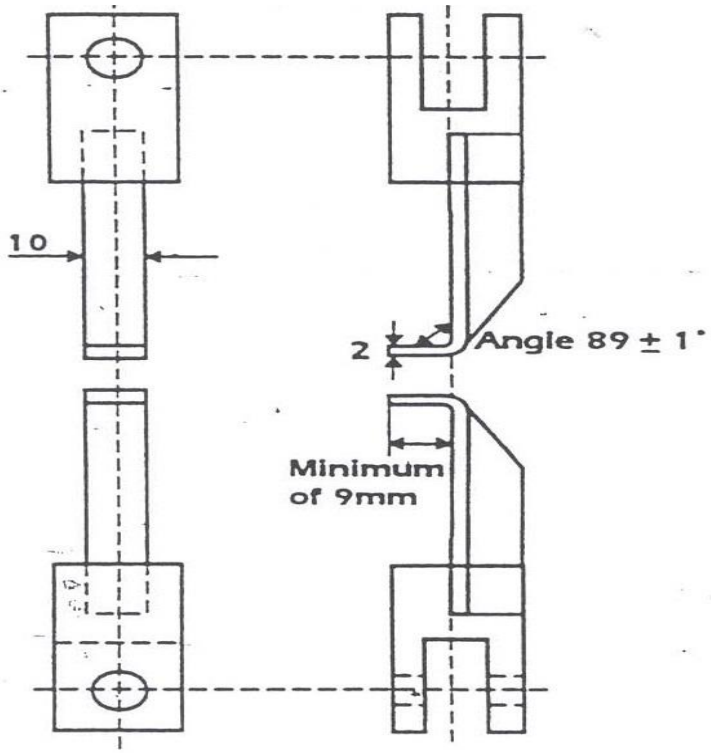


Test Method for Baumann Tear	Test Method #: VF- B09 REF # : TM-R- 064 Page 2 of 3
Date Issued: May, 2019 Revision #: 1 Reason for revision: Rectify the unit of measure from kg to kgf for material strength.	Created by : Nila Babia Erazo

SAMPLE PRERATION:

1. Condition the sample for at least 24 hours at the standard laboratory conditions at 23.0±2.0˚C temperature and 55 ±10 % Relative Humidity.

2. Die cut test samples in conformance to Figure B

Figure B

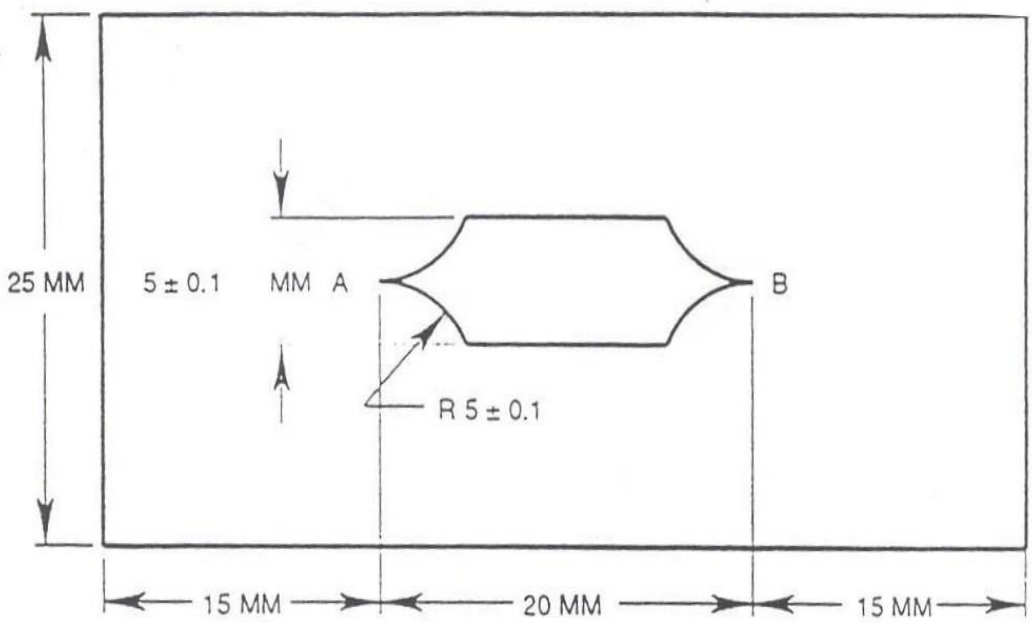

Note: All dimensions are in millimeters and tolerances are +/-0.5mm unless otherwise stated

Test Method for Baumann Tear	Test Method #: VF- B09 REF # : TM-R- 064 Page 3 of 3
Date Issued: May, 2019 Revision #: 1 Reason for revision : Rectify the unit of measure from kg to kgf for material strength.	Created by: Nila Babia Erazo

REPETITIONS: Test three (3) samples in each direction per material. The length direction corresponds to the tear line propagating perpendicular to the backbone. The width direction corresponds to the tear line propagating parallel to the backbone.

TEST PROCEDURE:

Test should be carried out at standard laboratory conditions @ 23.0±2.0˚C temperature and 55 ±10 % Relative Humidity.

1. Position the Baumann attachment in the tensile testing machine, and slowly move the jaws together until the gap between the samples “Hooks” is 1-3mm.
   Note: Do not allow the sample “hooks” to contact each other, as they are easily damaged.
2. Zero and calibrate the tensile testing machine.
3. Mount a test sample onto the “hooks” of the Baumann attachment, such that the long axis is horizontal.
4. Operate the tensile testing machine at a crosshead speed of 100mm/minute.
5. Stop the test when a tear reaches an edge of the test sample.
6. Record the maximum tearing load to the nearest 0.1kgf.

REPORT: The average of the three measurements to the nearest 0.1kgf.