


How to maintenance Power tiller

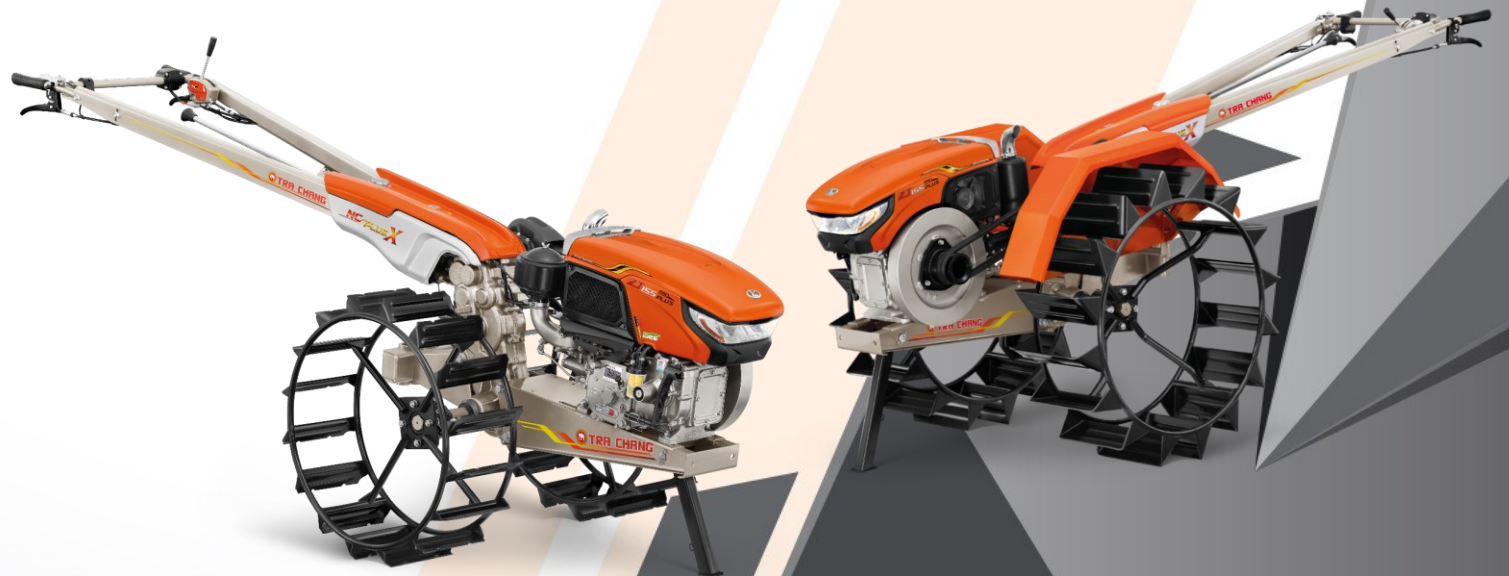

TRA CHANG



How to maintenance Power tiller **TRA CHANG**

5 key points



- 1) How to check the transmission oil
- 2) Adjusting the steering lever
- 3) Adjusting the clutch free play
- 4) Adjusting the brake free play
- 5) Adjusting the belt tension


1) How to check the transmission oil **TRA CHANG**

Period :


- For the new TRA CHANG power tiller, change the transmission oil after used for 50 hours.
- After that change the gear oil every 500 hours.

Process :

- Use TRA CHANG gear oil (SAE90 API GL-4)
- The level of gear oil should in the middle of level indicator
- Close the lid tightly to prevent dust or water from getting inside.

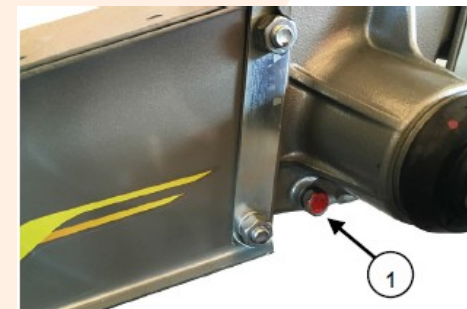

Transmission oil plug

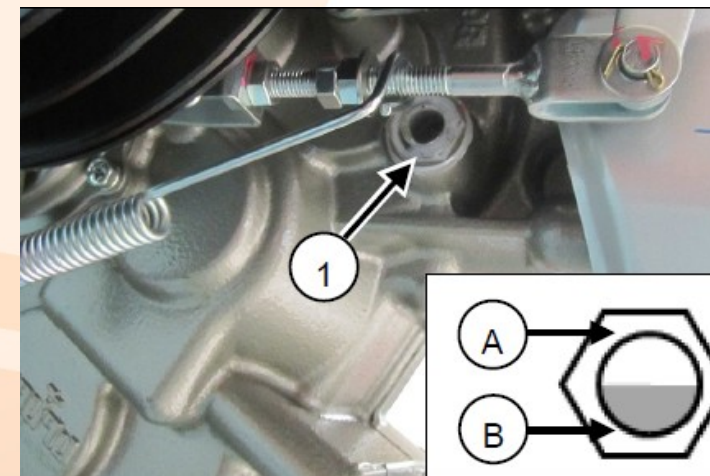


Transmission oil level

2) Adjusting the steering lever **TRA CHANG**

Process :

- Steering lever free play = 1-2 mm.
- Loosen the nut No.12 and No.14 then rotate the adjuster and check the steering lever free play
- Lubricate the left-right steering lever.

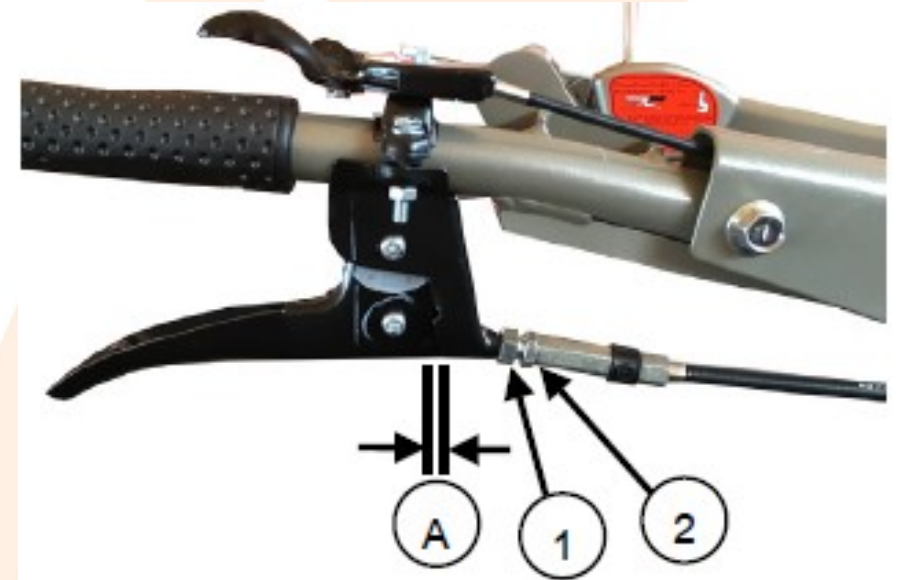

(1) Nuts


(2) Adjustor

(A) Free play = 1-2 mm.

3) Adjusting the clutch free play **TRA CHANG**

Process :

- Main clutch lever free play = 15–20 mm
- Loosen the clutch cable lock nut and turn the main clutch cable adjustor.
- Then recheck the clutch free play"

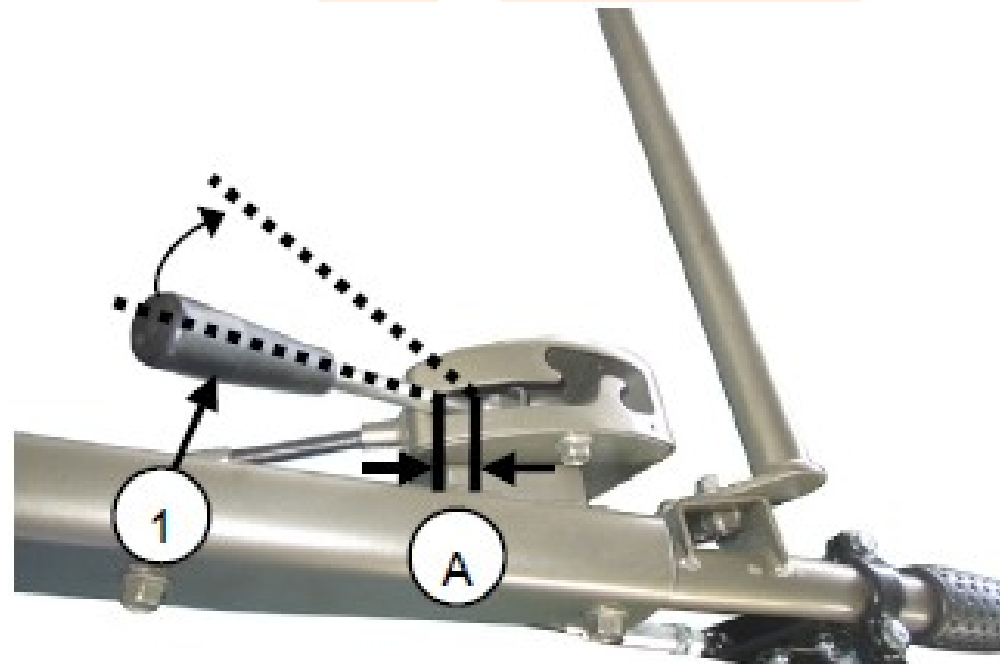

(1) Clutch lever


(A) Free play = 15–20 mm

4) Adjusting the brake free play **TRA CHANG**


Process :

- The brake free play at clutch lever = 5-9 mm.
- The brake free play = 3-5 mm.
- Pull the main clutch lever to the "DISENGAGED" position.
- Adjust the brake free play by adjusting the brake adjustment lock nut as required and tighten it

- * Always lubricate the brake cable to extend the lifetime
- * Turn the rubber cap to close the hole after lubricate

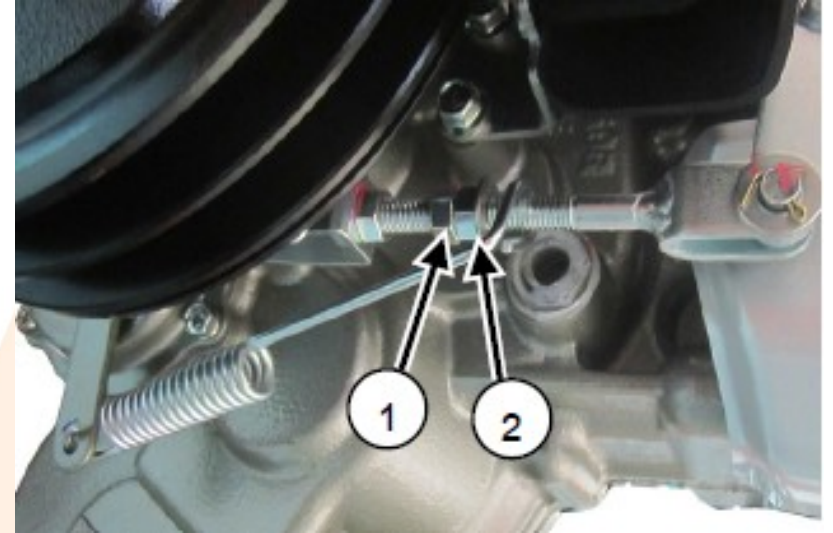

(1) Nut to lock
(2) Nut to adjusting

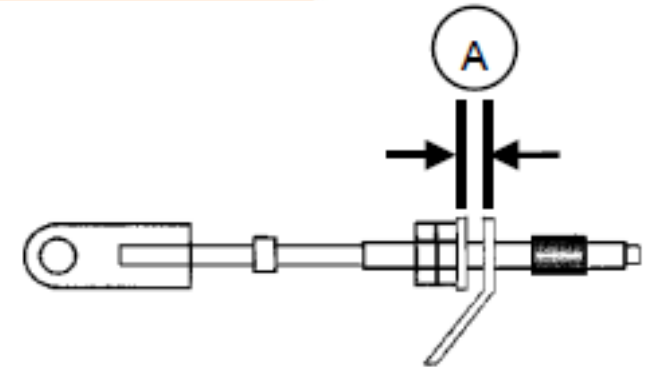


(A) Free play 3-5 mm


Adjusting the belt tension TRA CHANG

Process :

- ADJUSTING THE BELT TENSION
- Belt tension 30–40 mm.
- Tighten the belt tension adjusting wing bolt to lift up the pulley until the belt is stretched
- If the belt is cracked or torn, replace it immediately.

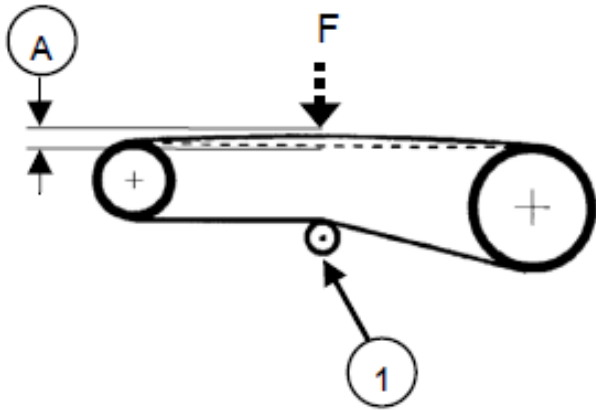

(1) Engine pulley
(A) Belt tension
30–40 mm.

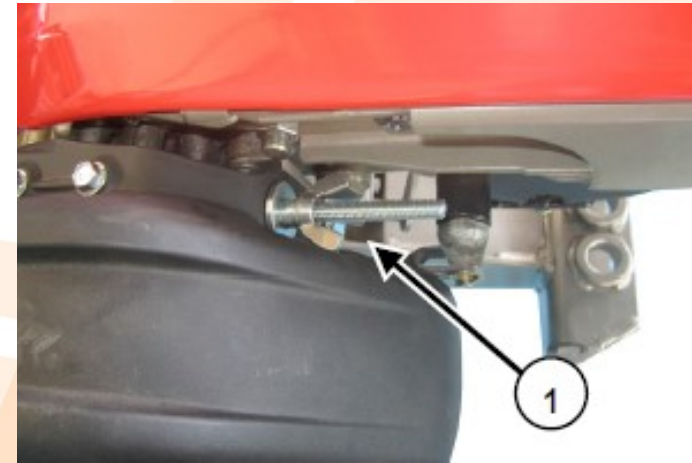

(1) Belt tension
adjustor