Release concerns doc:	Project number:	Created or amended and checked:		Checked and approved:	
		Date:	Abbreviation/Visa	Date:	Abbreviation/Visa
BA-6028-004_EN	**6028**	4.3.2025	KB	12.5.2025	MI

TABLE OF CONTENTS

1 INTRODUCTION

1.1 Purpose, scope and application

This operating manual describes how files can be downloaded from and uploaded to the P6 cleaning machine (*upload/download)*. This document is intended for ECOCLEAN GMBH service technicians and technicians trained by ECOCLEAN GMBH, as well as for users of the P6. It provides information on operating the PC software.

Questions about the application and operation can be sent to the e-mail address info.monschau@ecoclean-group.net of Ecoclean GmbH.

We reserve the right to make changes to this document. Copies already issued are not automatically subject to the amendment service.

This document was created for the software versions

App Up/Download 1.1.0
Web Main 1.0.0

These versions were first installed with the applications P6 ctrl 1.3.0 and P6 UI 1.3.0.

1.2 Abbreviations

CU: Control computer CU4000 (machine control)

Title	Document:
Operating instructions **Up/Download**	BA-6028-004_EN
	Revision: B
	Page:3 of 6

ECOCLEAN

2 GENERAL INFORMATION

2.1 Intended use

Up/Download is used with the P6 cleaning machine

2.2 Manufacturer

Ginova Electronics AG
Systems, Software and Electronics
Spärsstrasse 7
CH-2562 Port
SWITZERLAND
Website: www.ginova-electronics.com
E-mail: info@ginova-electronics.com

Title	Document:
Operating instructions	BA-6028-004_EN
Up/Download	
	Revision: B
	Page:4 of 6

ECOCLEAN

3 Operation

3.1 Connection with the machine

A PC can be used to access the machine for uploading/downloading files via any web browser (e.g. Firefox, Microsoft Edge, Google Chrome, etc.).

Connect

The machine must be in the same network as the PC (connection of the machine via Ethernet). Open any web browser on the PC (e.g. Firefox, Microsoft Edge, Google Chrome etc.) and enter the IP address (e.g. http://192.0.2.1) or the host name (http://IndexLine) of the machine in the browser. The IP address and host name of the machine can be seen on the CU in the system information and can be changed in the general settings[1].
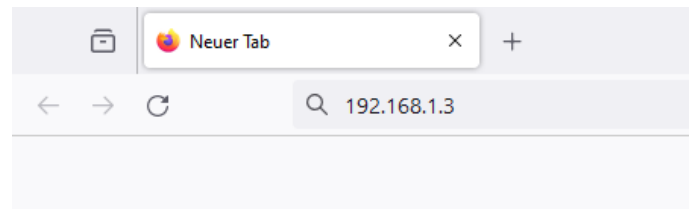

Fig. 3.1 - Enter IP address or host name in the browser

HTTP vs HTTPS:

Communication takes place via HTTP. Normally, it is sufficient to simply enter the IP address (e.g. 192.0.2.1). If the browser displays https (e.g. https://192.0.2.1), you must switch to http (without "s", e.g. http://192.0.2.1).

---

[1] The host name can be changed from P6 version 1.5.0 (P6 ctrl 1.5.0 and P6 UI 1.5.0) in the general settings

3.2 Function overview

As soon as a connection has been established, an overview of the available functions appears. Various "upload/download" functions exist (e.g. settings).
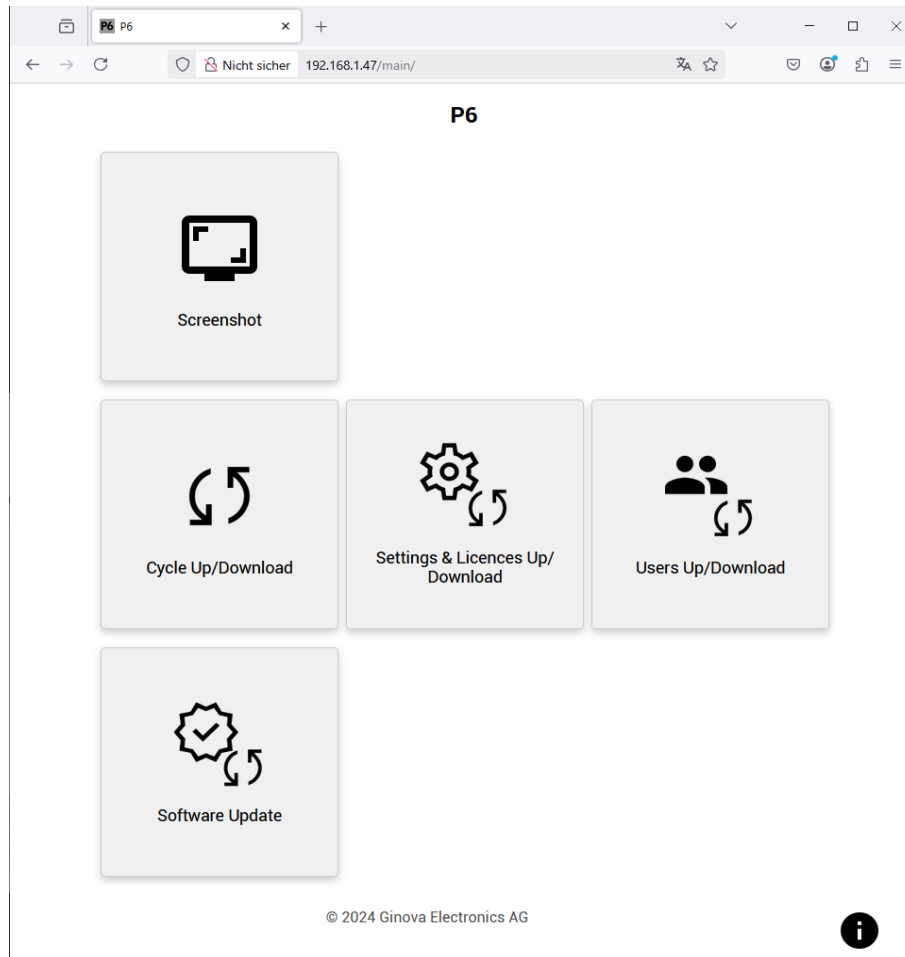

Fig. 3.2-1 Overview of the available functions

Title	Document:
Operating instructions **Up/Download**	BA-6028-004_EN
	Revision: B
	Page:6 of 6

ECOCLEAN

3.3 Up/Download

Various data (cleaning cycles, settings & licenses, users) can be downloaded from the machine to the PC (download) and also uploaded from the PC to the machine (upload).
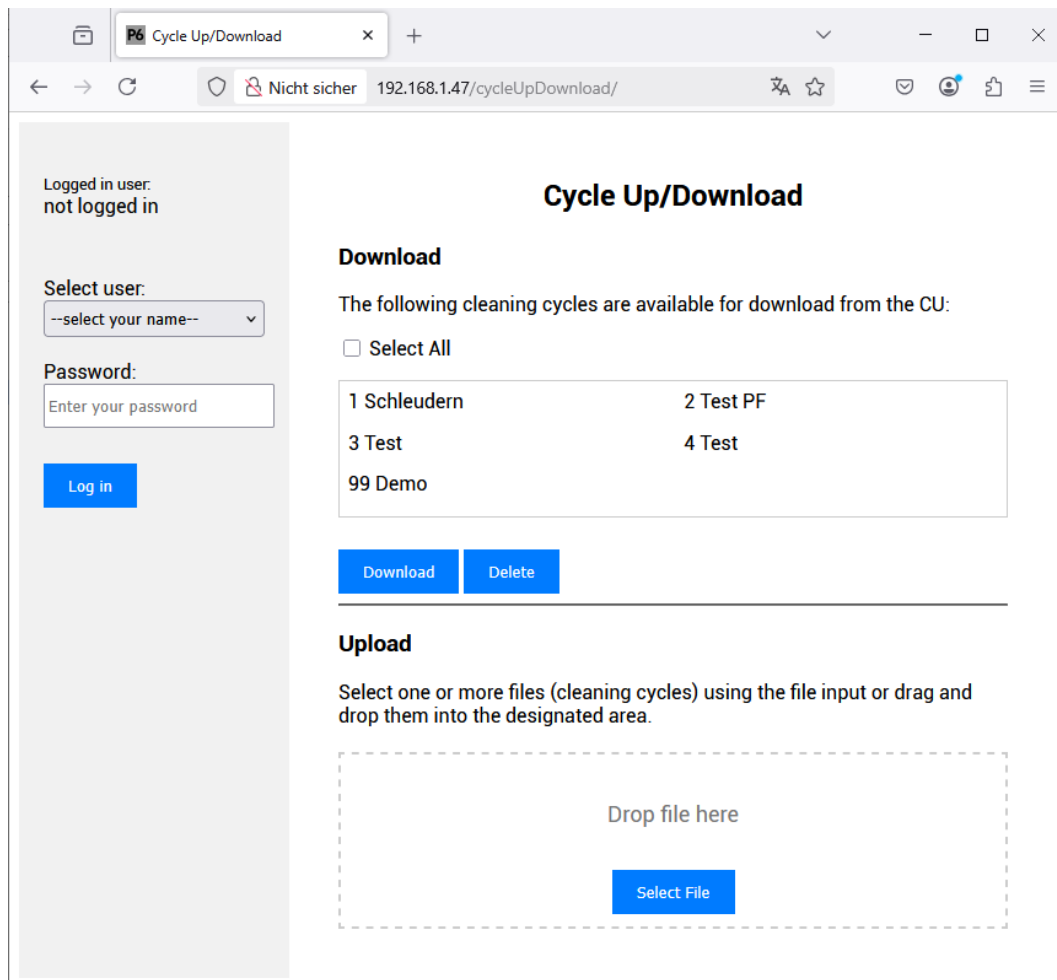

Fig. 3.3-1 Upload/download in the web browser (example: cleaning cycles)

Users
If the user system is activated on the CU, the user selection for logging in appears on the left-hand side. Files can only be uploaded and downloaded after logging in. If a password has expired or there are other problems with the user, these problems must be resolved on the CU.

Download (Download files)
A list of files available for download appears in the upper area (in the example above: cleaning cycles). Selected files can be downloaded or deleted. The web browser saves downloaded files in the "Downloads" folder (browser setting).

Upload (upload files)
Files can be uploaded in the lower area. To do this, files can be selected using the "Select file" button, or files can be dragged and dropped into the designated area.