



MP22 - BR (A252)

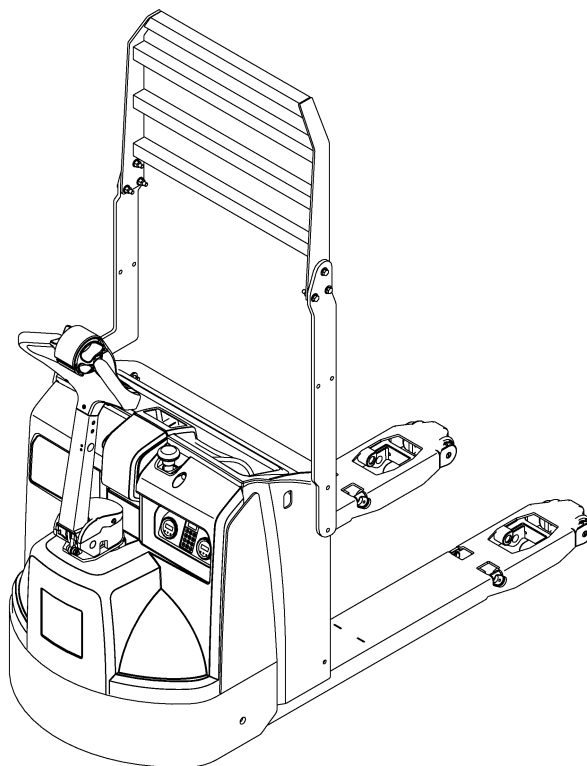

MODEL NOMENCLATURE

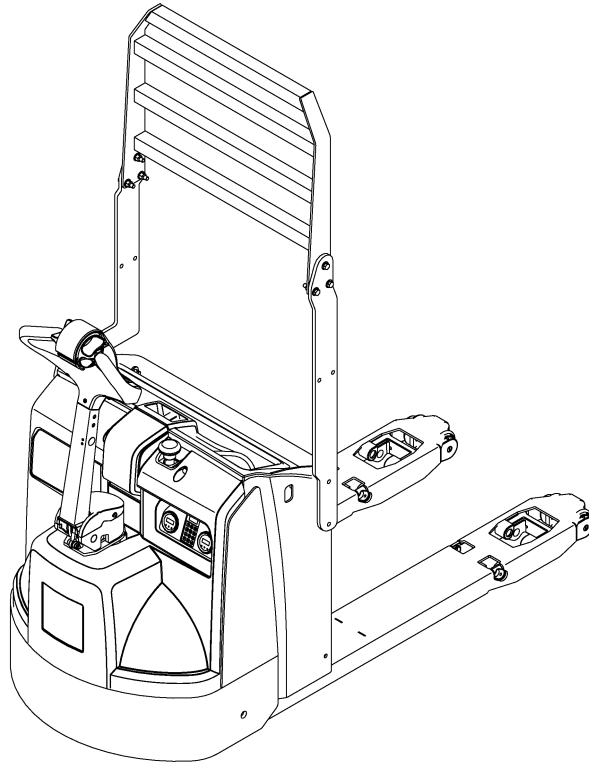

NOTE: This parts manual contains alternate pages for certain assemblies. The truck model code can be used to determine many of the assemblies on your lift truck (power, tire type, mast type). The complete truck model and serial number are stamped into the nameplate. See for further information.

SECTIONS

1	FRAME/DRIVE UNIT
---	------------------

2	ELECTRICAL SYSTEM
---	-------------------

3	STEER HANDLE/BRAKE SYSTEM
---	---------------------------

4	HYDRAULIC SYSTEM
---	------------------

5	LIFT LINKAGE AND FORKS
---	------------------------

6	OPTIONS
---	---------

7	NUMERICAL INDEX
---	-----------------

8	USER SUPPORT INFORMATION
---	--------------------------

This Parts Manual is divided into 8 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.

TABLE OF CONTENTS

DESCRIPTION	PAGE
A	
AUDIBLE ALARM OPTION	2-13
B	
BATTERY STOP - SIDE REMOVAL	2-10
BATTERY TRAY SIDE BATTERY EXTRACTION - 218 MM BATTERY BOX	1-4
C	
CASTER WHEEL ASSEMBLY	1-12
CASTER WHEELS	1-10
CONTACTOR	2-31
COVERS	1-3
CYLINDER ASSEMBLY	4-6
D	
DRIVE TIRE AND STATIC STRAP	1-5
E	
ELECTRICAL SYSTEM WITH HOURMETER	2-6
WITH KEYPAD	2-2
ENTRY BLADES	1-8
EXTENSION BATTERY CABLE OPTION	6-2
H	
HYDRAULIC POWER UNIT ASSEMBLY	4-4
HYDRAULIC SYSTEM	4-2
L	
LABELS	1-16
TILLER HANDLE	3-6
LIFT LINKAGE	5-2
LOAD BACKREST SIDE BATTERY EXTRACTION VERSION - OPTION	1-14
LOAD WHEEL SEALED BEARING	1-6
TANDEM - OPTION	1-7
M	
MASTER DRIVE UNIT ASSEMBLY	1-2
O	
ON-BOARD BATTERY CHARGER OPTION	2-8
S	
SNOWFLAKE LABEL ONLY FOR COLD STORE MODEL	1-18

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
SPEED REDUCTION STEERING OPTION	2-12
T	
TELEMETRY OPTION	2-14
TELEMETRY LABEL OPTION	2-16
TILLER HANDLE AND MOUNTING WELDMENT	3-2
TILLER HEAD ASSEMBLY	3-4
W	
WARRANTY LABEL	1-19
WIRE HARNESS	
KEYPAD JUMPER OPTION	2-23
MAIN - KEYPAD OPTION	2-24
MAIN - HOURMETER OPTION	2-28
OPTION HARNESS	2-22
TELEMETRY OPTION	2-18
TILLER	2-21

ABBREVIATIONS QUICK REFERENCE SHEET


Listed below are abbreviations used in parts manuals to denote the following expressions:

TERM	DEFINITION	TERM	DEFINITION
Amp	Amperes	FRE	Freezer Environment
AR	As Required	in.	inches
BDI	Battery Discharge Indicators	LPG	Liquefied Petroleum Gas
BWI	Brush Wear Indicator	MAP	Manifold Absolute Pressure
CE	Communicator End	mm	millimeters
CRE	Corrosive Environment	MSTS	Microprocessor Spark Timing System
D/B	Date Break	NPT	National Pipe Threads
dbA	Decibel "A" Scale	O/S	Oversize
DE	Drive End	PTO	Power Take Off
ECH	Empty Container Handler	RPM	Revolutions per Minute
ECH-3	Empty Container Handler - 3 High Stacking	S/N	Serial Number
ECH-4	Empty Container Handler - 4 High Stacking	TMM	Truck Management Module
ECH-5	Empty Container Handler - 5 High Stacking	UL Type D	Diesel-Powered Safety Rating
ECH-6	Empty Container Handler - 6 High Stacking	UL Type DS	Diesel-Powered Safety Rating
ECH-7	Empty Container Handler - 7 High Stacking	UL Type E	Battery-Powered Safety Rating
ECM	Electronic Control Module	UL Type EE	Battery-Powered Safety Rating
ECN	Engineering Change Notice	UL Type ES	Battery-Powered Safety Rating
EEPROM	Electrically Erasable Programmable Read Only Memory	UL Type G	Gasoline-Powered Safety Rating
EPA	US Environmental Protection Agency	UL Type GS	Gasoline-Powered Safety Rating
EPROM	Electrically Programmable Read Only Memory	UL Type LP	Gas-Powered Safety Rating
		UL Type LPS	LP Gas-Powered Safety Rating
		U/S	Undersize
		UL	Underwriters Laboratory
		V	Volts

HOW TO USE THE ILLUSTRATED PARTS MANUAL

This parts manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.

The different constructions are indicated by keys and footnotes. The callouts correspond to descriptions found on the next page.

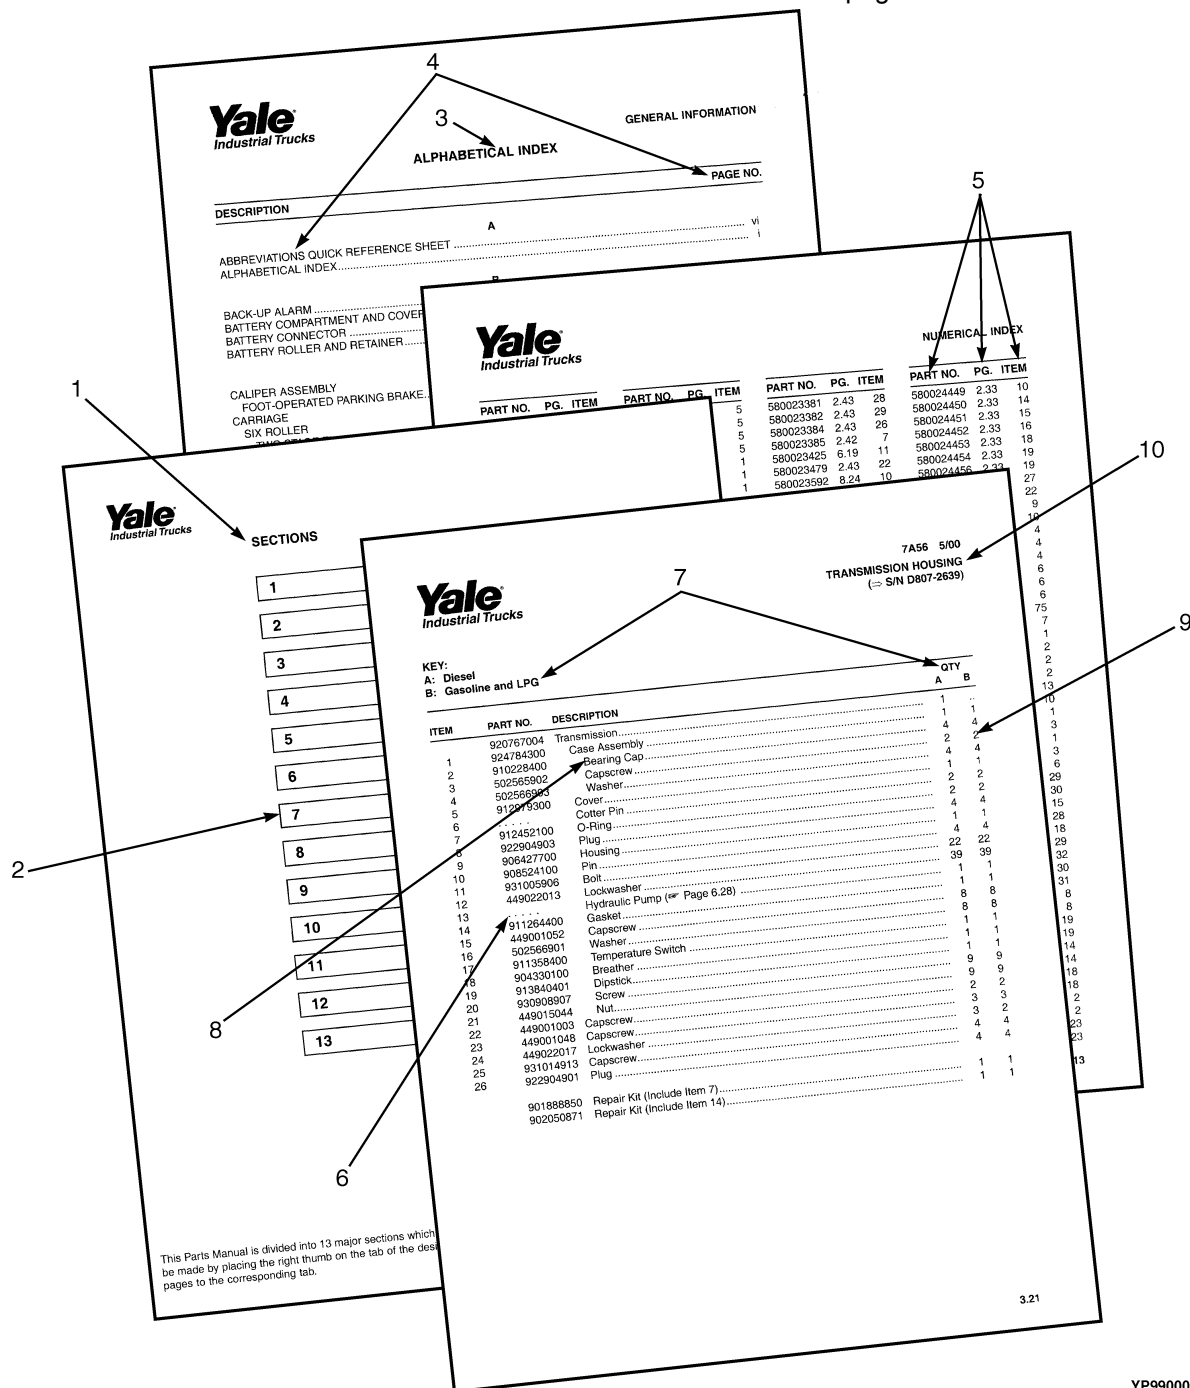

YP990006

HOW TO FIND THE DESIRED PART NUMBER

WHEN THE PART NUMBER AND THE NEXT HIGHER ASSEMBLY IS NOT KNOWN:

1. Determine the function and application of the part required. Turn to the Sections Page. Choose the general area of reference most likely to include the part.
2. Turn to the section you chose. Use the Section Table of Contents to determine the assembly which would normally contain the part required. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS NOT KNOWN AND THE NEXT HIGHER ASSEMBLY IS KNOWN:

3. Determine the assembly the required part is used on. Turn to the Table of Contents (Page i).
4. Locate the assembly the required part is used on and turn to the page indicated for that assembly. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS KNOWN:

5. Use the Numerical Index (Page 7-1) to find the part number. Turn to the page listed and locate the part as indicated by the item number.

GENERAL:

The assembly breakdowns include part numbers, descriptions, quantities required, keys and footnotes to help in selecting correct parts.

6. Parts Supersession Information. Part numbers that have this history will be displayed in the parts list in the order that they were superseded (from oldest to newest). The superseded part numbers will be shown with a line through them.

Five periods in the PART NO. column (.) indicate that the part is either *Not Serviced Separately* or there is a reference to another figure. A figure reference is denoted by a pointing hand followed by a parts page number in the DESCRIPTION column (☞ 7A56)

7. Keys are used to show two or more similar assemblies, RH and LH assembly parts, etc. Select the appropriate key, "A", "B", "C", "D", or "E" and the corresponding quantity column to find the required parts. Two periods in the QTY column (..) indicate that the part is not used for that assembly.
8. Indented descriptions under the DESCRIPTION column are used to indicate assemblies and

subparts of assemblies. In the example on the previous page, *BEARING CAP* (Item 2) is a subpart of the major assembly *CASE*.

9. Quantities shown are for one assembly. The quantities of the subpart *BEARING CAP* are indicated as two and two. This means two per *CASE* assembly.
10. Serial number breaks identify the most current parts information and are shown as follows:
 - **S/N A810N2639**
Indicates last serial number affected.
 - S/N A810N2640** →
Indicates the first serial number affected.
 - S/N A810N1553 ↔ S/N A810N3291**
Indicates a range of serial numbers affected.

ECN numbers for pending serial numbers are shown to allow for the inclusion of the most current parts information and are identified as follows:

→ **S/N Pending Per ECN 63243**

Indicates a pending serial number for last unit affected.

S/N Pending Per ECN 63243 →

Indicates a pending serial number for first unit affected.

Date breaks are used to indicate when a change occurred but a subsequent serial number break was not recorded. This is an arbitrary date usually based on the ECN release and are identified as follows:

→ **D/B 3/00**

Indicates that a change occurred sometime within that month for the item affected.

D/B 3/00 →

Indicates that a change occurred sometime within that month for the item affected.

D/B 3/00 ↔ D/B 4/00


Indicates a range of production dates of the item affected.

Contact your local dealer for Yale lift trucks for serial number information for items with a ECN or a date break.

ORDERING PARTS:

When ordering replacement parts, give the unit serial number, part number, name of part and quantity required.


For any further information on parts, service, or ordering, consult your local dealer for Yale lift trucks.

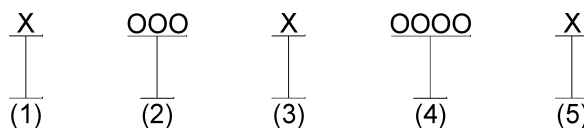IDENTIFICATION OF TRUCK SERIAL NUMBERS

NOTE: Serial Number breakdown is only for trucks built after 1994.

- (1) and (2) The first letter and three numbers indicate the truck unit code.
- (3) The second letter indicates the plant of manufacture.
- (4) The four or five digit number indicates the production sequence number of the truck.
- (5) The final letter indicates the year of manufacture starting with "A" in 1957, 1980, and 2003.
The letters "I", "O", and "Q" will not be used.

For pending serial numbers contact your local dealer for Yale lift trucks.

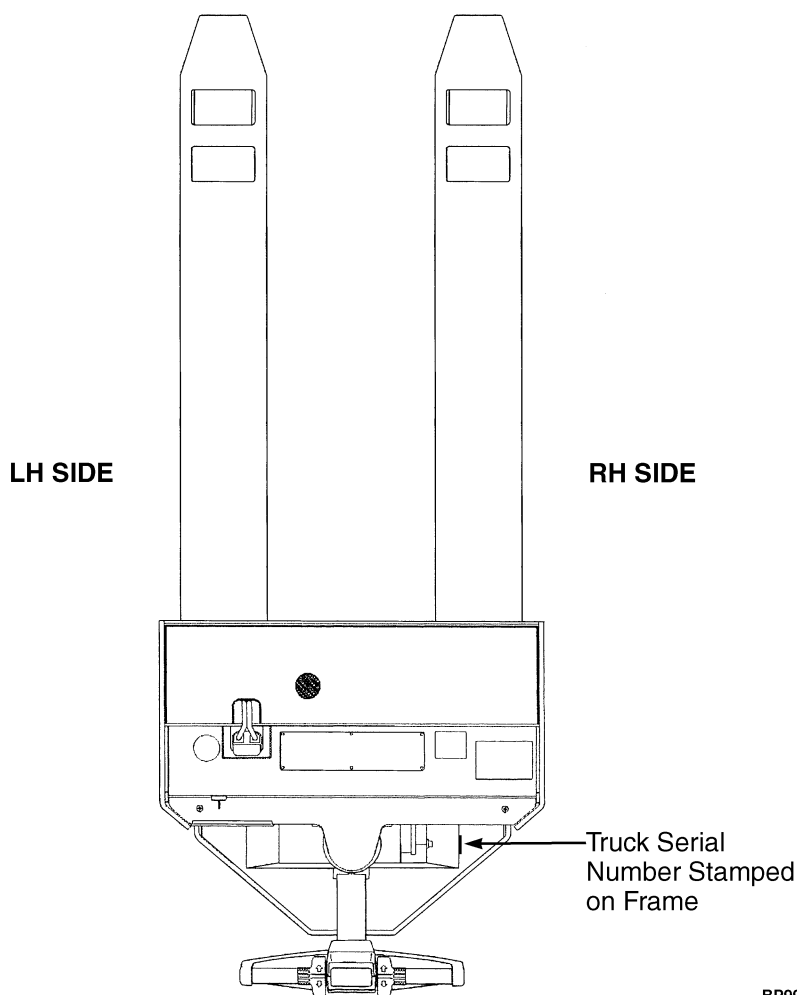

BP990006

Parts referred to in this book as right or left hand parts are in accordance with the illustration above.

PUBLICATIONS

Every new lift truck is provided with an **OPERATING MANUAL**. This manual has information that the operator must know for inspection and operation of the lift truck.

SERVICE MAINTENANCE MANUALS, which provide service and overhaul procedures, and **PARTS**

MANUALS with complete replacement part identification, are available at a nominal fee from your Yale dealer to assist users in effectively maintaining Yale lift trucks in a safe, useful condition. See the list below for information on ordering specific publications for this model lift truck.

PUBLICATION	YALE PART NUMBER
Operating Manual.....	550158151
Service Manual (Complete).....	550127938
Parts Manual.....	550158152

MASTER PART SHEET CROSS-REFERENCE

NOTE: Throughout this manual are references to Part Sheet Numbers. These references are usually found after the description of a part or assembly. The Part Sheet Number is found on the upper left- or righthand corner of the parts pages.

EXAMPLE:

ITEM	PART NO.	DESCRIPTION	QTY
31	505965530	Steering Cylinder (6E67 [Figure 4-3])	1
32	504224261	Pin.....	4

Below is a numerical listing of Part Sheet Numbers found in this parts book and what page number they are on.


PART SHEET	PAGE	PART SHEET	PAGE	PART SHEET	PAGE
B10131.....	1-2	B10143.....	1-19	B10155.....	2-23
B10132.....	1-3	B10144.....	2-2	B10156.....	2-24
B10133.....	1-4	B10145.....	2-6	B10157.....	2-28
B10134.....	1-5	B10146.....	2-8	B10158.....	2-31
B10135.....	1-6	B10147.....	2-10	B10159.....	3-2
B10136.....	1-7	B10148.....	2-12	B10160.....	3-4
B10137.....	1-8	B10149.....	2-13	B10161.....	3-6
B10138.....	1-10	B10150.....	2-14	B10162.....	4-2
B10139.....	1-12	B10151.....	2-16	B10163.....	4-4
B10140.....	1-14	B10152.....	2-18	B10164.....	4-6
B10141.....	1-16	B10153.....	2-21	B10165.....	5-2
B10142.....	1-18	B10154.....	2-22	B10166.....	6-2

1	FRAME/DRIVE UNIT
---	------------------

SECTION 1 FRAME/DRIVE UNIT

DESCRIPTION	PAGE
BATTERY TRAY	
SIDE BATTERY EXTRACTION - 218 MM BATTERY BOX	1-4
CASTER WHEEL ASSEMBLY	1-12
CASTER WHEELS	1-10
COVERS	1-3
DRIVE TIRE AND STATIC STRAP	1-5
ENTRY BLADES	1-8
LABELS	1-16
LOAD BACKREST	
SIDE BATTERY EXTRACTION VERSION - OPTION	1-14
LOAD WHEEL	
SEALED BEARING	1-6
TANDEM - OPTION	1-7
MASTER DRIVE UNIT ASSEMBLY	1-2
SNOWFLAKE LABEL	
ONLY FOR COLD STORE MODEL	1-18
WARRANTY LABEL	1-19


MASTER DRIVE UNIT ASSEMBLY (FIGURE 1-1)

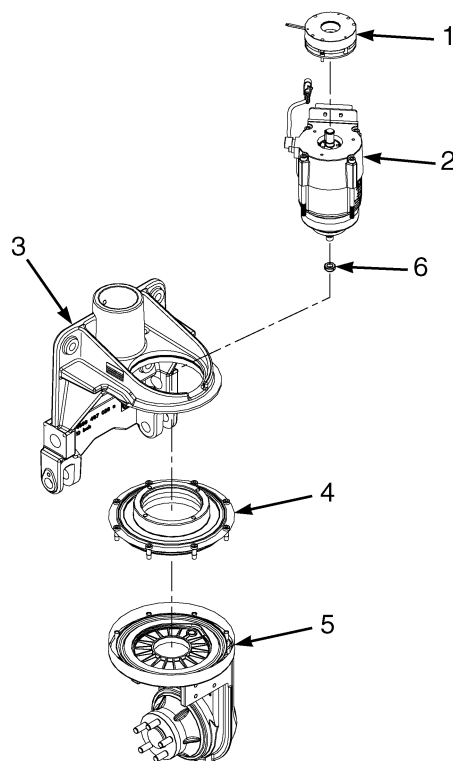

BP160130

ITEM	PART NO.	DESCRIPTION	QTY
	582029591	Master Drive Unit Assembly	1
1	582049755	Brake Assy	1
1	582015552	Brake	1
1	582049682	Cap	1
1	582049681	Gasket	1
2		Traction Motor Assembly	1
2	582049677	Motor , Traction	1
2	582045113	Sensor , Speed	1
2	582015551	Nut	1
3		Carrier Assy	1
3	582049437	Frame	1
3	582049438	O-Ring	1
4	582030998	Bearing (Turntable)	1
4	582046004	Bearing	1
4	582056459	Capscrew	24
5	582030999	Gearbox	1
5	582056460	Snap Ring	1
5	582049680	Housing Assembly	1
5	582037756	Housing Cover	1
5	582015541	Snap Ring	1
5	582015542	O-Ring	1
5	580064390		
	519244834	Breather Valve	1
5	582030281	Plate	1
6	582049754	Pinion Assembly	1
6	582037755	Pinion , Drive	1


COVERS (FIGURE 1-2)

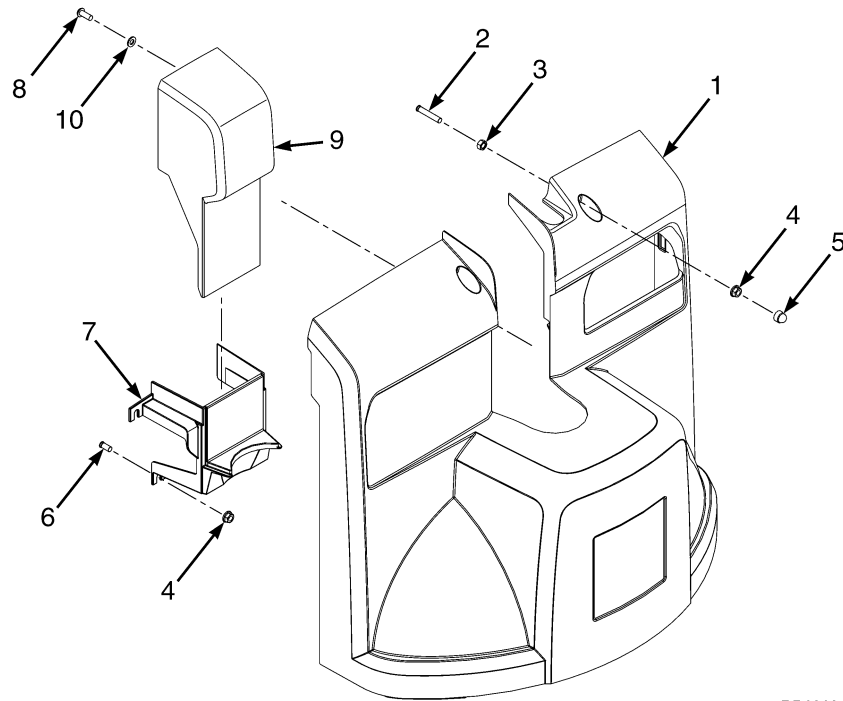

BP121342

ITEM	PART NO.	DESCRIPTION	QTY
1	550079667	Cover (Main)	1
2	582046106	Stud	2
3	519609804	Nut	2
4	580027573	Nut	5
5	258743277	Cap	2
6	582028147	Stud	3
7	582015980	Cover (Center Main)	1
8	932729905	Capscrew	1
9	582015981	Cover (Center Top)	1
10	582053119	Washer	1

BATTERY TRAY (FIGURE 1-3)
SIDE BATTERY EXTRACTION — 218 MM BATTERY BOX

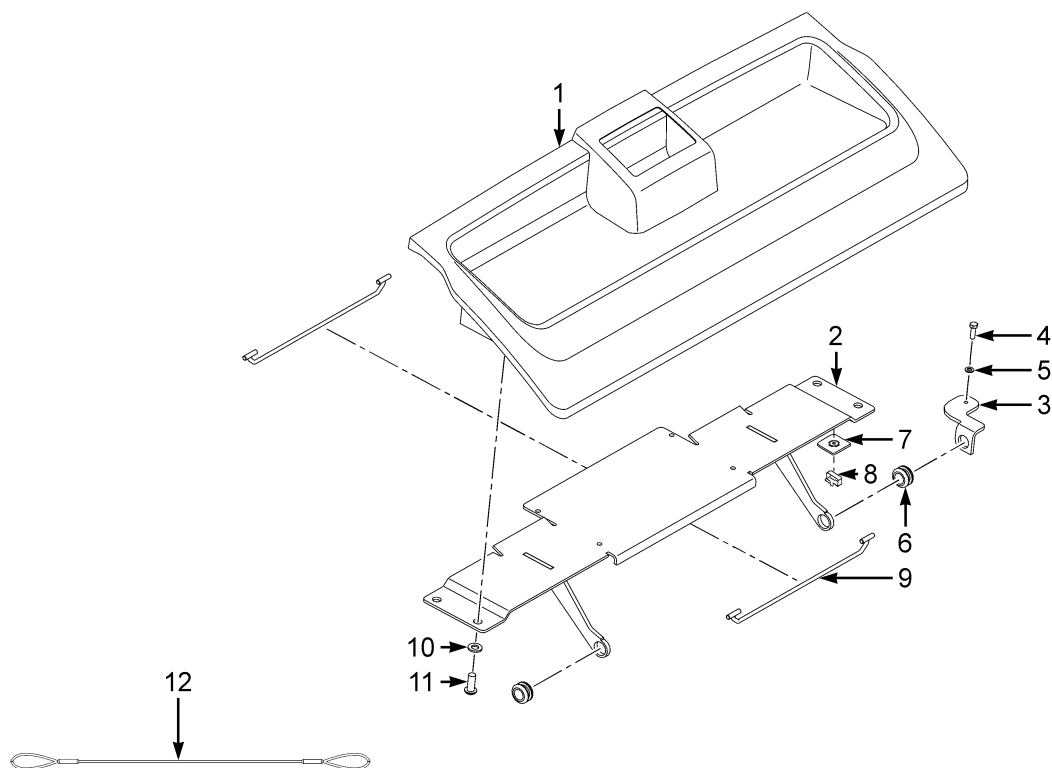


BP121350

ITEM	PART NO.	DESCRIPTION	QTY
1	582053547	Cover	1
2	582046394	Battery Tray Mounting Bracket	1
3	582046396	Plate	1
4	449001410	Capscrew	1
5	449021002	Washer	1
6	277458600	Guard (Cable Guide)	2
7	a 580017064	Strap	1
8	a 277754400	Clip	1
9	582045724	Band , Elastic	2
10	580003569	Washer	4
11	932729905	Capscrew	4
12	582035083	Lanyard NOT USED	1

FOOTNOTES:

a On-board battery charger option only


DRIVE TIRE AND STATIC STRAP (FIGURE 1-4)

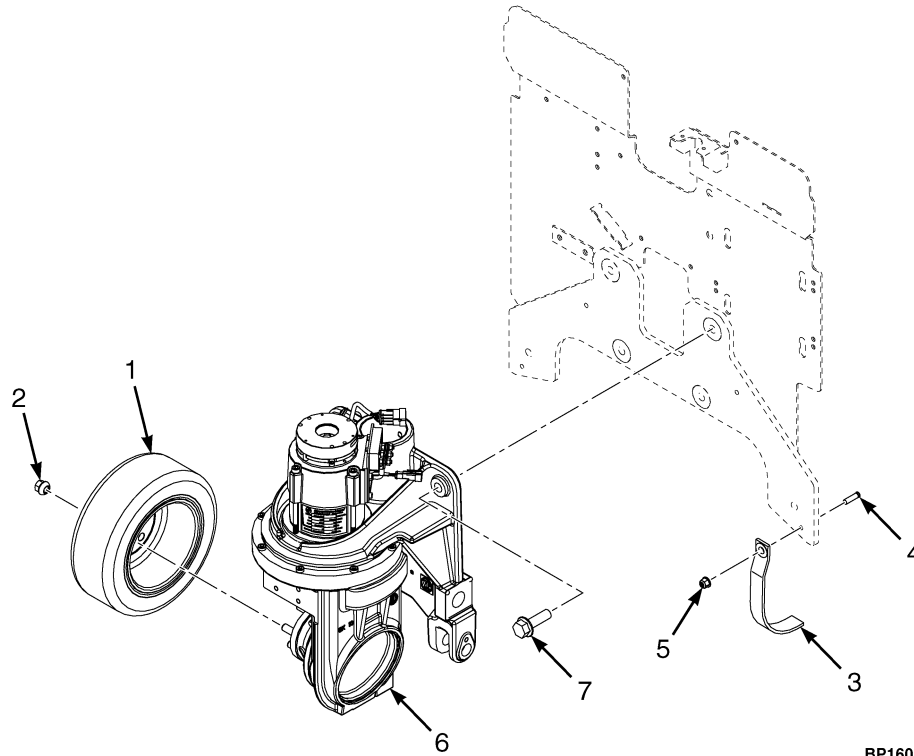

BP160131

ITEM	PART NO.	DESCRIPTION	QTY
1	582054884	Drive Wheel	1
1	582054885	Drive Wheel	1
1	582054886	Drive Wheel	1
2	582047188	Wheel Nut	5
3	582038703	Static Strap	1
4	506726507	Stud	1
5	580058190	Nut	1
6	582029591	Master Drive Unit Assembly (☞ B10131 [Page 1-2]).....	1
7	582018029	Capscrew	4


LOAD WHEEL (FIGURE 1-5)
SEALED BEARING

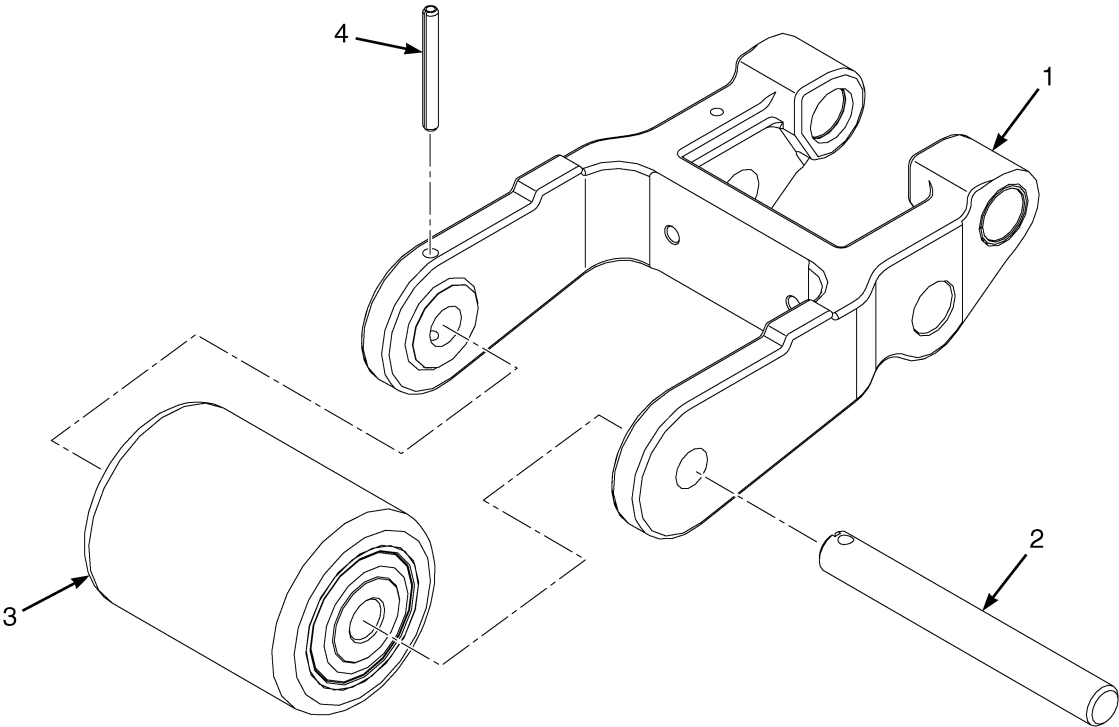

BP270098

ITEM	PART NO.	DESCRIPTION	QTY
	582031798	Load Wheel Assembly (Poly)	1
	582031796	Load Wheel Assembly (Vulkollan)	1
1	582032960	Link	1
2	582032958	Axle	1
3	582032968	Roller (Poly)	1
3	582032961	Roller (Vulkollan)	..
4	582032957	Pin	1

LOAD WHEEL (FIGURE 1-6) TANDEM — OPTION

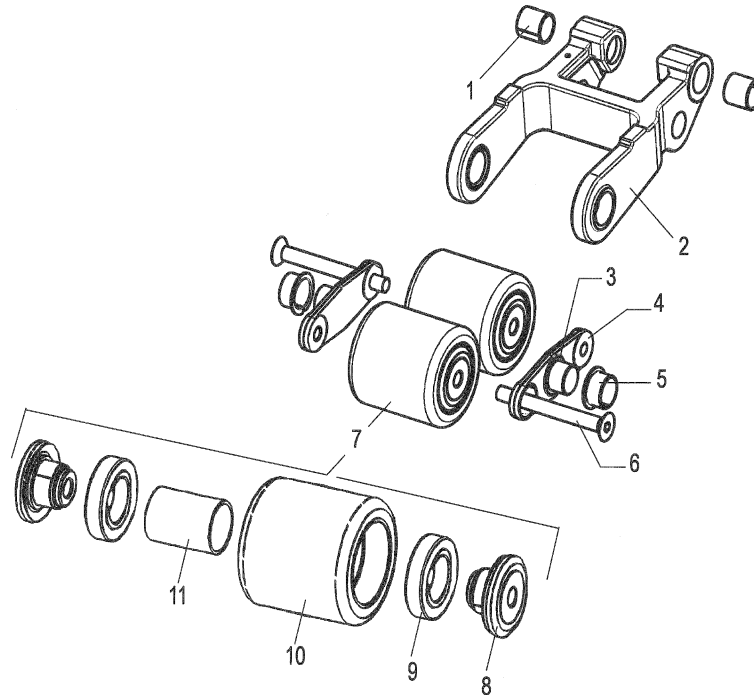

BP270031


KEY:

A: Standard

B: Polyurethane

ITEM	PART NO.	DESCRIPTION	QTY	
			A	B
1	273011400	Bushing	4	..
1	582015707	Bushing	..	4
2	580053822	Lever	2	2
3	580064740	Washer	4	4
4	580059462	Rocker Plate	4	4
5	272046300	Bushing	4	..
5	582015704	Bushing	..	4
6	580059464	Capscrew	4	4
7	582015705	Roller	..	4
7	580059476	Load Wheel	4	..
8	580064749	Bushing	2	..
9	950433907	Bearing Ball	2	..
10	580059473	Roller	1	..
11	580059475	Spacer	1	..

ENTRY BLADES (FIGURE 1-7)

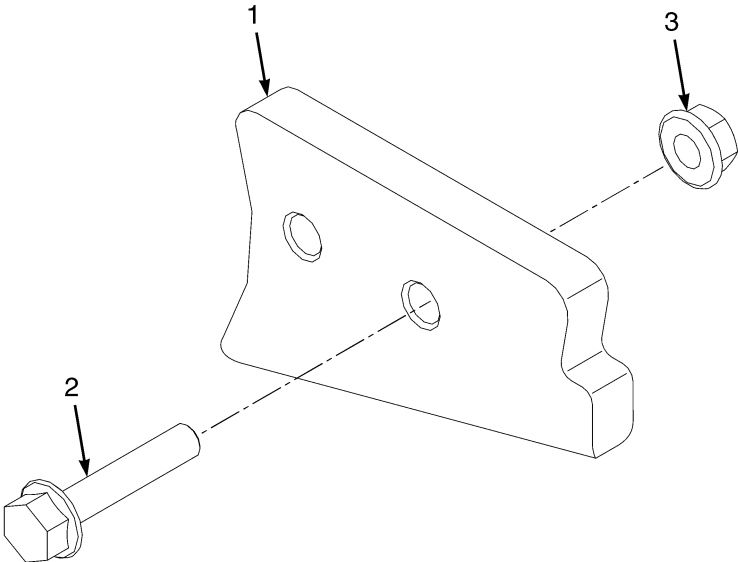


BP121344

ITEM	PART NO.	DESCRIPTION	QTY
1	582033352	Bar , Pallet Entry Skid (Tandem Load Rollers) (Shown)	2
1	582033351	Bar , Pallet Entry Skid (Standard Load Rollers)	2
2	580030967	Capscrew	4
3	580027573	Nut	4

[illegible]

CASTER WHEELS (FIGURE 1-8)

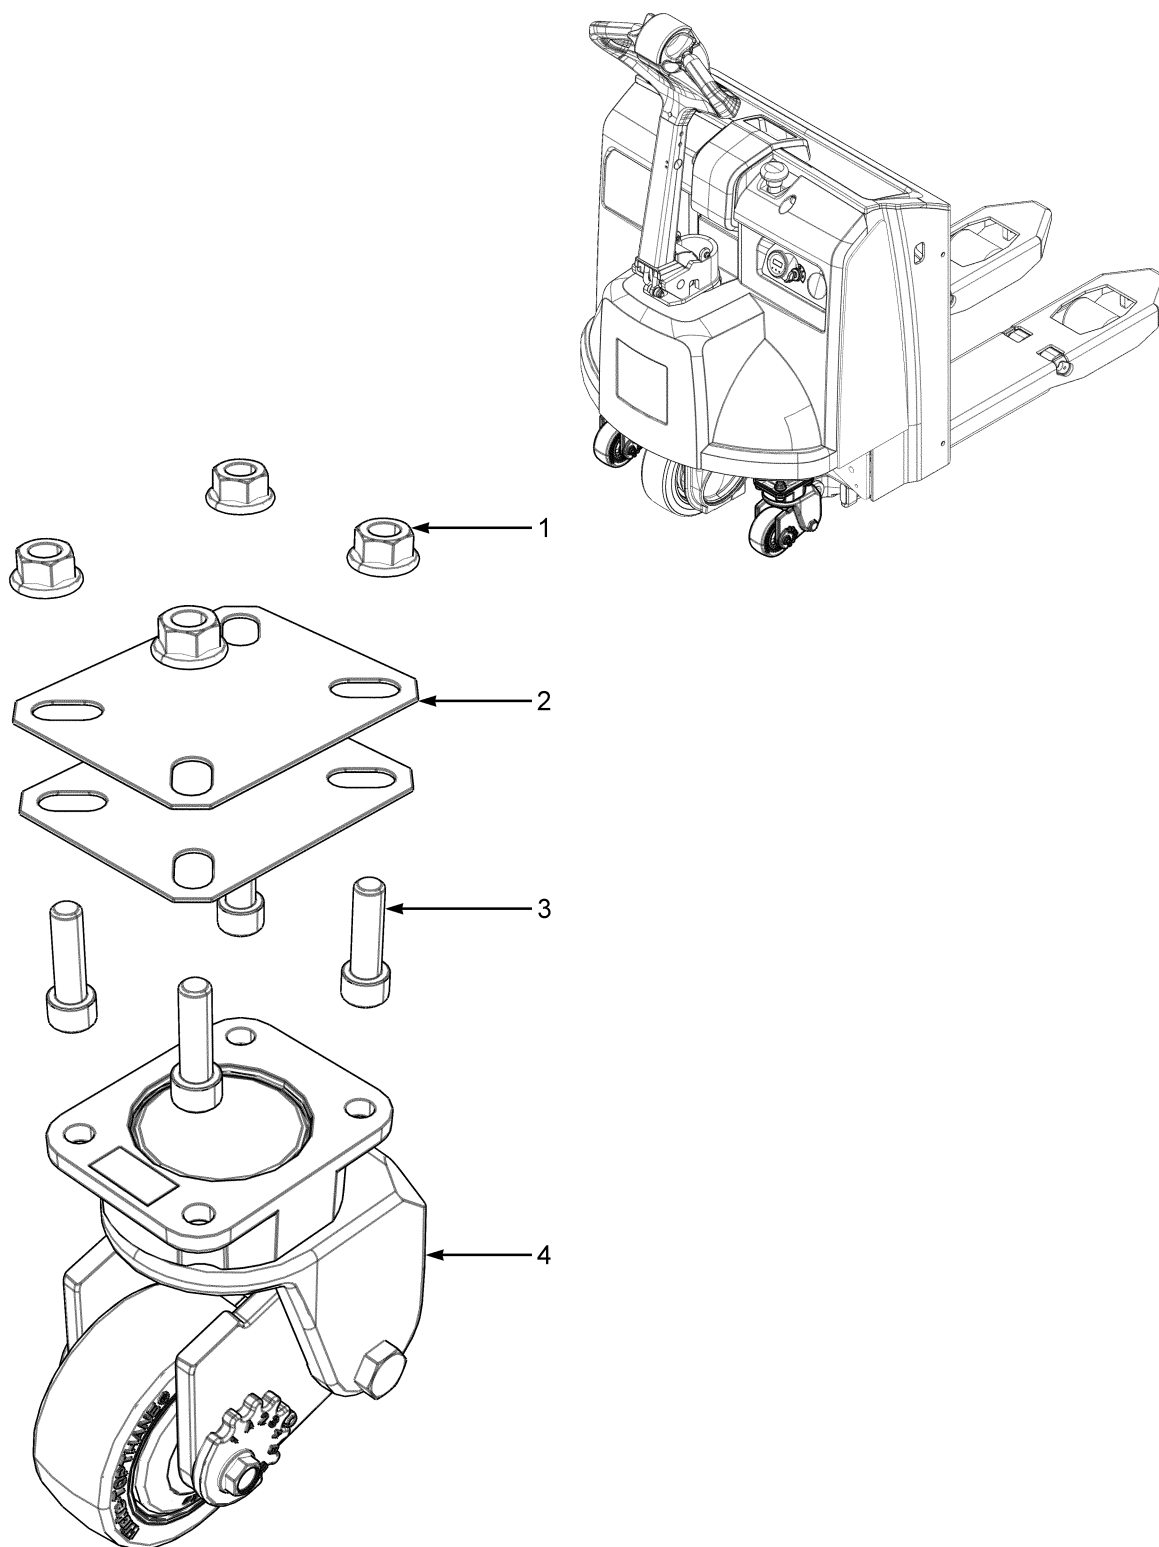


BP121473

CASTER WHEELS

ITEM	PART NO.	DESCRIPTION	QTY
1	580027572	Nut	8
2	580055098	Shim	AR
3	580023593	Capscrew	8
4	582055744	Caster Wheel (☞ B10139 [Page 1-12]).....	2

CASTER WHEEL ASSEMBLY (FIGURE 1-9)

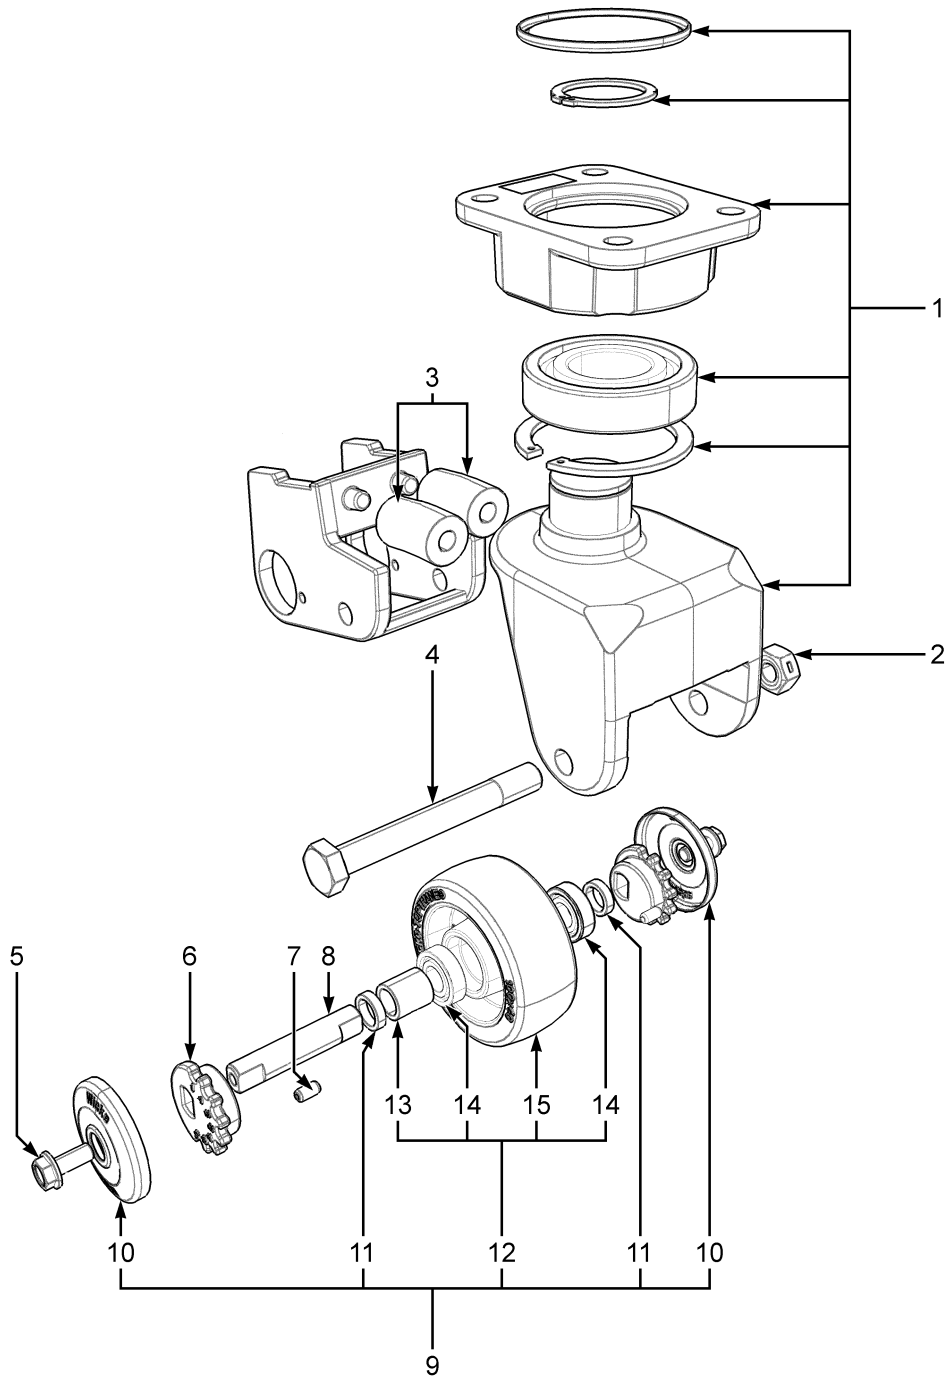


BP121474

CASTER WHEEL ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
	582055744	Caster Wheel	2
1	582010616	Support	1
2	524299833	Locknut	1
3	582010615	Bumper Assy (Includes Spring)	1
4	449001230	Screw	1
5	582003774	Screw	2
6	582003765	Adjuster	2
7	582003769	Pin	2
8	582003772	Axle Shaft	1
9	582010614	Wheel Assy	1
10	582003775	Guard	2
11	582003773	Axle Shaft	2
12	524149840	Wheel Assy	1
13	524149842	Tube	1
14	524149843	Bearing	2
15	524149841	Wheel	1

LOAD BACKREST (FIGURE 1-10)
SIDE BATTERY EXTRACTION VERSION — OPTION

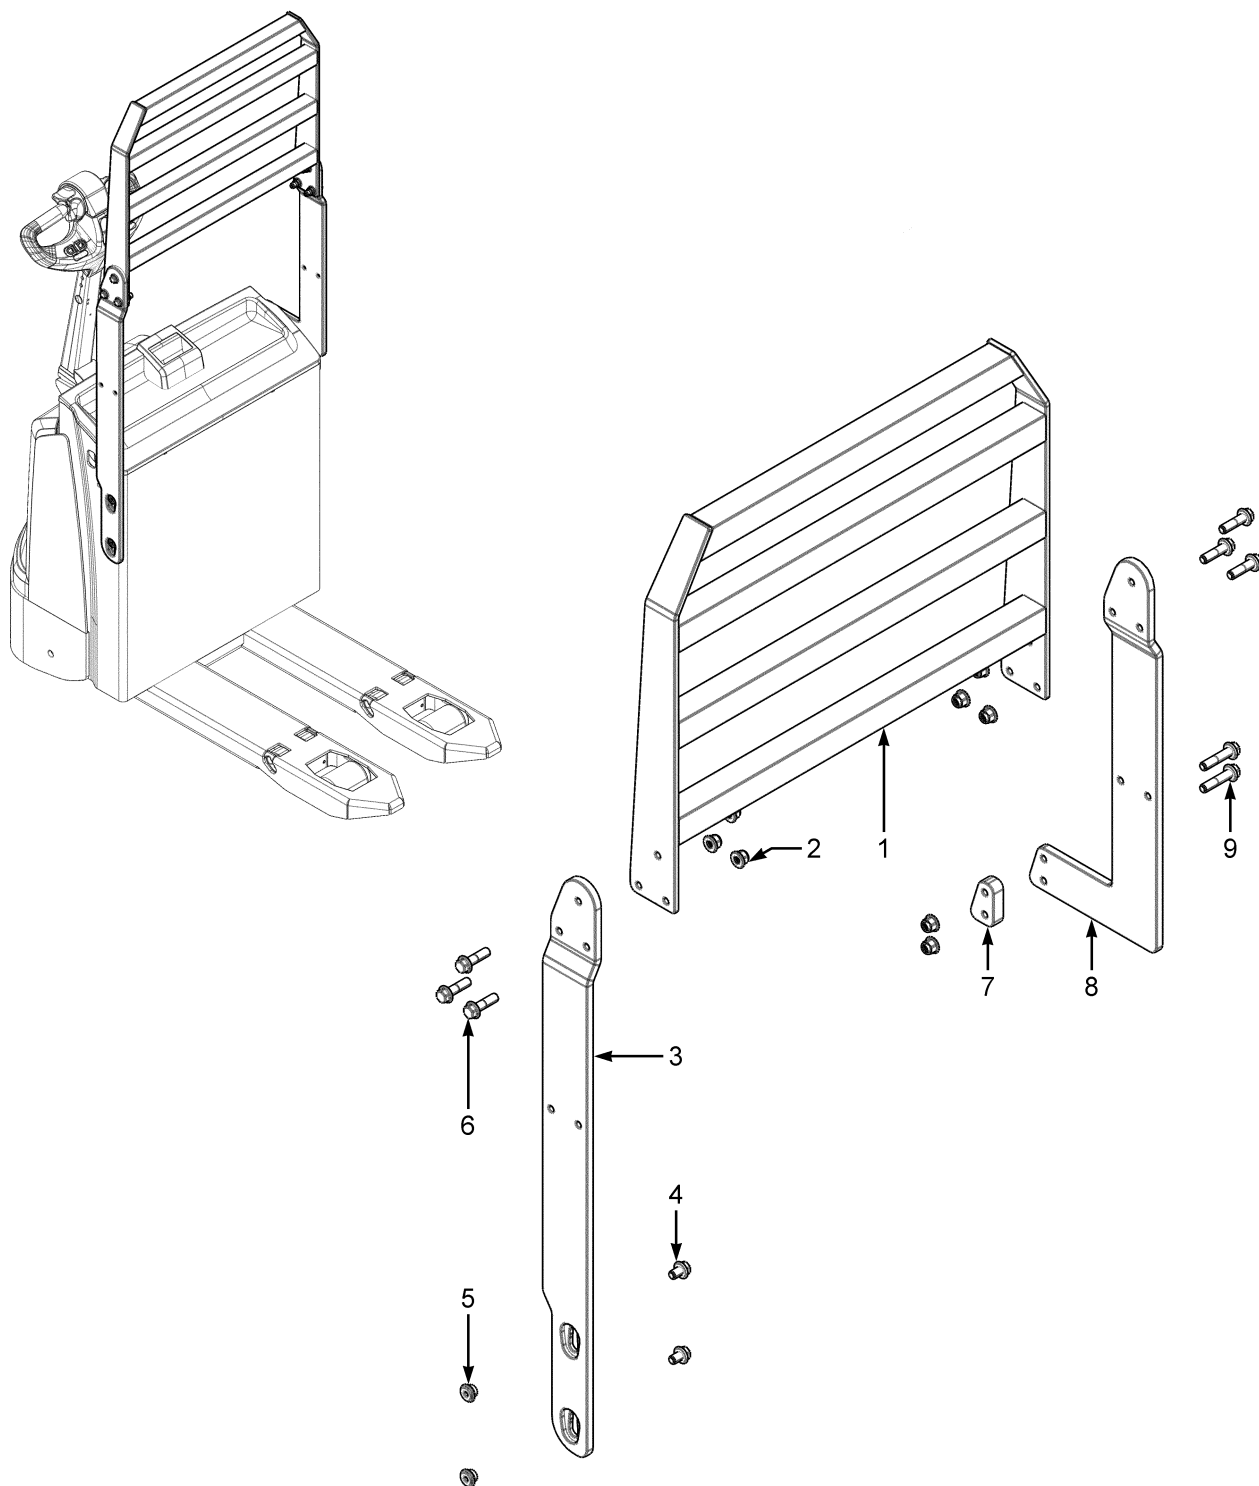

BP121345

LOAD BACKREST
SIDE BATTERY EXTRACTION VERSION – OPTION



ITEM	PART NO.	DESCRIPTION	QTY
1	582017022	Load Backrest (1524 mm)	1
2	582015519	Locknut	8
3	582049332	Load Backrest	1
4	580037179	Capscrew	2
5	582057369	Mount	2
6	582017090	Capscrew	6
7	582034130	Spacer	1
8	582034129	Plate	1
9	582028413	Capscrew	2

LABELS (FIGURE 1-11)

Yale


1

2,3

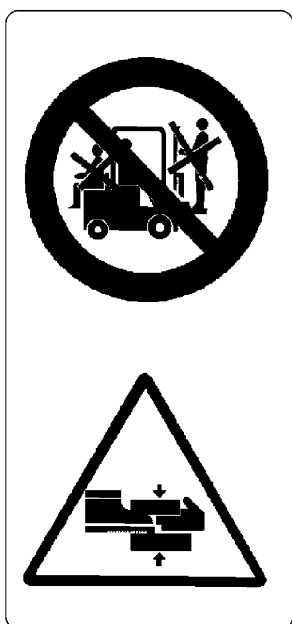

4

5

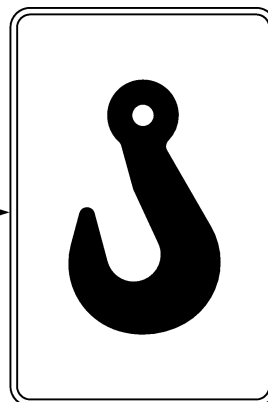


YP120353

LABELS

ITEM	PART NO.	DESCRIPTION	QTY
1	524208881	Label (Yale)	3
2	582030993	Label	1
3		Nameplate	1
4	580064842	Safety Label	2
5	272213500	Label (Lifting Hook)	2


SNOWFLAKE LABEL (FIGURE 1-12)
ONLY FOR COLD STORE MODEL

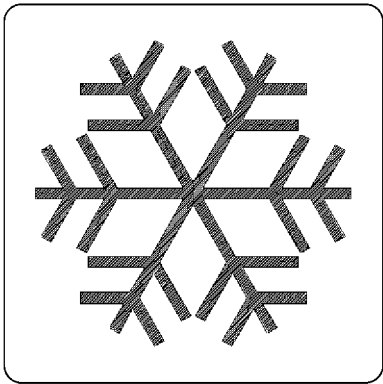

BP121341

ITEM	PART NO.	DESCRIPTION	QTY
	580014880	Label (Snowflake)	3

WARRANTY LABEL (FIGURE 1-13)

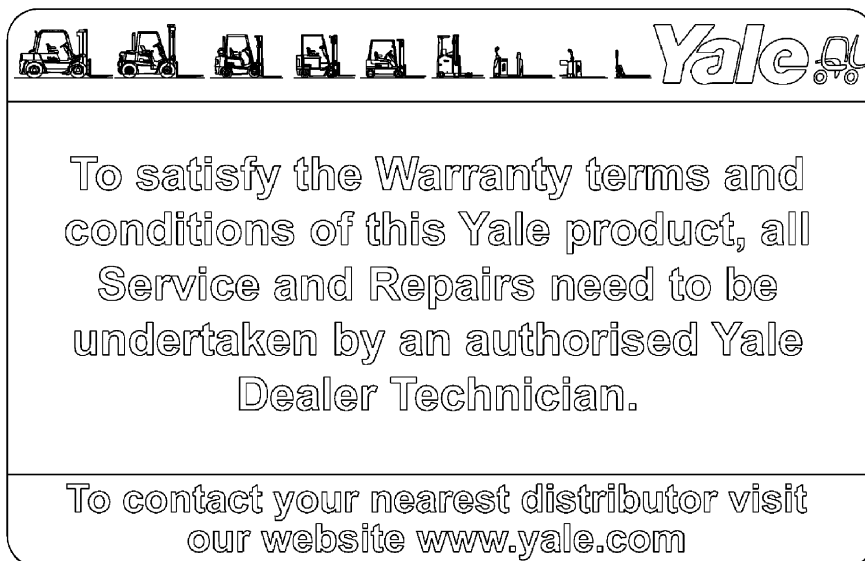

YP120319

ITEM	PART NO.	DESCRIPTION	QTY
	524216189	Label (Warranty) English	1
	524216190	Label (Warranty) Slovenian	1
	524216191	Label (Warranty) Brazilian	1
	524216192	Label (Warranty) Czech	1
	524216193	Label (Warranty) Danish	1
	524216194	Label (Warranty) Dutch	1
	524216195	Label (Warranty) Estonian	1
	524216196	Label (Warranty) Finnish	1
	524216197	Label (Warranty) French	1
	524216198	Label (Warranty) German	1
	524216199	Label (Warranty) Greek	1
	524216200	Label (Warranty) Hungarian	1
	524216201	Label (Warranty) Icelandic	1
	524216202	Label (Warranty) Italian	1
	524216203	Label (Warranty) Latvian	1
	524216204	Label (Warranty) Lithuanian	1
	524216205	Label (Warranty) Norwegian	1
	524216206	Label (Warranty) Polish	1
	524216207	Label (Warranty) Portuguese	1
	524216208	Label (Warranty) Romanian	1
	524216209	Label (Warranty) Russian	1
	524216210	Label (Warranty) Slovakian	1
	524216211	Label (Warranty) Spanish	1
	524216212	Label (Warranty) Swedish	1

ITEM	PART NO.	DESCRIPTION	QTY
	524216526	Label (Warranty) Turkish	1
	524216766	Label (Warranty) Croatian	1
	524259713	Label (Warranty) Bulgarian	1
	550076748	Label (Warranty) Serbian	1
	550111949	Label (Warranty) Chinese	1


2

ELECTRICAL SYSTEM

SECTION 2 ELECTRICAL SYSTEM

DESCRIPTION	PAGE
AUDIBLE ALARM	
OPTION	2-13
BATTERY STOP - SIDE REMOVAL	2-10
CONTACTOR	2-31
ELECTRICAL SYSTEM	
WITH HOURMETER	2-6
WITH KEYPAD	2-2
ON-BOARD BATTERY CHARGER	
OPTION	2-8
SPEED REDUCTION STEERING	
OPTION	2-12
TELEMETRY	
OPTION	2-14
TELEMETRY LABEL	
OPTION	2-16
WIRE HARNESS	
KEYPAD JUMPER OPTION	2-23
MAIN - KEYPAD OPTION	2-24
MAIN - HOURMETER OPTION	2-28
OPTION HARNESS	2-22
TELEMETRY OPTION	2-18
TILLER	2-21

ELECTRICAL SYSTEM (FIGURE 2-1) **WITH KEYPAD**

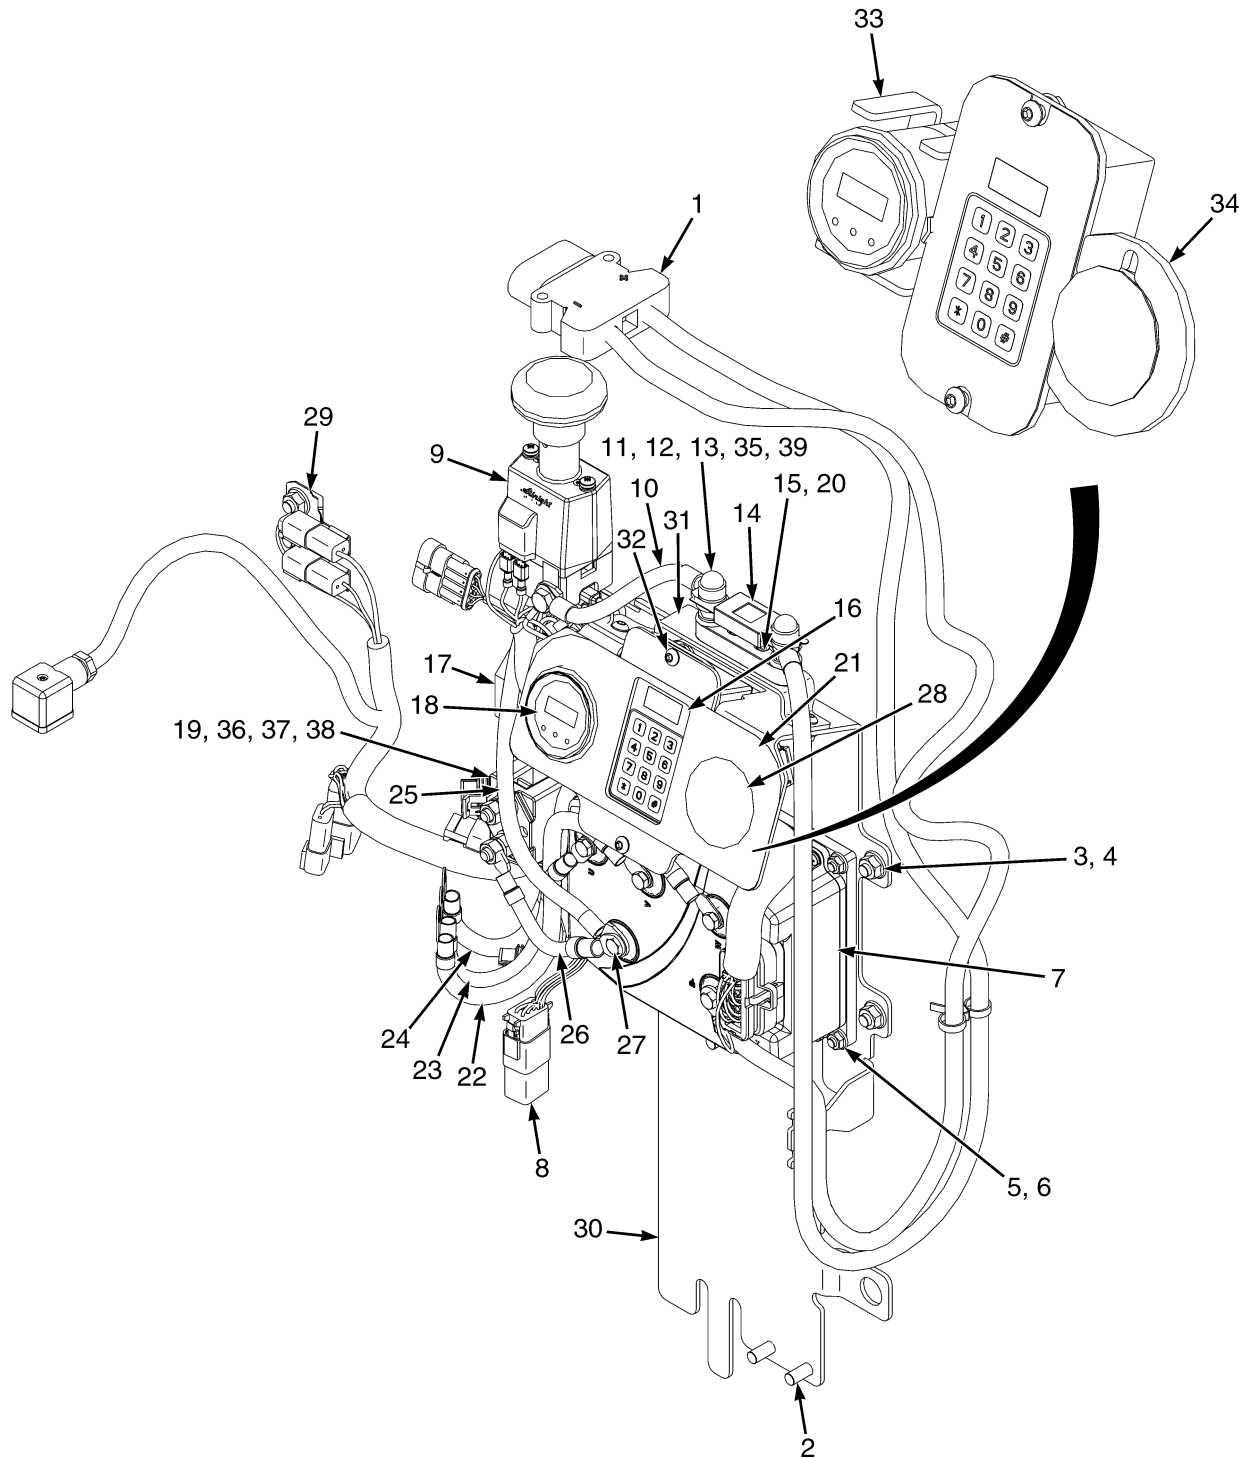

BP081864

ELECTRICAL SYSTEM WITH KEYPAD

ITEM	PART NO.	DESCRIPTION	QTY
1	582042501	Battery Cable	1
1	06205330D	E-Ring	1
1	06205330E	E-Ring	1
1	582015143	Strap Clamp	1
1	580035642	Battery Connector Housing	1
1	582035136	Battery Connector	2
2	582029183	Stud , Self Clinching	3
3	580027573	Nut	5
4	582028147	Stud	5
5	580004321		
	580047919	Nut	10
6	506726504	Stud	6
7	582033604	Controller-Traction	1
8	582035887	Wire Harness (Main) (☞B10156 [Page 2-24]).....	1
9	580019665	Emergency Disconnect Switch	1
10	582037031	Cable	1
11	582036781	Isolator	1
12	449015014	Nut	4
13	449021001	Washer	5
14	582059440		
	580096589	Fuse	1
15	504057775	Screw	2
16	582012416		
	582045353	Key Pad	1
17	524143269	Horn	1
18	580096845	Gauge BDI and Hourmeter	1
19	504058760	Contactor (☞B10158 [Page 2-31]).....	1
20	937100904	Nut	2
21	582045464	Label (Keypad)	1
22	582032804	Power Cable (U)	1
22	502026902	Terminal	2
23	582032803	Power Cable (V)	1
23	502026902	Terminal	2
24	582032800	Power Cable (W)	1
24	502026902	Terminal	2
25	582032801	Power Cable (E-Stop)	1
25	06205330D	E-Ring	1
25	06205330E	E-Ring	1
26	582032802	Power Cable (Jumper Pump to B+)	1
26	010387200	Terminal	1
26	064575700	Terminal	1
27	580084947	Capscrew	5
28	273059100	Plug	1
29	580056589	Clip	2
30	582033996	Control Panel	1
31	582033994	Fuse Holder	1
32	932728903	Capscrew	4
33	582033999	Bracket	1
34	582034000	Spacer	1
35	258743277	Cap	3




**ELECTRICAL SYSTEM
WITH KEYPAD**

ITEM	PART NO.	DESCRIPTION	QTY
36	580035673	Capscrew	2
37	940004903	Washer	2
38	449022019	Lockwasher	2
39	582007595	Washer	2

[illegible]

ELECTRICAL SYSTEM (FIGURE 2-2) **WITH HOURMETER**

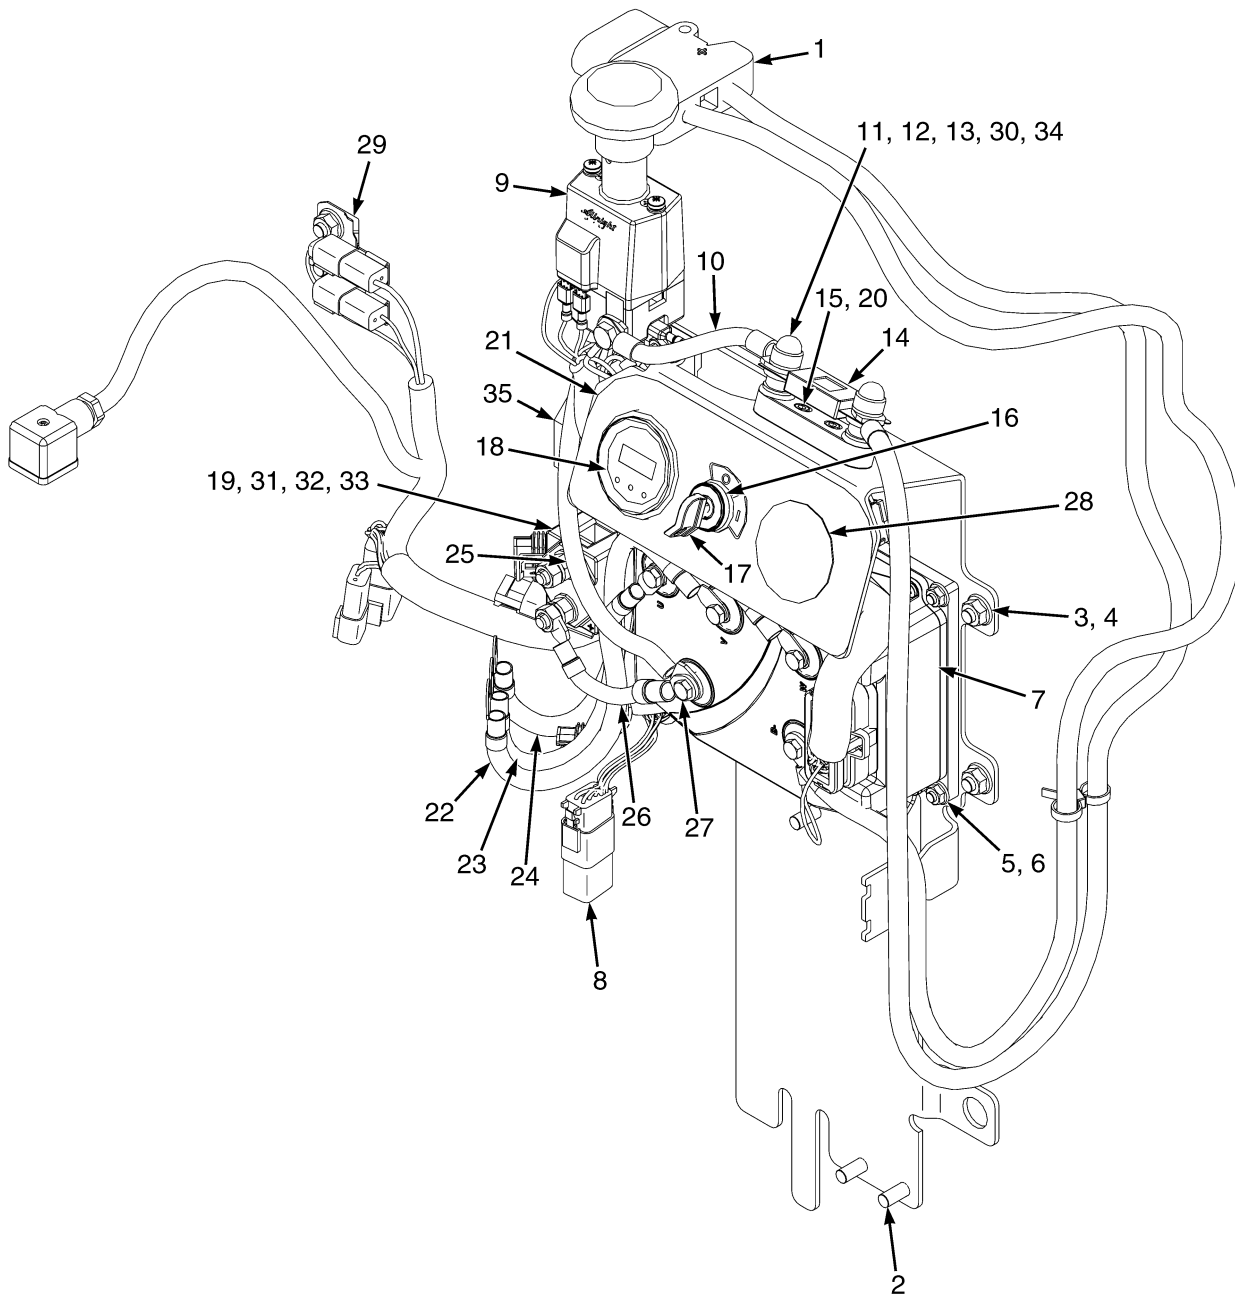


BP081863

ELECTRICAL SYSTEM WITH HOURMETER

ITEM	PART NO.	DESCRIPTION	QTY
1	582042501	Battery Cable	1
1	06205330D	E-Ring	1
1	06205330E	E-Ring	1
1	582015143	Strap Clamp	1
1	580035642	Battery Connector Housing	1
1	582035136	Battery Connector	2
2	582029183	Stud , Self Clinching	3
3	580027573	Nut	5
4	582028147	Stud	5
5	580004321		
	580047919	Nut	6
6	506726504	Stud	6
7	582033604	Controller-Traction	1
8	582044985	Wire Harness (Main) (☞B10157 [Page 2-28]).....	1
9	580019665	Emergency Disconnect Switch	1
10	582037031	Cable	1
11	582036781	Isolator	1
12	449015014	Nut	4
13	449021001	Washer	5
14	582059440		
	580096589	Fuse	1
15	504057775	Screw	2
16	582045305	Ignition Switch	1
17	582057815	Key Set	1
18	580096845	Gauge BDI and Hourmeter	1
19	504058760	Contactor (☞B10158 [Page 2-31]).....	1
20	937100904	Nut	2
21	582045004	Label (BDI)	1
22	582032804	Power Cable (U)	1
22	502026902	Terminal	2
23	582032803	Power Cable (V)	1
23	502026902	Terminal	2
24	582032800	Power Cable (W)	1
24	502026902	Terminal	2
25	582032801	Power Cable (E-Stop)	1
25	06205330D	E-Ring	1
25	06205330E	E-Ring	1
26	582032802	Power Cable (Jumper Pump to B+)	1
26	010387200	Terminal	1
26	064575700	Terminal	1
27	580084947	Capscrew	5
28	273059100	Plug	1
29	580056589	Clip	2
30	258743277	Cap	3
31	580035673	Capscrew	2
32	940004903	Washer	2
33	449022019	Lockwasher	2
34	582007595	Washer	2
35	524143269	Horn	1

ON-BOARD BATTERY CHARGER (FIGURE 2-3) OPTION

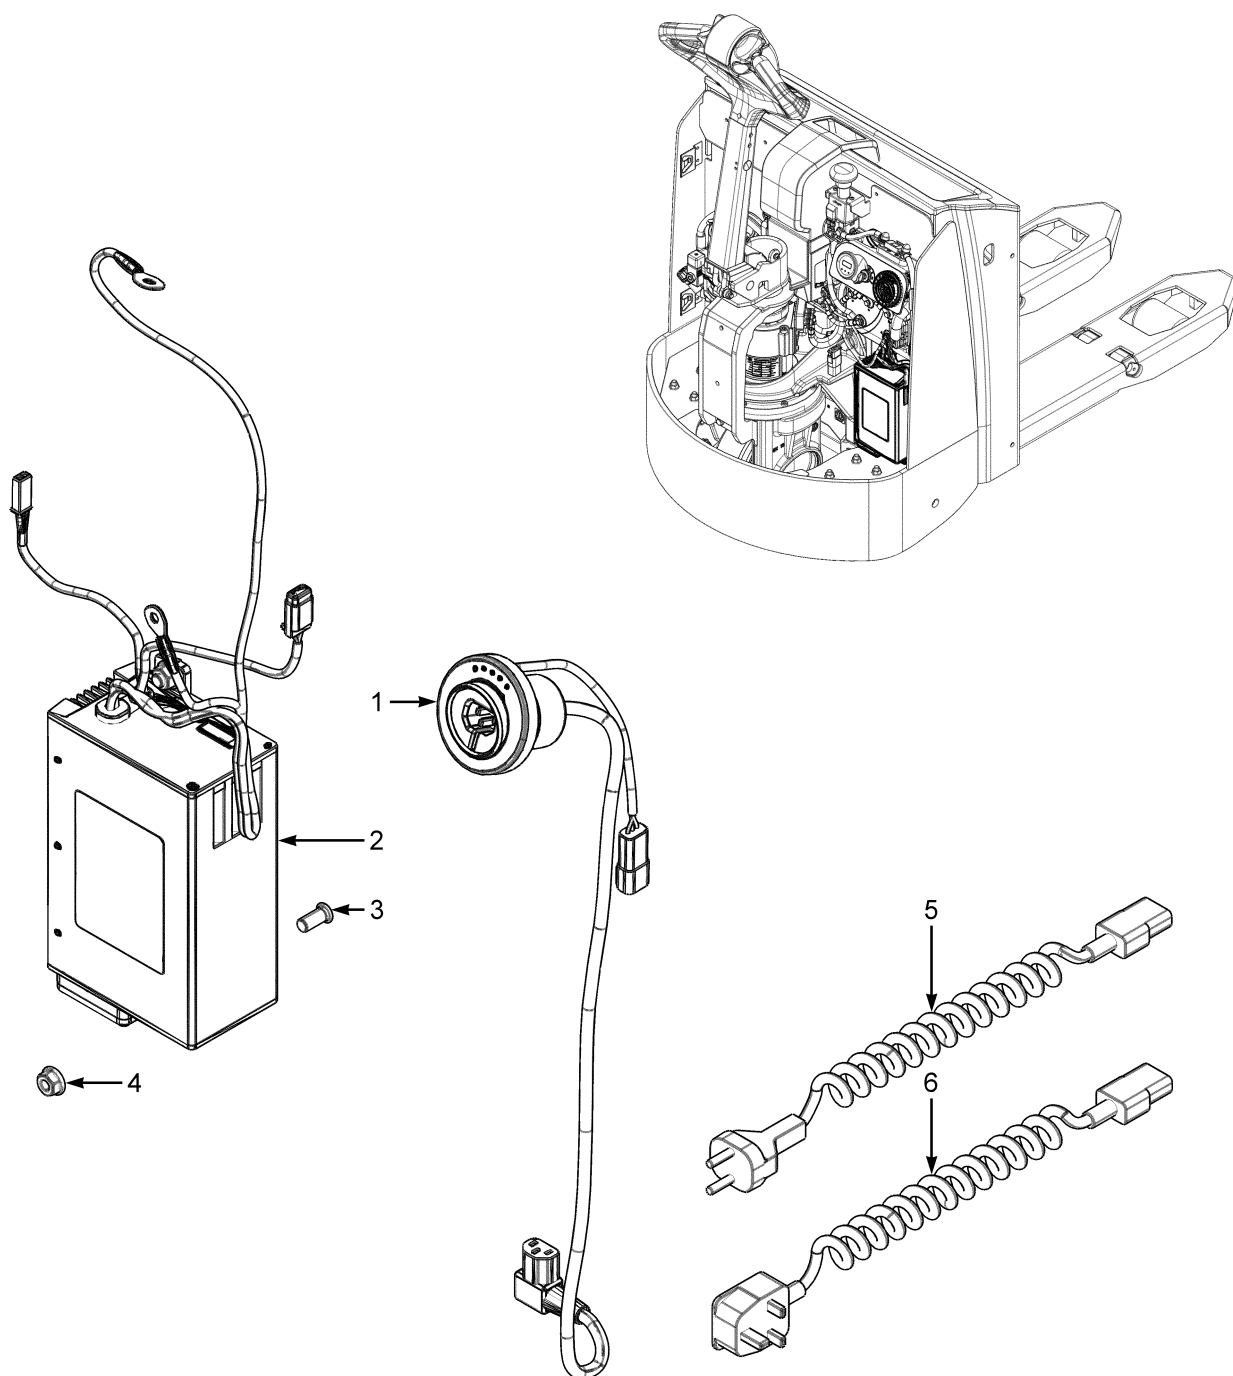


BP081861

ON-BOARD BATTERY CHARGER OPTION

ITEM	PART NO.	DESCRIPTION	QTY
1	582043199	Port (AC Charge IEC)	1
2	582032808		
	582061567	Battery Charger (230 Volt) (Flooded Battery)	1
2	582032812	Battery Charger (230V) (Lithium Ion Battery)	1
3	582029183	Stud , Self Clinching	2
4	580027573	Nut	2
5	582026101	Cable (SCHUKO plug)	1
6	582026102	Cable (UK plug)	1

BATTERY STOP - SIDE REMOVAL (FIGURE 2-4)

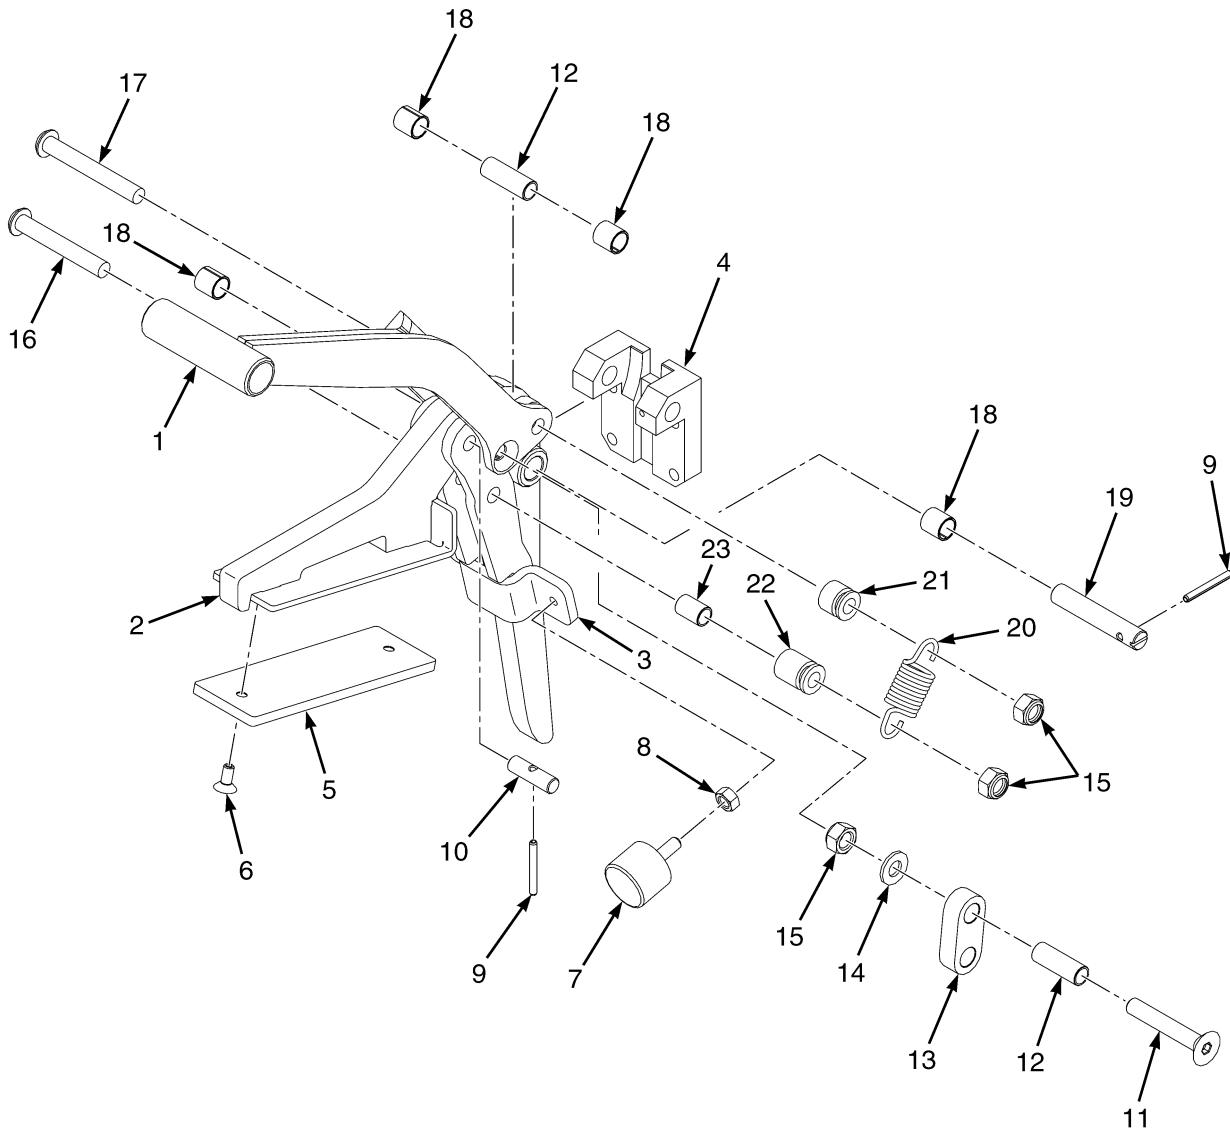

BP081973


BATTERY STOP - SIDE REMOVAL

ITEM	PART NO.	DESCRIPTION	QTY
1	582049889	Handle	1
2	582049899	Hook	1
3	582049892	Support	1
4	582049402	Support	1
5	582049898	Plate	1
6	580013990	Capscrew	2
7	272017300	Vibration Damper	2
8	449015135	Nut	2
9	582050201	Roll Pin	2
10	582049894	Pin	1
11	520426875	Capscrew	1
12	582049895	Spacer	2
13	582049890	Plate	1
14	449021001	Washer	1
15	449015098	Nut	3
16	501729904	Capscrew	1
17	580065140	Capscrew	1
18	582049818	Bushing	4
19	582049893	Pin	1
20	582049817	Spring	1
21	582049897	Spacer	1
22	582049896	Spacer	1
23	582049891	Spacer	1
24	a 582030973	Roller (Battery Roller)	4

FOOTNOTES:

a NOT ILLUSTRATED


**SPEED REDUCTION STEERING (FIGURE 2-5)
OPTION**

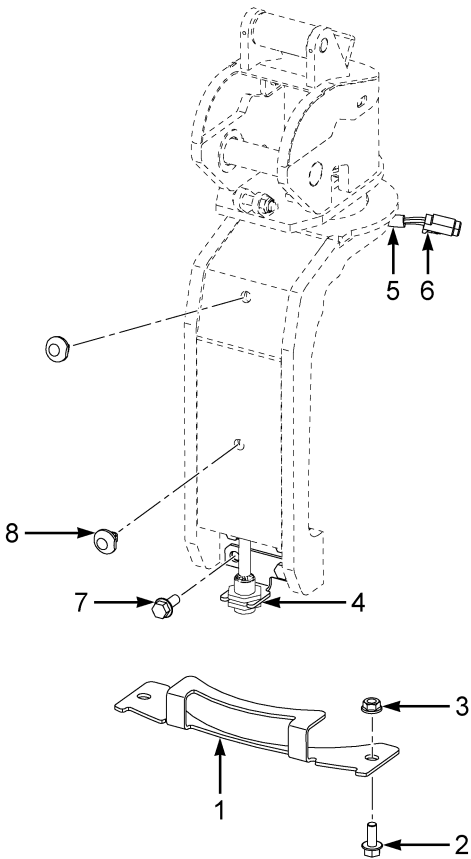

BP000835

ITEM	PART NO.	DESCRIPTION	QTY
1	582029282	Bracket	1
2	580049231	Capscrew	2
3	580027573	Nut	2
4	582029283	Bracket	1
5	582032773	Sensor, Proximity (Steer Reduction) Sensor	1
6	580022891	Connector	1
7	580049231	Capscrew	4
8	582003591	Strap Clamp (Button Head)	2


**AUDIBLE ALARM (FIGURE 2-6)
OPTION**

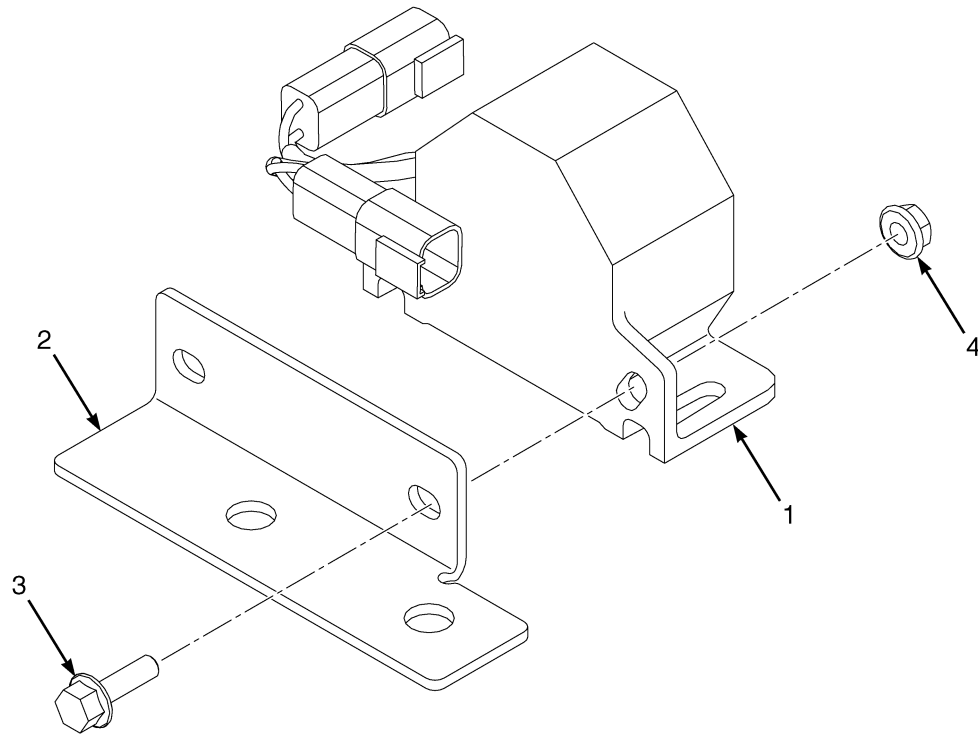

BP000834

ITEM	PART NO.	DESCRIPTION	QTY
1	580045132	Back-Up Alarm (82-102 dbA)	1
2	582032752	Bracket	1
3	580039438	Capscrew	2
4	580004321		
	580047919	Nut	2

TELEMETRY (FIGURE 2-7) OPTION

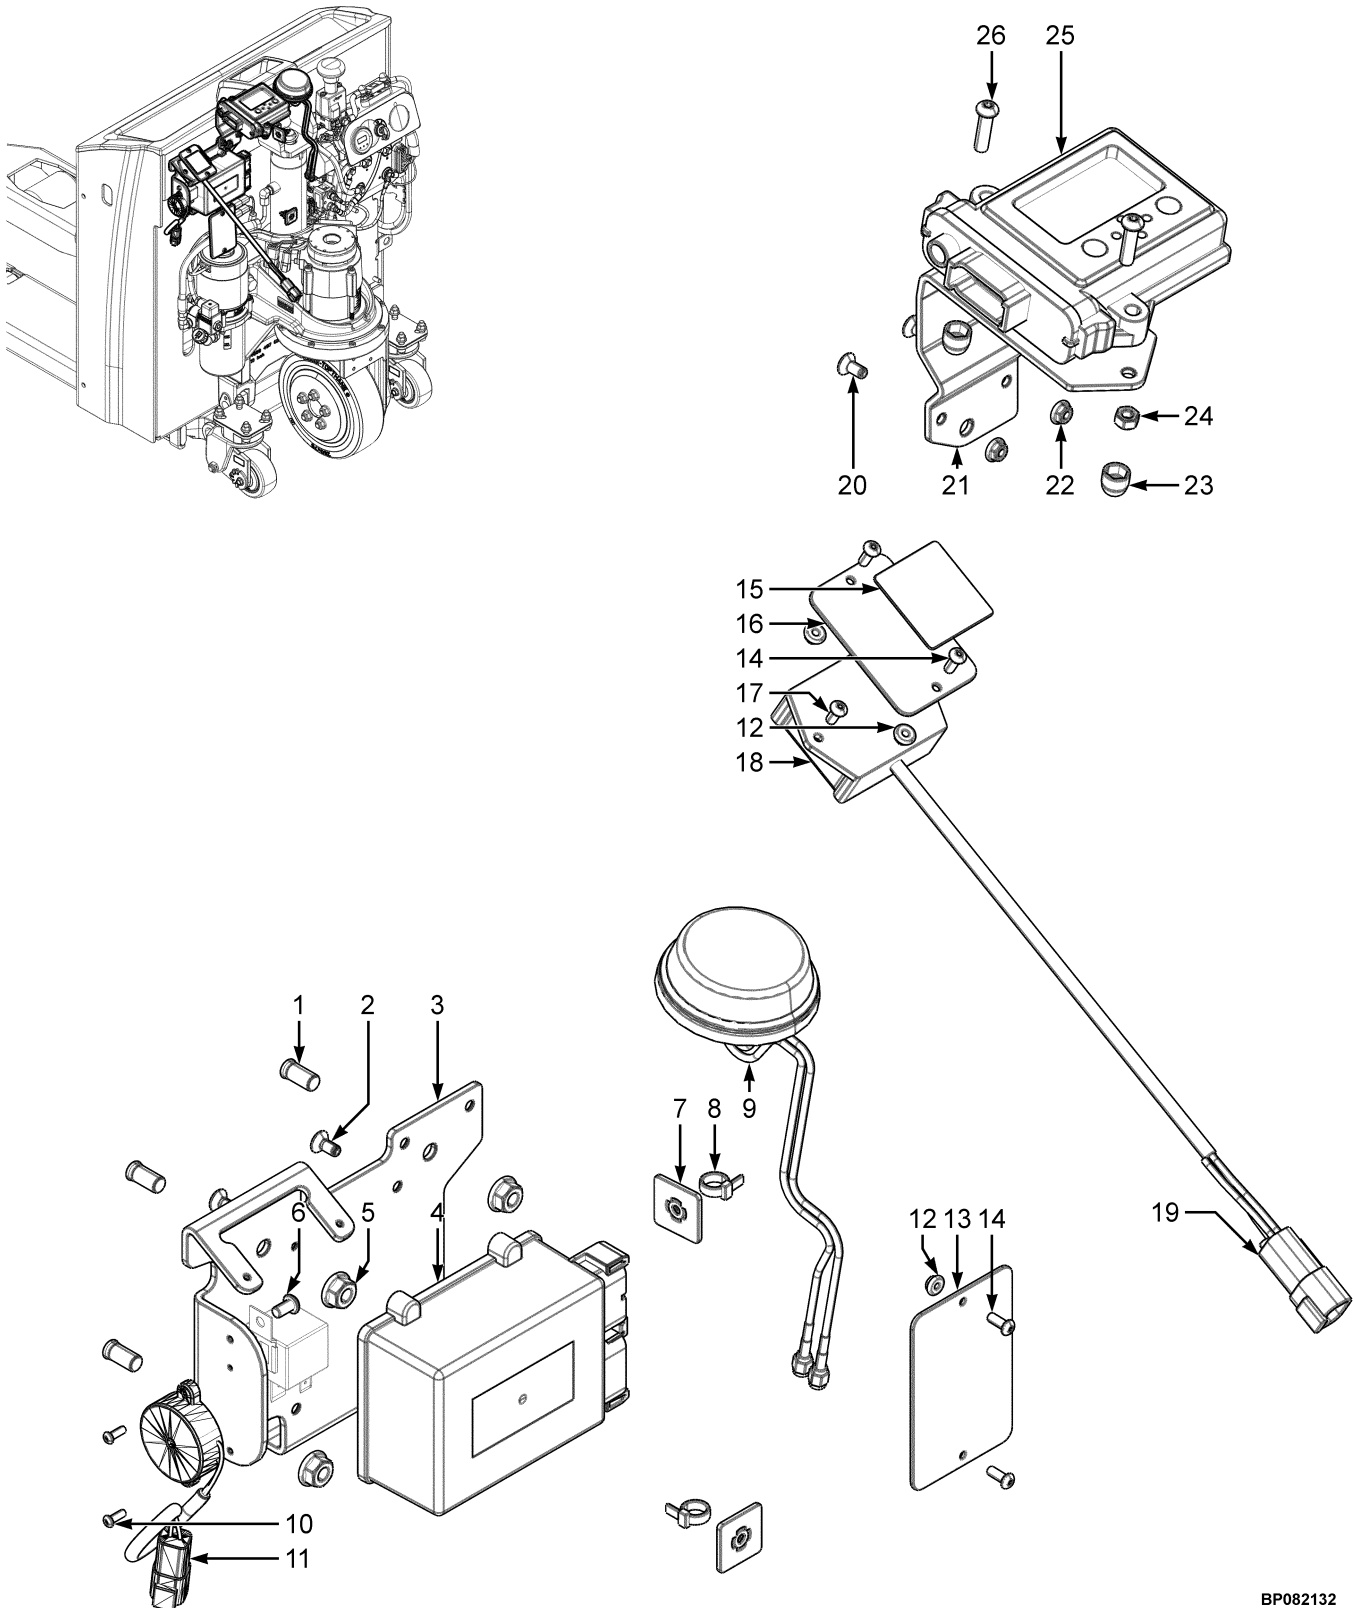

BP082132

TELEMETRY OPTION

KEY:

A: LEVEL 1: Monitoring

B: LEVEL 2: Access


C: LEVEL 3: Verification

ITEM	PART NO.	DESCRIPTION	QTY		
			A	B	C
1	582028147	Stud	4	4	4
2	580013990	Capscrew	4	4	4
3	582053325	Bracket	1	1	1
4	582020730	Control Module (FM1 Cell 3G Extended Voltage)	1	1	1
4	582020701				
	582020715	Control Module (FM1 WiFi Extended Voltage)	1	1	1
5	580027573	Nut	1	1	1
6	580038834	Capscrew	1	1	1
7	580017064	Strap	2	2	2
8	277754400	Clip	2	2	2
9	582020792				
	582020794	Antenna (GSM)	1	1	1
9	582020793	Antenna (WiFi)	1	1	1
10	580041805	Capscrew	..	2	2
11	580093223	Buzzer Assembly	..	1	1
11	580056006	Connector (2 Pin)	..	1	1
11	580056004	Connector (Secondary Lock)	..	1	1
11	580039516	Terminal	..	1	1
12	580044946	Nut	..	4	4
13	582053278	Support	..	1	1
14	580092732	Capscrew	..	4	4
15	582025995	Label (ID Card Reader)	..	1	1
16	582053709	Support	..	1	1
17	932726902	Capscrew	..	2	2
18	582020782	Card-ID Reader (ISO-Prox)	..	1	1
18	582020783	Card-ID Reader (HID Standard Prox)	..	1	1
18	582020784	Card-ID Reader (IClass/MIFARE Prox)	..	1	1
19	518803687	Connector	..	1	1
19	505968514	Terminal (Pin)	..	1	1
20	580009798	Capscrew	..	..	2
21	582053318	Bracket	..	..	1
22	580051432	Nut	..	..	2
23	580094577	Cap	..	..	2
24	449015135	Nut	..	..	2
25	582020706	Display (FM2)	..	..	1
26	932728908	Capscrew	..	..	2
27	a 582054025	Wire Harness (Level 1) (☞B10152 [Page 2-18]).....	1	1	1
28	a 582054024	Wire Harness (Level 2) (☞B10152 [Page 2-18]).....	..	1	1
29	a 582054023	Wire Harness (Level 3) (☞B10152 [Page 2-18]).....	..	..	1

FOOTNOTES:

a NOT ILLUSTRATED

TELEMETRY LABEL (FIGURE 2-8) OPTION

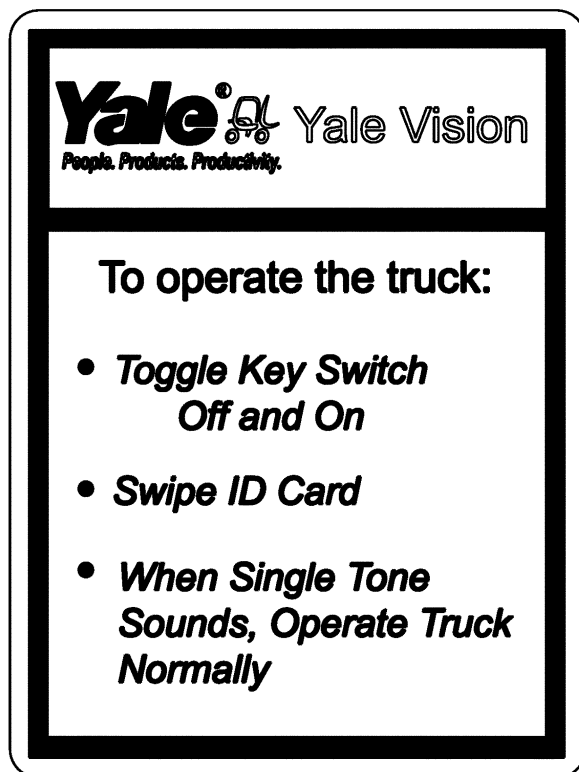


YP080564

ITEM	PART NO.	DESCRIPTION	QTY
	550061527	Label - System activation - Type B (English)	1
	550061528	Label - System activation - Type B (Brazilian)	1
	550061529	Label - System activation - Type B (Czech)	1
	550061530	Label - System activation - Type B (Danish)	1
	550061531	Label - System activation - Type B (Dutch)	1
	550061532	Label - System activation - Type B (Finnish)	1
	550061533	Label - System activation - Type B (French)	1
	550061534	Label - System activation - Type B (German)	1
	550061535	Label - System activation - Type B (Greek)	1
	550061536	Label - System activation - Type B (Hungarian)	1
	550061537	Label - System activation - Type B (Icelandic)	1
	550061538	Label - System activation - Type B (Italian)	1
	550061539	Label - System activation - Type B (Norwegian)	1
	550061540	Label - System activation - Type B (Polish)	1
	550061541	Label - System activation - Type B (Portuguese)	1
	550061542	Label - System activation - Type B (Russian)	1
	550061543	Label - System activation - Type B (Slovakian)	1
	550061544	Label - System activation - Type B (Spanish)	1
	550061545	Label - System activation - Type B (Swedish)	1
	550061546	Label - System activation - Type B (Croatian)	1
	550061547	Label - System activation - Type B (Estonian)	1
	550061548	Label - System activation - Type B (Latvian)	1
	550061549	Label - System activation - Type B (Lithuanian)	1

ITEM	PART NO.	DESCRIPTION	QTY
	550061550	Label - System activation - Type B (Romanian)	1
	550061551	Label - System activation - Type B (Slovenian)	1
	550061552	Label - System activation - Type B (Turkish)	1
	550061553	Label - System activation - Type B (Bulgarian)	1
	550081533	Label - System activation - Type B (Serbian)	1

WIRE HARNESS (FIGURE 2-9)
TELEMETRY OPTION

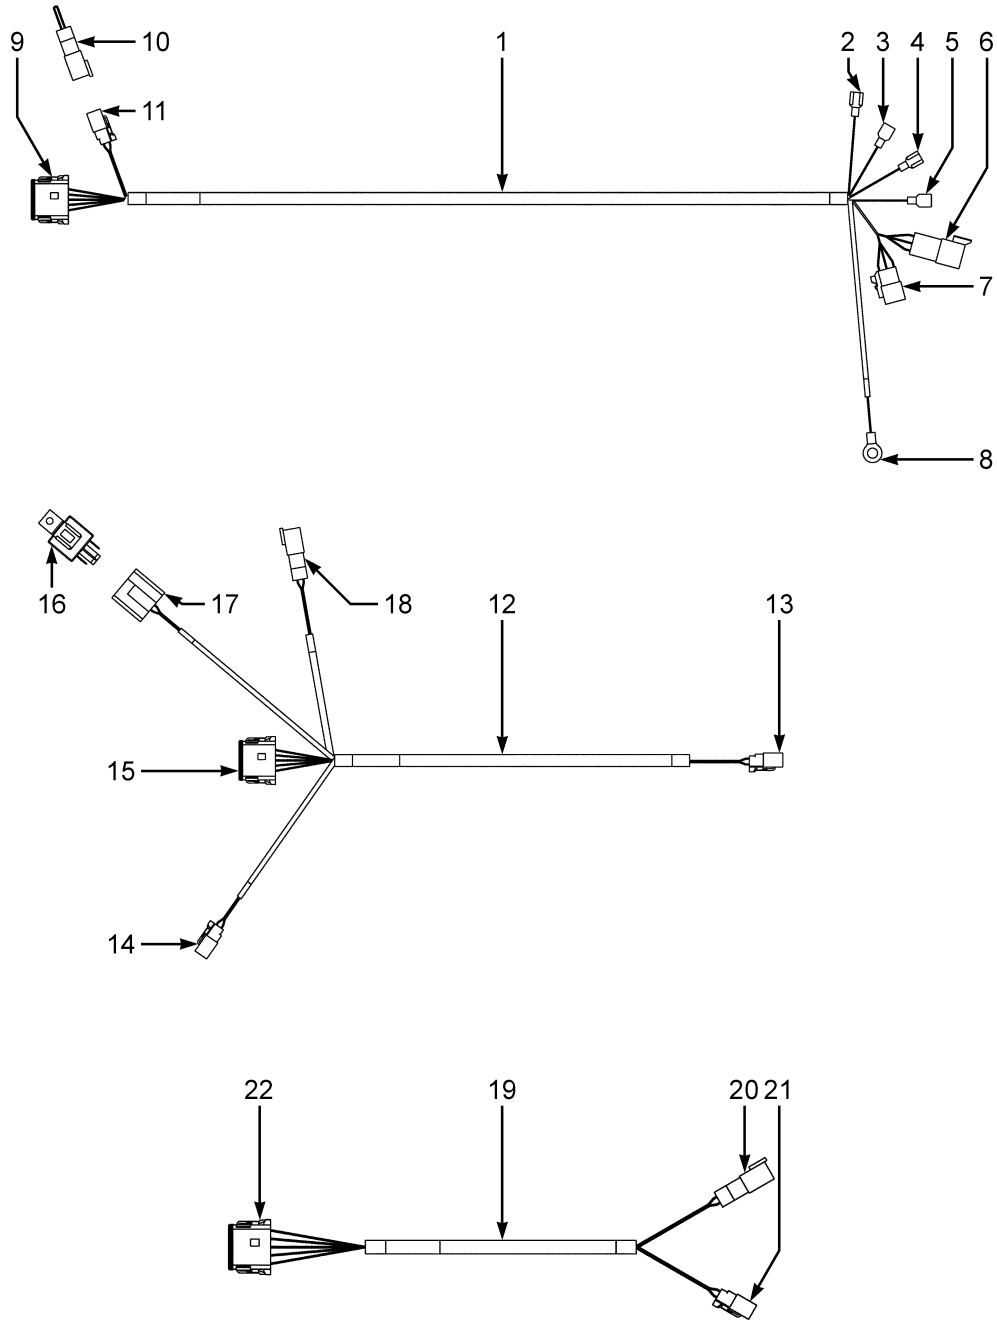

BP082133

WIRE HARNESS TELEMETRY OPTION

ITEM	PART NO.	DESCRIPTION	QTY
1	582054025	Wire Harness	1
2	580034053	Blade Terminal	1
3	580080969	Terminal (Blade)	1
4	580034053	Blade Terminal	1
5	580080969	Terminal (Blade)	1
6	520038850	Connector	1
6	a 505968514	Terminal (Pin)	3
6	a 580039193	Connector (Secondary Lock)	1
7	504064720	Connector	1
7	a 505968568	Terminal (Socket)	3
7	a 580039194	Connector (Secondary Lock)	1
8	277514700	Ring Terminal	1
9	580036981	Connector	1
9	a 580039513	Terminal	5
9	a 580036986	Connector (Secondary Lock)	1
9	a 580019119	Plug	7
10	505968533	Connector	1
10	a 505968514	Terminal (Pin)	2
10	a 505968540	Connector (Secondary Lock)	1
11	505968501	Connector	1
11	a 505968568	Terminal (Socket)	2
11	a 580021088	Connector (Secondary Lock)	1
12	582054024	Wire Harness	1
13	504064701	Connector (4 Soc)	1
13	a 505968568	Terminal (Socket)	4
13	a 580020944	Connector (Secondary Lock)	1
14	580019245	Connector (2 Socket)	1
14	a 580039513	Terminal	2
14	a 580019246	Connector (Secondary Lock)	1
15	580036982	Connector	1
15	a 580039513	Terminal	7
15	a 580036986	Connector (Secondary Lock)	1
15	a 580019119	Plug	5
16	582010004	Relay (Mini Power)	1
17	580009067	Connector	1
17	a 580091403	Terminal	2
17	a 582000484	Terminal	2
18	505968533	Connector	1
18	a 505968514	Terminal (Pin)	2
18	a 505968540	Connector (Secondary Lock)	1
19	582054023	Wire Harness	1
20	518803687	Connector	1
20	a 505968514	Terminal (Pin)	4
20	a 518806635	Connector (Secondary Lock)	1
21	504064701	Connector (4 Soc)	1
21	a 505968568	Terminal (Socket)	3
21	a 580020944	Connector (Secondary Lock)	1
21	a 505968566	Plug	1
22	580036983	Connector	1
22	a 580039513	Terminal	5

**WIRE HARNESS
TELEMETRY OPTION**

ITEM	PART NO.	DESCRIPTION	QTY
22	a 580036986	Connector (Secondary Lock)	1
22	a 580019119	Plug	7

FOOTNOTES:**a** NOT ILLUSTRATED


WIRE HARNESS (FIGURE 2-10)
TILLER



BP081860

ITEM	PART NO.	DESCRIPTION	QTY
	582043209	Wire Harness (Tiller)	1
1		Connector Assembly (CRS18 To Tiller Card)	1
1	518445610	Connector (8 Way)	1
1	518445602	Socket	6
2		Connector Assembly (CPS06-B To Main Harness)	1
2	580042221	Connector	1
2	580042222	Connector (Secondary Lock)	1
2	580019107	Terminal (Socket)	6
2	580019119	Plug	2


WIRE HARNESS (FIGURE 2-11) OPTION HARNESS

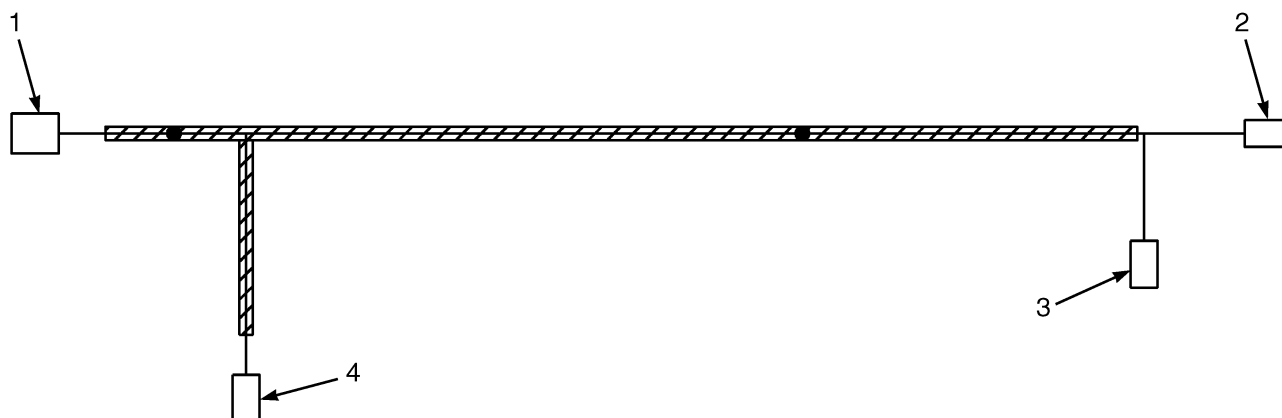

BP081648

ITEM	PART NO.	DESCRIPTION	QTY
	582033692	Wire Harness (Option Harness)	1
1		Connector Assembly (CRP12 Option Harness)	1
1	580042219	Connector (8 Pin)	1
1	580042220	Connector (Secondary Lock)	1
1	580019353	Terminal (Pin)	6
1	580019119	Plug	2
2		Connector Assembly (CPS13 Buzzer Alarm)	1
2	580021087	Connector (2 Way)	1
2	580021088	Connector (Secondary Lock)	1
2	580062388	Terminal	2
3		Connector Assembly (CRP14 Lift Limit Sensor)	1
3	580080890	Connector	1
3	580080891	Connector (Secondary Lock)	1
3	580019353	Terminal (Pin)	3
4		Connector Assembly (CRS15 Charger CAN Port)	1
4	518445606	Connector (Socket Female)	1
4	524152700	Connector Block	1
4	518445602	Socket	3


WIRE HARNESS (FIGURE 2-12)
KEYPAD JUMPER OPTION

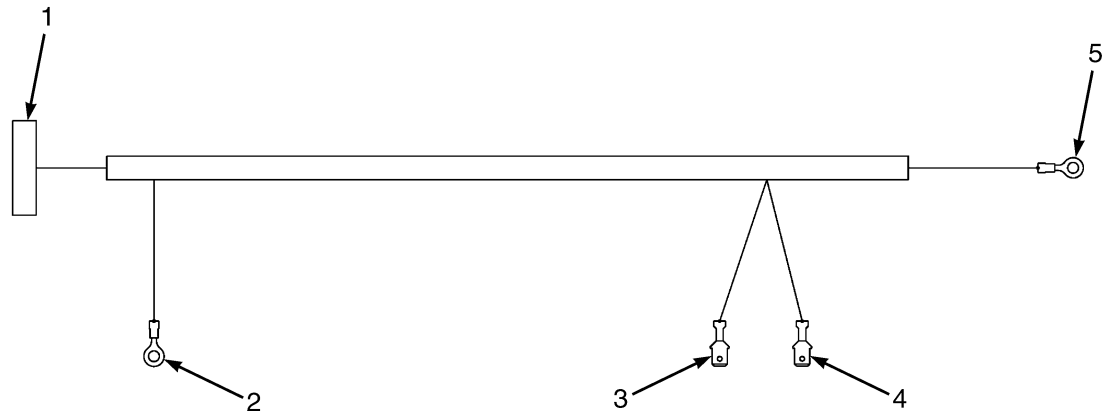

BP081862

ITEM	PART NO.	DESCRIPTION	QTY
	582034144	Wire Harness (Keypad Jumper)	1
1		Connector Assembly (CPS17 Keypad)	1
1	580035032	Connector (4 Way)	1
1	580062119	Receptacle Contact 20-22 AWG	4
1	580059764		
	272479200	Wire Seal	4
2		Ring Terminal (TS16 B-)	1
2	505975593	E-Ring	1
3		Terminal (TP14-B Key Switch)	1
3	502719902	Terminal	1
4		Terminal (TP15-B Key Switch)	1
4	502719902	Terminal	1
5		Ring Terminal (TS13 Main Cont)	1
5	520035837	E-Ring	1

WIRE HARNESS (FIGURE 2-13) **MAIN — KEYPAD OPTION**

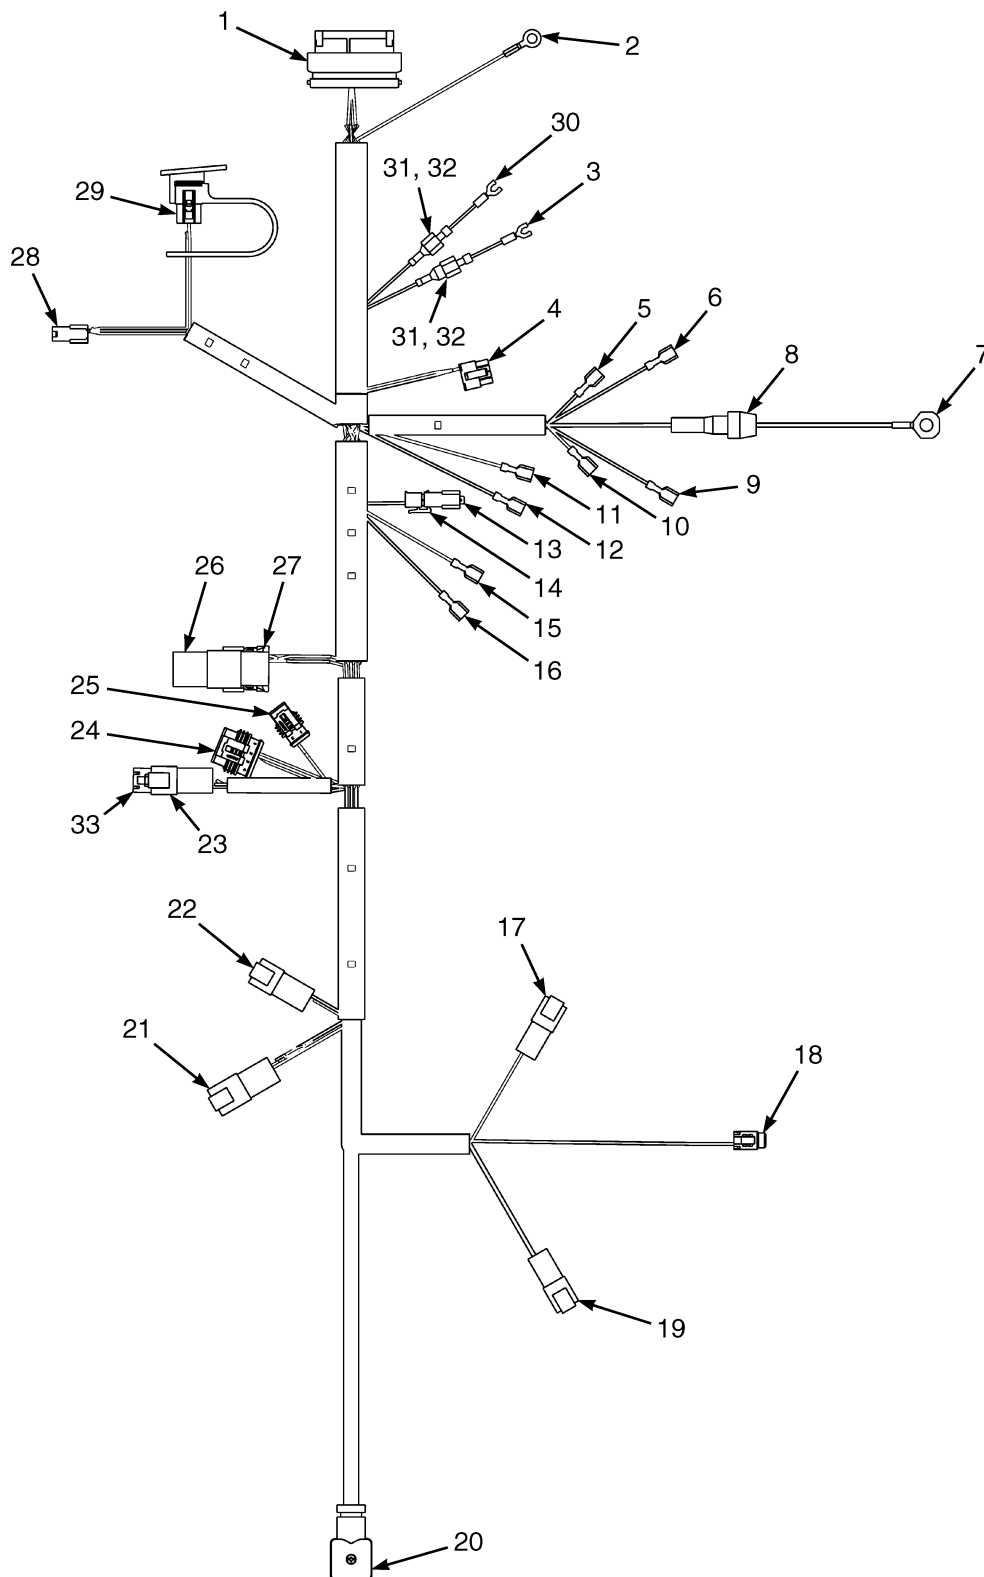

BP081651

WIRE HARNESS **MAIN – KEYPAD OPTION**


ITEM	PART NO.	DESCRIPTION	QTY
	582035887	Wire Harness (Main)	1
1		Connector Assembly (CPS01 Main Controller)	1
1	520202606	Connector (35-Way)	1
1	520202601	Connector (Socket Female)	28
2		Ring Terminal (TS06 B-)	1
2	505975593	E-Ring	1
3		Spade Terminal (TS05 Key Switch)	1
3	580083893	E-Ring	1
4		Connector Assembly (CRS07 Battery Display)	1
4	518445610	Connector (8 Way)	1
4	518445602	Socket	3
4	524152702	Insulator	1
5		Connector Assembly (TS07 Main Cont. Coil +)	1
5	504059730	Terminal	1
6		Connector Assembly (TS03 Disconnect Switch)	1
6	504059730	Terminal	1
7		Ring Terminal (TS01 Main Cont)	1
7	580024033	Terminal	1
8		FU2	1
8	751194100	Fuse Holder	1
8	504061787	Fuse (4 Amp)	1
9		Connector Assembly (TS02 Disconnect Switch)	1
9	504059730	Terminal	1
10		Connector Assembly (TS08 Main Cont. Coil -)	1
10	504059730	Terminal	1
11		Connector Assembly (TS10 Horn -)	1
11	504059730	Terminal	1
12		Connector Assembly (TS09 Horn +)	1
12	504059730	Terminal	1
13		Connector Assembly (CPP01-A Charger Jumper)	1
13	518445603	Connector	1
13	518445601	Pin	2
13	524152699	Insulator	1
14		Connector Assembly (CRS01-A Charger Interlock)	1
14	518445604	Connector	1
14	518445602	Socket	2
14	524152699	Insulator	1
15		Connector Assembly (TS12 Pump Coil -)	1
15	504059730	Terminal	1
16		Connector Assembly (TS11 Pump Coil +)	1
16	504059730	Terminal	1
17		Connector Assembly (CRP04-A Brake Harness)	1
17	580056006	Connector (2 Pin)	1
17	580056004	Connector (Secondary Lock)	1
17	580019353	Terminal (Pin)	2
18		Connector Assembly (CPS04-B Brake Override)	1
18	580019245	Connector (2 Socket)	1
18	580019246	Connector (Secondary Lock)	1
18	580019107	Terminal (Socket)	1
18	580019119	Plug	1

WIRE HARNESS
MAIN – KEYPAD OPTION

ITEM	PART NO.	DESCRIPTION	QTY
19		Connector Assembly (CRP04-B Brake Override)	1
19	580056006	Connector (2 Pin)	1
19	580056004	Connector (Secondary Lock)	1
19	580019353	Terminal (Pin)	2
20		Connector Assembly (CRS05 Lower Valve)	1
20	524223411	Connector (Socket)	1
21		Connector Assembly (CRP06 Tiller Harness)	1
21	580042219	Connector (8 Pin)	1
21	580042220	Connector (Secondary Lock)	1
21	580019353	Terminal (Pin)	8
22		Connector Assembly (CRP10 Tiller Enable)	1
22	580080890	Connector	1
22	580080891	Connector (Secondary Lock)	1
22	580019353	Terminal (Pin)	3
23		Connector Assembly (CRP11 Steering Sensor)	1
23	580080890	Connector	1
23	580080891	Connector (Secondary Lock)	1
23	580019353	Terminal (Pin)	3
24		Connector Assembly (CPS03 Encoder)	1
24	580035032	Connector (4 Way)	1
24	580062119	Receptacle Contact 20-22 AWG	4
24	580040456	Wire Seal (Yellow)	4
25		Connector Assembly (CPS02 Temp Sensor)	1
25	580035031	Connector (2 Way)	1
25	580062119	Receptacle Contact 20-22 AWG	2
25	580040456	Wire Seal (Yellow)	2
26		Cap (CRP12-Cap Options Cap)	1
26	580042219	Connector (8 Pin)	1
26	580019119	Plug	8
27		Connector Assembly (CPS12 Options)	1
27	580042221	Connector	1
27	580042222	Connector (Secondary Lock)	8
27	580019107	Terminal (Socket)	1
28		Connector Assembly (CPP08 Handset)	1
28	518445605	Connector (4 Way)	1
28	518445601	Pin	4
28	524152700	Connector Block	1
29		Connector Assembly (CPS09 PC Connection)	1
29	580019139	Connector (3-Way)	1
29	580039194	Connector (Secondary Lock)	1
29	580062388	Terminal	3
29	580051704	Dust Cap (For Diagnostic Cable)	1
30		Spade Terminal (TS04 Key Switch)	1
30	580083893	E-Ring	1
31	502719902	Terminal	1
32	317222556	Terminal	1
33		Cap (CPS11 Steer Sensor Cap)	1
33	580022891	Connector	1
33	580022892	Connector (Secondary Lock)	1

[illegible]

WIRE HARNESS (FIGURE 2-14)
MAIN — HOURMETER OPTION

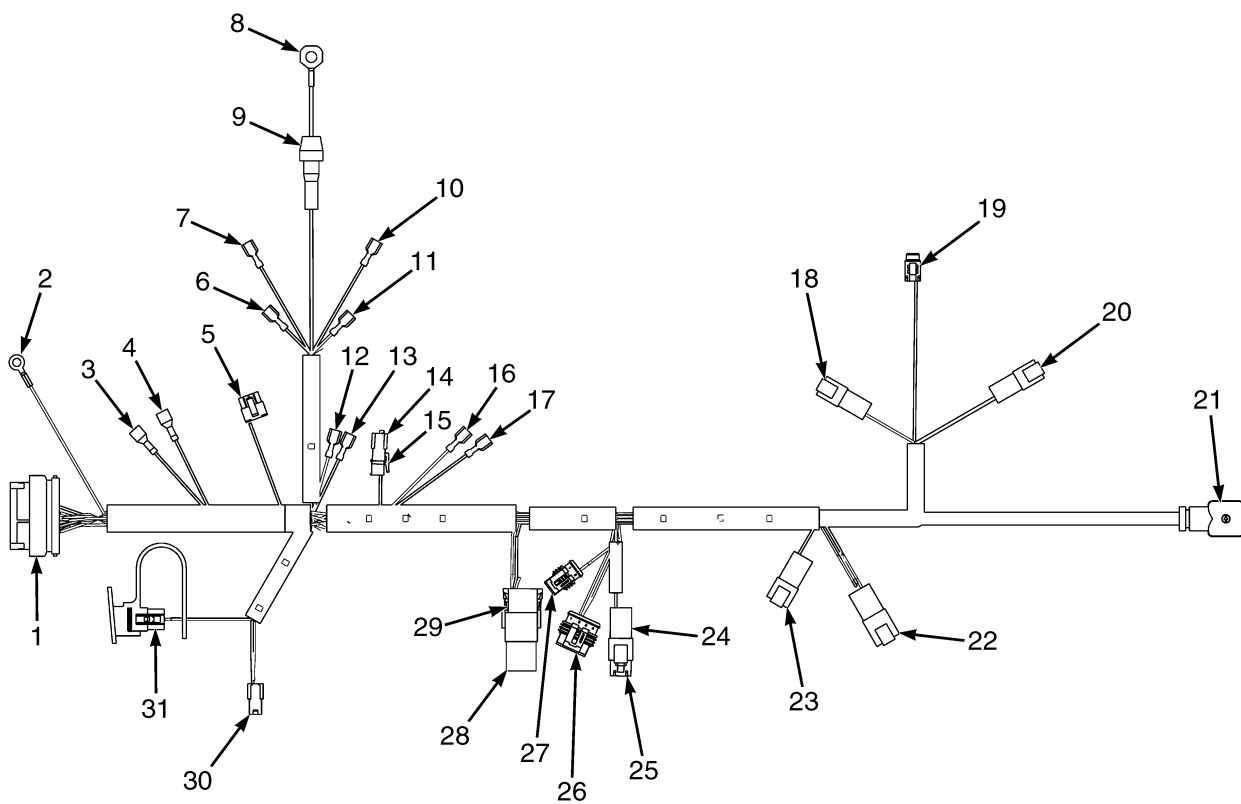

BP081865


WIRE HARNESS **MAIN – HOURMETER OPTION**

ITEM	PART NO.	DESCRIPTION	QTY
	582044985	Wire Harness (Main)	1
1		Connector Assembly (CPS01 Main Controller)	1
1	520202606	Connector (35-Way)	1
1	520202601	Connector (Socket Female)	28
1	520202604	Plug , Socket Contact, Female	7
2		Ring Terminal (TS06 B-)	1
2	505975593	E-Ring	1
3		Terminal (TS15A Keyswitch)	1
3	317222556	Terminal	1
4		Terminal (TS14A Keyswitch)	1
4	317222556	Terminal	1
5		Connector Assembly (CRS07 Battery Display)	1
5	518445610	Connector (8 Way)	1
5	518445602	Socket	3
6		Terminal (TS07 Main Control Coil +)	1
6	504059730	Terminal	1
7		Terminal (TS03 Disconnect Switch)	1
7	504059730	Terminal	1
8		Ring Terminal (TS01 Main Control)	1
8	580024033	Terminal	1
9		Fuse Holder and Fuse (FU2)	1
9	751194100	Fuse Holder	1
9	504061787	Fuse (4 Amp)	1
10		Terminal (TS02 Disconnect Switch)	1
10	504059730	Terminal	1
11		Terminal (TS08 Main Control Coil -)	1
11	504059730	Terminal	1
12		Terminal (TS10 Horn -)	1
12	504059730	Terminal	1
13		Terminal (TS09 Horn +)	1
13	504059730	Terminal	1
14		Connector Assembly (CPP01A Charger Jumper)	1
14	518445603	Connector	1
14	518445601	Pin	2
15		Terminal (CRS01A Charger Interlock)	1
15	518445604	Connector	1
15	518445602	Socket	2
16		Terminal (TS12 Pump Coil -)	1
16	504059730	Terminal	1
17		Terminal (TS11 Pump Coil +)	1
17	504059730	Terminal	1
18		Connector Assembly (CRP04A Brake Harness)	1
18	580056006	Connector (2 Pin)	1
18	580056004	Connector (Secondary Lock)	1
19		Connector Assembly (CPS04B Brake Override)	1
19	580019245	Connector (2 Socket)	1
19	580019246	Connector (Secondary Lock)	1
19	580019107	Terminal (Socket)	1
19	580019119	Plug	1
20		Connector Assembly (CRP04B Brake Override)	1

WIRE HARNESS
MAIN – HOURMETER OPTION

ITEM	PART NO.	DESCRIPTION	QTY
20	580056006	Connector (2 Pin)	1
20	580056004	Connector (Secondary Lock)	1
20	580019353	Terminal (Pin)	2
21		Connector Assembly (CRS05 Lower Valve)	1
21	524223411	Connector (Socket)	1
22		Connector Assembly (CRP06 Tiller Harness)	1
22	580042219	Connector (8 Pin)	1
22	580042220	Connector (Secondary Lock)	1
22	580019353	Terminal (Pin)	8
23		Connector Assembly (CRP10 Traction Interlock)	1
23	580080890	Connector	1
23	580080891	Connector (Secondary Lock)	1
23	580019353	Terminal (Pin)	3
24		Connector Assembly (CRP11 Steering Sensor)	1
24	580080890	Connector	1
24	580080891	Connector (Secondary Lock)	1
24	580019353	Terminal (Pin)	3
25		Cap (CPS11 Steering Sensor Cap)	1
25	580022891	Connector	1
25	580022892	Connector (Secondary Lock)	1
25	580019119	Plug	3
26		Connector Assembly (CPS03 Encoder)	1
26	580035032	Connector (4 Way)	1
26	580062119	Receptacle Contact 20-22 AWG	4
26	580059764		
	272479200	Wire Seal	4
27		Connector Assembly (CPS02 Temperature Sensor)	1
27	580035031	Connector (2 Way)	1
27	580062119	Receptacle Contact 20-22 AWG	2
27	580059764		
	272479200	Wire Seal	2
28		Connector Assembly (CRP12 Options Cap)	1
28	580042219	Connector (8 Pin)	1
28	580042220	Connector (Secondary Lock)	1
28	580019119	Plug	8
29		Connector Assembly (CPS12 Options)	1
29	580042221	Connector	1
29	580042222	Connector (Secondary Lock)	1
29	580019107	Terminal (Socket)	8
30		Connector Assembly (CPP08 Handset)	1
30	518445605	Connector (4 Way)	1
30	518445601	Pin	4
31		Connector Assembly (CPS09 PC Connection)	1
31	580019139	Connector (3-Way)	1
31	580039194	Connector (Secondary Lock)	1
31	580062388	Terminal	3

CONTACTOR (FIGURE 2-15)

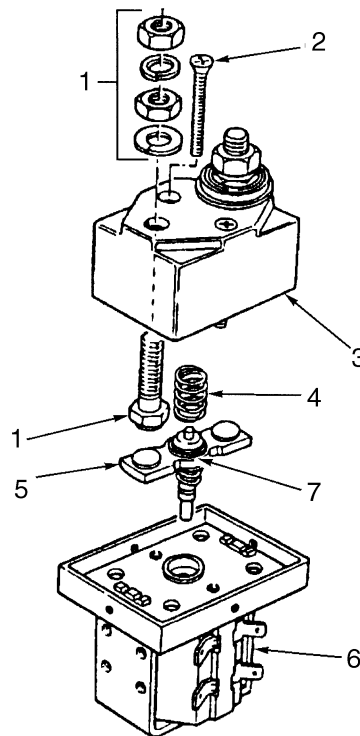

HP000746

ITEM	PART NO.	DESCRIPTION	QTY
	504058760	Contact (Fixed)	1
1	296320455	Contact (Moving)	1
2	519739830	Screw	2
3	519739845	Cover (Top)	1
4	504059719	Spring	1
5	296320456	Contact (Moving)	1
6	518803660	Coil and Frame	1
7	519739834	Insulator	1
	a 580035673	Capscrew (For Mounting)	2

FOOTNOTES:

a Not Illustrated


[illegible]

SECTION 3

STEER HANDLE/BRAKE SYSTEM

DESCRIPTION	PAGE
LABELS	
TILLER HANDLE	3-6
TILLER HANDLE AND MOUNTING WELDMENT	3-2
TILLER HEAD ASSEMBLY	3-4

TILLER HANDLE AND MOUNTING WELDMENT (FIGURE 3-1)

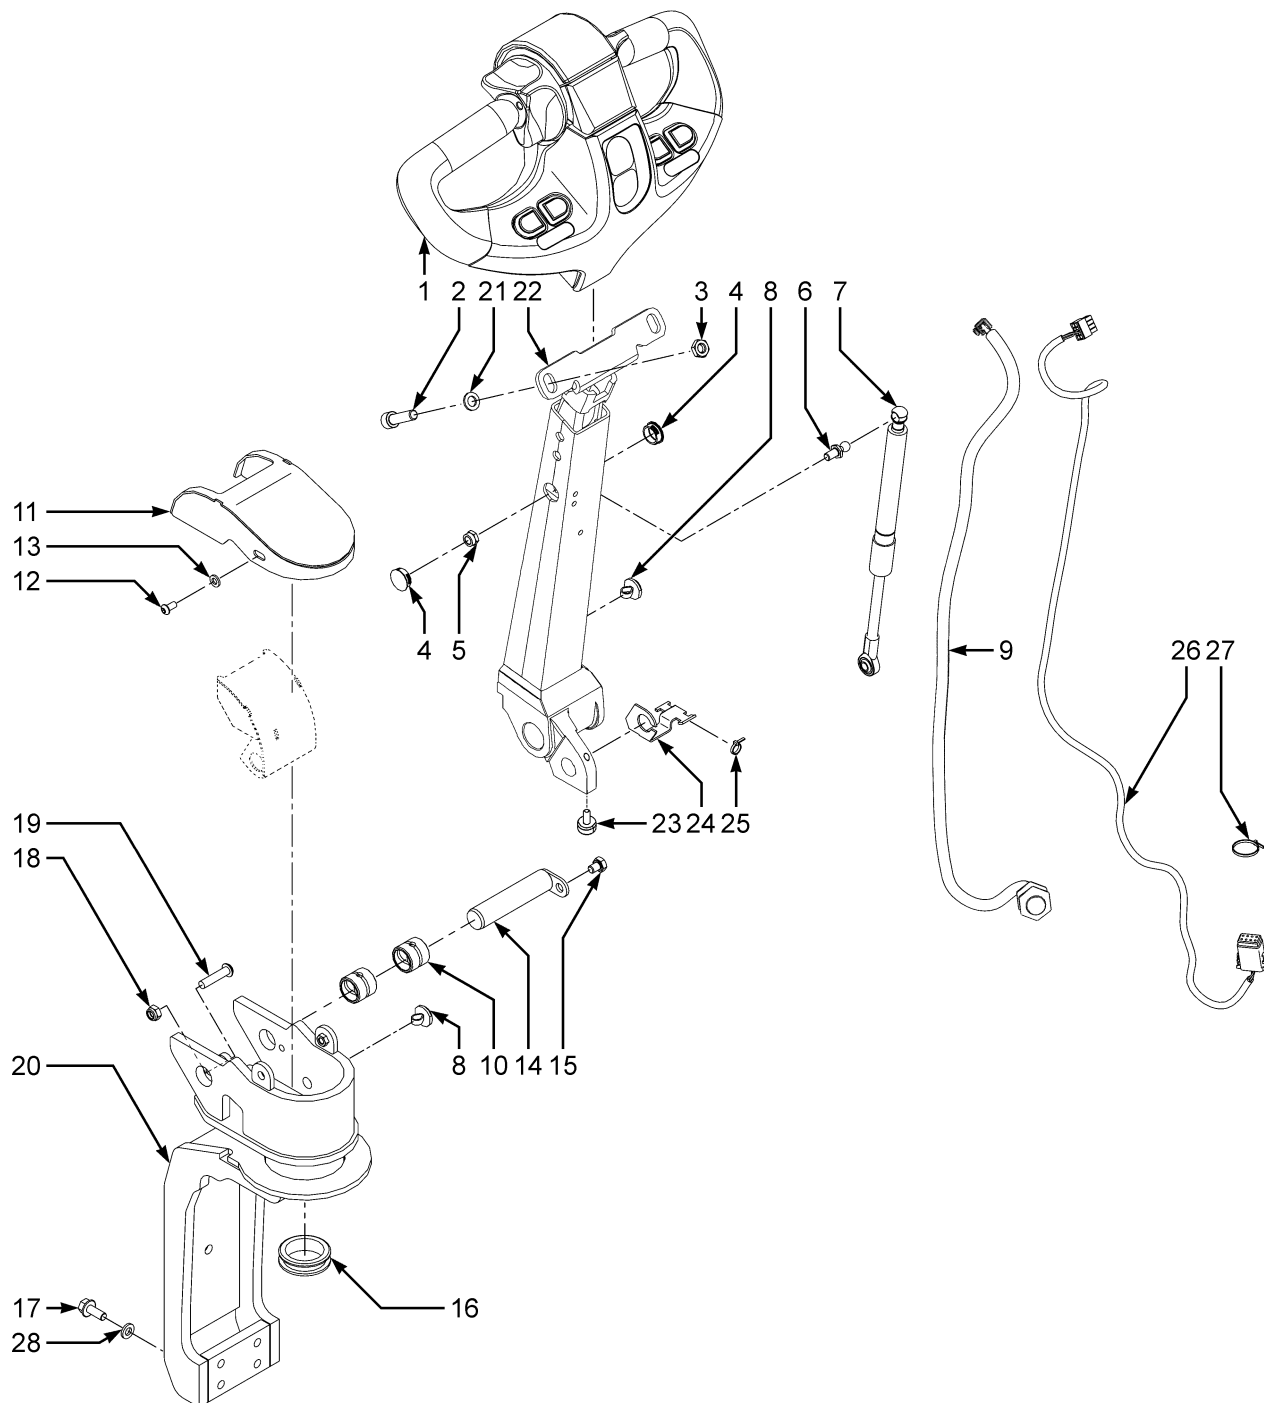


BP220389

TILLER HANDLE AND MOUNTING WELDMENT

ITEM	PART NO.	DESCRIPTION	QTY
1	582019366	Tiller Head Assembly (☞B10160 [Page 3-4]).....	1
2	580023593	Capscrew	2
3	931701910	Nut	2
4	580000119	Plug	2
5	504229298	Nut	1
6	524141136	Ball Stud	1
7	582031382	Tiller Return Spring	1
8	582003591	Strap Clamp (Button Head)	2
9	582053464	Tiller Sensor	1
10	582017793	Bushing	2
11	582035668	Cover	1
12	580083871	Capscrew	2
13	580029990	Washer	2
14	582023900	Shaft Assembly (Tiller Handle Pivot)	1
15	582014374	Capscrew	1
16	582023892	Grommet	1
17	449001241	Capscrew	4
18	580055861	Nut	1
19	580003654	Capscrew	1
20	582031381	Mounting Weldment	1
21	272469000	Washer	2
22	582048717	Tiller Handle	1
23	582048716	Vibration Damper	1
24	582047378	Bracket	1
25	277558000	Strap Clamp	2
26	582043209	Wire Harness (Tiller) (☞B10153 [Page 2-21]).....	1
27	520038838	Strap Clamp	3
28	449021001	Washer	4

TILLER HEAD ASSEMBLY (FIGURE 3-2)

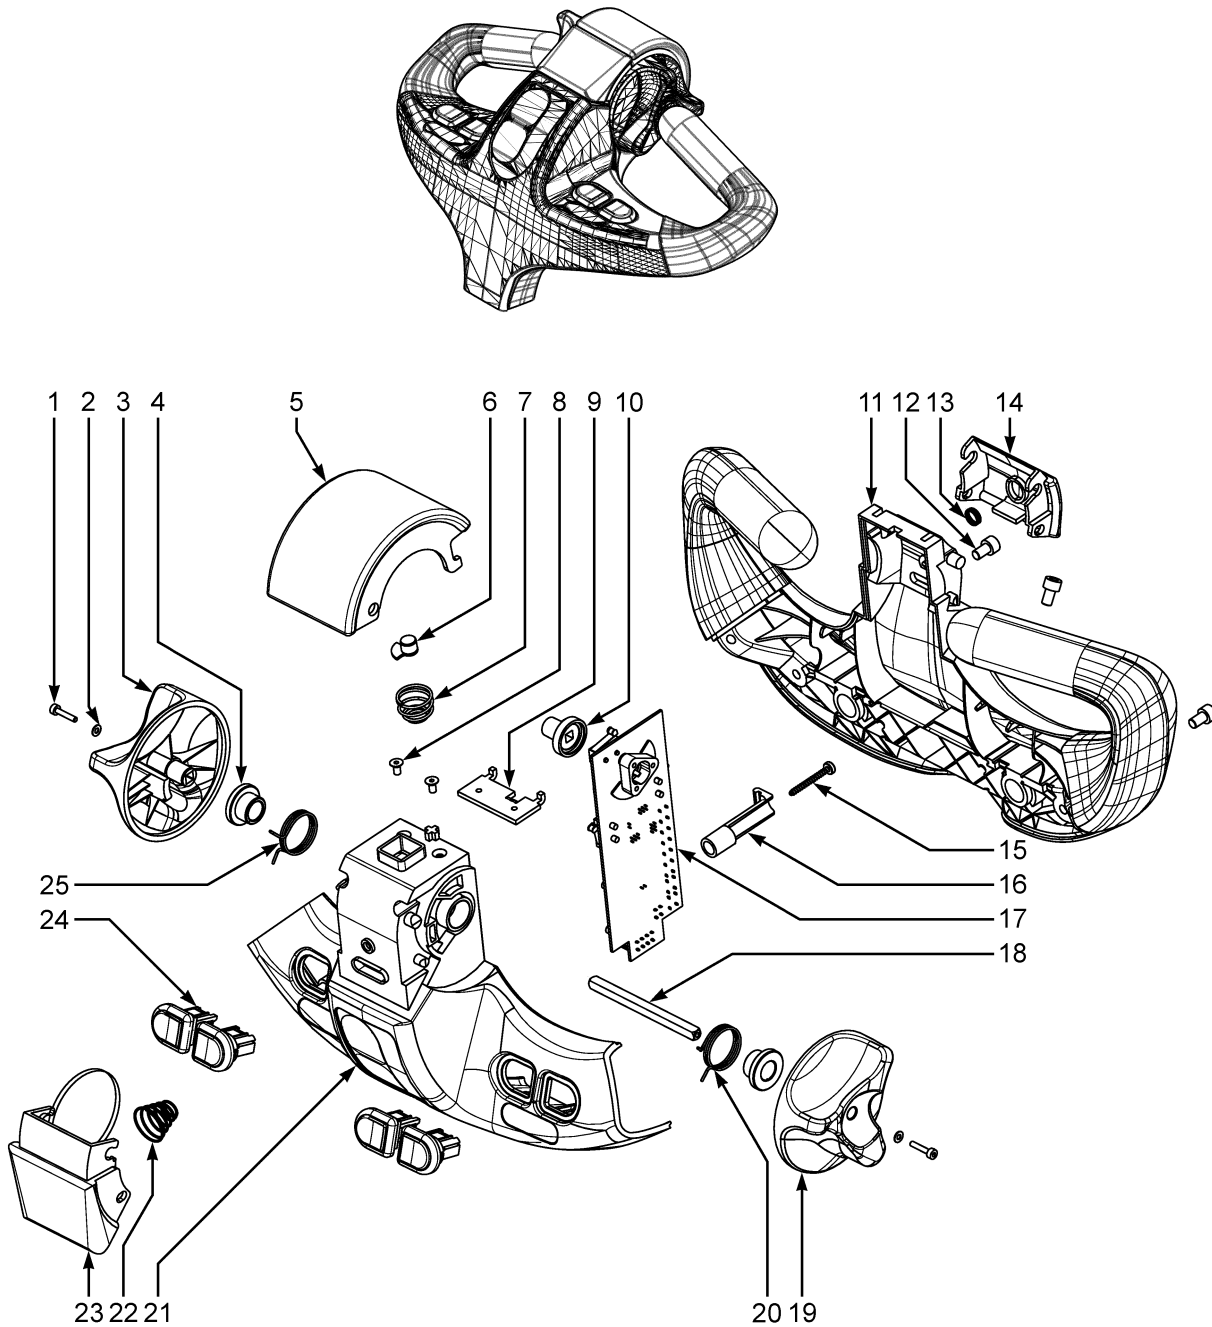

BP220388


TILLER HEAD ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
	582019366	Tiller Head Assembly	1
1	580026296	Capscrew	2
2	940004902	Washer	2
3	582007131	Accelerator Control Knob (RH Butterfly)	1
4	580012962	Bushing	2
5	582010514		
	580011991	Cover (Belly Switch)	1
6	580082841	Locking Lever (Belly Spring)	1
7	580038175	Spring (Cover, Belly)	1
8	580034974	Capscrew	2
9	582019747	Plate	1
10	582015784	Bushing	1
11	524338448	Tiller Head Assembly (Lower Half) (Composite)	1
12	932200901	Capscrew	3
13	524144372	Spring (Quick Pick)	1
14	582007134	Cover , Rear (For Push Button)	1
15	524292775	Screw	1
16	580079167	Support Clip	1
17	582015751	Printed Circuit Board (MULTICAN)	1
18	582010515		
	580013106	Camshaft , Direction Control	1
19	582007130	Accelerator Control Knob	1
20	580060389	Spring , Directional Control Return	1
21	582015752		
	524228248	Tiller Head (Upper Half)	1
22	580012969	Spring (Horn/Snail)	1
23	582005203	Horn Button Cover	1
24	582007128	Push Button Switch Assembly (On-Off)	4
24	a 582015753	Push Button Switch (On-Off)	4
24	a 580026824	Microswitch (On-Off, Molex Connector)	4
25	580012970	Spring , Directional Control Return	1

FOOTNOTES:

a Not Illustrated

LABELS (FIGURE 3-3)
TILLER HANDLE

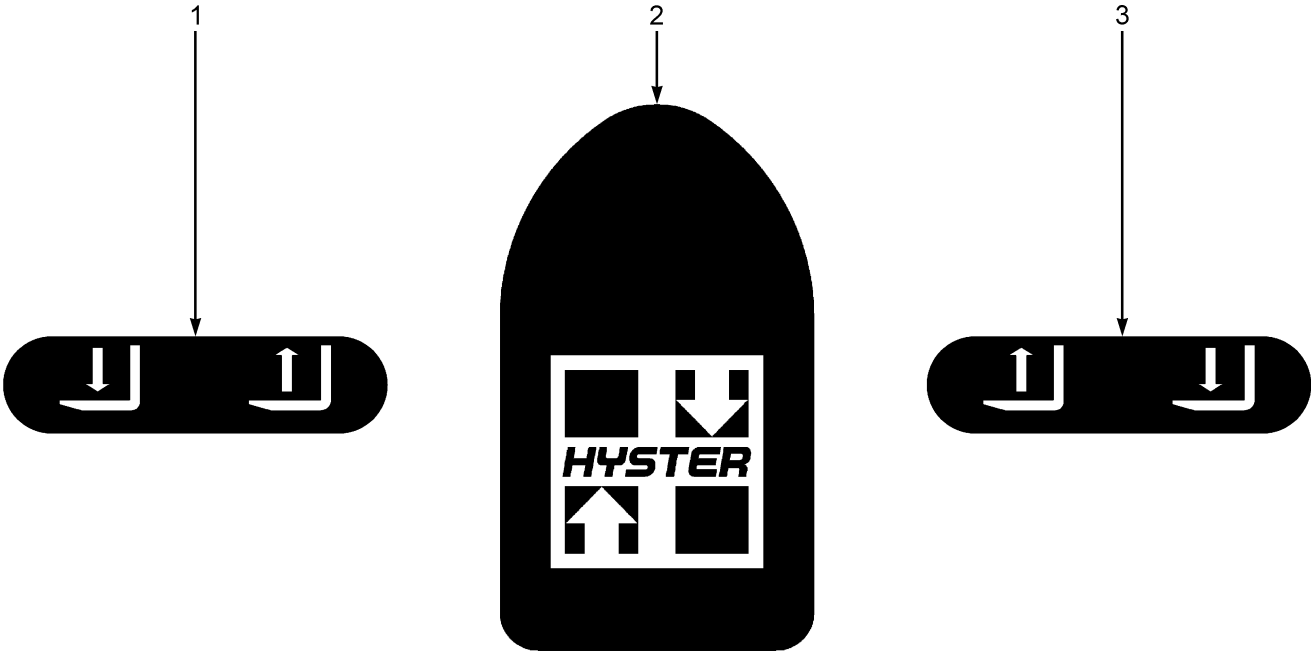


HP280011

ITEM	PART NO.	DESCRIPTION	QTY
1	582020332	Label (LH Switch Functions)	1
2	582053324	Label (Tiller Handle Hyster)	1
3	582015332	Label (RH Switch Functions)	1

SECTION 4 HYDRAULIC SYSTEM

DESCRIPTION	PAGE
CYLINDER ASSEMBLY	4-6
HYDRAULIC POWER UNIT ASSEMBLY	4-4
HYDRAULIC SYSTEM	4-2


HYDRAULIC SYSTEM (FIGURE 4-1)

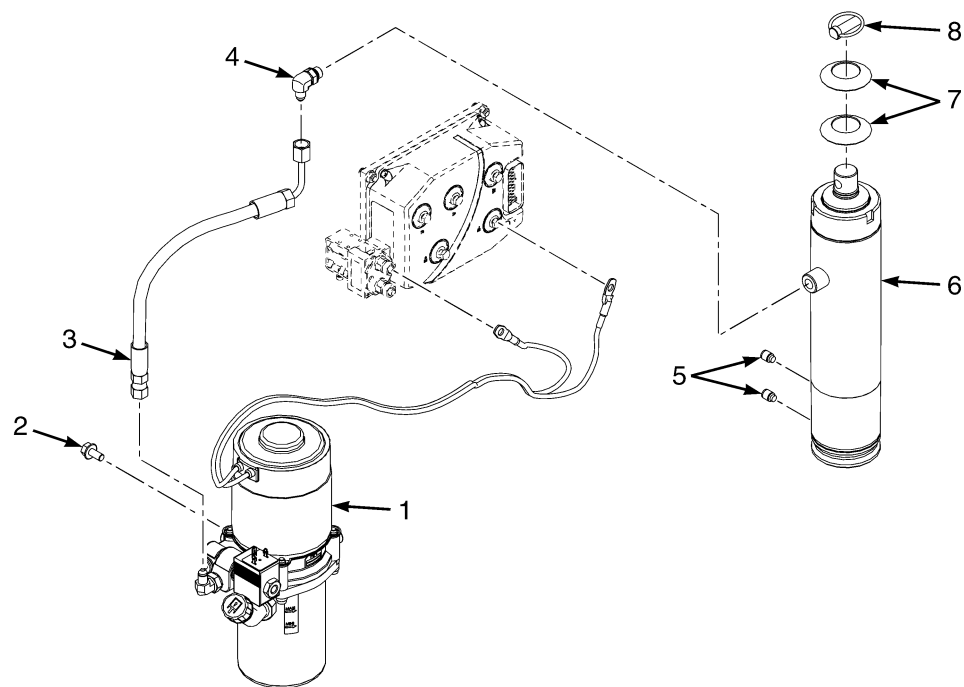

BP150722

ITEM	PART NO.	DESCRIPTION	QTY
1	582013368	Hydraulic Power Unit (☞ B10163 [Page 4-4]).....	1
2	582041056		
	580047714	Capscrew	2
3	582014173	Hose Assy	1
4	316534106	Fitting	1
5	580093279	Screw	2
6	580056997	Cylinder Assy (☞ B10164 [Page 4-6]).....	1
7	582002209	Spacer	2
8	580060015	Pin	1

[illegible]

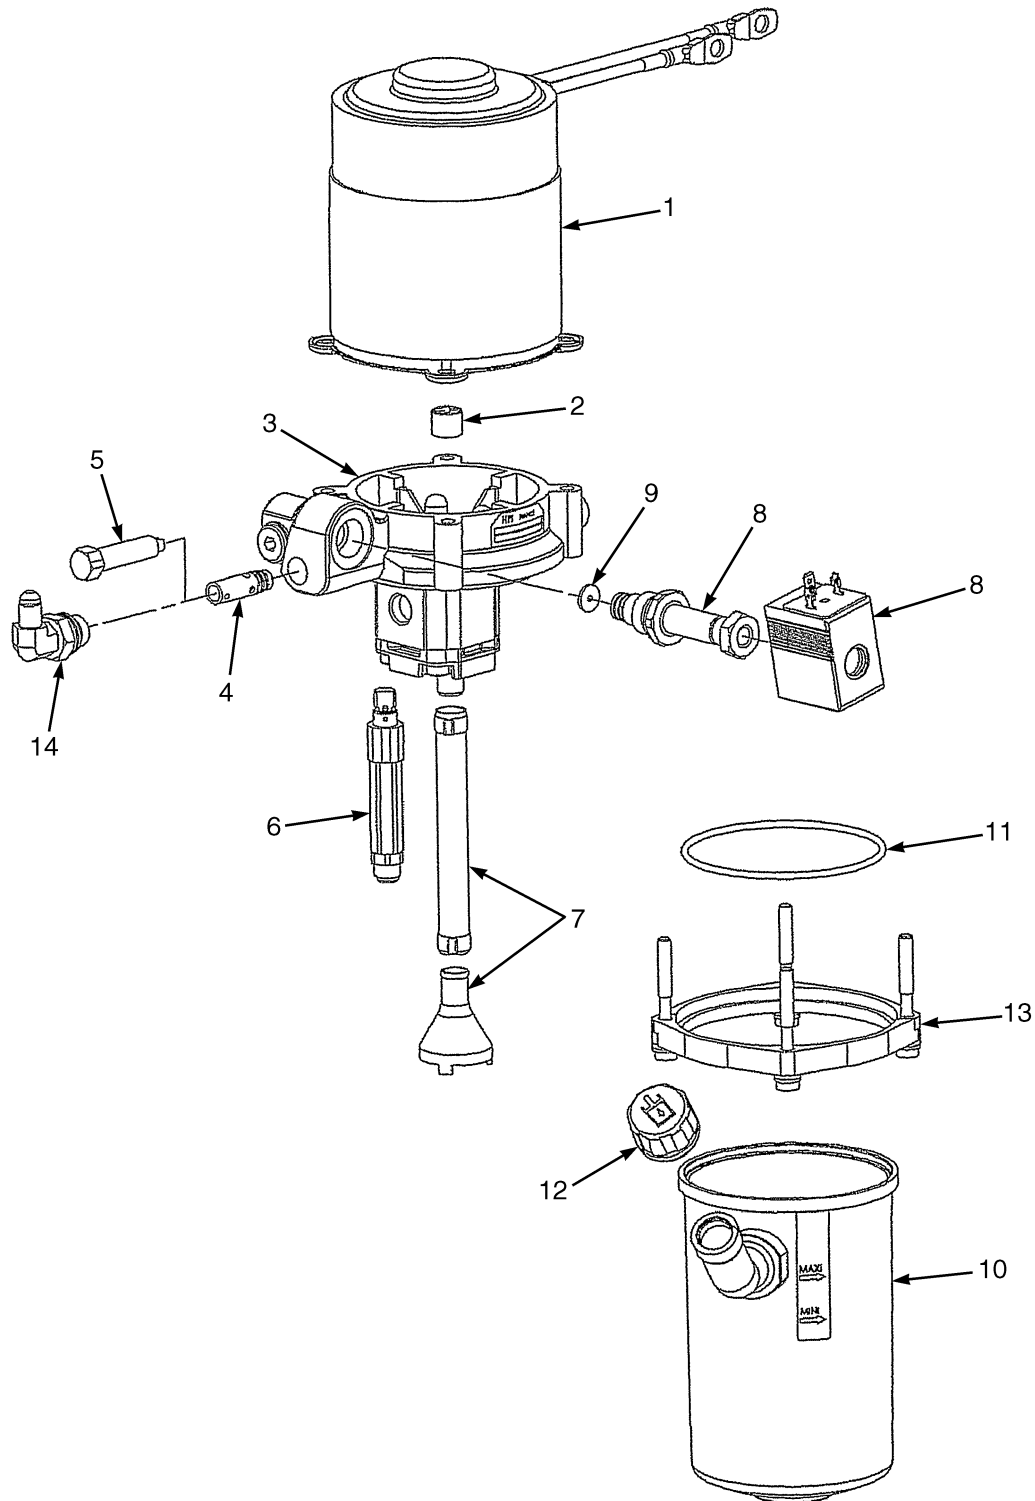HYDRAULIC POWER UNIT ASSEMBLY (FIGURE 4-2)

BP150598


HYDRAULIC POWER UNIT ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
	582013368	Hydraulic Power Unit	1
1	580064007	Motor	1
2	582015474	Nut	1
3	580064011	Hydraulic Motor Sub Unit	1
3	580064012	Kit-Seal	1
4	582015475	Check Valve	1
5	582015477	Tool (Check Valve)	1
6	582015481	Relief Valve	1
7	582015489	Pipe	1
7	582015490	Strainer	1
8	582015491	Valve	1
8	582015493	Kit-Seal Valve	1
8	582042440	Coil	1
9	582015494	Restrictor	1
10	582015478	Tank (For Hydraulic Pump)	1
11	582015479	O-Ring	1
12	582015480	Plug (Filter)	1
13	580028972	Clamp Assembly	1
14	582015498	Fitting	1
	a 582015492	Solenoid	1

FOOTNOTES:

a Not Illustrated

CYLINDER ASSEMBLY (FIGURE 4-3)

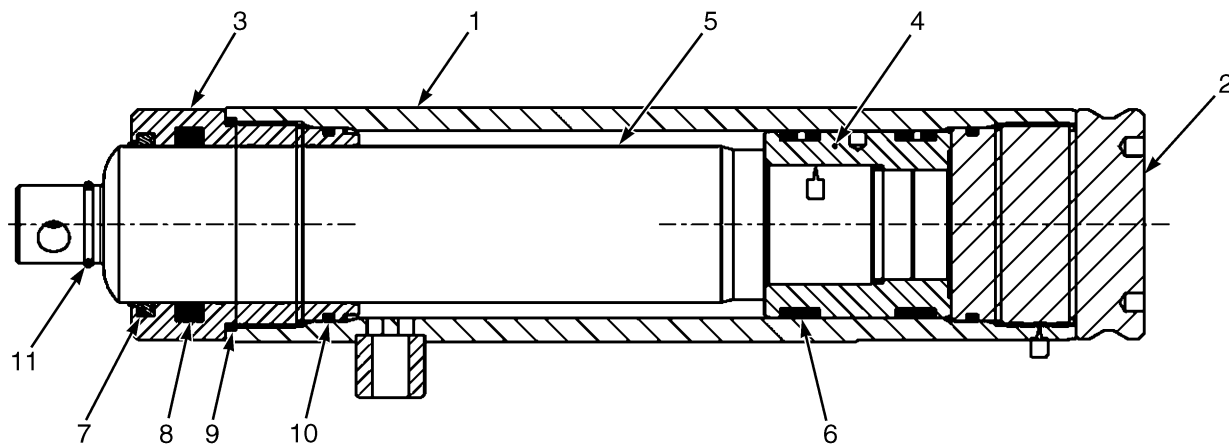


HP151227

ITEM	PART NO.	DESCRIPTION	QTY
	580056997	Cylinder Assy	1
1	582031135	Cylinder Liner	1
2	582031133	Head	1
3	272131500	Cylinder Head	1
4	582031134	Piston	1
5	582031132	Cylinder Rod	1
6	580060095	O-Ring	2
7	277269200	Wiper	1
8	580060093	Seal	1
9	580060092	O-Ring	1
10	580060091	O-Ring	2
11	019327000	O-Ring	1
	582003607	Kit-Seal (Includes Items 6-10)	1

SECTION 5
LIFT LINKAGE AND FORKS

DESCRIPTION	PAGE
LIFT LINKAGE	5-2

LIFT LINKAGE (FIGURE 5-1)

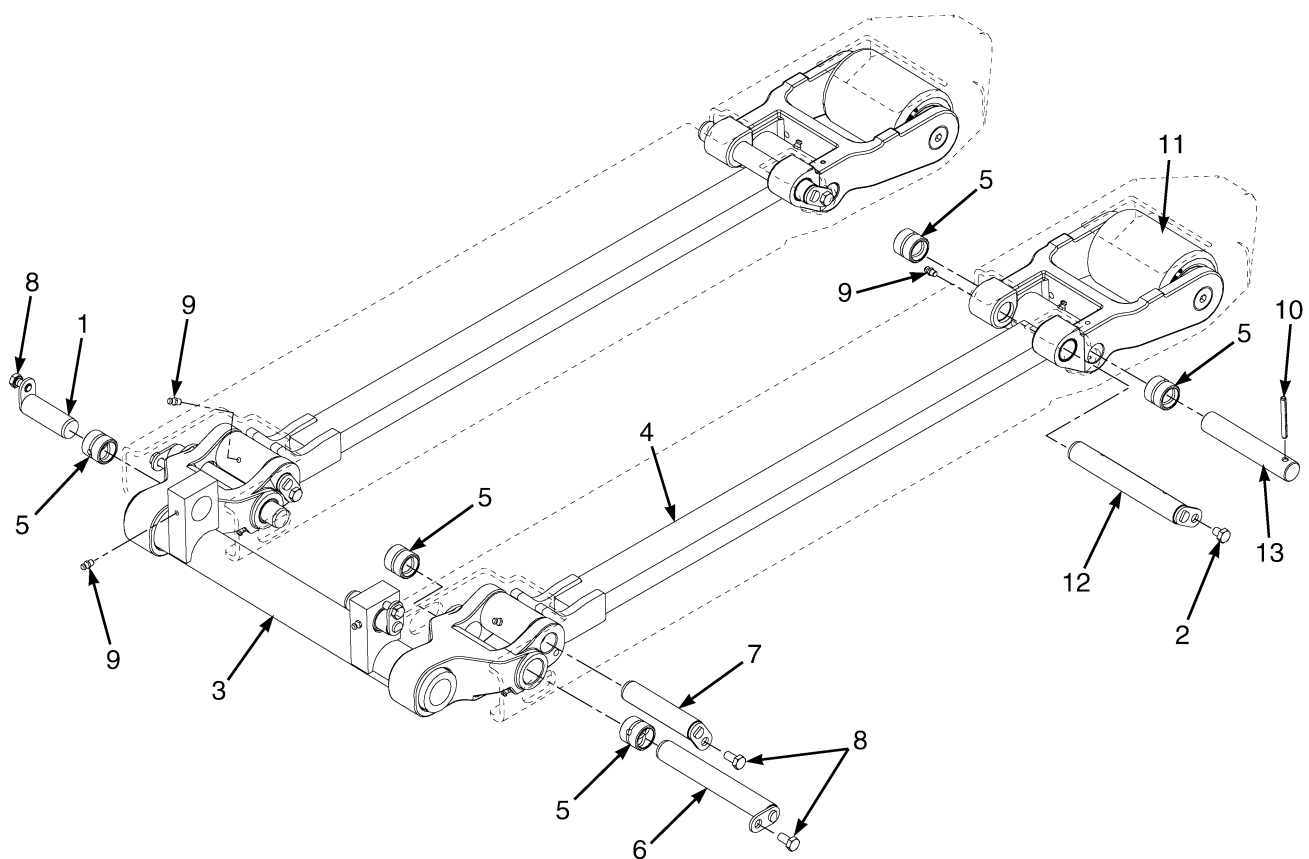

BP290121

LIFT LINKAGE

ITEM	PART NO.	DESCRIPTION	QTY
1	582023896	Shaft (Drive Frame Pivot)	2
2	582014374	Capscrew	2
3	582023894	Rocker Arm Assembly (560 mm)	1
4	582036142	Pull Rod (938 mm)	1
5	582017793	Bushing	6
6	582023898	Shaft (Front Fork Frame Pivot)	2
7	582023897	Shaft (Pull Rod Pivot)	2
8	582007824	Capscrew	6
9	449076005	Grease Fitting	12
10	449034030	Roll Pin	2
11		Load Wheels (☞B10135 [Page 1-6], ☞B10136 [Page 1-7]).....	2
12	582023899	Shaft (Rear Fork Pivot)	2
13	580063754	Axle (Pin)	2

[illegible]


6

OPTIONS

SECTION 6
OPTIONS

DESCRIPTION	PAGE
EXTENSION BATTERY CABLE OPTION	6-2

EXTENSION BATTERY CABLE (FIGURE 6-1)
OPTION

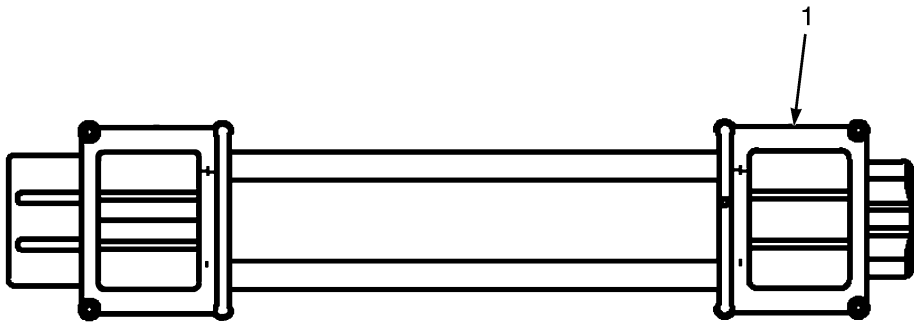

BP000894

ITEM	PART NO.	DESCRIPTION	QTY
1	580080014	Battery Cable	1
1	580035638	Battery Connector Housing	1
1	580035642	Battery Connector Housing	1

SECTION 7

NUMERICAL INDEX

PART NO.	PAGE	ITEM	PART NO.	PAGE	ITEM	PART NO.	PAGE	ITEM	PART NO.	PAGE	ITEM
010387200	2-3	26		2-11	14		2-19	18	520202601	2-25	1
	2-7	26		3-3	28		2-19	20		2-29	1
019327000	4-6	11	449021002	1-4	5	505968533	2-19	10	520202604	2-29	1
06205330D	2-3	1	449022019	2-4	38		2-19	18	520202606	2-25	1
	2-3	25		2-7	33	505968540	2-19	10		2-29	1
	2-7	1	449034030	5-3	10		2-19	18	520426875	2-11	11
	2-7	25	449076005	5-3	9	505968566	2-19	21	524141136	3-3	6
06205330E	2-3	1	501729904	2-11	16	505968568	2-19	7	524143269	2-3	17
	2-3	25	502026902	2-3	22		2-19	11		2-7	35
	2-7	1		2-3	23		2-19	13	524144372	3-5	13
	2-7	25		2-3	24		2-19	21	524149840	1-13	12
064575700	2-3	26		2-7	22	505975593	2-23	2	524149841	1-13	15
	2-7	26		2-7	23		2-25	2	524149842	1-13	13
258743277	1-3	5		2-7	24		2-29	2	524149843	1-13	14
	2-3	35	502719902	2-23	3	506726504	2-3	6	524152699	2-25	13
	2-7	30		2-23	4		2-7	6		2-25	14
272017300	2-11	7		2-26	31	506726507	1-5	4	524152700	2-22	4
272046300	1-7	5	504057775	2-3	15	518445601	2-25	13		2-26	28
272131500	4-6	3		2-7	15		2-26	28	524152702	2-25	4
272213500	1-17	5	504058760	2-3	19		2-29	14	524208881	1-17	1
272469000	3-3	21		2-7	19		2-30	30	524216189	1-19	
272479200	2-23	1		2-31		518445602	2-21	1	524216190	1-19	
	2-30	26	504059719	2-31	4		2-22	4	524216191	1-19	
	2-30	27	504059730	2-25	5		2-25	4	524216192	1-19	
273011400	1-7	1		2-25	6		2-25	14	524216193	1-19	
273059100	2-3	28		2-25	9		2-29	5	524216194	1-19	
	2-7	28		2-25	10		2-29	15	524216195	1-19	
277269200	4-6	7		2-25	11	518445603	2-25	13	524216196	1-19	
277458600	1-4	6		2-25	12		2-29	14	524216197	1-19	
277514700	2-19	8		2-25	15	518445604	2-25	14	524216198	1-19	
277558000	3-3	25		2-25	16		2-29	15	524216199	1-19	
277754400	1-4	8		2-29	6	518445605	2-26	28	524216200	1-19	
	2-15	8		2-29	7		2-30	30	524216201	1-19	
296320455	2-31	1		2-29	10	518445606	2-22	4	524216202	1-19	
296320456	2-31	5		2-29	11	518445610	2-21	1	524216203	1-19	
316534106	4-2	4		2-29	12		2-25	4	524216204	1-19	
317222556	2-26	32		2-29	13		2-29	5	524216205	1-19	
	2-29	3		2-29	16	518803660	2-31	6	524216206	1-19	
	2-29	4		2-29	17	518803687	2-15	19	524216207	1-19	
449001230	1-13	4	504061787	2-25	8		2-19	20	524216208	1-19	
449001241	3-3	17		2-29	9	518806635	2-19	20	524216209	1-19	
449001410	1-4	4	504064701	2-19	13	519244834	1-2	5	524216210	1-19	
449015014	2-3	12		2-19	21	519609804	1-3	3	524216211	1-19	
	2-7	12	504064720	2-19	7	519739830	2-31	2	524216212	1-19	
449015098	2-11	15	504229298	3-3	5	519739834	2-31	7	524216526	1-20	
449015135	2-11	8	505968501	2-19	11	519739845	2-31	3	524216766	1-20	
	2-15	24	505968514	2-15	19	520035837	2-23	5	524223411	2-26	20
449021001	2-3	13		2-19	6	520038838	3-3	27		2-30	21
	2-7	13		2-19	10	520038850	2-19	6	524228248	3-5	21

NUMERICAL INDEX (continued)

PART NO.	PAGE	ITEM	PART NO.	PAGE	ITEM	PART NO.	PAGE	ITEM	PART NO.	PAGE	ITEM
524259713	1-20			2-25	18	580027572	1-11	1		2-30	22
524292775	3-5	15		2-26	27	580027573	1-3	4		2-30	28
524299833	1-13	2		2-29	19		1-8	3	580042220	2-22	1
524338448	3-5	11		2-30	29		2-3	3		2-26	21
550061527	2-16		580019119	2-19	9		2-7	3		2-30	22
550061528	2-16			2-19	15		2-9	4		2-30	28
550061529	2-16			2-20	22		2-12	3	580042221	2-21	2
550061530	2-16			2-21	2		2-15	5		2-26	27
550061531	2-16			2-22	1	580028972	4-5	13		2-30	29
550061532	2-16			2-25	18	580029990	3-3	13	580042222	2-21	2
550061533	2-16			2-26	26	580030967	1-8	2		2-26	27
550061534	2-16			2-29	19	580034053	2-19	2		2-30	29
550061535	2-16			2-30	25		2-19	4	580044946	2-15	12
550061536	2-16			2-30	28	580034974	3-5	8	580045132	2-13	1
550061537	2-16		580019139	2-26	29	580035031	2-26	25	580047714	4-2	2
550061538	2-16			2-30	31		2-30	27	580047919	2-3	5
550061539	2-16		580019245	2-19	14	580035032	2-23	1		2-7	5
550061540	2-16			2-25	18		2-26	24		2-13	4
550061541	2-16			2-29	19		2-30	26	580049231	2-12	2
550061542	2-16		580019246	2-19	14	580035638	6-2	1		2-12	7
550061543	2-16			2-25	18	580035642	2-3	1	580051432	2-15	22
550061544	2-16			2-29	19		2-7	1	580051704	2-26	29
550061545	2-16		580019353	2-22	1		6-2	1	580053822	1-7	2
550061546	2-16			2-22	3	580035673	2-4	36	580055098	1-11	2
550061547	2-16			2-25	17		2-7	31	580055861	3-3	18
550061548	2-16			2-26	19		2-31		580056004	2-15	11
550061549	2-16			2-26	21	580036981	2-19	9		2-25	17
550061550	2-17			2-26	22	580036982	2-19	15		2-26	19
550061551	2-17			2-26	23	580036983	2-19	22		2-29	18
550061552	2-17			2-30	20	580036986	2-19	9		2-30	20
550061553	2-17			2-30	22		2-19	15	580056006	2-15	11
550076748	1-20			2-30	23		2-20	22		2-25	17
550079667	1-3	1		2-30	24	580037179	1-15	4		2-26	19
550081533	2-17		580019665	2-3	9	580038175	3-5	7		2-29	18
550111949	1-20			2-7	9	580038834	2-15	6		2-30	20
580000119	3-3	4	580020944	2-19	13	580039193	2-19	6	580056589	2-3	29
580003569	1-4	10		2-19	21	580039194	2-19	7		2-7	29
580003654	3-3	19	580021087	2-22	2		2-26	29	580056997	4-2	6
580009067	2-19	17	580021088	2-19	11		2-30	31		4-6	
580009798	2-15	20		2-22	2	580039438	2-13	3	580058190	1-5	5
580011991	3-5	5	580022891	2-12	6	580039513	2-19	9	580059462	1-7	4
580012962	3-5	4		2-26	33		2-19	14	580059464	1-7	6
580012969	3-5	22		2-30	25		2-19	15	580059473	1-7	10
580012970	3-5	25	580022892	2-26	33		2-19	22	580059475	1-7	11
580013106	3-5	18		2-30	25	580039516	2-15	11	580059476	1-7	7
580013990	2-11	6	580023593	1-11	3	580040456	2-26	24	580060015	4-2	8
	2-15	2		3-3	2		2-26	25	580060091	4-6	10
580014880	1-18		580024033	2-25	7	580041805	2-15	10	580060092	4-6	9
580017064	1-4	7		2-29	8	580042219	2-22	1	580060093	4-6	8
	2-15	7	580026296	3-5	1		2-26	21	580060095	4-6	6
580019107	2-21	2	580026824	3-5	24		2-26	26	580060389	3-5	20

NUMERICAL INDEX (continued)

PART NO.	PAGE	ITEM	PART NO.	PAGE	ITEM	PART NO.	PAGE	ITEM	PART NO.	PAGE	ITEM
580062119	2-23	1	582003769	1-13	7	582015981	1-3	9	582031796	1-6	
	2-26	24	582003772	1-13	8	582017022	1-15	1	582031798	1-6	
	2-26	25	582003773	1-13	11	582017090	1-15	6	582032752	2-13	2
	2-30	26	582003774	1-13	5	582017793	3-3	10	582032773	2-12	5
	2-30	27	582003775	1-13	10		5-3	5	582032800	2-3	24
580062388	2-22	2	582005203	3-5	23	582018029	1-5	7		2-7	24
	2-26	29	582007128	3-5	24	582019366	3-3	1	582032801	2-3	25
	2-30	31	582007130	3-5	19		3-5			2-7	25
580063754	5-3	13	582007131	3-5	3	582019747	3-5	9	582032802	2-3	26
580064007	4-5	1	582007134	3-5	14	582020332	3-6	1		2-7	26
580064011	4-5	3	582007595	2-4	39	582020706	2-15	25	582032803	2-3	23
580064012	4-5	3		2-7	34	582020715	2-15	4		2-7	23
580064740	1-7	3	582007824	5-3	8	582020730	2-15	4	582032804	2-3	22
580064749	1-7	8	582010004	2-19	16	582020782	2-15	18		2-7	22
580064842	1-17	4	582010614	1-13	9	582020783	2-15	18	582032812	2-9	2
580065140	2-11	17	582010615	1-13	3	582020784	2-15	18	582032957	1-6	4
580079167	3-5	16	582010616	1-13	1	582020793	2-15	9	582032958	1-6	2
580080014	6-2	1	582013368	4-2	1	582020794	2-15	9	582032960	1-6	1
580080890	2-22	3		4-5		582023892	3-3	16	582032961	1-6	3
	2-26	22	582014173	4-2	3	582023894	5-3	3	582032968	1-6	3
	2-26	23	582014374	3-3	15	582023896	5-3	1	582033351	1-8	1
	2-30	23		5-3	2	582023897	5-3	7	582033352	1-8	1
	2-30	24	582015143	2-3	1	582023898	5-3	6	582033604	2-3	7
580080891	2-22	3		2-7	1	582023899	5-3	12		2-7	7
	2-26	22	582015332	3-6	3	582023900	3-3	14	582033692	2-22	
	2-26	23	582015474	4-5	2	582025995	2-15	15	582033994	2-3	31
	2-30	23	582015475	4-5	4	582026101	2-9	5	582033996	2-3	30
	2-30	24	582015477	4-5	5	582026102	2-9	6	582033999	2-3	33
580080969	2-19	3	582015478	4-5	10	582028147	1-3	6	582034000	2-3	34
	2-19	5	582015479	4-5	11		2-3	4	582034129	1-15	8
580082841	3-5	6	582015480	4-5	12		2-7	4	582034130	1-15	7
580083871	3-3	12	582015481	4-5	6		2-15	1	582034144	2-23	
580083893	2-25	3	582015489	4-5	7	582028413	1-15	9	582035083	1-4	12
	2-26	30	582015490	4-5	7	582029183	2-3	2	582035136	2-3	1
580084947	2-3	27	582015491	4-5	8		2-7	2		2-7	1
	2-7	27	582015492	4-5			2-9	3	582035668	3-3	11
580091403	2-19	17	582015493	4-5	8	582029282	2-12	1	582035887	2-3	8
580092732	2-15	14	582015494	4-5	9	582029283	2-12	4		2-25	
580093223	2-15	11	582015498	4-5	14	582029591	1-2		582036142	5-3	4
580093279	4-2	5	582015519	1-15	2		1-5	6	582036781	2-3	11
580094577	2-15	23	582015541	1-2	5	582030281	1-2	5		2-7	11
580096589	2-3	14	582015542	1-2	5	582030973	2-11	24	582037031	2-3	10
	2-7	14	582015551	1-2	2	582030993	1-17	2		2-7	10
580096845	2-3	18	582015552	1-2	1	582030998	1-2	4	582037755	1-2	6
	2-7	18	582015704	1-7	5	582030999	1-2	5	582037756	1-2	5
582000484	2-19	17	582015705	1-7	7	582031132	4-6	5	582038703	1-5	3
582002209	4-2	7	582015707	1-7	1	582031133	4-6	2	582042440	4-5	8
582003591	2-12	8	582015751	3-5	17	582031134	4-6	4	582042501	2-3	1
	3-3	8	582015753	3-5	24	582031135	4-6	1		2-7	1
582003607	4-6		582015784	3-5	10	582031381	3-3	20	582043199	2-9	1
582003765	1-13	6	582015980	1-3	7	582031382	3-3	7	582043209	2-21	

NUMERICAL INDEX (continued)

PART NO.	PAGE	ITEM	PART NO.	PAGE	ITEM	PART NO.	PAGE	ITEM	PART NO.	PAGE	ITEM
	3-3	26	582049438	1-2	3	582050201	2-11	9	582056459	1-2	4
582044985	2-7	8	582049677	1-2	2	582053119	1-3	10	582056460	1-2	5
	2-29		582049680	1-2	5	582053278	2-15	13	582057369	1-15	5
582045004	2-7	21	582049681	1-2	1	582053318	2-15	21	582057815	2-7	17
582045113	1-2	2	582049682	1-2	1	582053324	3-6	2	582061567	2-9	2
582045305	2-7	16	582049754	1-2	6	582053325	2-15	3	751194100	2-25	8
582045353	2-3	16	582049755	1-2	1	582053464	3-3	9		2-29	9
582045464	2-3	21	582049817	2-11	20	582053547	1-4	1	931701910	3-3	3
582045724	1-4	9	582049818	2-11	18	582053709	2-15	16	932200901	3-5	12
582046004	1-2	4	582049889	2-11	1	582054023	2-15	29	932726902	2-15	17
582046106	1-3	2	582049890	2-11	13		2-19	19	932728903	2-3	32
582046394	1-4	2	582049891	2-11	23	582054024	2-15	28	932728908	2-15	26
582046396	1-4	3	582049892	2-11	3		2-19	12	932729905	1-3	8
582047188	1-5	2	582049893	2-11	19	582054025	2-15	27		1-4	11
582047378	3-3	24	582049894	2-11	10		2-19	1	937100904	2-3	20
582048716	3-3	23	582049895	2-11	12	582054884	1-5	1		2-7	20
582048717	3-3	22	582049896	2-11	22	582054885	1-5	1	940004902	3-5	2
582049332	1-15	3	582049897	2-11	21	582054886	1-5	1	940004903	2-4	37
582049402	2-11	4	582049898	2-11	5	582055744	1-11	4		2-7	32
582049437	1-2	3	582049899	2-11	2		1-13		950433907	1-7	9

SECTION 8

USER SUPPORT INFORMATION

DESCRIPTION	PAGE
SERVICE PARTS ORDERING INSTRUCTIONS	8-2
TECHNICAL SERVICE PUBLICATIONS	8-2
OPERATOR TRAINING	8-2
SERVICE TRAINING COURSE	8-2
SERVICE TRAINING MATERIALS	8-2

Your investment in a Yale Industrial Truck is important to you and to your Yale Dealer. You measure the return on that investment through the performance of these trucks and the drivers who operate and the mechanics who service them safely and efficiency. The following information is intended to help you to achieve your investments objectives:

SERVICE PARTS ORDERING INSTRUCTIONS

HOW TO ORDER SERVICE PARTS

In order to prevent delay, too much communication and to have your orders filled correctly, quickly, and at the least possible cost, the following is the correct procedure to use to order replacement parts.

WHEN ORDERING PARTS

Contact your authorized Yale Industrial Truck Dealer giving them the following information:

1. Your Purchase order number.
2. Complete addresses for sending the invoice and parts.
3. Tell us how you want your parts sent. If we do not get this information, we will send the parts using the lowest priced method.
4. Correct part number(s) and description(s). Use your parts manual as a reference.
5. Model and serial number of the truck.

TECHNICAL SERVICE PUBLICATIONS

Technical literature, with detailed information, is available at a nominal fee to assist users to effectively maintain Yale Industrial Trucks in a safe, useful condition. Part Manuals with complete replacement parts identification, Service Maintenance Manuals which provide service and overhaul procedures and additional copies of the Operating Manual can be obtained from your Yale Industrial Truck Dealer.

To provide instructions for safely operating and servicing Yale Industrial Trucks, each truck is equipped with an operators manual. It describes various operating techniques and safety warnings to the operator. It contains a guide to safe maintenance practices and recommended schedules for maintenance. If the

operators manual is missing from any Yale Industrial Truck, it should be replaced. Replacement copies are available for a nominal fee from your Yale Dealer.

OPERATOR TRAINING

The Yale "Basic Operator Training" program helps industrial truck users increase their materials handling production and safety through correct lift truck operation, training, and motivation. The Yale program is based upon real life experience – not theoretical concepts. We developed a "complete" program that is totally self-contained – incorporating the most modern instructional techniques including elements of self-study, audio-visual support (both video and slides), and classroom study.

SERVICE TRAINING COURSE

Operators and Yale dealer service technicians can improve their technical ability for maintaining and repairing Yale Industrial Trucks, which decreases repair time and cost, by taking Yale Service Training courses. Different types of mechanical, electric, and electronic subjects are available. Courses can be held at customer or Dealer locations in addition to regularly scheduled courses which are held at Yale Corporate Headquarters in Greenville, NC.

SERVICE TRAINING MATERIALS

Your own service training can be supported through a complete line of Yale Service Training materials. An Index is available from your Yale Dealer which lists textbooks, audio-visual programs and films. These materials will provide your training staff with everything necessary for training your group.

For additional information or assistance in obtaining these user support publications and programs, contact:

Yale Materials Handling Corporation
1400 Sullivan Drive
Caller No. 12011
Greenville, NC 27834-2011



Yale Materials Handling Corporation
1400 Sullivan Drive
Caller No. 12011
Greenville, NC 27834-2011

550158152
©Yale Corp.
07/2016