



MS16 - BR (A959)

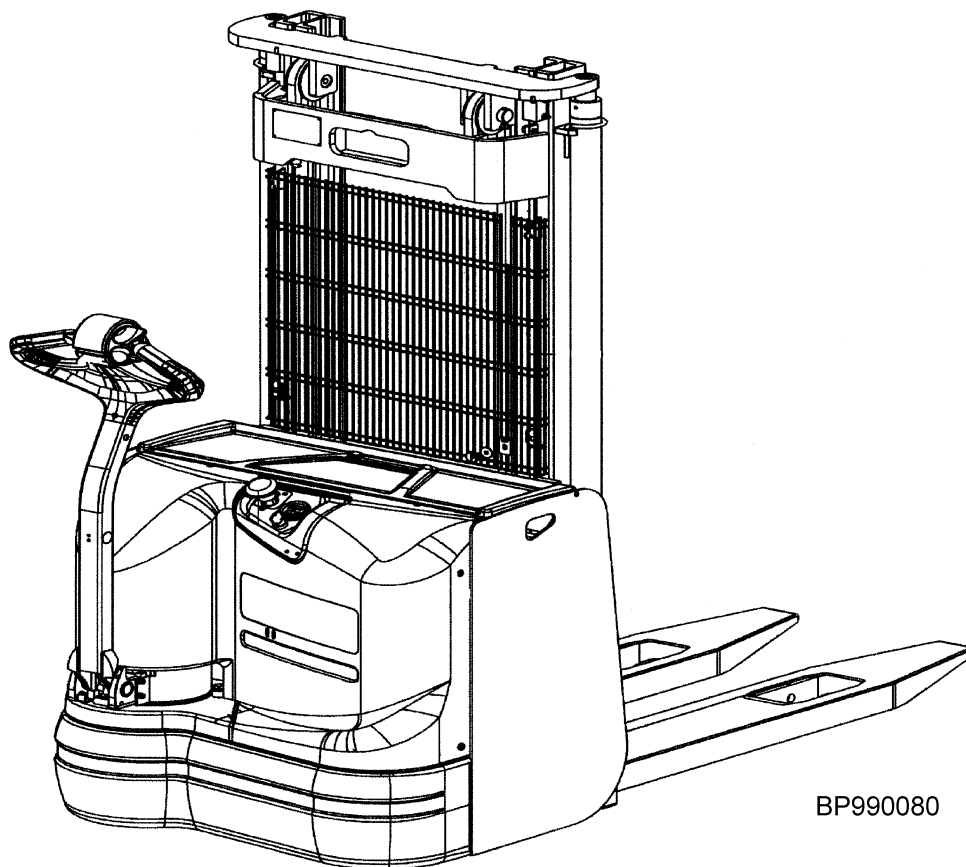

BP990080

MODEL NOMENCLATURE

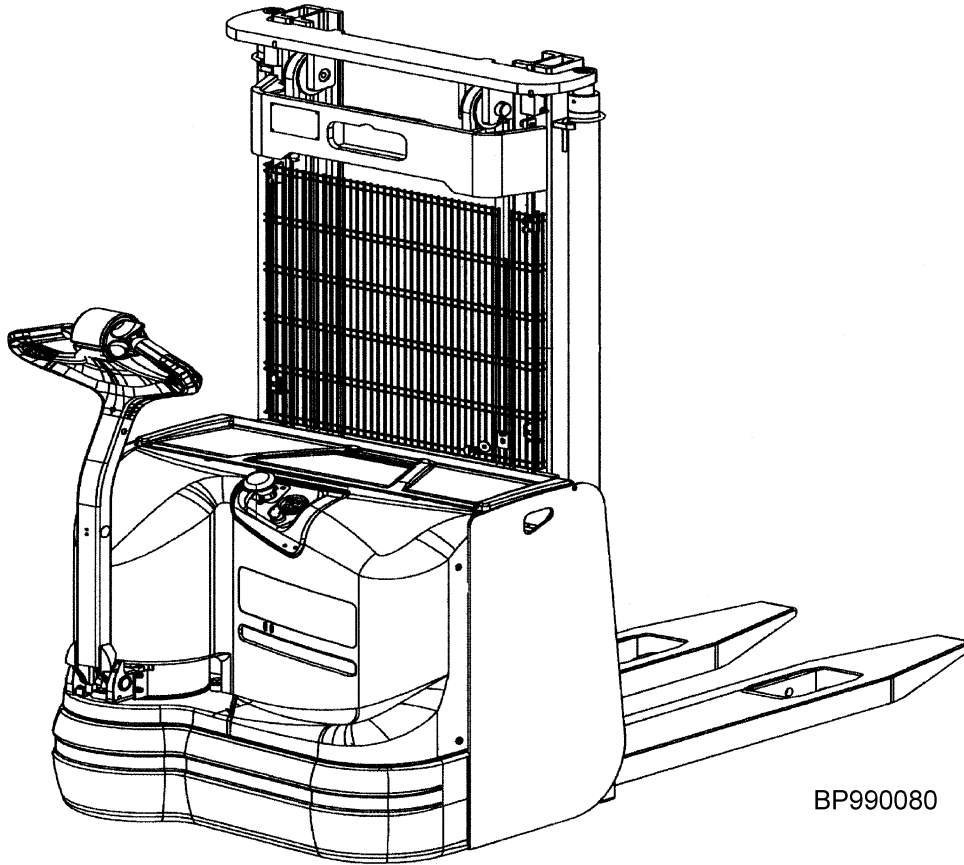

BP990080

NOTE: This parts manual contains alternate pages for certain assemblies. The truck model code can be used to determine many of the assemblies on your lift truck (power, tire type, mast type). The complete truck model and serial number are stamped into the nameplate. See for further information.

SECTIONS

1	GENERAL TRUCK
2	ELECTRICAL SYSTEM
3	LOAD WHEEL
4	HYDRAULIC SYSTEM
5	LIFT LINKAGE AND FORKS
6	MAST-TWO STAGE LIMITED FREE-LIFT
7	MAST-THREE STAGE FULL FREE-LIFT
8	NUMERICAL INDEX
9	USER SUPPORT INFORMATION

This Parts Manual is divided into 9 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.

TABLE OF CONTENTS

DESCRIPTION	PAGE
B	
BATTERY COMPARTMENT	
LATERAL EXTRACTION	1-4
C	
CONNECTORS, CONTACTS, TOOLS	2-6
CONTROL BOX	
PROPORTIONAL VERSION	1-16
COVERS AND ADHESIVE LABELS	1-2
E	
ELECTRICAL ARRANGEMENT	2-2
ELECTROMAGNETIC BRAKE	1-12
F	
FORKS CARRIAGE	
THREE STAGE FULL FREE-LIFT MAST	5-4
TWO STAGE LIMITED FREE-LIFT MAST	5-2
H	
HYDRAULIC ARRANGEMENT	4-2
HYDRAULIC CYLINDERS	
THREE STAGE FULL FREE-LIFT MAST	7-4
TWO STAGE LIMITED FREE-LIFT MAST	6-4
HYDRAULIC POWER PACK	4-4
L	
LOAD WHEELS	
TANDEM	3-2
M	
MAST	
THREE STAGE FULL FREE- LIFT	7-2
TWO STAGE LIMITED FREE-LIFT	6-2
P	
POWER CABLES	2-4
S	
SUPPORTS AND CASTER WHEELS	1-6
T	
TILLER	1-14
TRACTION MOTOR	1-10
TRACTION UNIT	1-8
W	
WIRE NET	
THREE STAGE MAST	7-6
TWO STAGE LIMITED FREE-LIFT MAST	6-6

ABBREVIATIONS QUICK REFERENCE SHEET

Listed below are abbreviations used in parts manuals to denote the following expressions:

TERM	DEFINITION	TERM	DEFINITION
Amp	Amperes	FRE	Freezer Environment
AR	As Required	in.	inches
BDI	Battery Discharge Indicators	LPG	Liquefied Petroleum Gas
BWI	Brush Wear Indicator	MAP	Manifold Absolute Pressure
CE	Communicator End	mm	millimeters
CRE	Corrosive Environment	MSTS	Microprocessor Spark Timing System
D/B	Date Break	NPT	National Pipe Threads
dbA	Decibel "A" Scale	O/S	Oversize
DE	Drive End	PTO	Power Take Off
ECH	Empty Container Handler	RPM	Revolutions per Minute
ECH-3	Empty Container Handler - 3 High Stacking	S/N	Serial Number
ECH-4	Empty Container Handler - 4 High Stacking	TMM	Truck Management Module
ECH-5	Empty Container Handler - 5 High Stacking	UL Type D	Diesel-Powered Safety Rating
ECH-6	Empty Container Handler - 6 High Stacking	UL Type DS	Diesel-Powered Safety Rating
ECH-7	Empty Container Handler - 7 High Stacking	UL Type E	Battery-Powered Safety Rating
ECM	Electronic Control Module	UL Type EE	Battery-Powered Safety Rating
ECN	Engineering Change Notice	UL Type ES	Battery-Powered Safety Rating
EEPROM	Electrically Erasable Programmable Read Only Memory	UL Type G	Gasoline-Powered Safety Rating
EPA	US Environmental Protection Agency	UL Type GS	Gasoline-Powered Safety Rating
EPROM	Electrically Programmable Read Only Memory	UL Type LP	Gas-Powered Safety Rating
		UL Type LPS	LP Gas-Powered Safety Rating
		U/S	Undersize
		UL	Underwriters Laboratory
		V	Volts

HOW TO USE THE ILLUSTRATED PARTS MANUAL

This parts manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.

The different constructions are indicated by keys and footnotes. The callouts correspond to descriptions found on the next page.

Yale Industrial Trucks

GENERAL INFORMATION

4
3
ALPHABETICAL INDEX
PAGE NO.

DESCRIPTION

ABBREVIATIONS QUICK REFERENCE SHEET A vi
ALPHABETICAL INDEX..... i

BACK-UP ALARM
BATTERY COMPARTMENT AND COVER
BATTERY CONNECTOR
BATTERY ROLLER AND RETAINER.....

CALIPER ASSEMBLY
FOOT-OPERATED PARKING BRAKE.....
CARRIAGE
SIX ROLLER.....

Yale Industrial Trucks

NUMERICAL INDEX

PART NO.	PG.	ITEM	PART NO.	PG.	ITEM	PART NO.	PG.	ITEM
580023381	2.43	28	580024449	2.33	10			
580023382	2.43	29	580024450	2.33	14			
580023384	2.43	26	580024451	2.33	15			
580023385	2.42	7	580024452	2.33	16			
580023425	6.19	11	580024453	2.33	18			
580023479	2.43	22	580024454	2.33	19			
580023592	8.24	10	580024455	2.33	27			

SECTIONS

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10
- 11
- 12
- 13

Yale Industrial Trucks

KEY:
A: Diesel
B: Gasoline and LPG

TRANSMISSION HOUSING
(= S/N D807-2639)

ITEM	PART NO.	DESCRIPTION	QTY	
			A	B
1	920767004	Transmission	1	1
2	924784300	Case Assembly	1	1
3	910228400	Bearing Cap	4	4
4	502565902	Capscrew	2	2
5	502565903	Washer	1	1
6	912979300	Cover	2	2
7	912452100	Cotter Pin	4	4
8	922904903	O-Ring	1	1
9	906427700	Plug	4	4
10	908524100	Housing	22	22
11	931005906	Pin	39	39
12	449022013	Bolt	1	1
13	911264400	Lockwasher	1	1
14	449001052	Hydraulic Pump (see Page 6.28)	8	8
15	502565901	Gasket	1	1
16	911358400	Capscrew	1	1
17	904330100	Washer	1	1
18	913840401	Temperature Switch	9	9
19	930808907	Breather	9	9
20	449015044	Dipstick	2	2
21	449001003	Screw	3	3
22	449001048	Nut	3	2
23	449022017	Capscrew	4	4
24	931014913	Lockwasher	4	4
25	922904901	Capscrew	1	1
26	901888650	Plug	1	1
	902050871	Repair Kit (Include Item 7)		
		Repair Kit (Include Item 14)		

This Parts Manual is divided into 13 major sections which be made by placing the right thumb on the tab of the des pages to the corresponding tab.

3.21

YP990006

HOW TO FIND THE DESIRED PART NUMBER

WHEN THE PART NUMBER AND THE NEXT HIGHER ASSEMBLY IS NOT KNOWN:

1. Determine the function and application of the part required. Turn to the Sections Page. Choose the general area of reference most likely to include the part.
2. Turn to the section you chose. Use the Section Table of Contents to determine the assembly which would normally contain the part required. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS NOT KNOWN AND THE NEXT HIGHER ASSEMBLY IS KNOWN:

3. Determine the assembly the required part is used on. Turn to the Table of Contents (Page i).
4. Locate the assembly the required part is used on and turn to the page indicated for that assembly. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS KNOWN:

5. Use the Numerical Index (Page 8-1) to find the part number. Turn to the page listed and locate the part as indicated by the item number.

GENERAL:

The assembly breakdowns include part numbers, descriptions, quantities required, keys and footnotes to help in selecting correct parts.

6. Parts Supersession Information. Part numbers that have this history will be displayed in the parts list in the order that they were superseded (from oldest to newest). The superseded part numbers will be shown with a line through them.

Five periods in the PART NO. column (.) indicate that the part is either *Not Serviced Separately* or there is a reference to another figure. A figure reference is denoted by a pointing hand followed by a parts page number in the DESCRIPTION column (☞ 7A56)

7. Keys are used to show two or more similar assemblies, RH and LH assembly parts, etc. Select the appropriate key, "A", "B", "C", "D", or "E" and the corresponding quantity column to find the required parts. Two periods in the QTY column (..) indicate that the part is not used for that assembly.
8. Indented descriptions under the DESCRIPTION column are used to indicate assemblies and

subparts of assemblies. In the example on the previous page, *BEARING CAP* (Item 2) is a subpart of the major assembly *CASE*.

9. Quantities shown are for one assembly. The quantities of the subpart *BEARING CAP* are indicated as two and two. This means two per *CASE* assembly.
10. Serial number breaks identify the most current parts information and are shown as follows:
 - **S/N A810N2639**
Indicates last serial number affected.
 - S/N A810N2640** →
Indicates the first serial number affected.
 - S/N A810N1553 ↔ S/N A810N3291**
Indicates a range of serial numbers affected.

ECN numbers for pending serial numbers are shown to allow for the inclusion of the most current parts information and are identified as follows:

- **S/N Pending Per ECN 63243**
Indicates a pending serial number for last unit affected.
- S/N Pending Per ECN 63243** →
Indicates a pending serial number for first unit affected.

Date breaks are used to indicate when a change occurred but a subsequent serial number break was not recorded. This is an arbitrary date usually based on the ECN release and are identified as follows:

- **D/B 3/00**
Indicates that a change occurred sometime within that month for the item affected.
- D/B 3/00** →
Indicates that a change occurred sometime within that month for the item affected.
- D/B 3/00 ↔ D/B 4/00**
Indicates a range of production dates of the item affected.


Contact your local dealer for Yale lift trucks for serial number information for items with a ECN or a date break.

ORDERING PARTS:

When ordering replacement parts, give the unit serial number, part number, name of part and quantity required.

For any further information on parts, service, or ordering, consult your local dealer for Yale lift trucks.


IDENTIFICATION OF TRUCK SERIAL NUMBERS

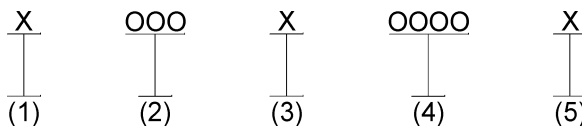

NOTE: Serial Number breakdown is only for trucks built after 1994.

- (1) and (2) The first letter and three numbers indicate the truck unit code.
- (3) The second letter indicates the plant of manufacture.
- (4) The four or five digit number indicates the production sequence number of the truck.
- (5) The final letter indicates the year of manufacture starting with "A" in 1957, 1980, and 2003.
The letters "I", "O", and "Q" will not be used.

For pending serial numbers contact your local dealer for Yale lift trucks.

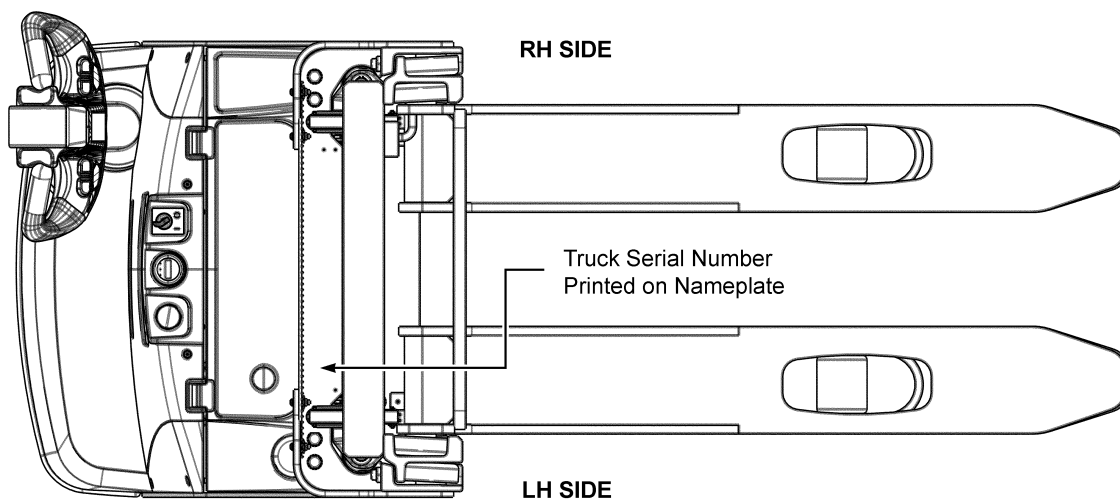

BP990015

Parts referred to in this book as right or left hand parts are in accordance with the illustration above.



PUBLICATIONS

Every new lift truck is provided with an OPERATING MANUAL. This manual has information that the operator must know for inspection and operation of the lift truck.

SERVICE MAINTENANCE MANUALS, which provide service and overhaul procedures, and PARTS

MANUALS with complete replacement part identification, are available at a nominal fee from your Yale dealer to assist users in effectively maintaining Yale lift trucks in a safe, useful condition. See the list below for information on ordering specific publications for this model lift truck.

PUBLICATION	YALE PART NUMBER
Operating Manual.....	550138871
Service Manual (Complete).....	524301698
Parts Manual.....	550138873

MASTER PART SHEET CROSS-REFERENCE

NOTE: Throughout this manual are references to Part Sheet Numbers. These references are usually found after the description of a part or assembly. The Part Sheet Number is found on the upper left- or righthand corner of the parts pages.

EXAMPLE:

ITEM	PART NO.	DESCRIPTION	QTY
31	505965530	Steering Cylinder (6E67 [Figure 4-3])	1
32	504224261	Pin.....	4

Below is a numerical listing of Part Sheet Numbers found in this parts book and what page number they are on.

PART SHEET	PAGE	PART SHEET	PAGE	PART SHEET	PAGE
B10109.....	1-2	B10117.....	2-2	B10124.....	5-4
B10110.....	1-4	B10118.....	2-4	B10125.....	6-2
B10111.....	1-6	B10119.....	2-6	B10126.....	6-4
B10112.....	1-8	B10120.....	3-2	B10127.....	6-6
B10113.....	1-10	B10121.....	4-2	B10128.....	7-2
B10114.....	1-12	B10122.....	4-4	B10129.....	7-4
B10115.....	1-14	B10123.....	5-2	B10130.....	7-6
B10116.....	1-16				



NOTES

Notes section with 20 horizontal lines for writing.


1

GENERAL TRUCK

SECTION 1 GENERAL TRUCK

DESCRIPTION	PAGE
BATTERY COMPARTMENT	
LATERAL EXTRACTION	1-4
CONTROL BOX	
PROPORTIONAL VERSION	1-16
COVERS AND ADHESIVE LABELS	1-2
ELECTROMAGNETIC BRAKE	1-12
SUPPORTS AND CASTER WHEELS	1-6
TILLER	1-14
TRACTION MOTOR	1-10
TRACTION UNIT	1-8


COVERS AND ADHESIVE LABELS (FIGURE 1-1)

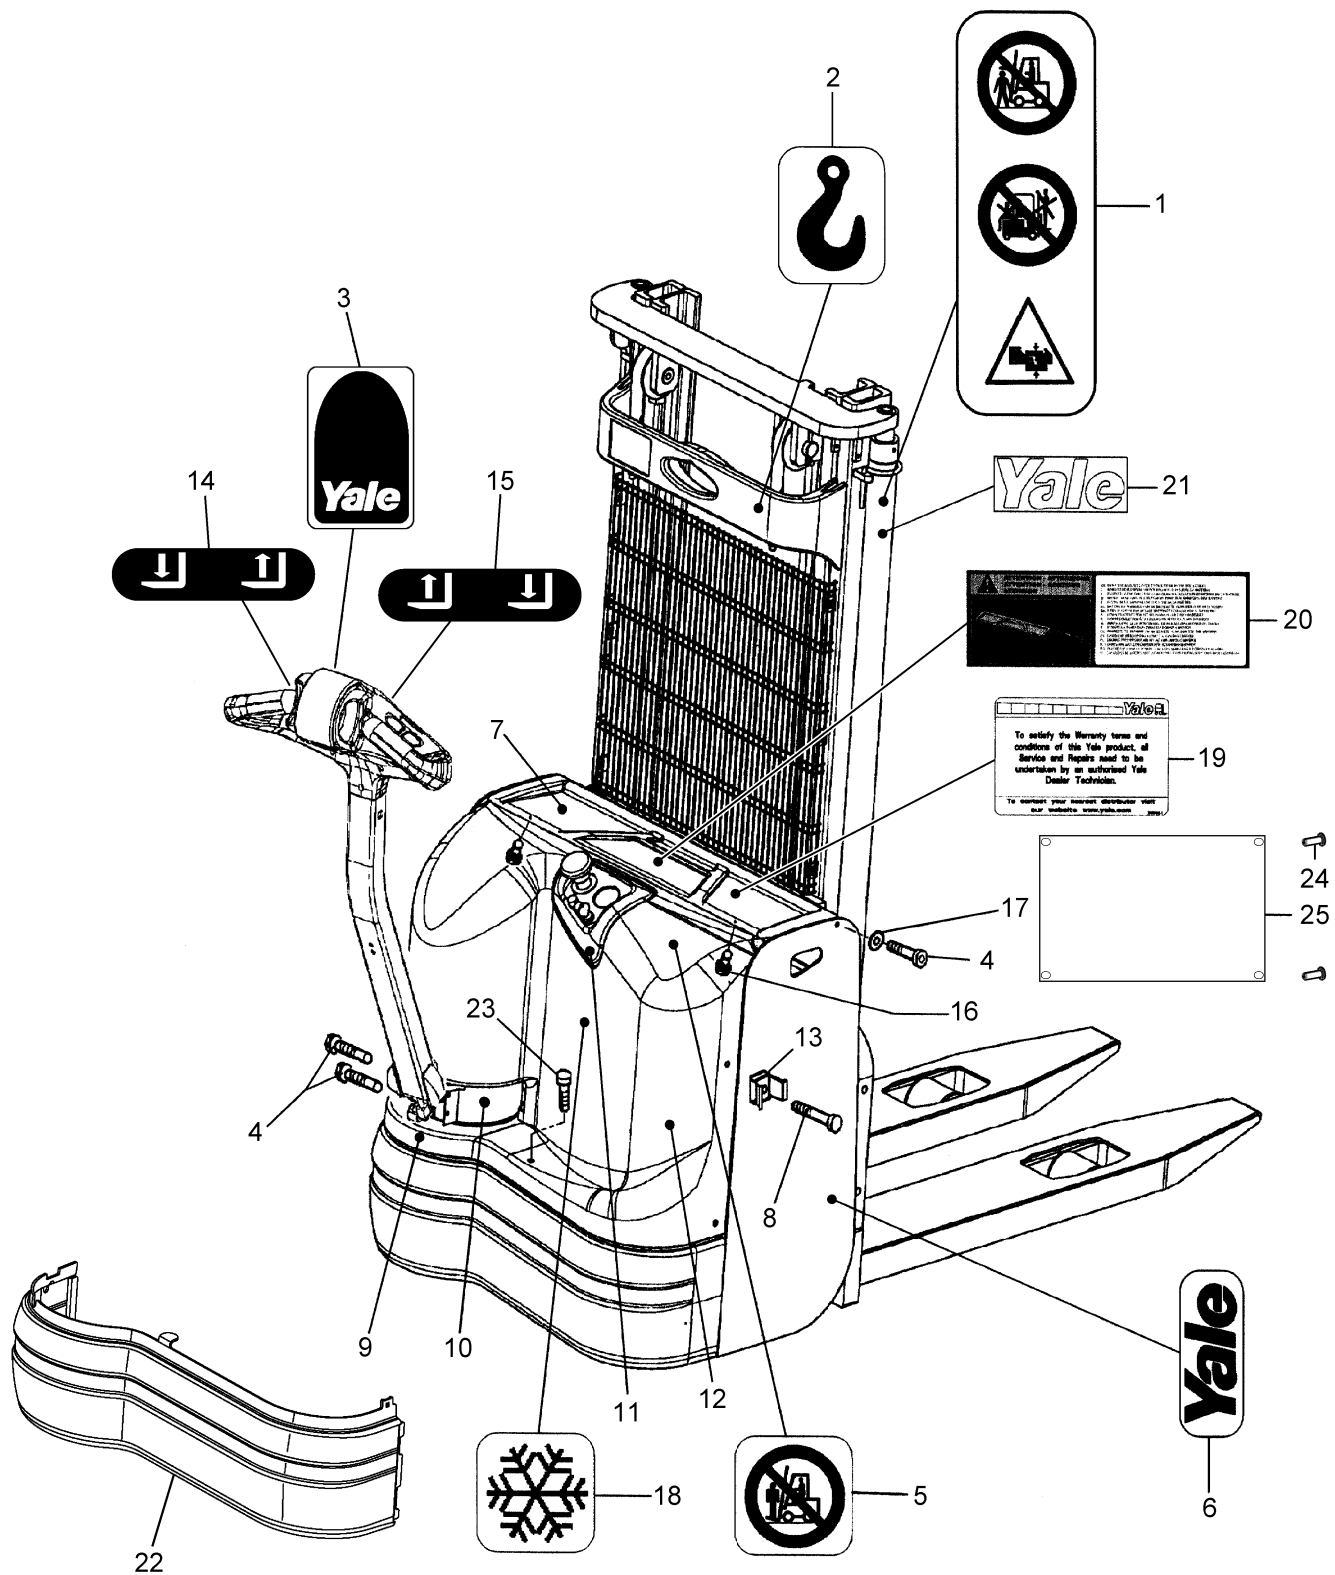

YP120352

COVERS AND ADHESIVE LABELS


ITEM	PART NO.	DESCRIPTION	QTY
1	272303000	Label (No Step/No Ride/Pinch Point)	2
2	272213500	Label (Lifting Hook)	1
3	524139322	Label (Tiller Handle Yale)	1
4	580022962	Capscrew	1
5	272213200	Label (No Riders)	1
6	272219100	Label (Yale Logo)	2
7	582057231	Cover	1
8	272105600	Screw	3
9	524141524	Cover , MDU Plate	1
10	580013326	Cover , Tiller Ring	1
11	524327019	Cover	1
12	524141523	Cover	1
12	550060285	Cover , Key-Pad (Option)	1
13	580093734	Clip	4
14	582020332	Label (LH Switch Functions)	1
15	582015332	Label (RH Switch Functions)	1
16	277458400	Cushion	2
17	580012959	Spacer	2
18	580014880	Label (Snowflake)	1
19	524216191	Label (Warranty) (Brazilian)	1
20	580053923	Instruction Label	1
21	524242350	Label (Yale Logo)	2
22	580053763	Bumper	1
23	272033100	Screw	1
24	580038954	Rivet	4
25	582010233	Cover	1

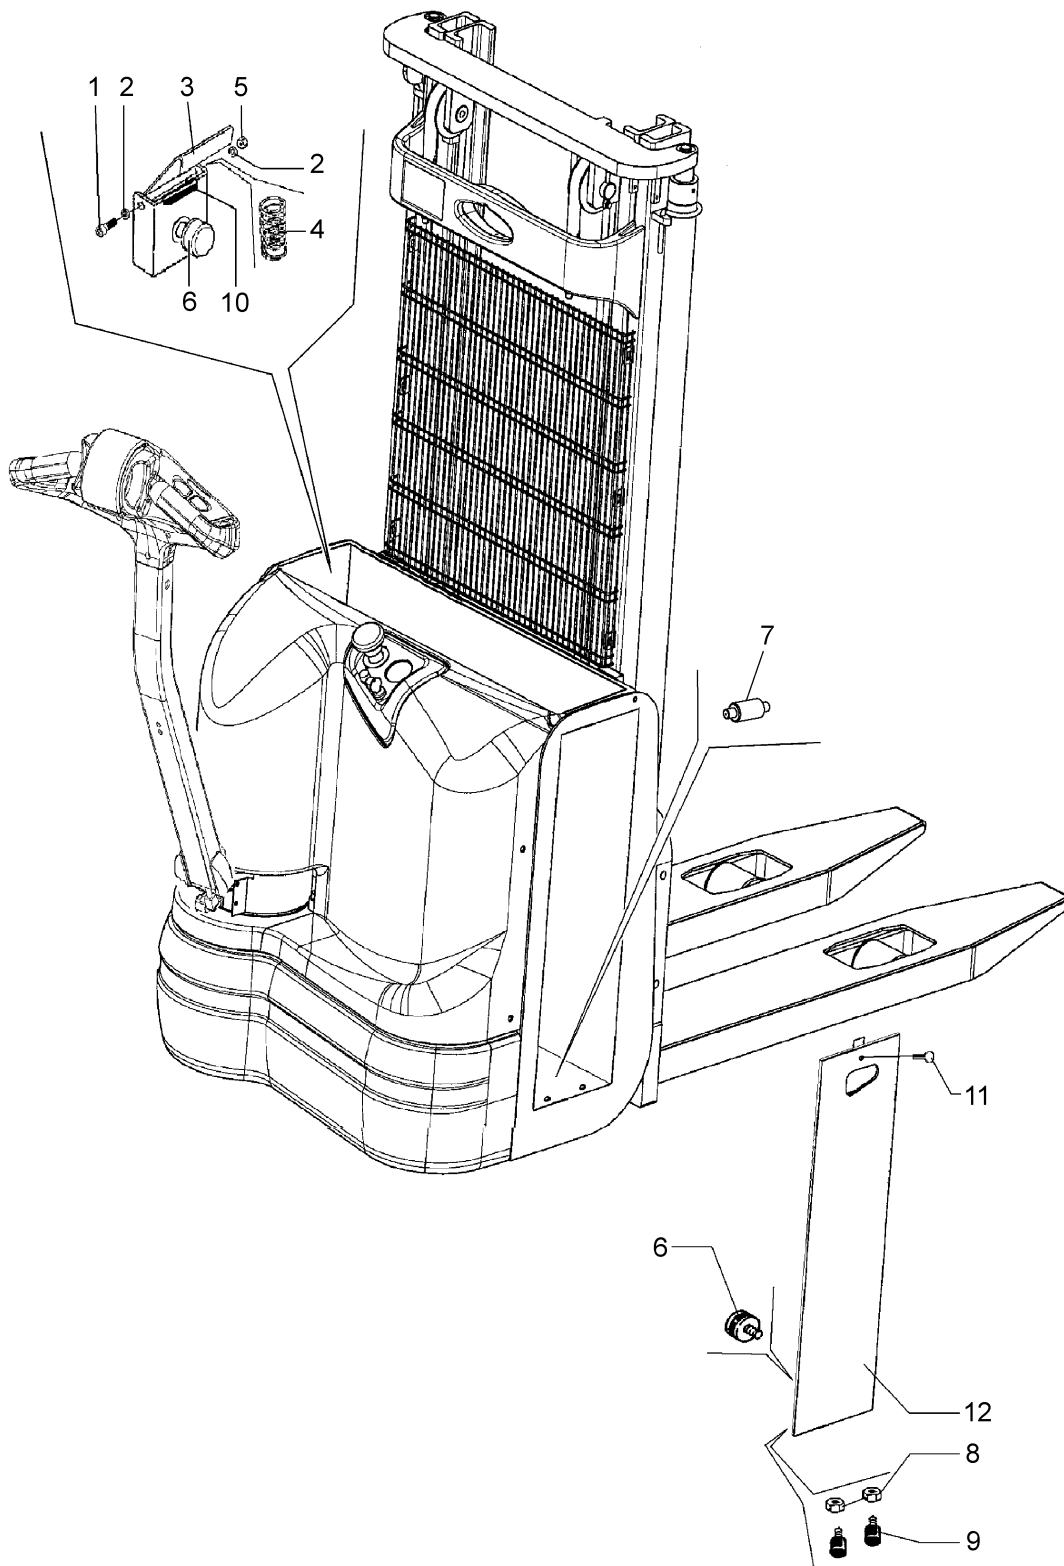BATTERY COMPARTMENT (FIGURE 1-2)
LATERAL EXTRACTION

BP120573

BATTERY COMPARTMENT LATERAL EXTRACTION

ITEM	PART NO.	DESCRIPTION	QTY
1	449001014	Screw	1
2	449021001	Washer	1
3	582057234	Hook	1
5	449015098	Nut	1
6	272470200	Bumper	2
7	582023708	Roller	5
8	449015135	Nut	2
9	580013298	Shock Absorber	2
11	582057232	Key	1
12	550141841	Cover	1
13	582057234	Hook	1

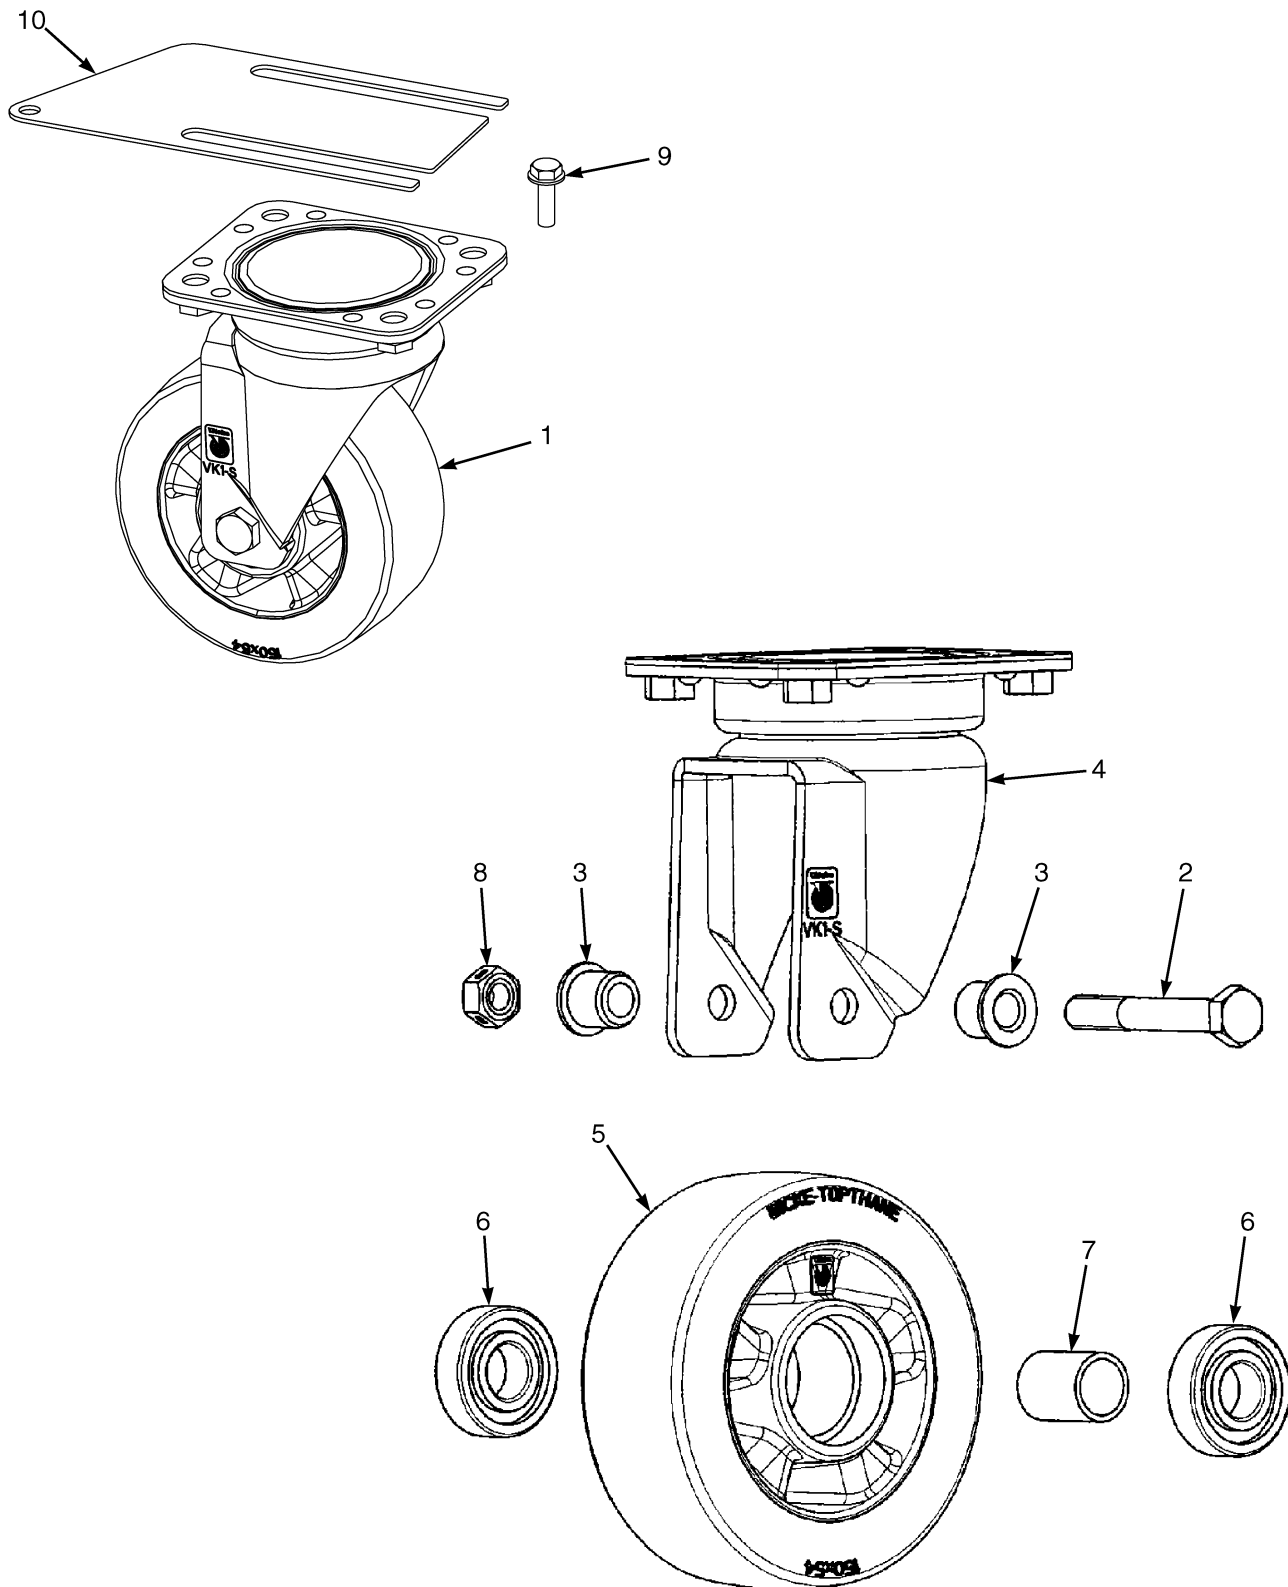
SUPPORTS AND CASTER WHEELS (FIGURE 1-3)

BP121080

SUPPORTS AND CASTER WHEELS

ITEM	PART NO.	DESCRIPTION	QTY
1	580092328	Caster Wheel Assembly	1
2	931015914	Capscrew	1
3	580037730	Bushing	2
4	580092729	Swivel Fork	1
5	580092728	Wheel	1
6	582057746 015120100	Ball Bearing	2
7	580092727	Axle Shaft	1
8	524148554	Locknut	1
9	580013314	Screw	4
10	580017382	Spacer (1 mm)	AR
10	580013312	Spacer (2 mm)	AR


TRACTION UNIT (FIGURE 1-4)

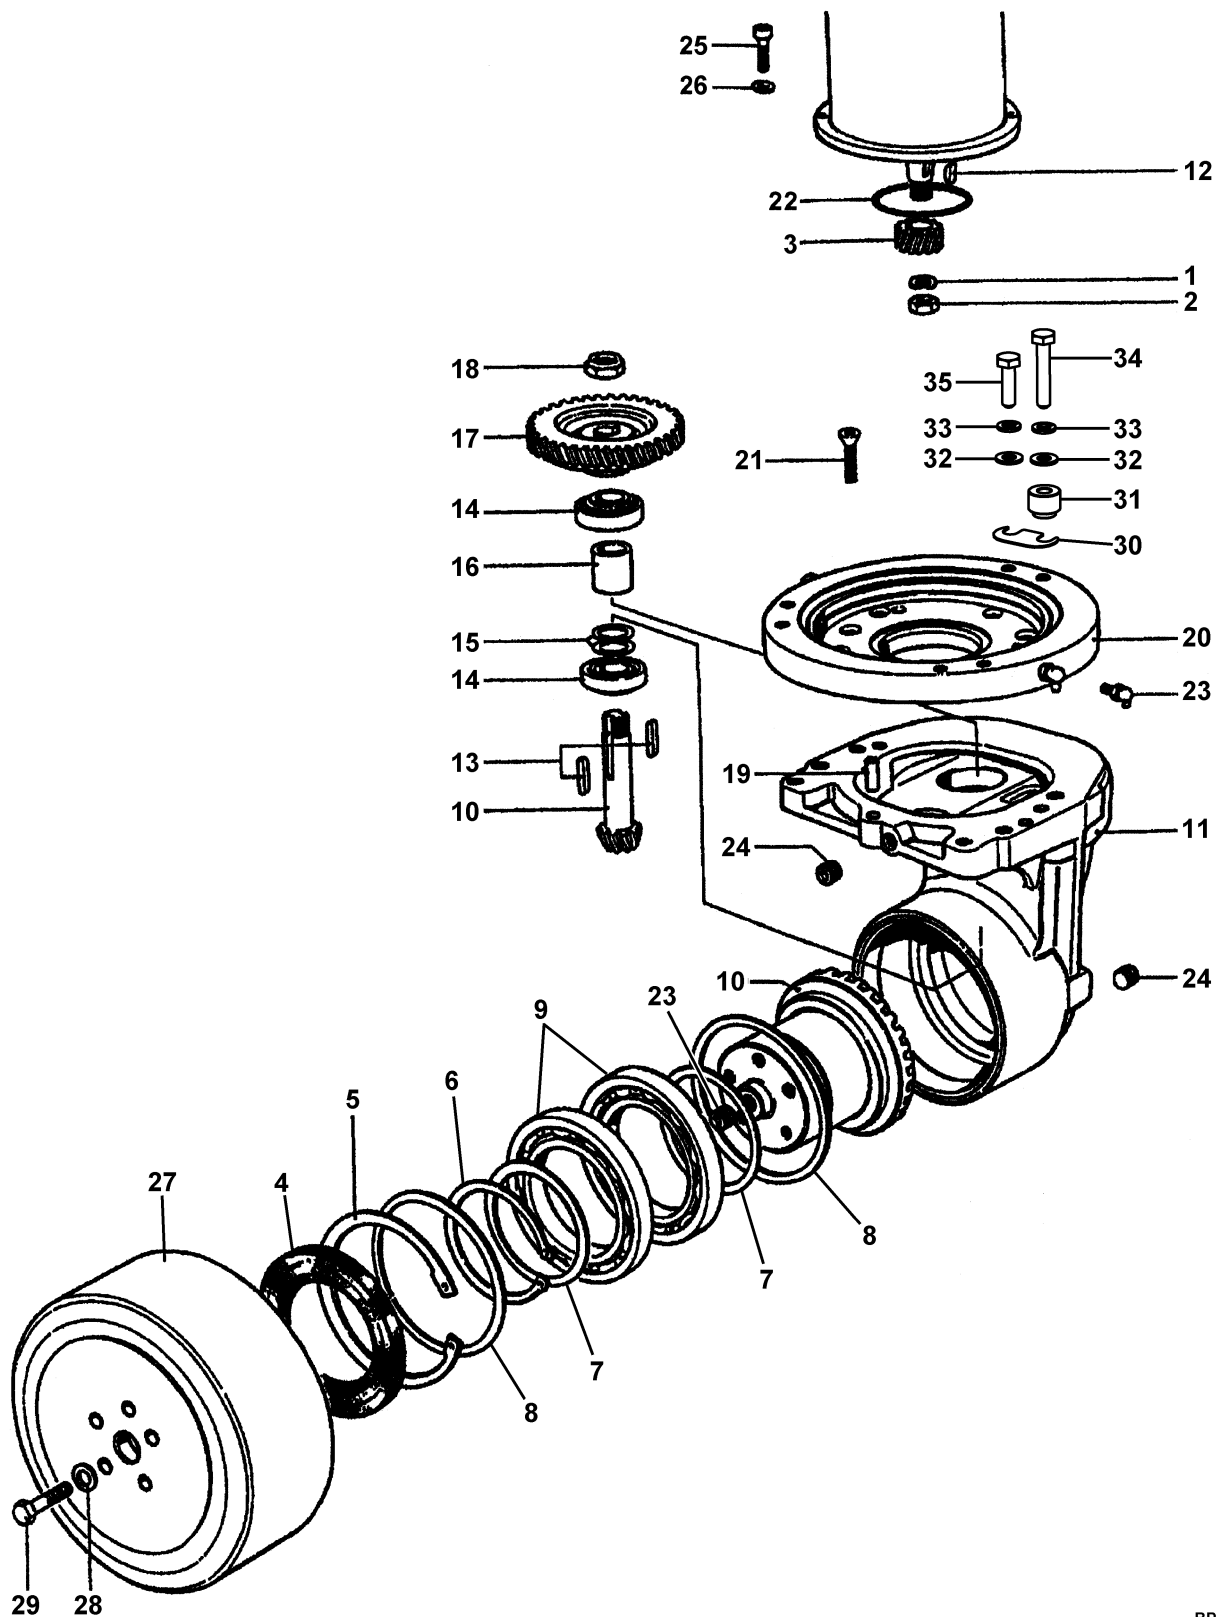

BP121081

TRACTION UNIT

ITEM	PART NO.	DESCRIPTION	QTY
	580040114	Transmission Assy	1
1	502566901	Washer	1
2	449015014	Nut	1
3	580041303	Gear	1
4	580014438	Seal	1
5	501989923	Snap Ring	1
6	501989907	Snap Ring	1
7	580014439	Shim	1
8	580014440	Shim	1
9	580014441	Bearing	2
10	580014457	Kit-Gear and Pinion	1
11	580041309	Transmission Housing	1
12	272393000	Key	1
13	273129300	Key	2
14	272019300	Bearing	2
15	272006900	Shim	1
16	272040800	Spacer	1
17	580041302	Gear	1
18	272386700	Nut	1
19	272090800	Screw	2
20	580014446	Bearing	1
21	900005220	Capscrew	6
22	272013700	Gasket	1
23	580014448	Fitting	2
24	580014447	Drain Plug	3
25	580023467	Capscrew	3
26	272053000	Screw	3
27	580013479	Drive Wheel (Tophane, 92Sh)	1
27	580022041	Drive Wheel (Rubber, 73Sh)	1
27	580013477	Drive Wheel (Non-Marking, 75Sh)	1
27	580013478	Drive Wheel (Gripped) (Cold Storage, 75Sh)	1
27	580038927	Drive Wheel (Antistatic Vulkollan 92Sh)	1
27	580041174	Drive Wheel (Vulkollan, 92Sh)	1
28	449021010	Washer	5
29	582021324		
	449001058	Capscrew	5
30	580054707	Shim	AR
31	582002469	Block	2
32	449021006	Washer	6
33	504057795		
	449022013	Lockwasher	6
34	449001301	Capscrew	2
35	449001015	Capscrew	4

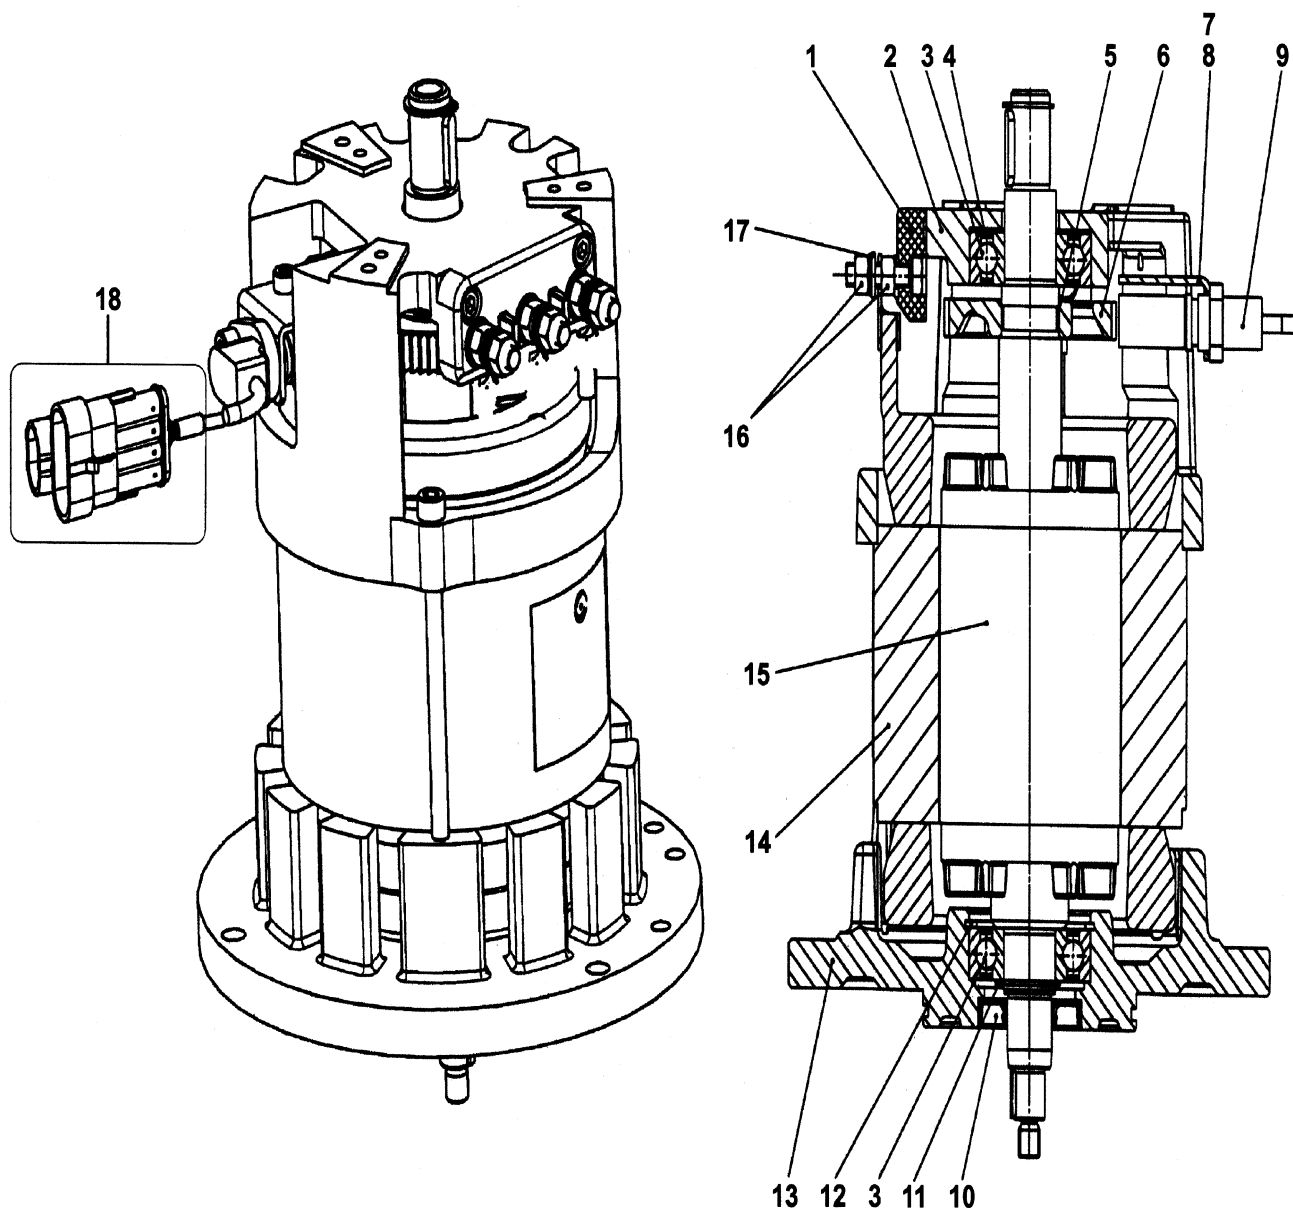
TRACTION MOTOR (FIGURE 1-5)

BP100028

TRACTION MOTOR

ITEM	PART NO.	DESCRIPTION	QTY
	580090778	Electric Motor Assembly	1
1	580094593	Terminal	1
2	580094595	End Cover	1
3	580014499	Bearing	2
4	580070960	Washer	1
5	580094601	Ring	1
6	580094599	Wheel	1
7	580094597	Support Plate	1
8	580094598	Spacer	1
9	580094596		
	582005003	Speed Sensor	1
10	580094623	Oil Seal	1
11	015915100	Snap Ring	1
12	640046901	Snap Ring	1
13	580094594	End Cover	1
14	580094592	Stator	1
15	580094600	Rotor	1
16	449015002	Nut	6
17	504057745	Disk	3
18	580059760	Sensor (Temperature)	1



ELECTROMAGNETIC BRAKE (FIGURE 1-6)

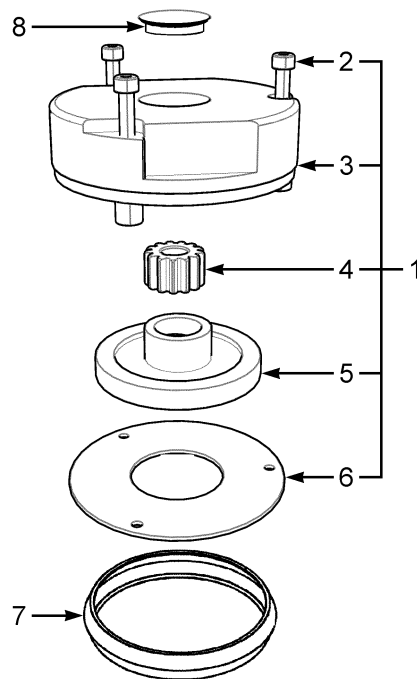

BP040193

ITEM	PART NO.	DESCRIPTION	QTY
1	582026221		
	582053921	Brake Assy	1
2	580094788	Capscrew	3
3	582031453	Coil	1
4	580035384	Hub	1
5	582031452	Brake Disk	1
6	580088527	Flange	1
7	580088528	Band	1
8	524213454	Dust Cap	1

[illegible]

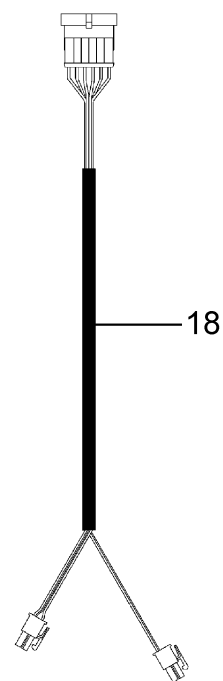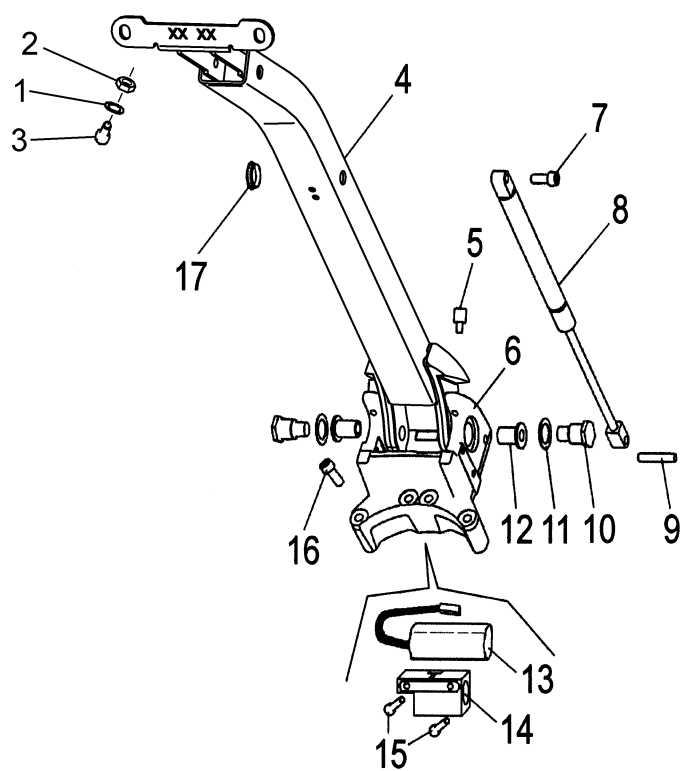TILLER (FIGURE 1-7)

BP220261


TILLER

ITEM	PART NO.	DESCRIPTION	QTY
1	449021006	Washer	2
2	931701910	Nut	2
3	580023593	Capscrew	2
4	550142266	Tiller Wldmt	1
5	580013298	Shock Absorber	2
6	580013129	Casting	1
7	272106000	Screw	1
8	580035765	Shock Absorber	1
9	272087200	Pin	1
10	272027800	Pin	2
11	272006400	Washer	2
12	272015100	Bushing	2
13	580013974		
	582001198	Sensor	1
14	272330200	Support	1
15	272466100	Screw	2
15	580008011	Capscrew	2
15	a 940004903	Washer	2
16	580013482	Screw	4
16	932201911	Capscrew	4
16	a 449021001	Washer	4
17	273058800	Plug	1
18	582034038	Wire Harness , Tiller	1

FOOTNOTES:

a Not Illustrated

CONTROL BOX (FIGURE 1-8) **PROPORTIONAL VERSION**

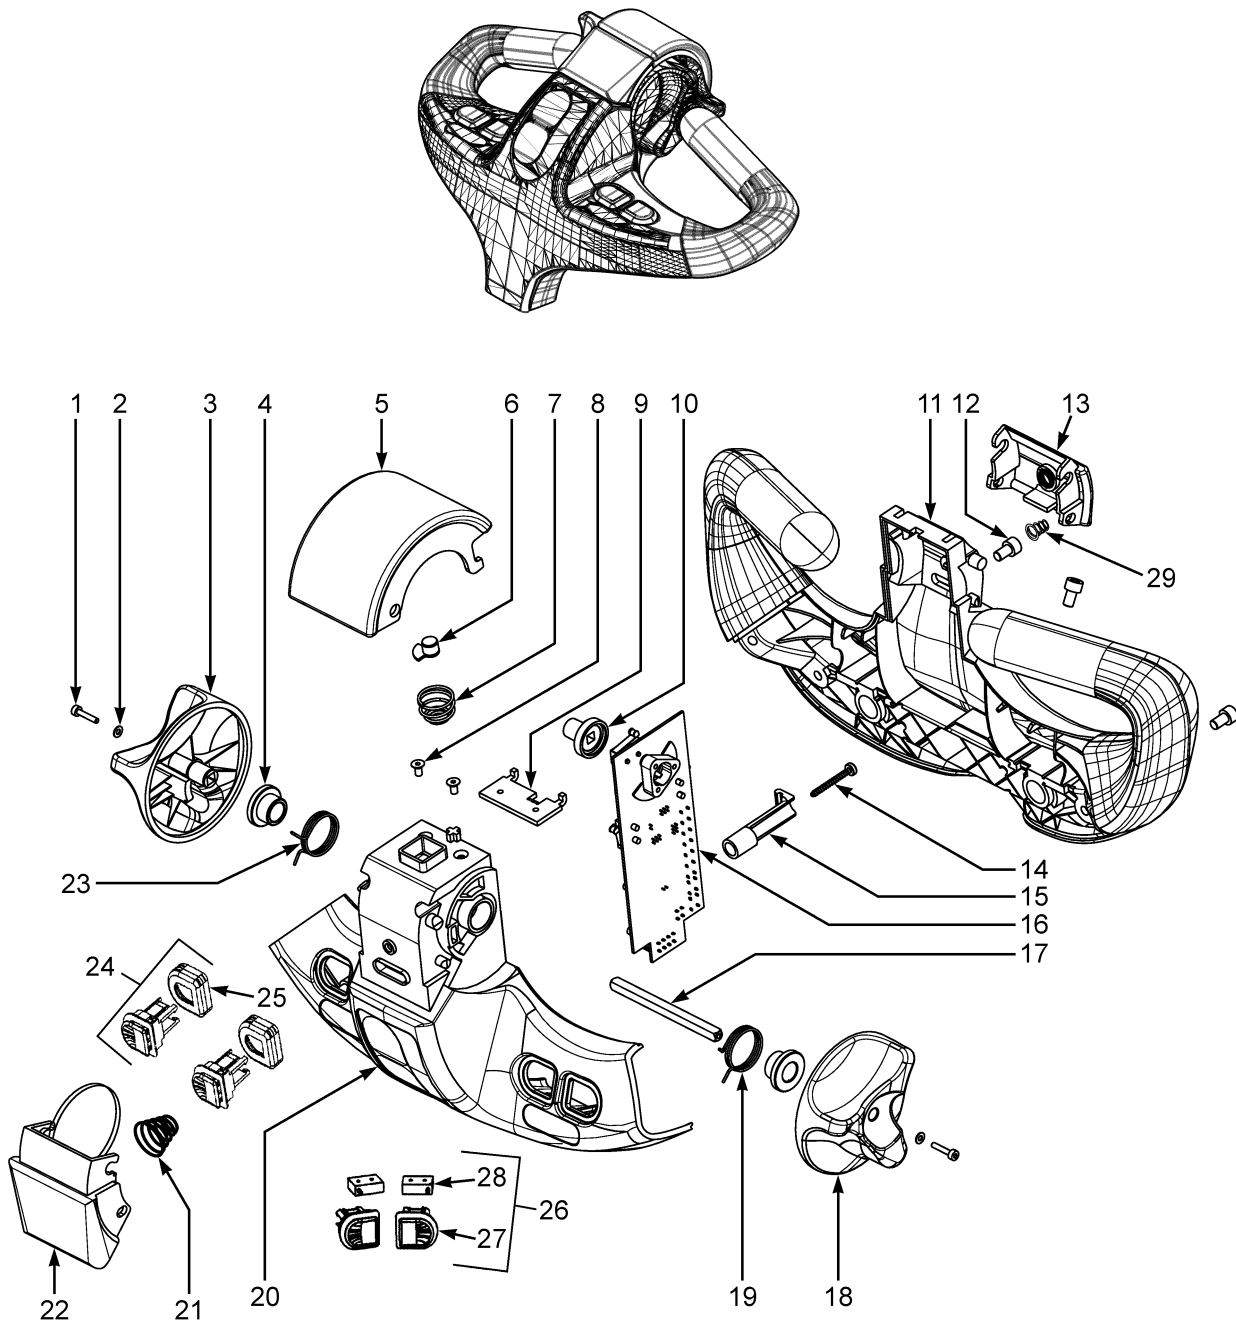

BP220257

CONTROL BOX PROPORTIONAL VERSION

ITEM	PART NO.	DESCRIPTION	QTY
	582033654	Tiller Head	1
1	580026296	Capscrew	2
2	940004902	Washer	2
3	582007131	Accelerator Control Knob (RH Butterfly)	1
4	580012962	Bushing	2
5	582010514		
	580011991	Cover (Belly Switch)	1
6	580082841	Locking Lever (Belly Spring)	1
7	580038175	Spring (Cover, Belly)	1
8	580034974	Capscrew	2
9	582019747	Plate	1
10	582015784	Bushing	1
11	524338448	Tiller Head Assembly (Lower Half) (Composite)	1
12	932200901	Capscrew	3
13	582007134	Cover , Rear (For Push Button)	1
14	524292775	Screw	1
15	580079167	Support Clip	1
16	582015751	Printed Circuit Board (MULTICAN)	1
17	582010515		
	580013106	Camshaft , Direction Control	1
18	582007130	Accelerator Control Knob	1
19	580060389	Spring , Directional Control Return	1
20	582015752		
	524228248	Tiller Head (Upper Half)	1
21	580012969	Spring (Horn/Snail)	1
22	582005203	Horn Button Cover	1
23	580012970	Spring , Directional Control Return	1
24	582020280	Push Button Switch Assy (Proportional)	2
25	580055435	Rubber Cover (Proportional Version)	1
26	582007128	Push Button Switch Assembly (On-Off)	2
27	582015753	Push Button Switch (On-Off)	1
28	580026824	Microswitch (On-Off, Molex Connector)	1
29	524144372	Spring (Quick Pick)	1




NOTES

Lined area for notes, consisting of 20 horizontal lines.

SECTION 2 ELECTRICAL SYSTEM

DESCRIPTION	PAGE
CONNECTORS, CONTACTS, TOOLS	2-6
ELECTRICAL ARRANGEMENT	2-2
POWER CABLES	2-4

ELECTRICAL ARRANGEMENT (FIGURE 2-1)

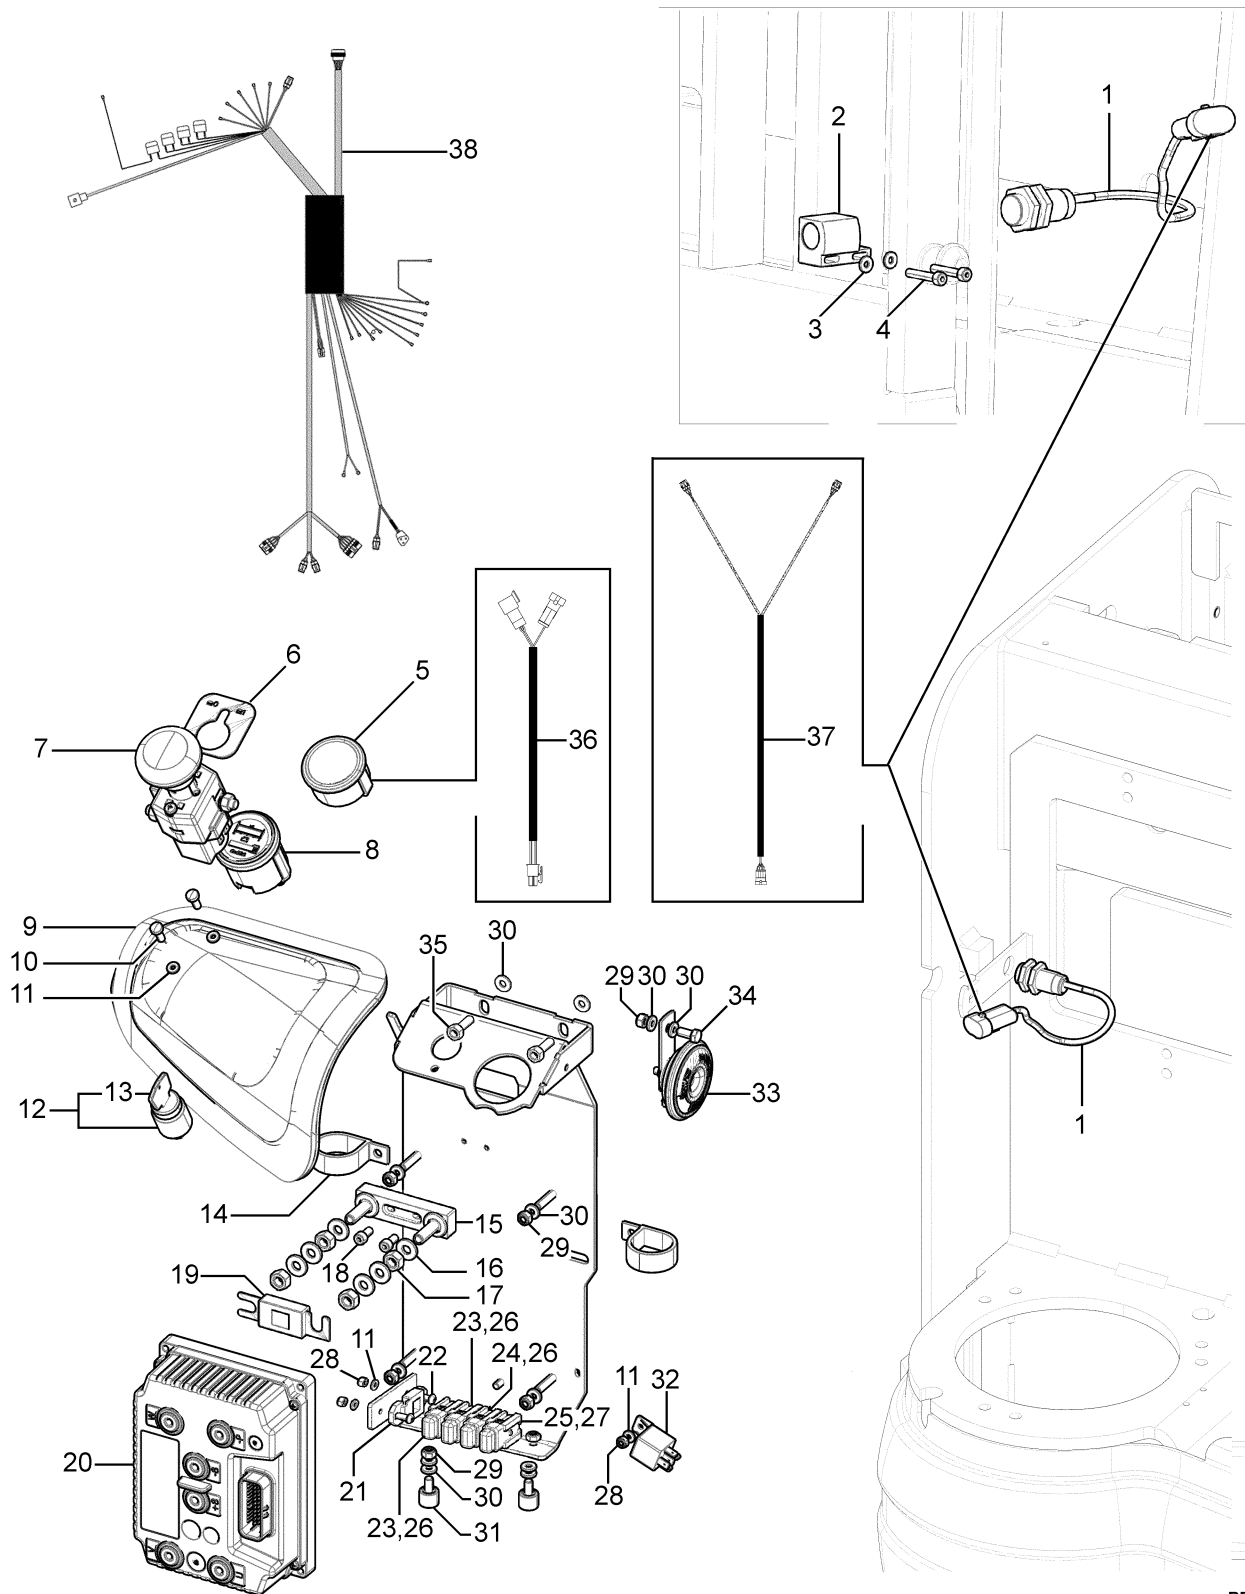


BP081243

ELECTRICAL ARRANGEMENT

ITEM	PART NO.	DESCRIPTION	QTY
7	580092138	Switch (Emergency Disconnect)	1
8	273004100	BDI And Hourmeter	1
9	524327019	Cover	1
10	520038883	Screw	2
11	449021002	Washer	5
12	580094362		
	582016205	Ignition Switch	1
13	582017910	Key	1
14	580001407	Clamp	2
15	582036781	Isolator	1
16	449021001	Washer	6
17	449015014	Nut	4
18	580009061	Screw	2
19	580077549	Fuse (300 Amp)	1
20	580093629	Controller	1
21	580063867	Support	1
22	506395532	Capscrew	2
23	505966599	Fuse (3 Amp)	2
24	505972528	Fuse (5 Amp)	1
25	505972555	Fuse (10 Amp)	1
26	580088450	Fuse Holder	3
27	580066344	Fuse Holder (10 Amp)	1
28	449015112	Locknut	3
29	449015135	Nut	7
30	449021003	Washer	12
31	580013298	Shock Absorber	2
32	582046477	Relay (Mini SPDT WP with Diode)	1
33	580091806	Horn	1
34	449001412	Capscrew	1
35	449001170	Capscrew	2
38	580093385	Wire Harness	1

POWER CABLES (FIGURE 2-2)

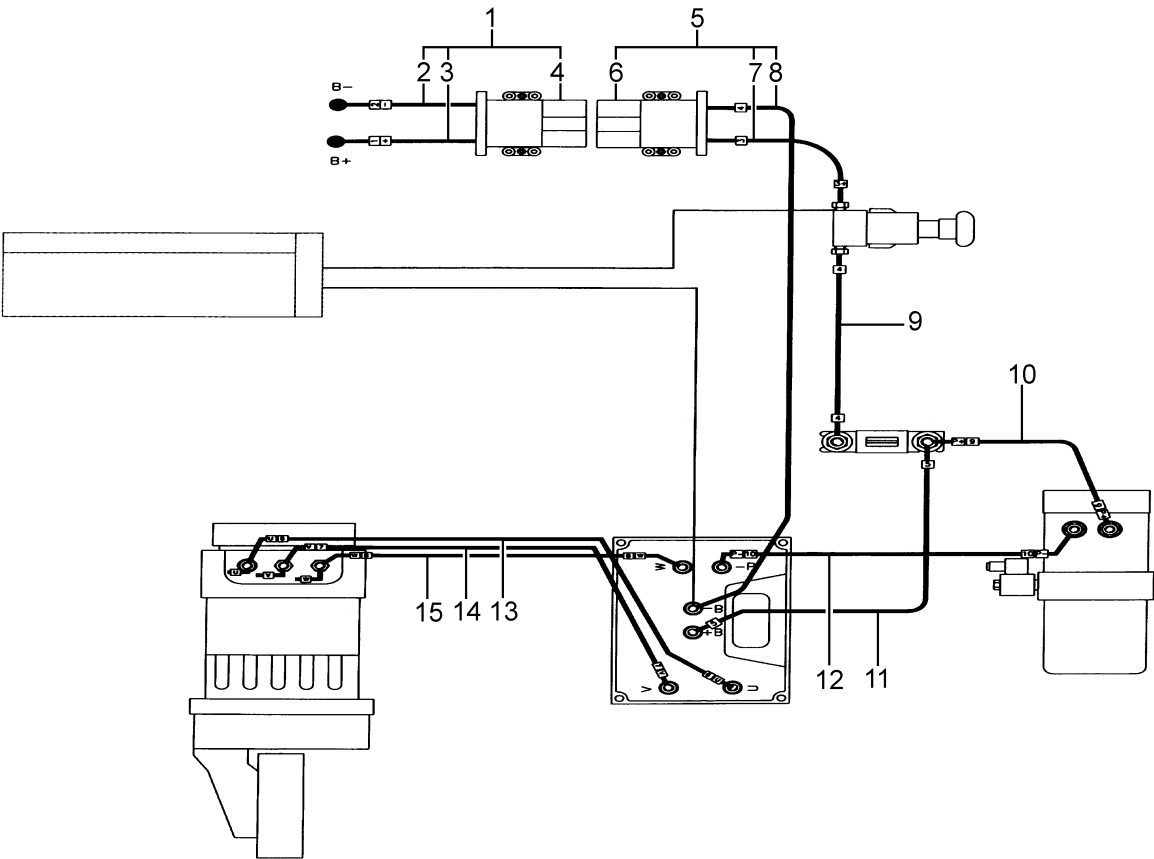


BP081234

ITEM	PART NO.	DESCRIPTION	QTY
1	580039028	Battery Connector	1
2	580039027	Battery Cable (-)	1
3	580039026	Battery Cable (+)	1
4	580039025	Battery Connector Housing	1
5	580039032	Battery Connector and Cable Assembly	1
6	580039029	Battery Connector Housing	1
7	580039030	Battery Cable (+)	1
8	580039031	Battery Cable (-)	1
9	580093537	Power Cable	1
10	580093319	Power Cable	1
11	580093321	Power Cable	1
12	580093320	Power Cable	1
13	580093316	Power Cable	1
14	580093317	Power Cable	1
15	580093318	Power Cable	1

[illegible]

CONNECTORS, CONTACTS, TOOLS (FIGURE 2-3)

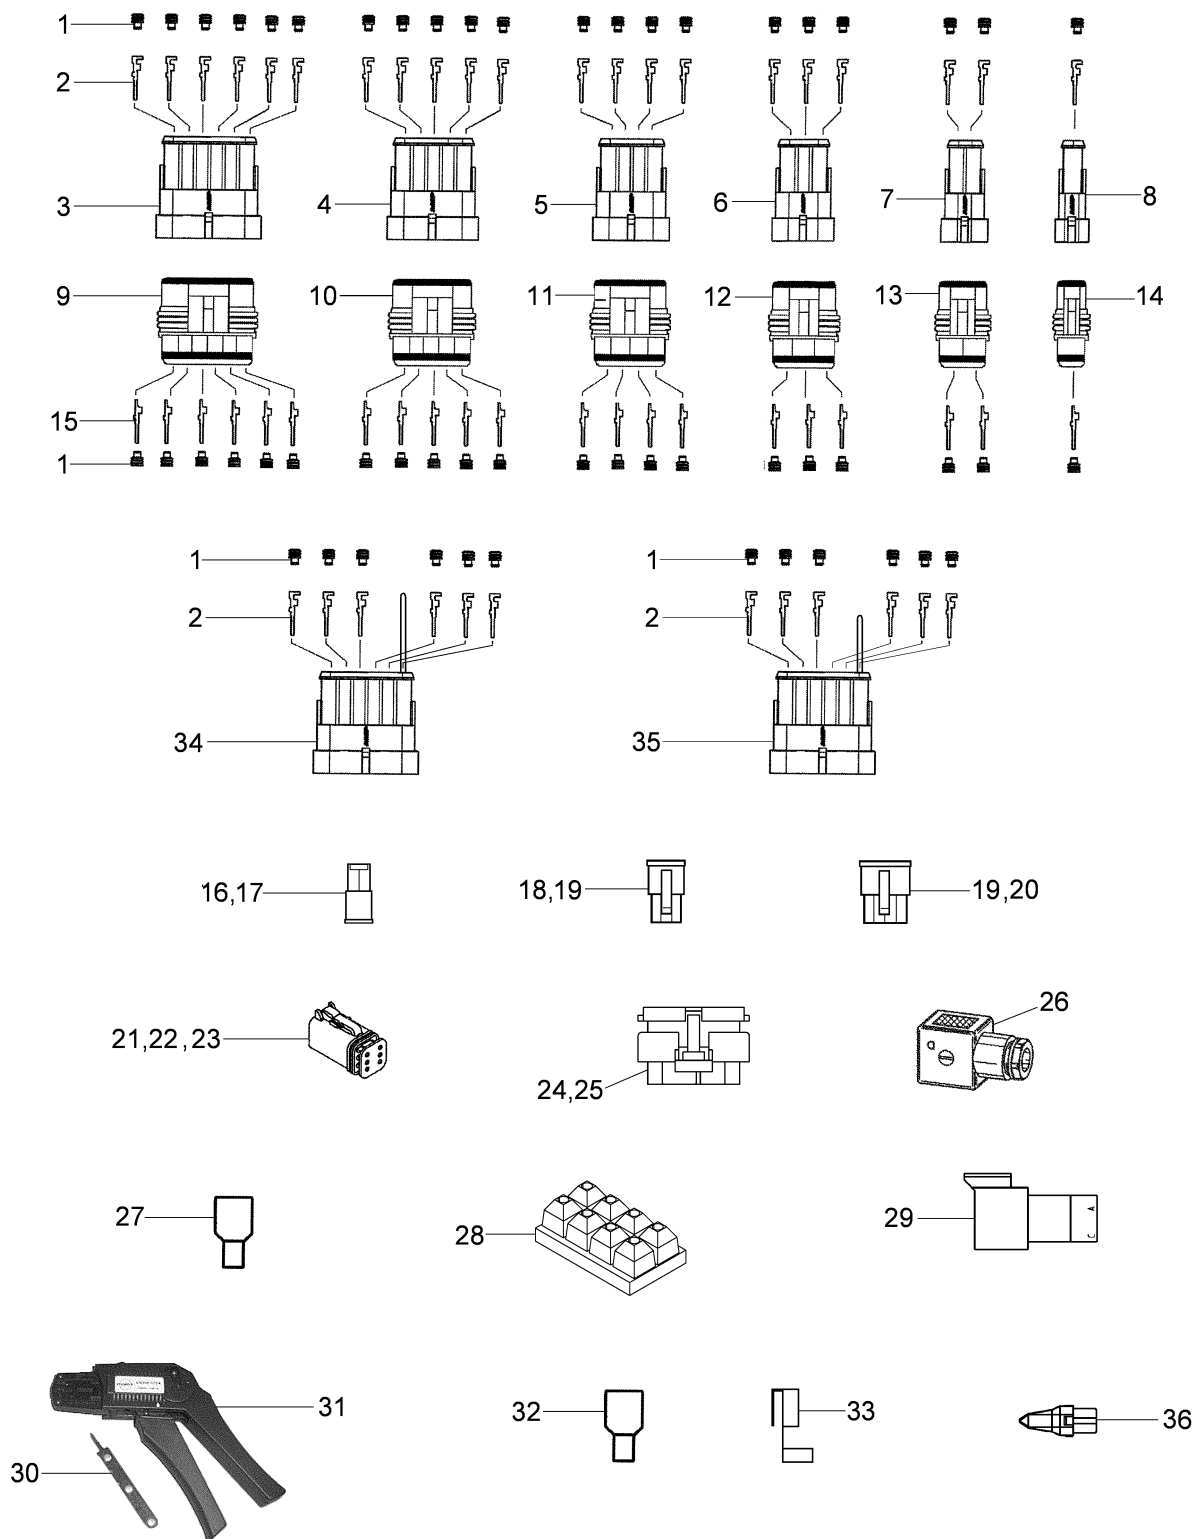

BP081471

CONNECTORS, CONTACTS, TOOLS

ITEM	PART NO.	DESCRIPTION	QTY
1	580040456	Wire Seal (Yellow)	AR
2	278131700	Pin Terminal	AR
3	580065044	Electrical Connector (6 Way)	AR
4	278130600	Terminal (5 Way)	AR
5	580059765		
	278130800	Connector (4 Way)	AR
6	272478100	Connector (3 Way)	AR
7	278131200	Connector (2 Way)	AR
8	580049117	Connector (1 Way)	AR
9	580065043	Electrical Connector (6 Way)	AR
10	278130700	Connector (5 Way)	AR
11	580035032	Connector (4 Way)	AR
12	580062118	Connector (3 Way)	AR
13	580035031	Connector (2 Way)	AR
14	580049116	Connector (1 Way)	AR
15	580035034	Terminal (Pin)	AR
16	518445605	Connector (4 Way)	AR
17	518445601	Pin	AR
18	518445608	Connector (6 Way)	AR
19	518445602	Socket	AR
20	518445610	Connector (8 Way)	AR
21	504064720	Connector	AR
22	505968568	Terminal (Socket)	AR
23	580068946	Lock	AR
24	520202606	Connector (35-Way)	AR
25	520202601	Connector (Socket Female)	AR
26	524175704	Connector	AR
27	580034053	Blade Terminal (Red - Sec. 1,5mm - Male)	AR
28	524152702	Insulator	AR
29	520038850	Connector	AR
30	580014685	Extractor	1
31	580014686	Pliers	1
32	580080969	Terminal (Blade)	AR
33	582000705	Terminal	AR
34	582008405	Connector (With Bridge)	AR
35	582008406	Connector (With Bridge)	AR
36	580039193	Connector (Secondary Lock)	AR



NOTES

Lined area for notes, consisting of 20 horizontal lines.

3


LOAD WHEEL



SECTION 3
LOAD WHEEL

DESCRIPTION	PAGE
LOAD WHEELS	
TANDEM	3-2

LOAD WHEELS (FIGURE 3-1) TANDEM

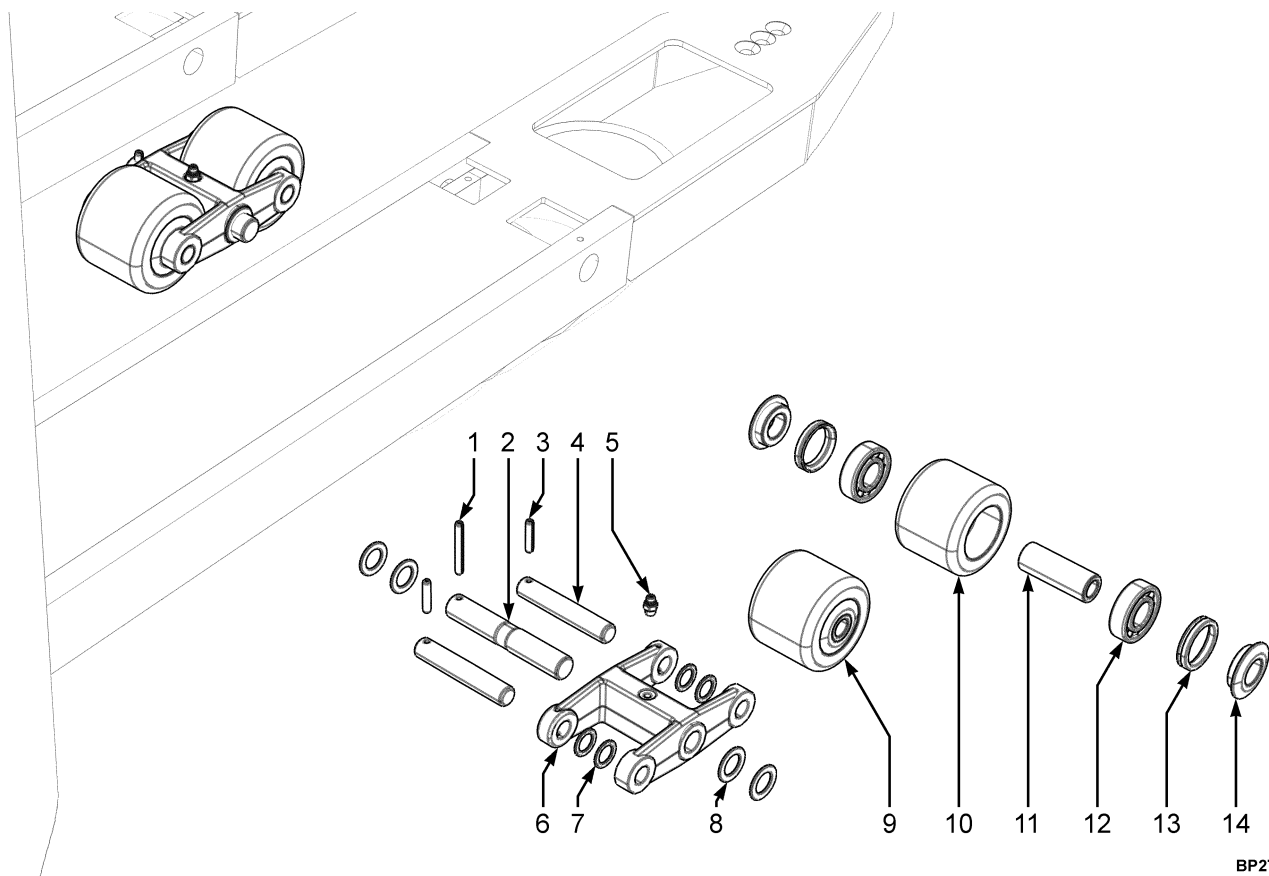


BP270115

ITEM	PART NO.	DESCRIPTION	QTY
1	449034030	Roll Pin	2
2	580013309	Pin	2
3	449034082	Roll Pin	2
4	272078800	Pin	4
5	272008800	Grease Fitting	2
6	580013311	Rocker Arm	2
7	272065200	Washer	8
8	272006400	Washer	8
9	580038706	Roller Assembly	4
10	580038708	Roller	1
11	580038709	Bushing	1
12	015120400	Ball Bearing	2
13	580037672	Seal	2
14	580037615	Bushing	2

SECTION 4 HYDRAULIC SYSTEM

DESCRIPTION	PAGE
HYDRAULIC ARRANGEMENT	4-2
HYDRAULIC POWER PACK	4-4

HYDRAULIC ARRANGEMENT (FIGURE 4-1)

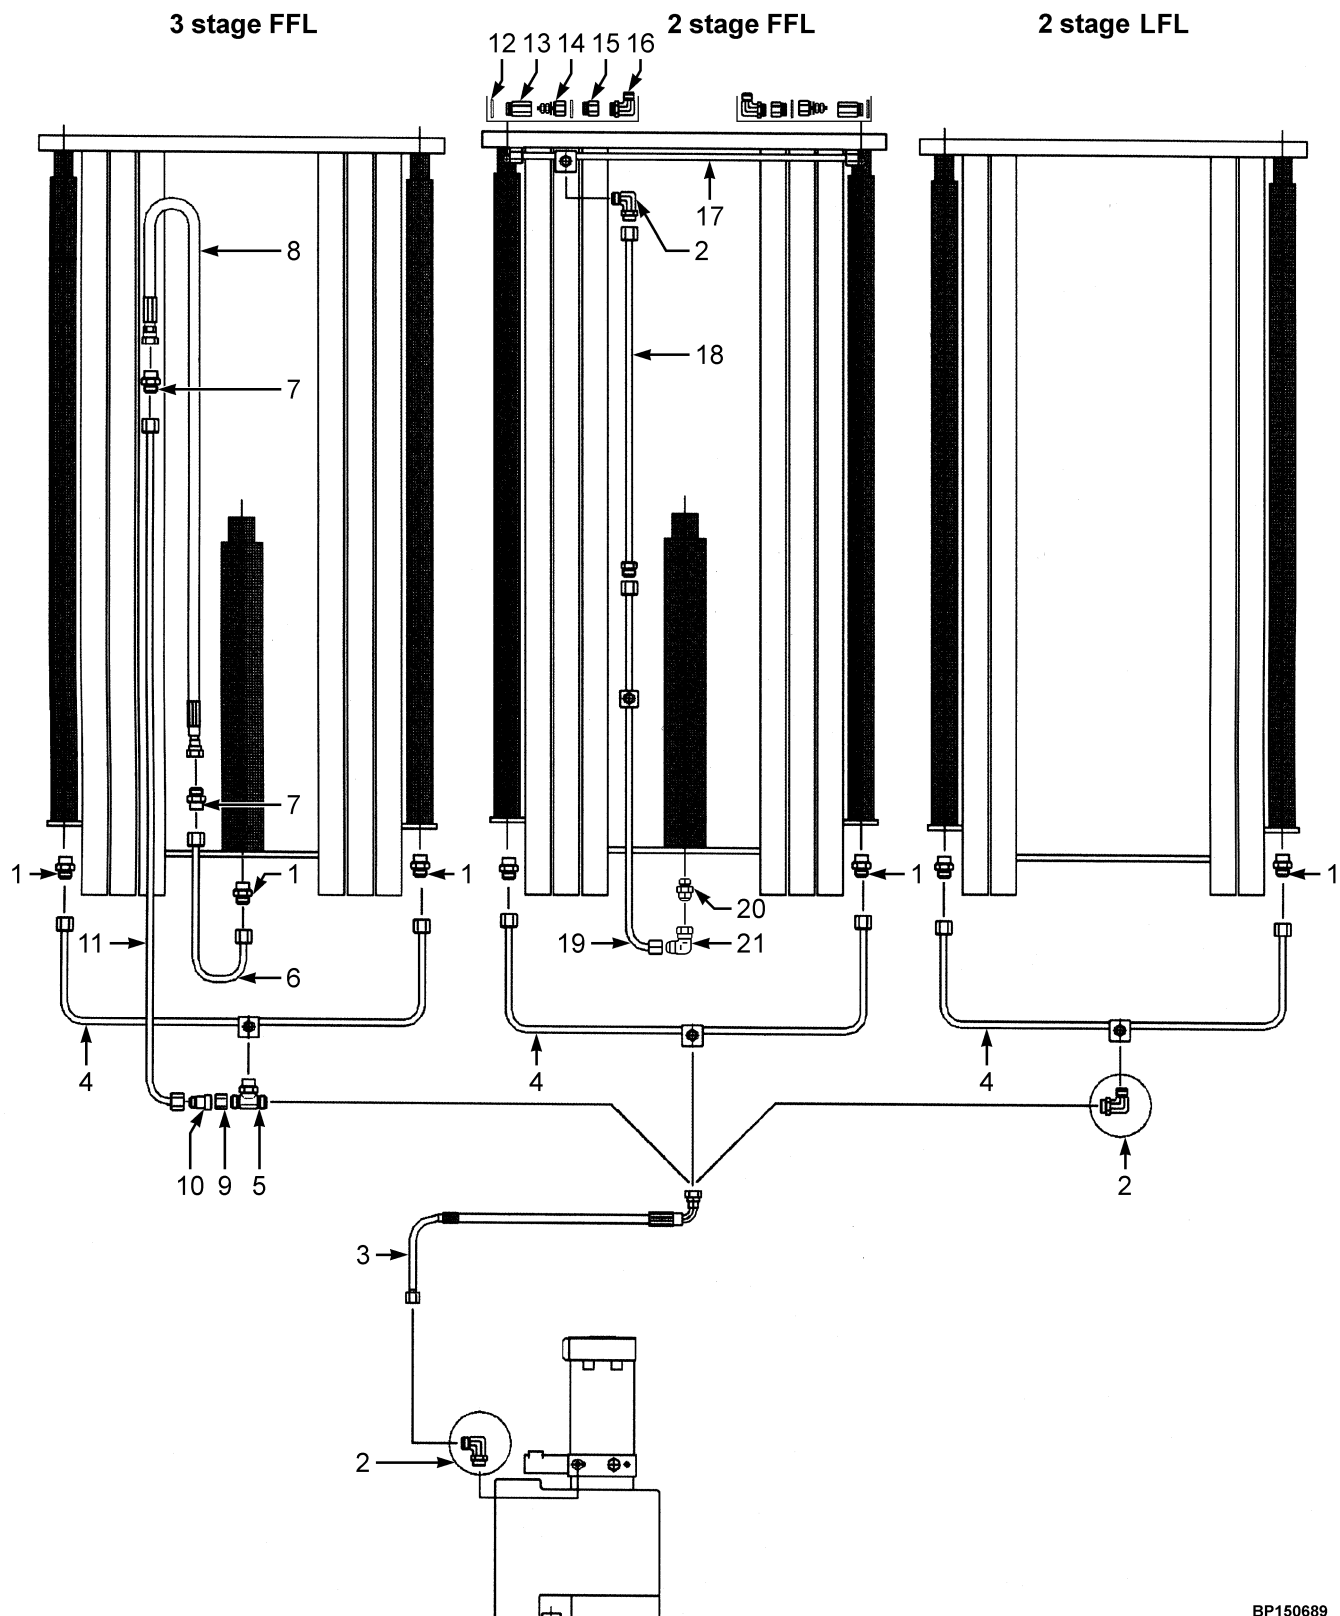


BP150689

HYDRAULIC ARRANGEMENT

KEY:
A: 2 STG LFL
B: 3 STG FFL

ITEM	PART NO.	DESCRIPTION	QTY	
			A	B
1	277263400	Fitting	2	3
2	277263200	Fitting	2	1
3	580013476	Hydraulic Tube	1	1
4	580013345	Tube Assy	1	1
5	013405200	Fitting	..	1
6	580014635	Tube	..	1
7	019899100	Fitting	..	2
8	580014637	Hose (Lift Height=4625mm)	..	1
8	580018418	Hose (Lift Height=5395mm)	..	1
9	056731900	Fitting	..	1
10	504071729	Fitting	..	1
11	580014634	Tube (Lift Height=4625mm)	..	1
11	580018432	Tube (Lift Height=5395mm)	..	1

HYDRAULIC POWER PACK (FIGURE 4-2)

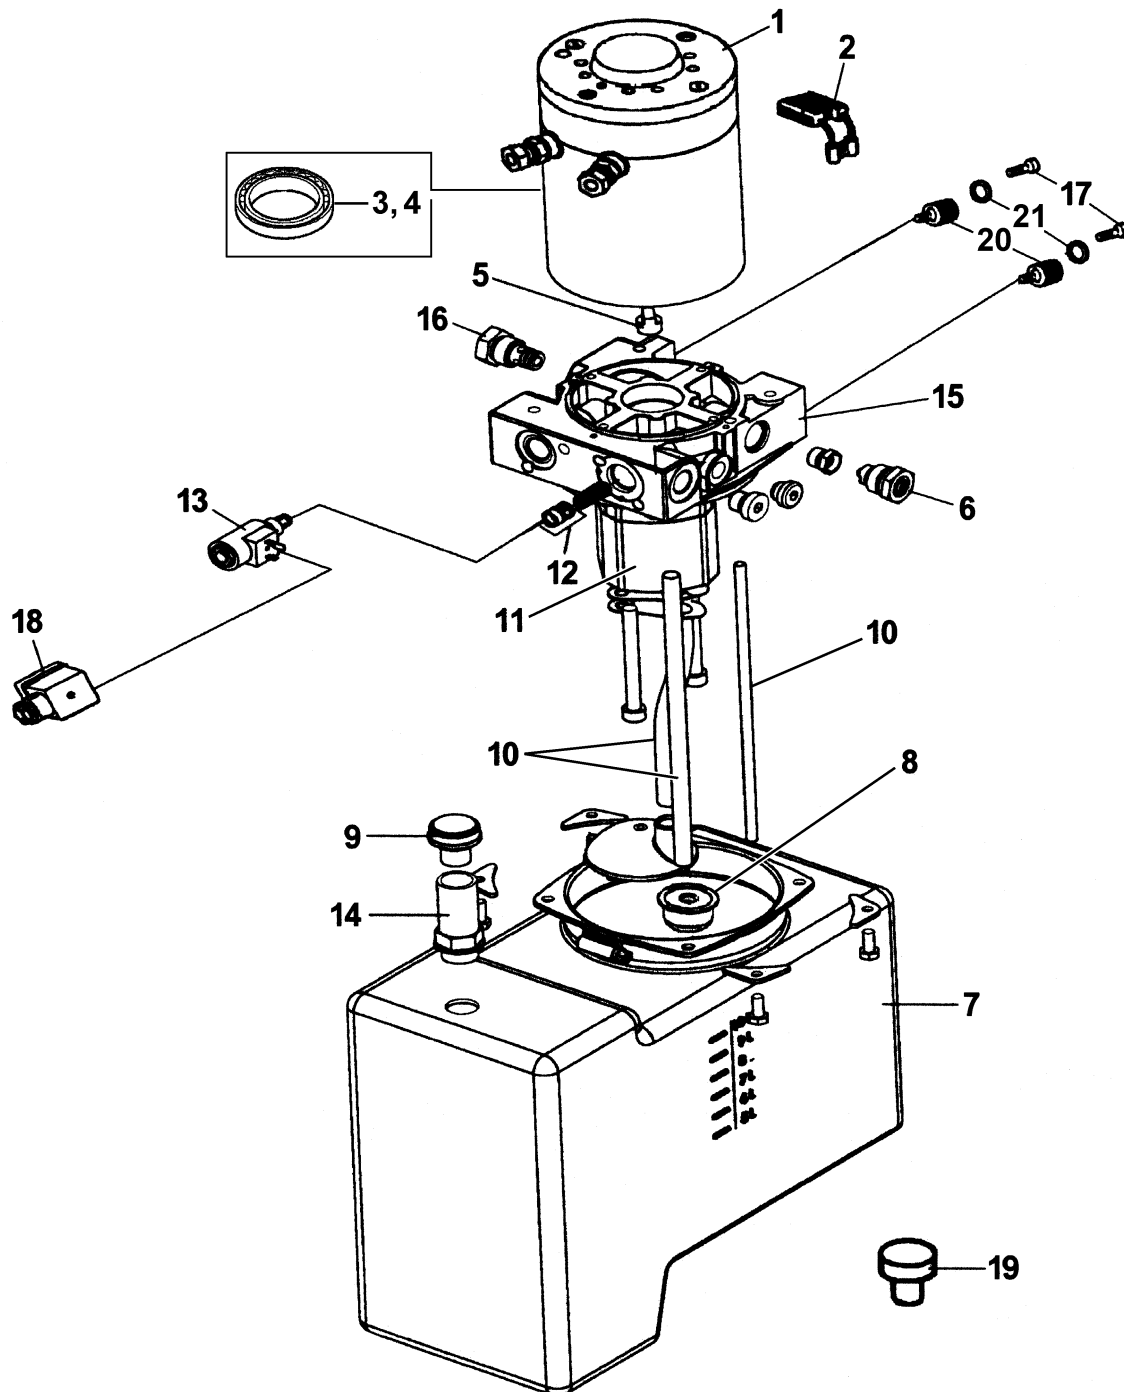

BP150310

HYDRAULIC POWER PACK

ITEM	PART NO.	DESCRIPTION	QTY
	580014493	Pump And Motor Assembly	1
1	580014492	Motor Assy	1
2	580014491	Kit-Brush	1
3	063621900	Ball Bearing	1
4	582009564	Bearing	1
5	580023828	Coupling	1
6	580014480	Relief Valve	2
7	580062570	Reservoir	1
8	518818830	Strainer	1
9	580027872	Hyd Oil Fill Cap	1
10	580063350	Tube Assy	1
11	580014481	Pump	1
12	580064632	Flow Valve	1
13	580014489	Valve , Proportional	1
14	580027871	Tube Assy	1
15	580014479	Distributor	1
16	518818806	Valve	1
17	449001023	Capscrew	2
19	580013474	Support , Rubber	1
20	272013200		
	582001077	Vibration Damper	2
21	449021006	Washer	2
	580014482	Hydraulic Tank Kit (Includes Items 7-10, 14)	1


[illegible]

SECTION 5

LIFT LINKAGE AND FORKS

DESCRIPTION	PAGE
FORKS CARRIAGE	
THREE STAGE FULL FREE-LIFT MAST	5-4
TWO STAGE LIMITED FREE-LIFT MAST	5-2

FORKS CARRIAGE (FIGURE 5-1) **TWO STAGE LIMITED FREE-LIFT MAST**

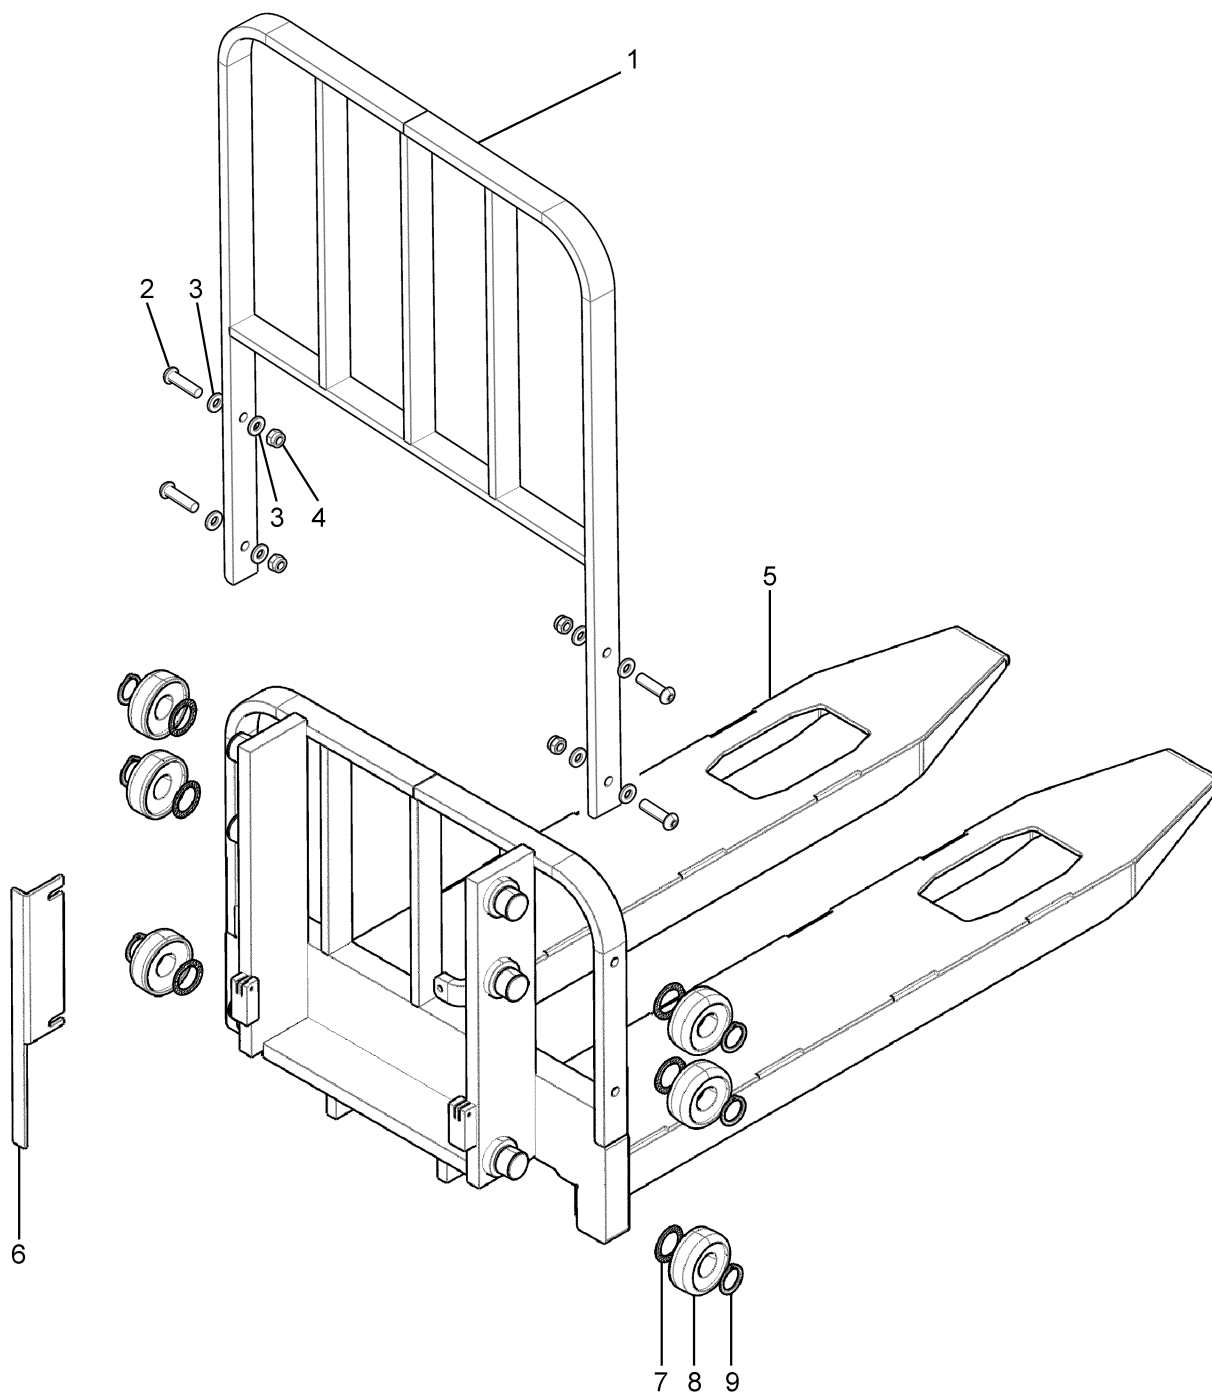

BP120898


FORKS CARRIAGE **TWO STAGE LIMITED FREE-LIFT MAST**

ITEM	PART NO.	DESCRIPTION	QTY
1	580065150	Load Backrest	1
2	580061459	Screw	4
3	449021010	Washer	8
4	580013371	Nut	4
5	524138883	Forks Carriage	1
7	504233232	Shim (0.020 in.)	AR
8	518797634	Load Roller ("B") (3.24 in.)	6
9	015916300	Snap Ring	6
10	a 504057795		
	449022013	Lockwasher	1
11	a 272467500	Screw	1

FOOTNOTES:

a Not Illustrated

FORKS CARRIAGE (FIGURE 5-2)
THREE STAGE FULL FREE-LIFT MAST

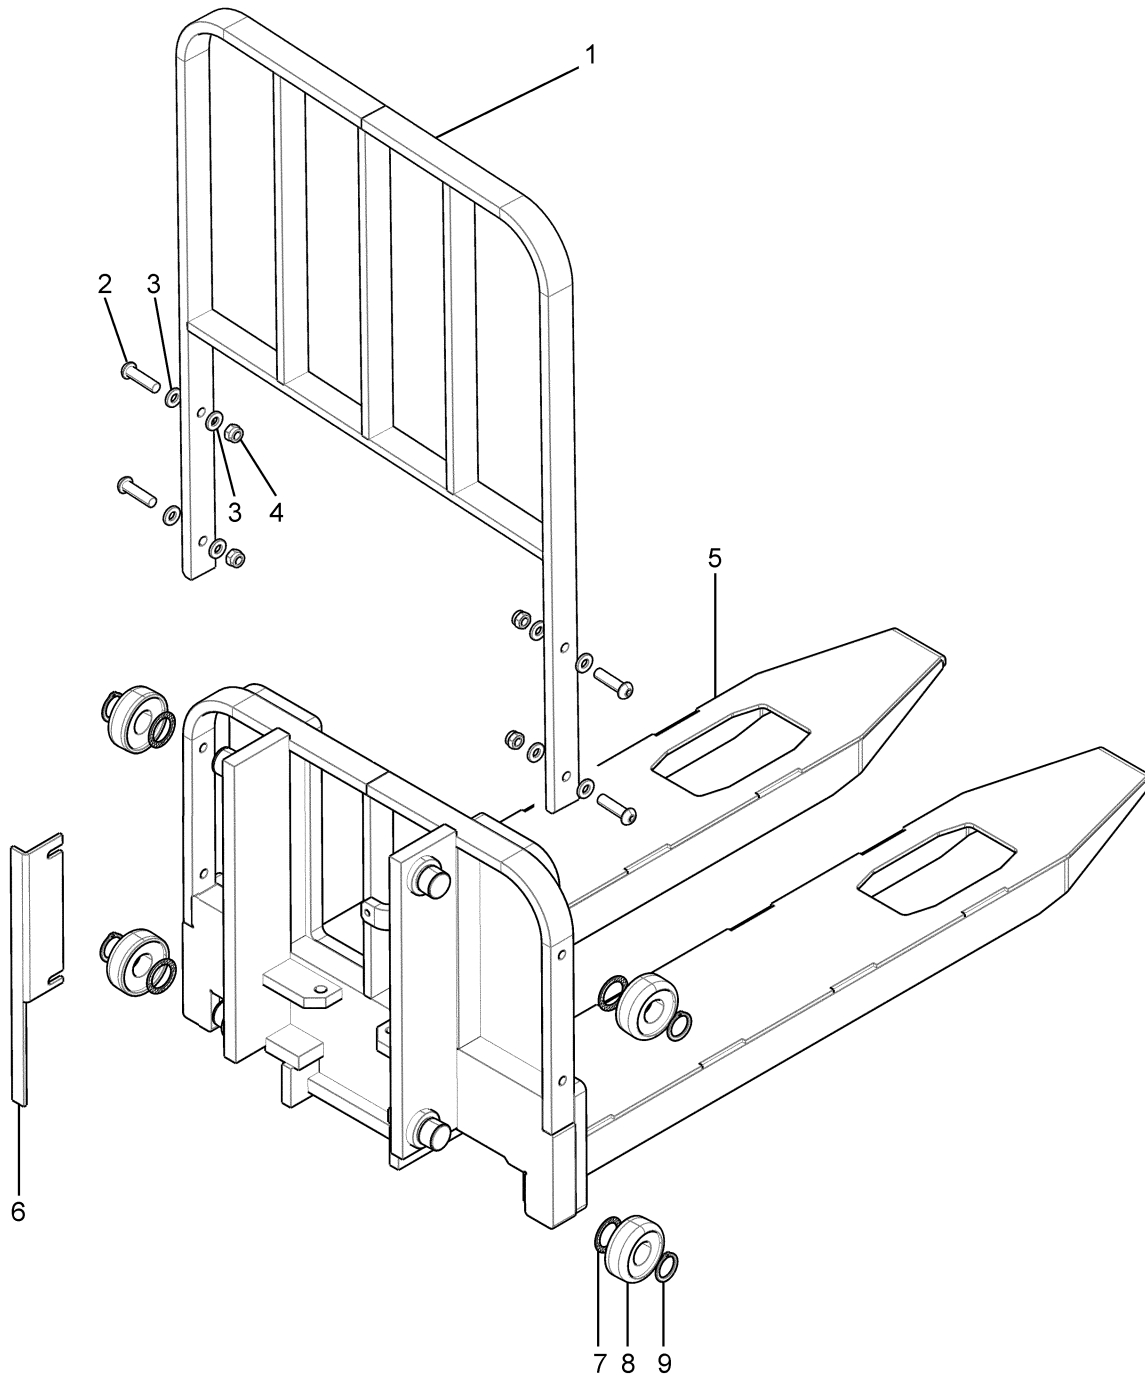

BP120899

FORKS CARRIAGE **THREE STAGE FULL FREE-LIFT MAST**

ITEM	PART NO.	DESCRIPTION	QTY
1	580065150	Load Backrest	1
2	580061459	Screw	4
3	449021010	Washer	8
4	580013371	Nut	4
5	524138884	Forks Carriage	1
7	504233232	Shim (0.020 in.)	AR
8	518797634	Load Roller ("B") (3.24 in.)	4
9	015916300	Snap Ring	4
10	a 504057795		
	449022013	Lockwasher	1
11	a 272467500	Screw	1

FOOTNOTES:

a Not Illustrated

[illegible]


6

MAST-TWO STAGE LIMITED FREE-LIFT

SECTION 6
MAST-TWO STAGE LIMITED FREE-LIFT

DESCRIPTION	PAGE
HYDRAULIC CYLINDERS	
TWO STAGE LIMITED FREE-LIFT MAST	6-4
MAST	
TWO STAGE LIMITED FREE-LIFT	6-2
WIRE NET	
TWO STAGE LIMITED FREE-LIFT MAST	6-6

MAST (FIGURE 6-1)
TWO STAGE LIMITED FREE-LIFT

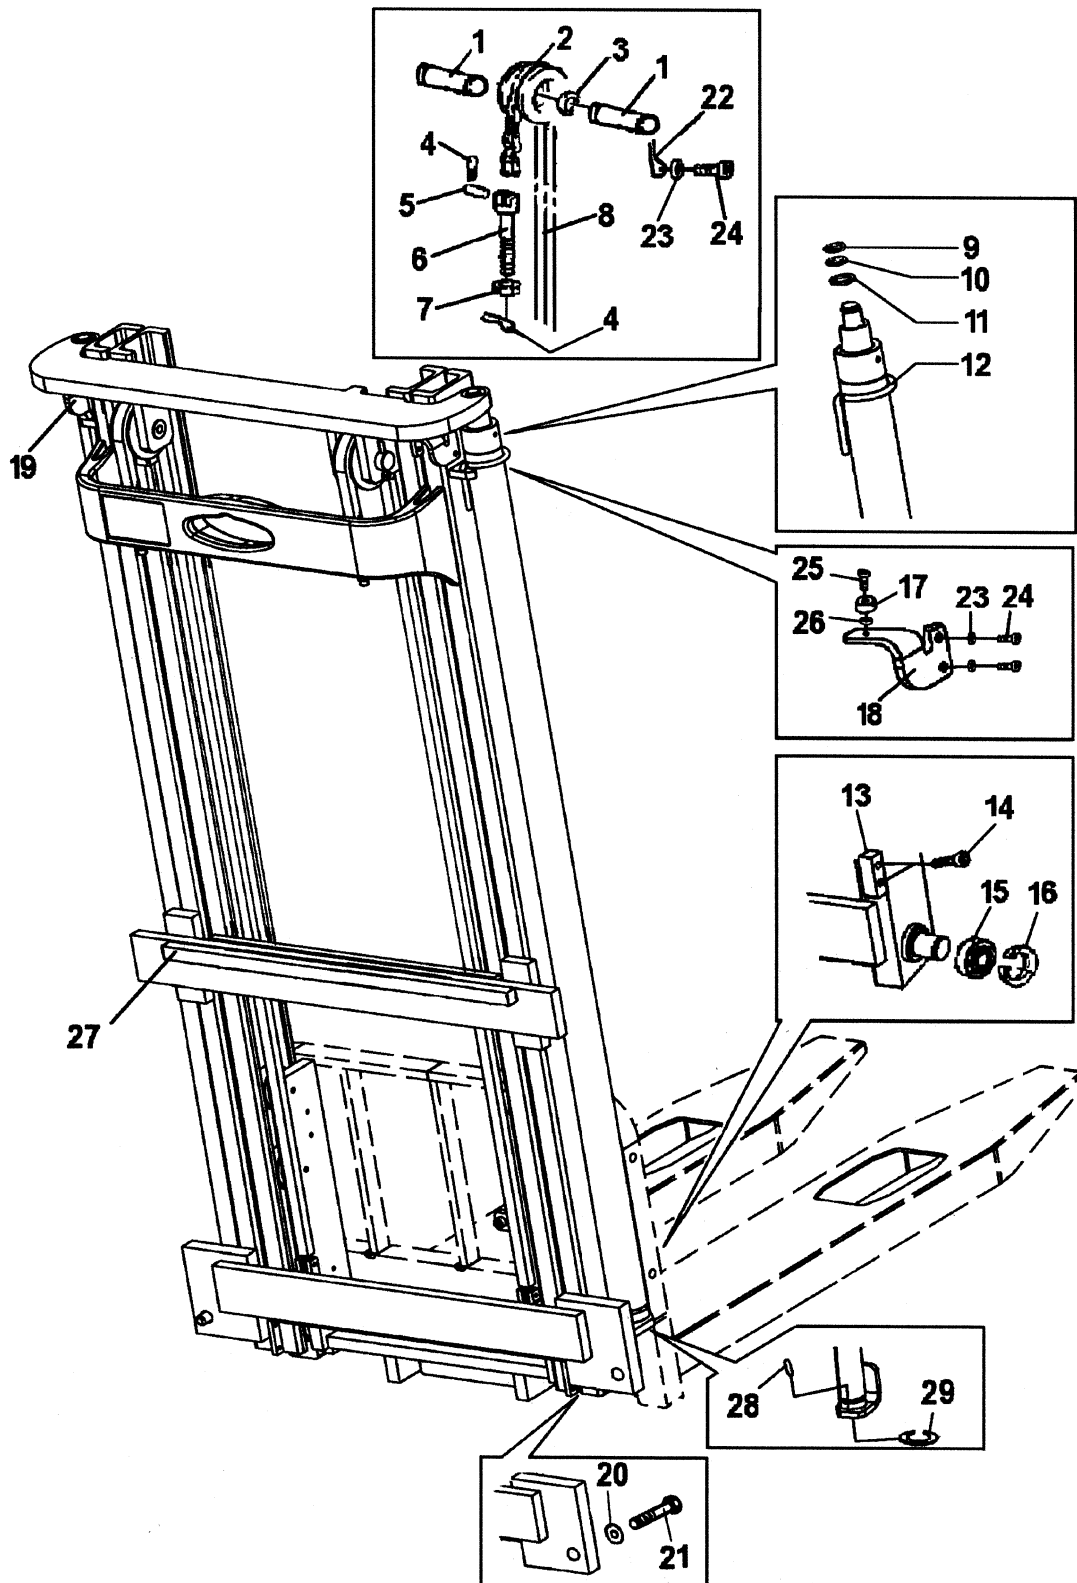


BP170400

MAST
TWO STAGE LIMITED FREE-LIFT

ITEM	PART NO.	DESCRIPTION	QTY
1	580012914	Pin	2
2	273066000	Pulley	2
3	272065300	Washer	2
4	449025027	Cotter Pin	12
5	272101200	Pin	4
6	272101300	Anchor	2
7	449015107	Locknut	2
8	580014118	Chain (Lift Height=4168mm)	2
9	500227904	Snap Ring	2
10	582008468		
	449021042	Washer	2
11	580024912	Seal	2
12	580012892	Brace	2
13	272465600	Wear Plate (0.12 in.) (Not Used)	AR
14	504235265	Capscrew (Not Used)	AR
15	518797634	Load Roller ("B") (3.24 in.)	10
16	015916300	Snap Ring	10
17	272328600	Damper	2
18	580012894	Bracket (RH)	1
19	580012895	Bracket (LH)	1
20	449022041	Lockwasher	2
21	580040491	Capscrew	2
22	015425200	Cotter Pin	2
23	449022018	Washer	6
24	580022962	Capscrew	6
25	580024707	Capscrew	2
26	449022018	Washer	AR
27	580026201	Foam	1
28	580014670	Pin	2
29	580015115	Snap Ring	2

HYDRAULIC CYLINDERS (FIGURE 6-2) **TWO STAGE LIMITED FREE-LIFT MAST**

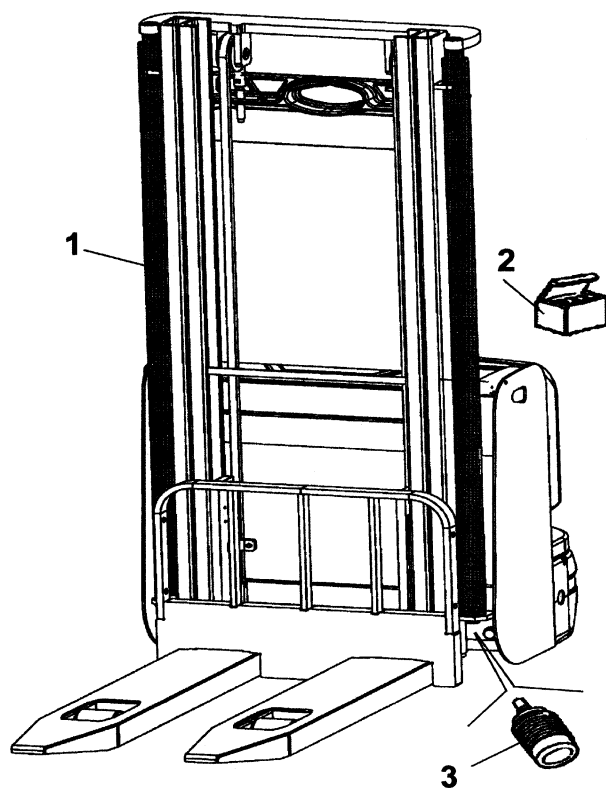


BP170540

ITEM	PART NO.	DESCRIPTION	QTY
1	580015739	Cylinder Assy (Lift Height=4168mm)	2
2	580016918	Kit-Seal	1
3	580015507	Flow Valve	2

[illegible]

WIRE NET (FIGURE 6-3)
TWO STAGE LIMITED FREE-LIFT MAST

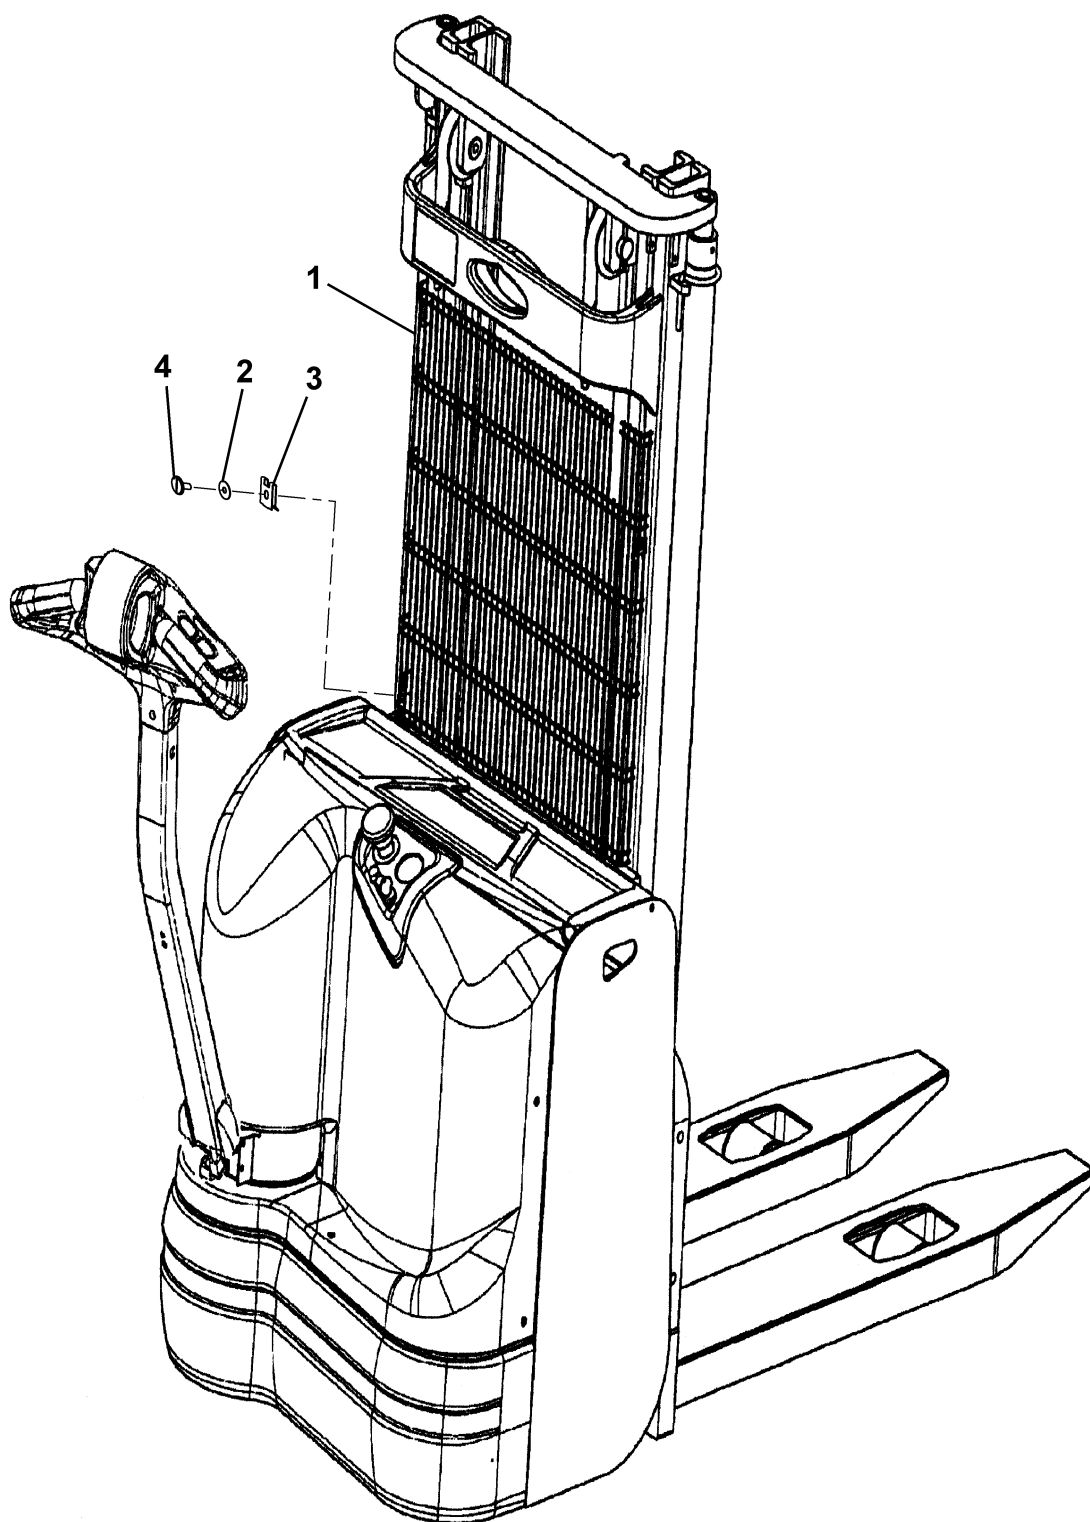

BP290133

WIRE NET
TWO STAGE LIMITED FREE-LIFT MAST

ITEM	PART NO.	DESCRIPTION	QTY
1	580018426	Guard (Lift Height=4168mm)	1
2	580065307	Washer	2
3	580057830	Nut , Clip	2
4	580058551	Screw	2

[illegible]


7

MAST-THREE STAGE FULL FREE-LIFT

SECTION 7
MAST-THREE STAGE FULL FREE-LIFT

DESCRIPTION	PAGE
HYDRAULIC CYLINDERS	
THREE STAGE FULL FREE-LIFT MAST	7-4
MAST	
THREE STAGE FULL FREE- LIFT	7-2
WIRE NET	
THREE STAGE MAST	7-6

MAST (FIGURE 7-1) **THREE STAGE FULL FREE- LIFT**

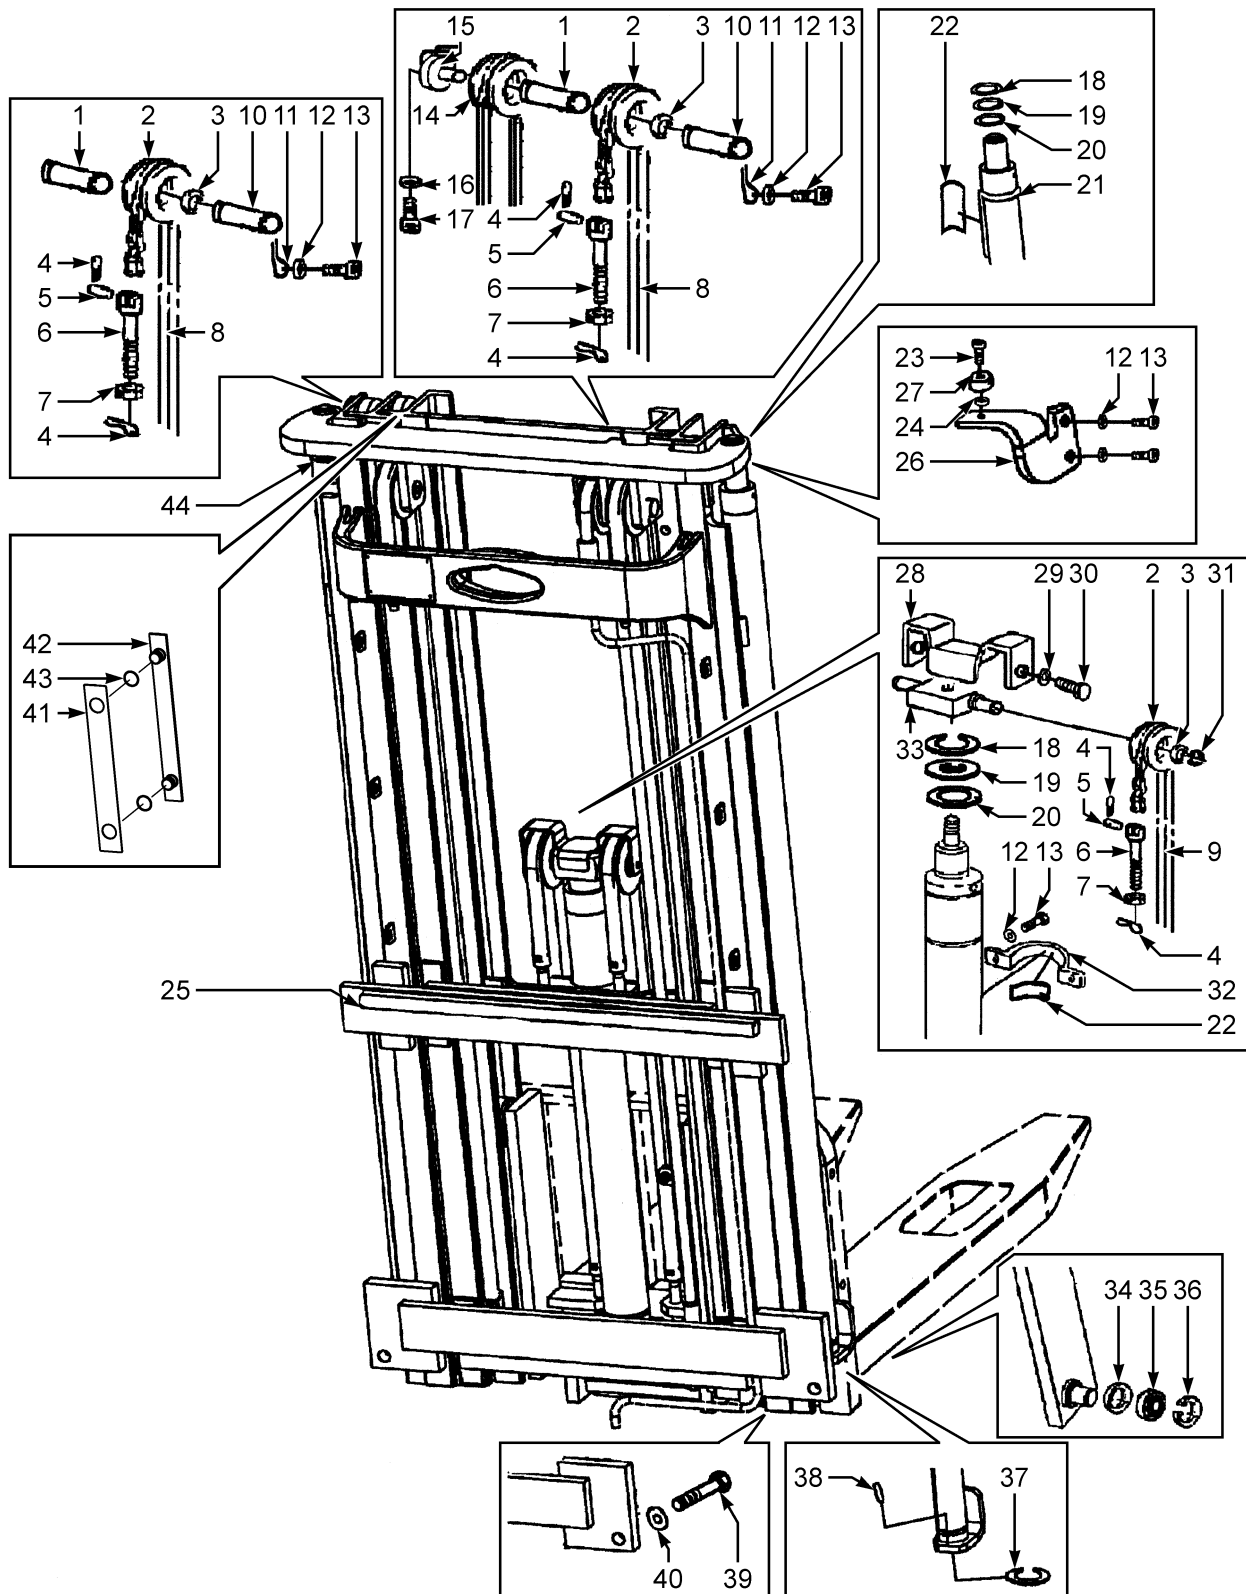


BP290206

MAST
THREE STAGE FULL FREE- LIFT

ITEM	PART NO.	DESCRIPTION	QTY
1	580012914	Pin	2
2	273066000	Pulley	4
3	272065300	Washer	10
4	449025027	Cotter Pin	24
5	272101200	Pin	8
6	272101300	Anchor	6
7	449015107	Locknut	6
8	580014115	Chain (Lift Height=4625mm)	2
8	580014117	Chain (Lift Height=5395mm)	2
9	580014110	Chain (Lift Height=4625mm)	2
9	580014112	Chain (Lift Height=5395mm)	2
10	580012915	Pin	1
11	015425200	Cotter Pin	2
12	449022018	Washer	8
13	580022962	Capscrew	8
14	504064782	Hose Sheave	1
15	582015015	Stubshaft	1
16	449022017	Lockwasher	1
17	449001389	Capscrew	1
18	500227904	Snap Ring	3
19	582008468		
	449021042	Washer	AR
20	272010200	Seal	3
21	580012892	Brace	2
22	272465500	Rubber Pad	3
23	580024707	Capscrew	2
24	449022018	Washer	AR
25	580026201	Foam (Not Used)	AR
26	580012894	Bracket (RH)	1
27	272328600	Damper	2
28	582057235	Cover	2
29	449022016	Lockwasher	2
30	449001415	Capscrew	2
31	580091430		
	015915900	Snap Ring	2
32	580019110	Strap	1
33	580012891	Sheave	1
34	504233232	Shim (0.020 in.)	AR
35	518797634	Load Roller ("B") (3.24 in.)	12
36	015916300	Snap Ring	12
37	580015115	Snap Ring	3
38	580014670	Pin	3
39	580040491	Capscrew	2
40	449022041	Lockwasher	2
41	504234265	Shim (0.020 in.)	AR
42	504075764	Wear Strip	4
43	012824300	O-Ring	4
44	580012895	Bracket (LH)	1

HYDRAULIC CYLINDERS (FIGURE 7-2)

THREE STAGE FULL FREE-LIFT MAST

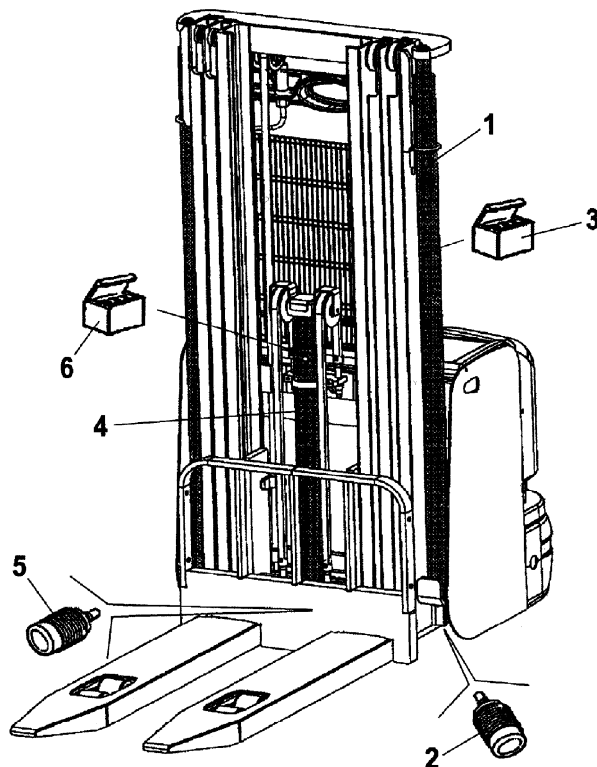


BP170542

ITEM	PART NO.	DESCRIPTION	QTY
1	580015736	Cylinder Assy (Lift Height=4625mm)	1
1	580017812	Cylinder Assy (Lift Height=5395mm)	2
2	580015507	Flow Valve	2
3	580016918	Kit-Seal	2
4	580015696	Cylinder Assy (Lift Height=4625mm)	1
4	580015698	Cylinder Assy (Lift Height=5395mm)	1
5	580015508	Flow Valve	1
6	580016919	Kit-Seal	1

[illegible]

WIRE NET (FIGURE 7-3)
THREE STAGE MAST

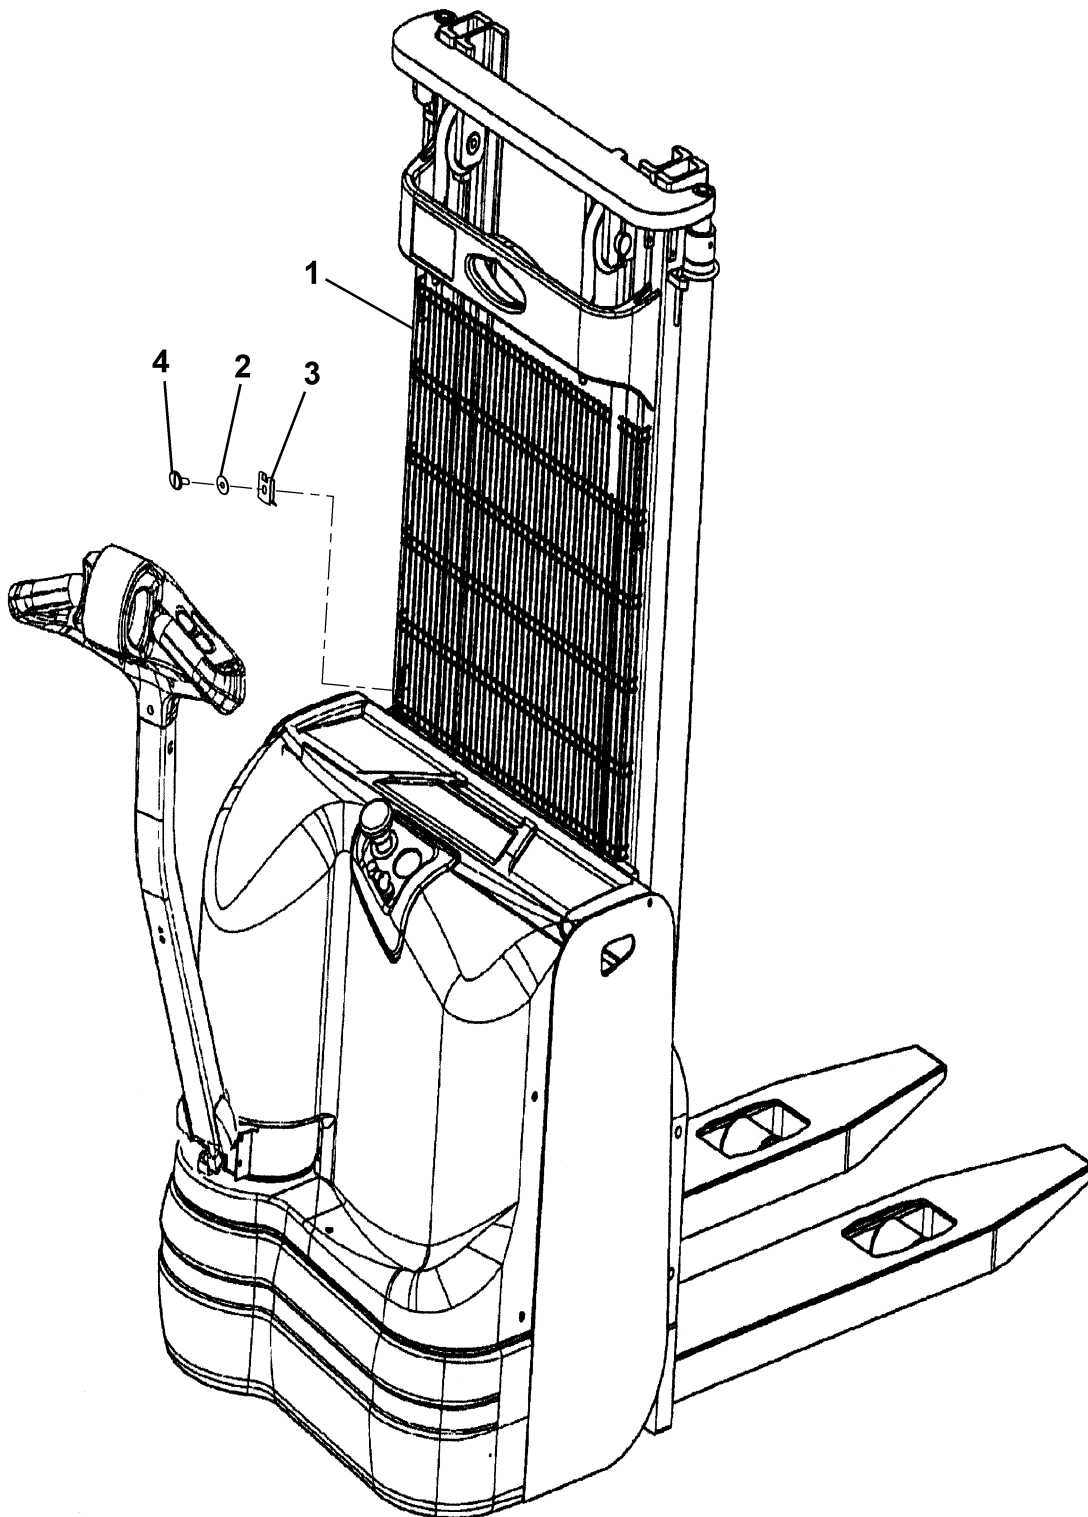

BP290133

**WIRE NET
THREE STAGE MAST**

ITEM	PART NO.	DESCRIPTION	QTY
1	580016808	Guard (Lift Height=4625mm, 4795mm)	1
1	580018425	Guard (Lift Height=5395mm)	1
2	580065307	Washer	2
3	580057830	Nut , Clip	2
4	580058551	Screw	2

[illegible]

SECTION 8

NUMERICAL INDEX

PART NO.	PAGE	ITEM	PART NO.	PAGE	ITEM	PART NO.	PAGE	ITEM	PART NO.	PAGE	ITEM
012824300	7-3	43	272465600	6-3	13		7-3	19	520202601	2-7	25
013405200	4-3	5	272466100	1-15	15	449022013	1-9	33	520202606	2-7	24
015120100	1-7	6	272467500	5-3	11		5-3	10	524138883	5-3	5
015120400	3-2	12		5-5	11		5-5	10	524138884	5-5	5
015425200	6-3	22	272470200	1-5	6	449022016	7-3	29	524139322	1-3	3
	7-3	11	272478100	2-7	6	449022017	7-3	16	524141523	1-3	12
015915100	1-11	11	273004100	2-3	8	449022018	6-3	23	524141524	1-3	9
015915900	7-3	31	273058800	1-15	17		6-3	26	524144372	1-17	29
015916300	5-3	9	273066000	6-3	2		7-3	12	524148554	1-7	8
	5-5	9		7-3	2		7-3	24	524152702	2-7	28
	6-3	16	273129300	1-9	13	449022041	6-3	20	524175704	2-7	26
	7-3	36	277263200	4-3	2		7-3	40	524213454	1-12	8
019899100	4-3	7	277263400	4-3	1	449025027	6-3	4	524216191	1-3	19
056731900	4-3	9	277458400	1-3	16		7-3	4	524228248	1-17	20
063621900	4-5	3	278130600	2-7	4	449034030	3-2	1	524242350	1-3	21
272006400	1-15	11	278130700	2-7	10	449034082	3-2	3	524292775	1-17	14
	3-2	8	278130800	2-7	5	500227904	6-3	9	524327019	1-3	11
272006900	1-9	15	278131200	2-7	7		7-3	18		2-3	9
272008800	3-2	5	278131700	2-7	2	501989907	1-9	6	524338448	1-17	11
272010200	7-3	20	449001014	1-5	1	501989923	1-9	5	550060285	1-3	12
272013700	1-9	22	449001015	1-9	35	502566901	1-9	1	550141841	1-5	12
272015100	1-15	12	449001023	4-5	17	504057745	1-11	17	550142266	1-15	4
272019300	1-9	14	449001058	1-9	29	504064720	2-7	21	580001407	2-3	14
272027800	1-15	10	449001170	2-3	35	504064782	7-3	14	580008011	1-15	15
272033100	1-3	23	449001301	1-9	34	504071729	4-3	10	580009061	2-3	18
272040800	1-9	16	449001389	7-3	17	504075764	7-3	42	580011991	1-17	5
272053000	1-9	26	449001412	2-3	34	504233232	5-3	7	580012891	7-3	33
272065200	3-2	7	449001415	7-3	30		5-5	7	580012892	6-3	12
272065300	6-3	3	449015002	1-11	16		7-3	34		7-3	21
	7-3	3	449015014	1-9	2	504234265	7-3	41	580012894	6-3	18
272078800	3-2	4		2-3	17	504235265	6-3	14		7-3	26
272087200	1-15	9	449015098	1-5	5	505966599	2-3	23	580012895	6-3	19
272090800	1-9	19	449015107	6-3	7	505968568	2-7	22		7-3	44
272101200	6-3	5		7-3	7	505972528	2-3	24	580012914	6-3	1
	7-3	5	449015112	2-3	28	505972555	2-3	25		7-3	1
272101300	6-3	6	449015135	1-5	8	506395532	2-3	22	580012915	7-3	10
	7-3	6		2-3	29	518445601	2-7	17	580012959	1-3	17
272105600	1-3	8	449021001	1-5	2	518445602	2-7	19	580012962	1-17	4
272106000	1-15	7		1-15	16	518445605	2-7	16	580012969	1-17	21
272213200	1-3	5		2-3	16	518445608	2-7	18	580012970	1-17	23
272213500	1-3	2	449021002	2-3	11	518445610	2-7	20	580013106	1-17	17
272219100	1-3	6	449021003	2-3	30	518797634	5-3	8	580013129	1-15	6
272303000	1-3	1	449021006	1-9	32		5-5	8	580013298	1-5	9
272328600	6-3	17		1-15	1		6-3	15		1-15	5
	7-3	27		4-5	21		7-3	35		2-3	31
272330200	1-15	14	449021010	1-9	28	518818806	4-5	16	580013309	3-2	2
272386700	1-9	18		5-3	3	518818830	4-5	8	580013311	3-2	6
272393000	1-9	12		5-5	3	520038850	2-7	29	580013312	1-7	10
272465500	7-3	22	449021042	6-3	10	520038883	2-3	10	580013314	1-7	9

NUMERICAL INDEX (continued)

PART NO.	PAGE	ITEM	PART NO.	PAGE	ITEM	PART NO.	PAGE	ITEM	PART NO.	PAGE	ITEM
580013326	1-3	10		7-4	3	580040456	2-7	1	580093318	2-4	15
580013345	4-3	4	580016919	7-4	6	580040491	6-3	21	580093319	2-4	10
580013371	5-3	4	580017382	1-7	10		7-3	39	580093320	2-4	12
	5-5	4	580017812	7-4	1	580041174	1-9	27	580093321	2-4	11
580013474	4-5	19	580018418	4-3	8	580041302	1-9	17	580093385	2-3	38
580013476	4-3	3	580018425	7-7	1	580041303	1-9	3	580093537	2-4	9
580013477	1-9	27	580018426	6-7	1	580041309	1-9	11	580093629	2-3	20
580013478	1-9	27	580018432	4-3	11	580049116	2-7	14	580093734	1-3	13
580013479	1-9	27	580019110	7-3	32	580049117	2-7	8	580094592	1-11	14
580013482	1-15	16	580022041	1-9	27	580053763	1-3	22	580094593	1-11	1
580014110	7-3	9	580022962	1-3	4	580053923	1-3	20	580094594	1-11	13
580014112	7-3	9		6-3	24	580054707	1-9	30	580094595	1-11	2
580014115	7-3	8		7-3	13	580055435	1-17	25	580094597	1-11	7
580014117	7-3	8	580023467	1-9	25	580057830	6-7	3	580094598	1-11	8
580014118	6-3	8	580023593	1-15	3		7-7	3	580094599	1-11	6
580014438	1-9	4	580023828	4-5	5	580058551	6-7	4	580094600	1-11	15
580014439	1-9	7	580024707	6-3	25		7-7	4	580094601	1-11	5
580014440	1-9	8		7-3	23	580059760	1-11	18	580094623	1-11	10
580014441	1-9	9	580024912	6-3	11	580060389	1-17	19	580094788	1-12	2
580014446	1-9	20	580026201	6-3	27	580061459	5-3	2	582000705	2-7	33
580014447	1-9	24		7-3	25		5-5	2	582001077	4-5	20
580014448	1-9	23	580026296	1-17	1	580062118	2-7	12	582001198	1-15	13
580014457	1-9	10	580026824	1-17	28	580062570	4-5	7	582002469	1-9	31
580014479	4-5	15	580027871	4-5	14	580063350	4-5	10	582005003	1-11	9
580014480	4-5	6	580027872	4-5	9	580063867	2-3	21	582005203	1-17	22
580014481	4-5	11	580034053	2-7	27	580064632	4-5	12	582007128	1-17	26
580014482	4-5		580034974	1-17	8	580065043	2-7	9	582007130	1-17	18
580014489	4-5	13	580035031	2-7	13	580065044	2-7	3	582007131	1-17	3
580014491	4-5	2	580035032	2-7	11	580065150	5-3	1	582007134	1-17	13
580014492	4-5	1	580035034	2-7	15		5-5	1	582008405	2-7	34
580014493	4-5		580035384	1-12	4	580065307	6-7	2	582008406	2-7	35
580014499	1-11	3	580035765	1-15	8		7-7	2	582009564	4-5	4
580014634	4-3	11	580037615	3-2	14	580066344	2-3	27	582010233	1-3	25
580014635	4-3	6	580037672	3-2	13	580068946	2-7	23	582015015	7-3	15
580014637	4-3	8	580037730	1-7	3	580070960	1-11	4	582015332	1-3	15
580014670	6-3	28	580038175	1-17	7	580077549	2-3	19	582015751	1-17	16
	7-3	38	580038706	3-2	9	580079167	1-17	15	582015753	1-17	27
580014685	2-7	30	580038708	3-2	10	580080969	2-7	32	582015784	1-17	10
580014686	2-7	31	580038709	3-2	11	580082841	1-17	6	582016205	2-3	12
580014880	1-3	18	580038927	1-9	27	580088450	2-3	26	582017910	2-3	13
580015115	6-3	29	580038954	1-3	24	580088527	1-12	6	582019747	1-17	9
	7-3	37	580039025	2-4	4	580088528	1-12	7	582020280	1-17	24
580015507	6-4	3	580039026	2-4	3	580090778	1-11		582020332	1-3	14
	7-4	2	580039027	2-4	2	580091806	2-3	33	582023708	1-5	7
580015508	7-4	5	580039028	2-4	1	580092138	2-3	7	582031452	1-12	5
580015696	7-4	4	580039029	2-4	6	580092328	1-7	1	582031453	1-12	3
580015698	7-4	4	580039030	2-4	7	580092727	1-7	7	582033654	1-17	
580015736	7-4	1	580039031	2-4	8	580092728	1-7	5	582034038	1-15	18
580015739	6-4	1	580039032	2-4	5	580092729	1-7	4	582036781	2-3	15
580016808	7-7	1	580039193	2-7	36	580093316	2-4	13	582046477	2-3	32
580016918	6-4	2	580040114	1-9		580093317	2-4	14	582053921	1-12	1

NUMERICAL INDEX (continued)

PART NO.	PAGE	ITEM	PART NO.	PAGE	ITEM	PART NO.	PAGE	ITEM	PART NO.	PAGE	ITEM
582057231	1-3	7	582057235	7-3	28	931015914	1-7	2	932201911	1-15	16
582057232	1-5	11	640046901	1-11	12	931701910	1-15	2	940004902	1-17	2
582057234	1-5	3	900005220	1-9	21	932200901	1-17	12	940004903	1-15	15
	1-5	13									



NUMERICAL INDEX (continued)

NOTES

Blank lined area for notes.

SECTION 9

USER SUPPORT INFORMATION

DESCRIPTION	PAGE
SERVICE PARTS ORDERING INSTRUCTIONS	9-2
TECHNICAL SERVICE PUBLICATIONS	9-2
OPERATOR TRAINING	9-2
SERVICE TRAINING COURSE	9-2
SERVICE TRAINING MATERIALS	9-2

Your investment in a Yale Industrial Truck is important to you and to your Yale Dealer. You measure the return on that investment through the performance of these trucks and the drivers who operate and the mechanics who service them safely and efficiency. The following information is intended to help you to achieve your investments objectives:

SERVICE PARTS ORDERING INSTRUCTIONS

HOW TO ORDER SERVICE PARTS

In order to prevent delay, too much communication and to have your orders filled correctly, quickly, and at the least possible cost, the following is the correct procedure to use to order replacement parts.

WHEN ORDERING PARTS

Contact your authorized Yale Industrial Truck Dealer giving them the following information:

1. Your Purchase order number.
2. Complete addresses for sending the invoice and parts.
3. Tell us how you want your parts sent. If we do not get this information, we will send the parts using the lowest priced method.
4. Correct part number(s) and description(s). Use your parts manual as a reference.
5. Model and serial number of the truck.

TECHNICAL SERVICE PUBLICATIONS

Technical literature, with detailed information, is available at a nominal fee to assist users to effectively maintain Yale Industrial Trucks in a safe, useful condition. Part Manuals with complete replacement parts identification, Service Maintenance Manuals which provide service and overhaul procedures and additional copies of the Operating Manual can be obtained from your Yale Industrial Truck Dealer.

To provide instructions for safely operating and servicing Yale Industrial Trucks, each truck is equipped with an operators manual. It describes various operating techniques and safety warnings to the operator. It contains a guide to safe maintenance practices and recommended schedules for maintenance. If the

operators manual is missing from any Yale Industrial Truck, it should be replaced. Replacement copies are available for a nominal fee from your Yale Dealer.

OPERATOR TRAINING

The Yale "Basic Operator Training" program helps industrial truck users increase their materials handling production and safety through correct lift truck operation, training, and motivation. The Yale program is based upon real life experience – not theoretical concepts. We developed a "complete" program that is totally self-contained – incorporating the most modern instructional techniques including elements of self-study, audio-visual support (both video and slides), and classroom study.

SERVICE TRAINING COURSE

Operators and Yale dealer service technicians can improve their technical ability for maintaining and repairing Yale Industrial Trucks, which decreases repair time and cost, by taking Yale Service Training courses. Different types of mechanical, electric, and electronic subjects are available. Courses can be held at customer or Dealer locations in addition to regularly scheduled courses which are held at Yale Corporate Headquarters in Greenville, NC.

SERVICE TRAINING MATERIALS

Your own service training can be supported through a complete line of Yale Service Training materials. An Index is available from your Yale Dealer which lists textbooks, audio-visual programs and films. These materials will provide your training staff with everything necessary for training your group.

For additional information or assistance in obtaining these user support publications and programs, contact:

Yale Materials Handling Corporation
1400 Sullivan Drive
Caller No. 12011
Greenville, NC 27834-2011



Yale Materials Handling Corporation
1400 Sullivan Drive
Caller No. 12011
Greenville, NC 27834-2011

550138873
©Yale Corp.
12/2015