


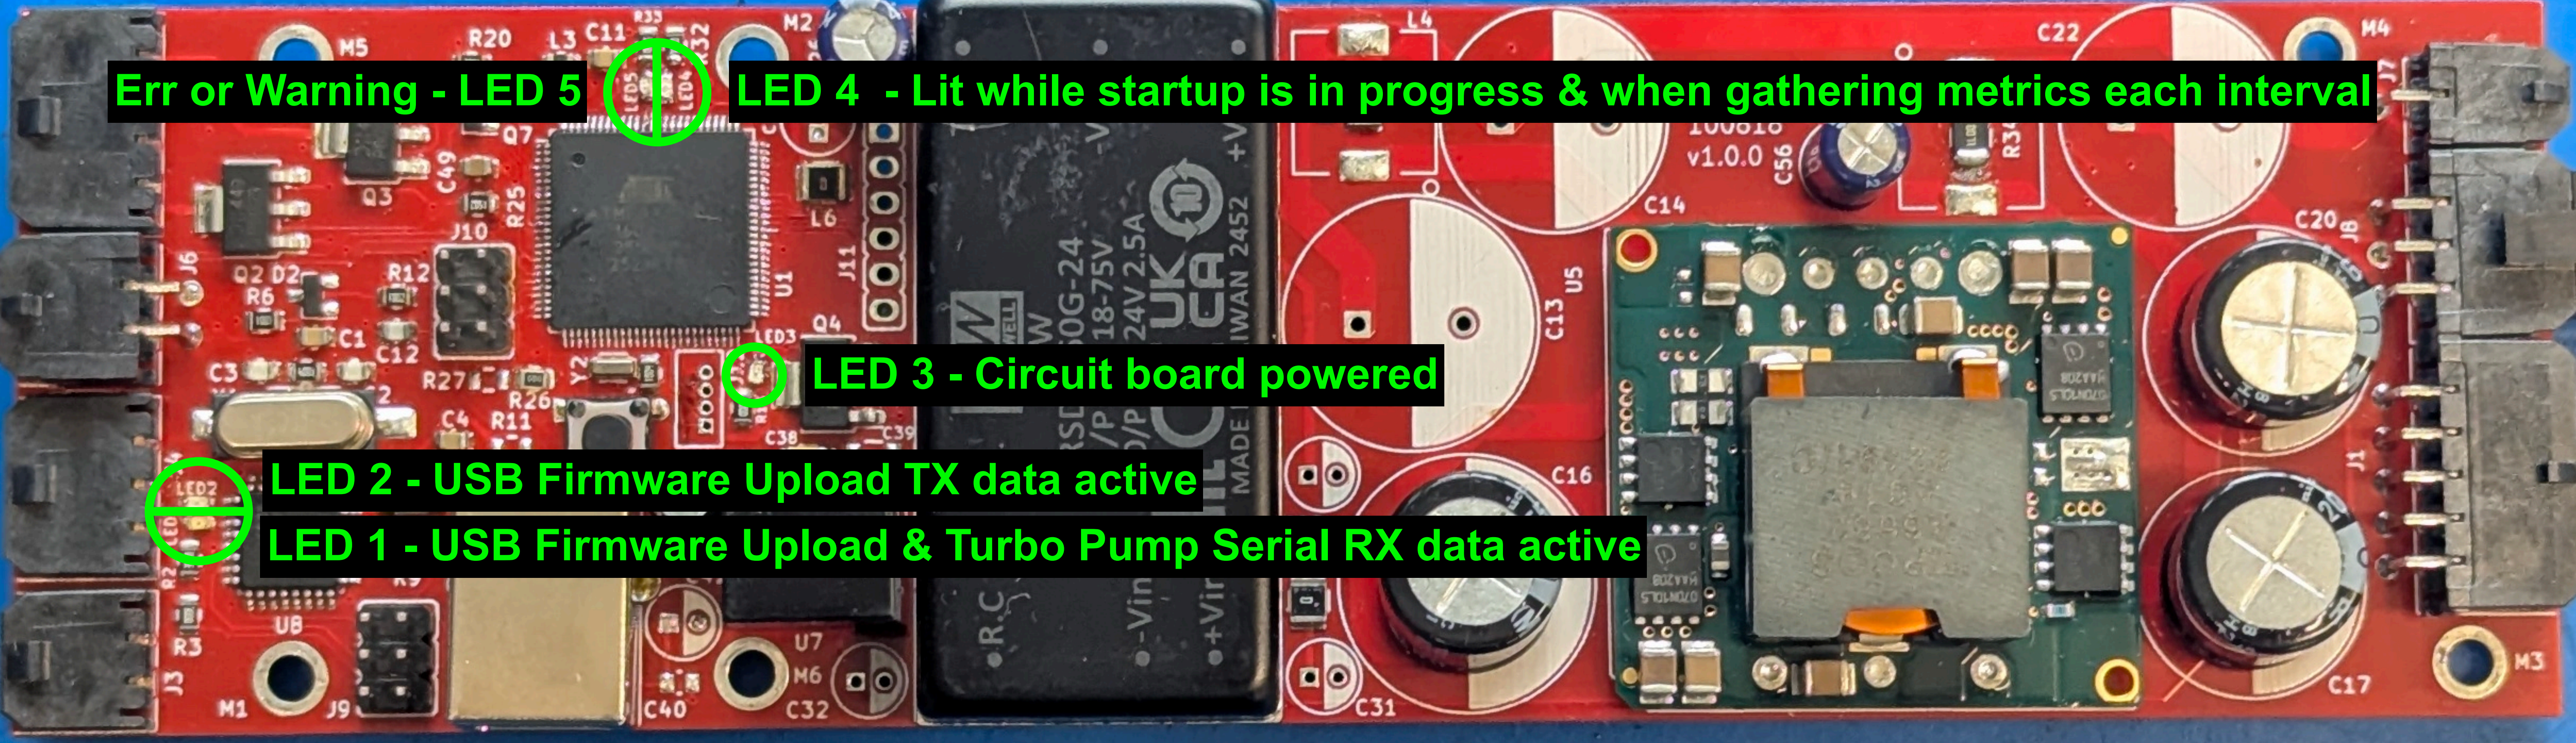

Err or Warning - LED 5

LED 4 - Lit while startup is in progress & when gathering metrics each interval

LED 3 - Circuit board powered

LED 2 - USB Firmware Upload TX data active

LED 1 - USB Firmware Upload & Turbo Pump Serial RX data active