


Shared Ground applies to EVERYTHING on board



Pins can be trimmed (If too tall)

Note: In Documentation
VIN = Power supply A
VIN2 = Power Supply B

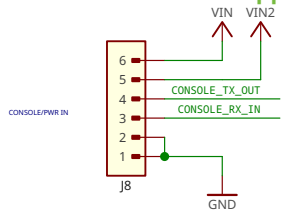


Console In/Out Are RS232
Topside Comms (signals at 12V)

Unused Connector
(Used to tap voltages/Test voltages)

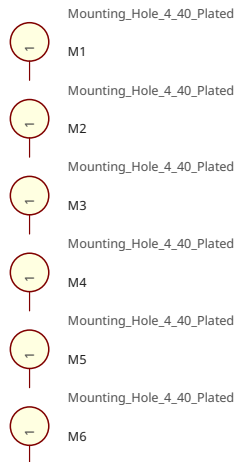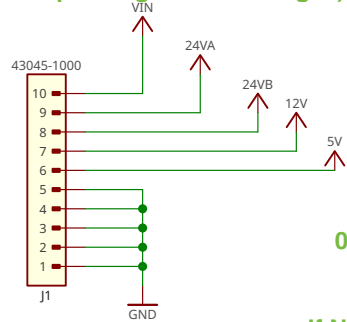


Power Voltage conversion for RGA AND Turbo

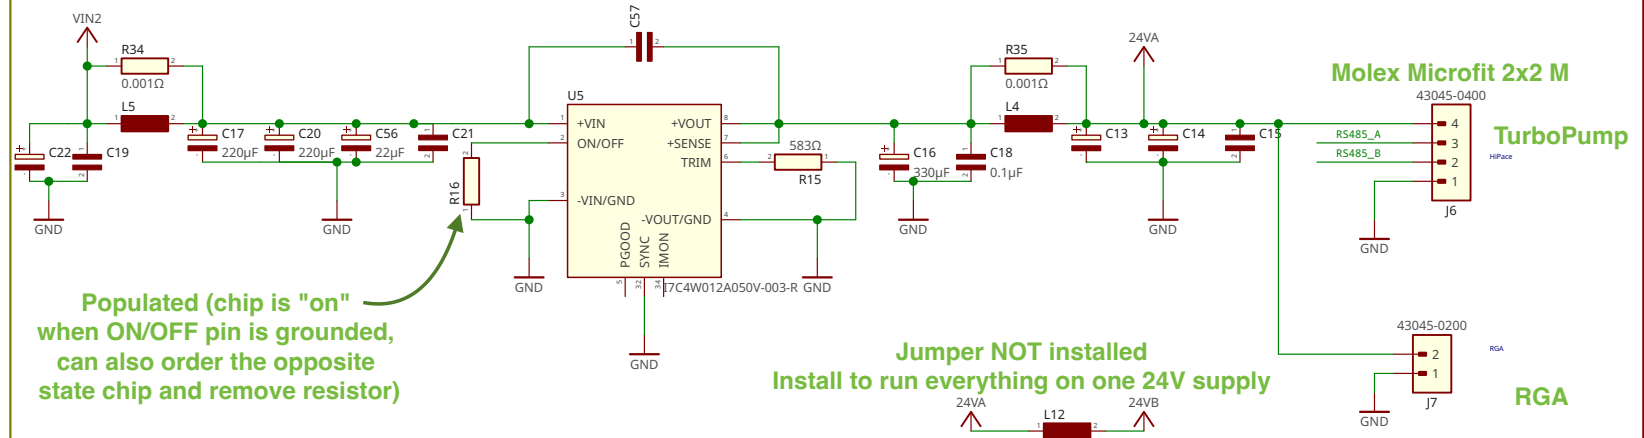

Populated (chip is "on"
when ON/OFF pin is grounded,
can also order the opposite
state chip and remove resistor)


Jumper NOT installed
Install to run everything on one 24V supply


0MH means an inductor
can be used to
to change PI filter
If NOISE is Present/An Issue

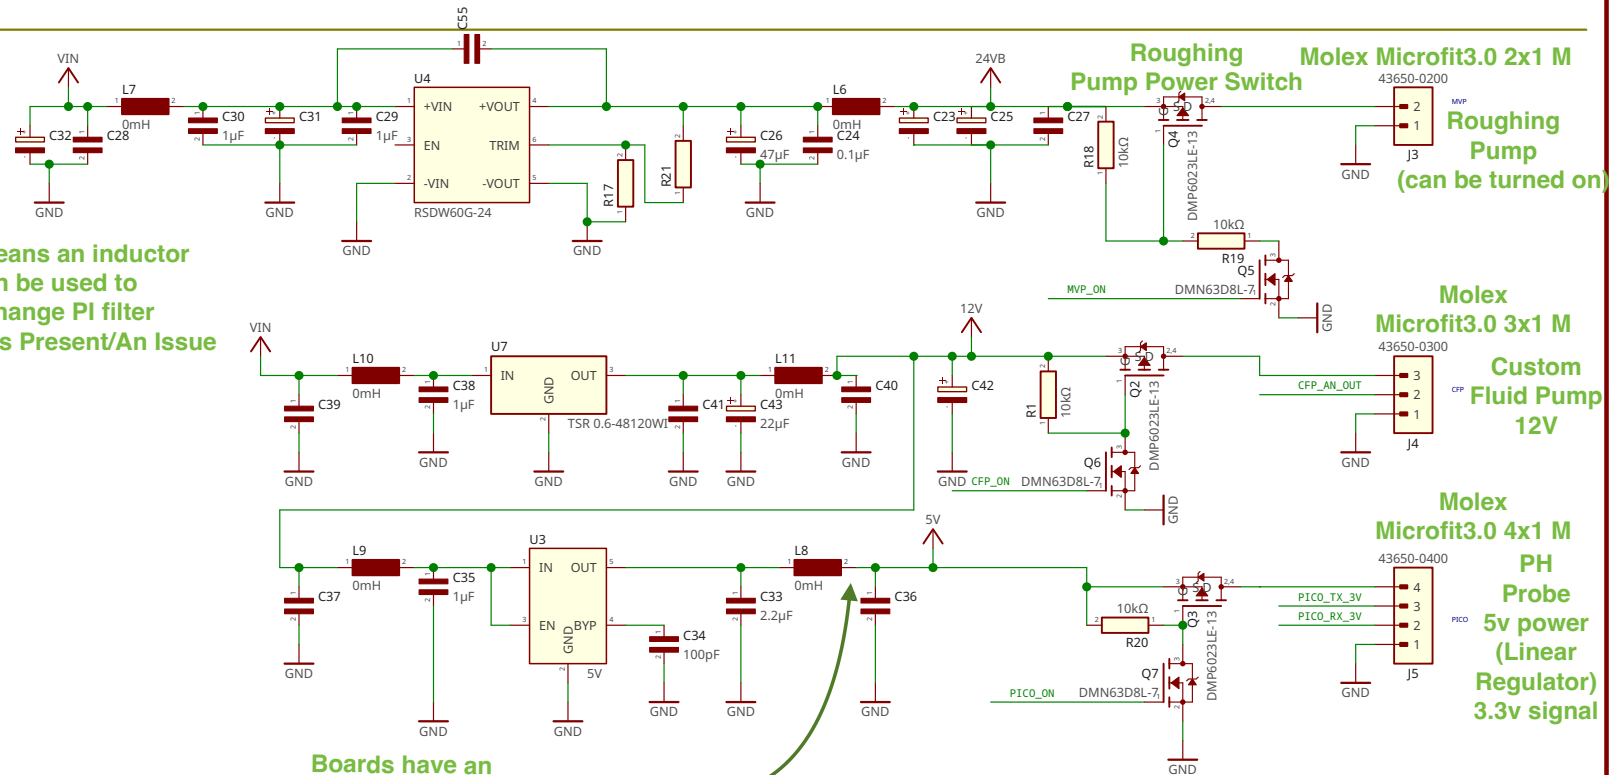

Boards have an
Un-shown 3.3v power supply about Here - Fits in as
a retrofit To supply 3.3V buffers for the pico below

Power		2024-09-10
		sam
100818	v1.0.1	Page 1 of 4

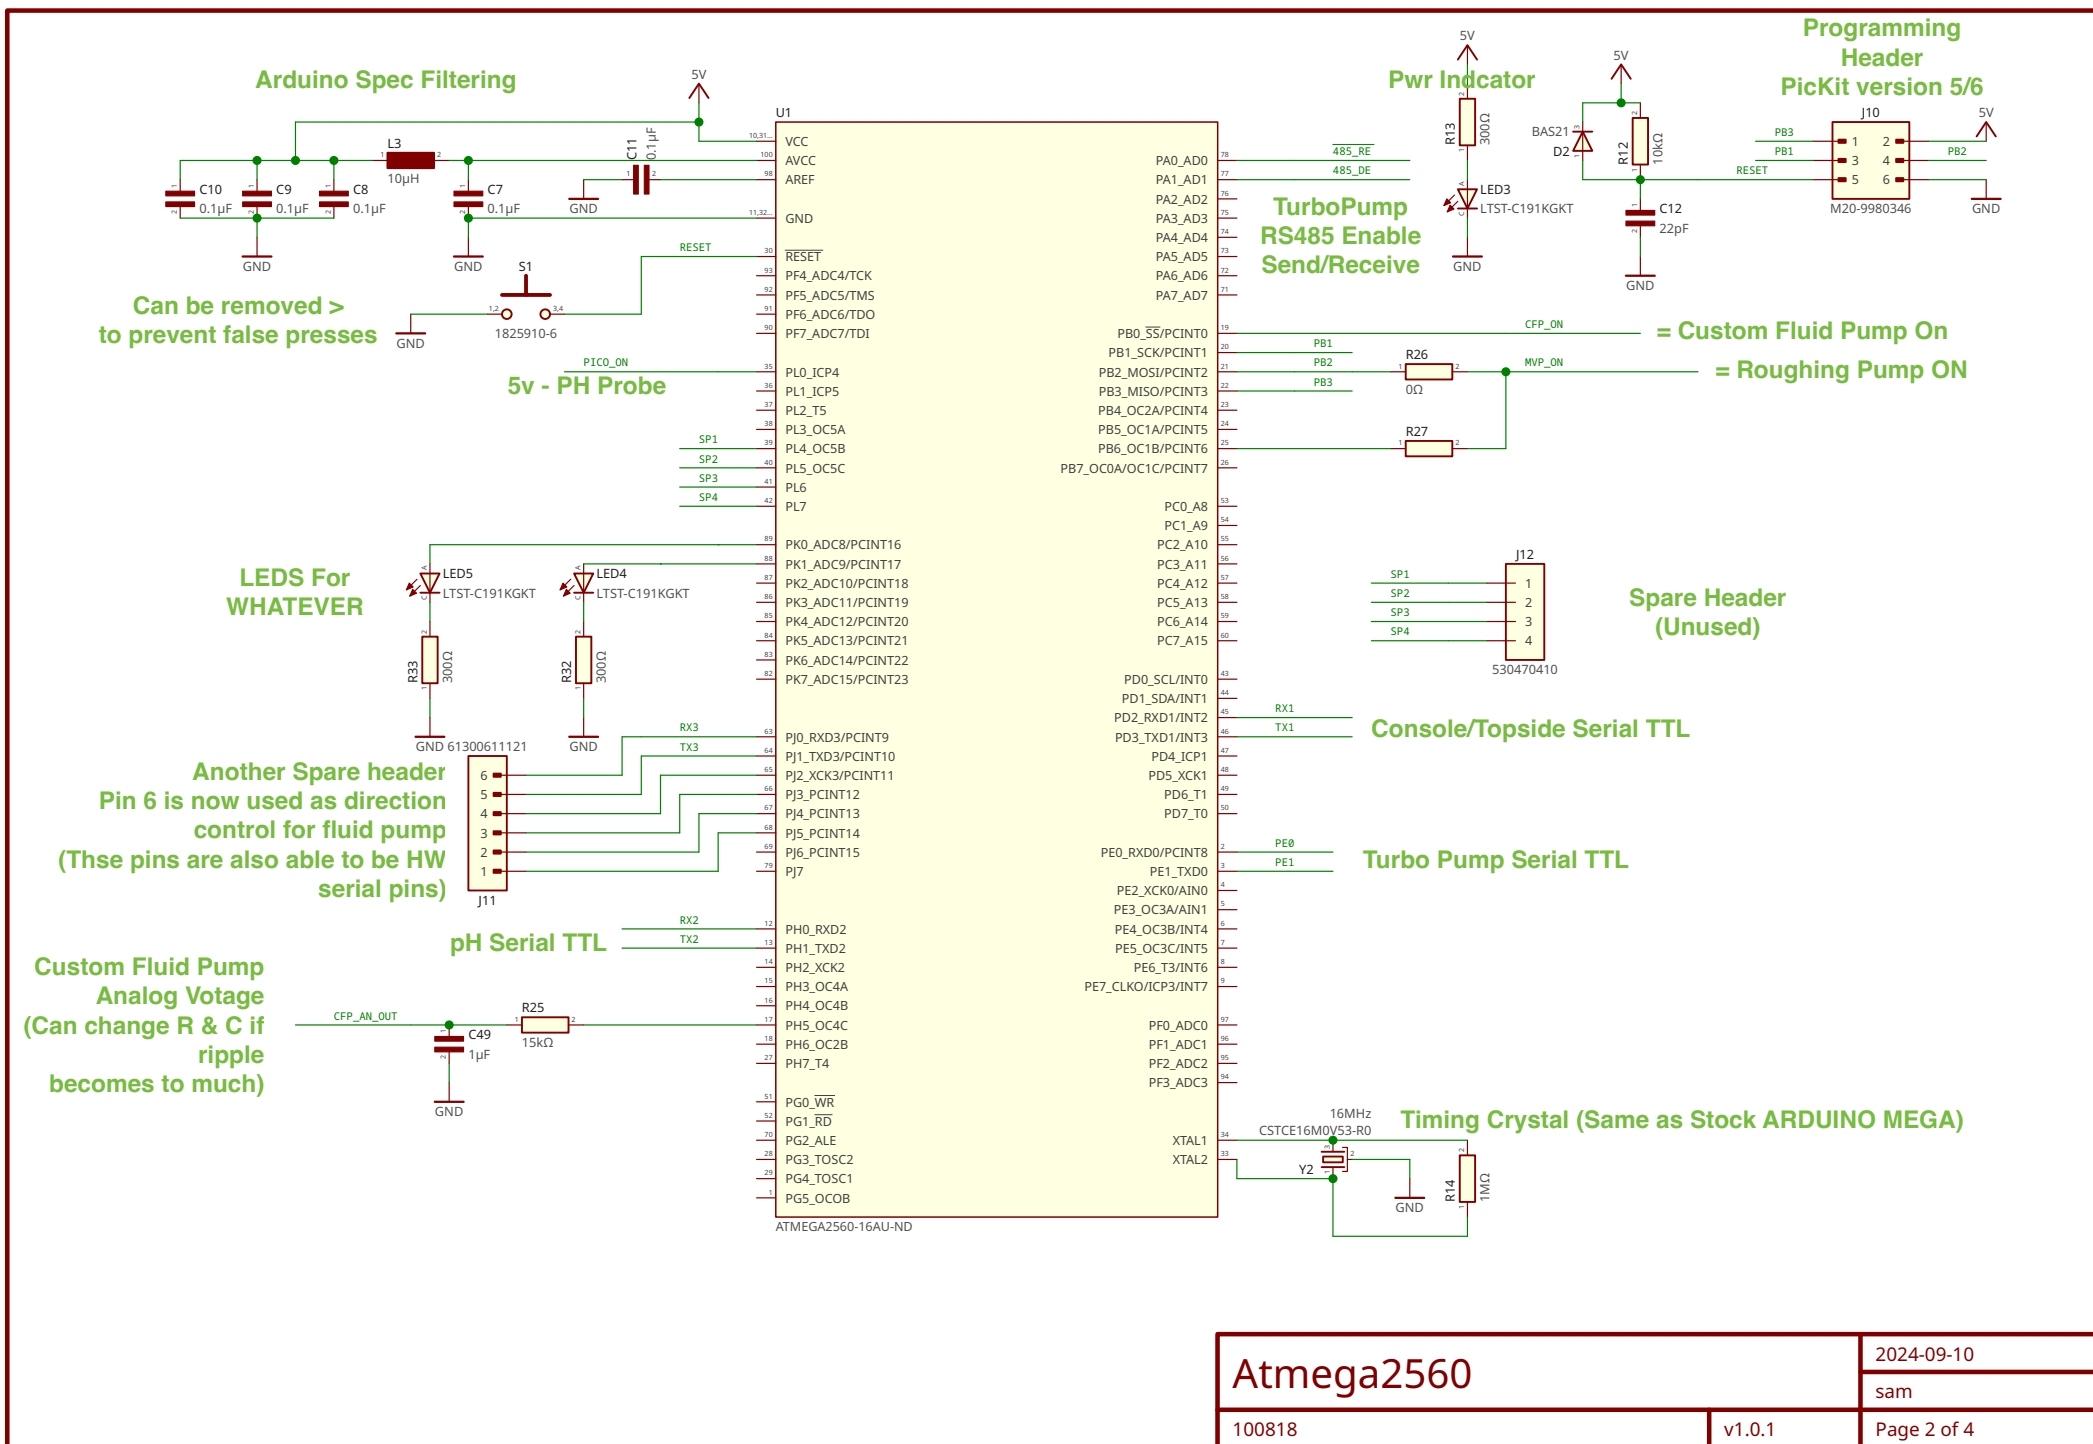

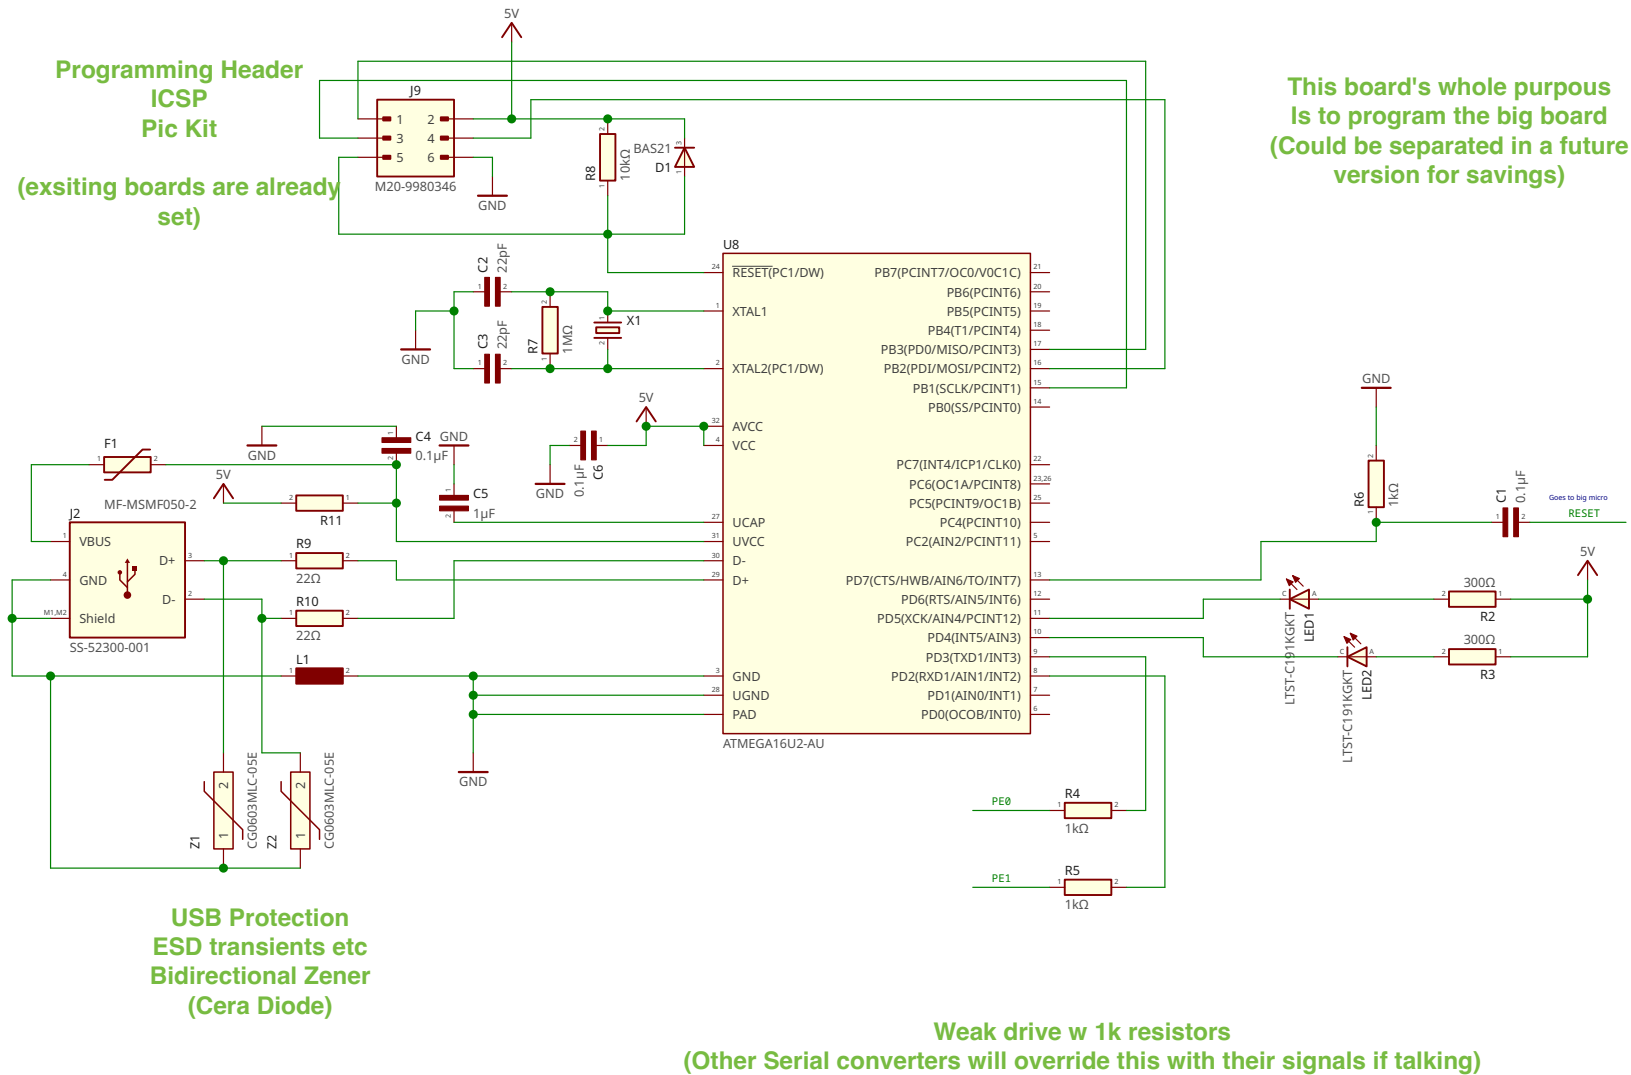

Atmega16		2024-09-10	
		sam	
100818	v1.0.1	Page 3 of 4	

