Service Manual

ViewSonic VX1935wm-3

Model No. VS11444
19" Color TFT LCD Display

Copyright

Copyright © 2006 by ViewSonic Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of ViewSonic Corporation.

Disclaimer

ViewSonic makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranty of merchantability or fitness for any particular purpose. Further, ViewSonic reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation of ViewSonic to notify any person of such revision or changes.

Trademarks

Optiquest is a registered trademark of ViewSonic Corporation.

ViewSonic is a registered trademark of ViewSonic Corporation.

All other trademarks used within this document are the property of their respective owners.

Revision History

| Revision | SM Editing Date | ECR Number | Description of Changes | Editor |
|----------|-----------------|------------|------------------------|-------------|
| 1a | 10/26/2006 | | Initial Release | Jamie Chang |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

TABLE OF CONTENTS

| 1. | Precautions and Safety Notices | 1 |
|-----|--|----|
| 2. | Specification | 4 |
| 3. | Front Panel Function Control Description | 13 |
| 4. | Circuit Description | 21 |
| 5. | Adjustment Procedure | 33 |
| 6. | Troubleshooting Flow Chart | 45 |
| 7. | Recommended Spare Parts List | 53 |
| 8. | Exploded Diagram and Exploded Parts List | 56 |
| 9. | Block Diagram | 60 |
| 10. | Schematic Diagrams | 61 |
| 11. | PCB Layout Diagrams | 68 |

1. Precautions and Safety Notices

1. SAFETY PRECAUTIONS

This monitor is manufactured and tested on a ground principle that a user's safety comes first. However, improper used or installation may cause damage to the monitor as well as to the user.

WARNINGS:

- This monitor should be operated only at the correct power sources indicated on the label on the rear of the monitor. If you're unsure of the power supply in you residence, consult your local dealer or Power Company.
- Use only the special power adapter that comes with this monitor for power input.
- Do not try to repair the monitor by yourself, as it contains no user-serviceable parts. Only the qualified technician can repair it.
- Do not remove the monitor cabinet. There are high-voltage parts inside that may cause electric shock to human bodies.
- Stop using the monitor if the cabinet is damaged. Have it checked by a service technician.
- Put your monitor only in a lean, cool, dry environment. If it gets wet, unplug the power cable immediately and consult your closed dealer.
- Always unplug the monitor before cleaning it. Clean the cabinet with a clean, dry cloth. Apply non-ammonia based cleaner onto the cloth, not directly onto the glass screen.
- Do not place heavy objects on the monitor or power cord.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety visual inspections and the protection afforded by them cannot necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Before replacing any of these components read the parts list in this manual carefully. The use of substitute replacement parts, which do not have the same safety characteristics as specified in the parts list, may create shock, fire, or other hazards.

3. SERVICE NOTES

When replacing parts or circuit boards, clamp the lead wires around terminals before soldering.

Keep wires away from high voltage, high temperature components and sharp edges.

Keep wires in their original position so as to reduce interference.

Adjustment of this product please refers to the user' manual.

Handling and Placing Methods Correct Metbods: Incorrect Methods: Only touch the metal frame of the LCD panel or the Surface of the LCD panel is pressed by fingers and front cover of the monitor. Do not touch the surface that may cause "Mura" of the polarizer Taking out the monitor by grasping the LCD panel. Take out the monitor with cushions That may cause "Mura"

Place the monitor on a clean and soft foam pad.

Placing the monitor on foreign objects.That could scratch the surface of the panel or cause "Mura"





The panel is placed facedown on the lap. That may cause "Mura".



2. Specification

1. INTRODUCTION

| | FEATURES | VX1935wm-3 | | | | | |
|--------------------------|---|---|--|--|--|--|--|
| TETI OR 5445 | Size | 19 " wide | | | | | |
| TFTLCD PANEL | Luminance (Typ) | 300 cd/m² | | | | | |
| 1 st | Contrast Ratio (Typ) | 700:1 | | | | | |
| lanal | Colors | 16.2 M (6 bits + 2 bits FRC) | | | | | |
| Innolux MT190AW01 V.0 | Response Time | 5 ms(on/off) | | | | | |
| WITT90AVVOT V.U | Viewing Angle (H/V) | 160 ° / 160 ° | | | | | |
| | Recommend resolution | 1440x900@60Hz | | | | | |
| January Cinnal | Analog | Yes (75ohms, 0.7/1.0 Vp-p) | | | | | |
| Input Signal | Digital | Yes | | | | | |
| | Separate Sync | Yes | | | | | |
| Sync Compatibility | Composite Sync | Yes | | | | | |
| | Sync on Green | Yes | | | | | |
| | PC | Yes | | | | | |
| Compatibility | Power Mac | Yes | | | | | |
| | TV Box (NextVision 6) | Yes | | | | | |
| Power Voltage | AC 100-240V, 50/60Hz | Yes | | | | | |
| Davis Oassassation | On Mode(Max / Typ) | 42 W / 35 W | | | | | |
| Power Consumption | Off Mode (Max) | ≤1 W | | | | | |
| Audio | 2W / THD 10% (Max) | Yes | | | | | |
| | Tilt (20 °5 °) | Yes | | | | | |
| F | Swivel | No | | | | | |
| Ergonomics | Pivot | No | | | | | |
| | Height Adjust | No | | | | | |
| OSD Control | [1][2][Ů][▼][▲] | Yes | | | | | |
| Discounting | Physical (W x H x D) | 450 x 434 x 209mm | | | | | |
| Dimension | Package (W x H x D) | 545*515*162mm | | | | | |
| 144 : 14 | Physical (Net Weight) | 5.2 Kg / 11.5 lbs | | | | | |
| Weight | Package (Gross Weight) | 6.7 Kg / 14.8 lbs | | | | | |
| 0 " 0 " | Temperature (°F/°C) | 32 °F-104°F / 0°C-40°C | | | | | |
| Operating Condition | Humidity (%) | 20 % - 80 % | | | | | |
| 0, 0, 1111 | Temperature (°F/°C) | -4°F-140°F / -20°C-60°C | | | | | |
| Storage Condition | Humidity (%) 10% - 90 % | | | | | | |
| | Global: CB, MPR II, WEEE,ROHS , ISO13406-2 | | | | | | |
| | VSA:UL, cUL, FCC-B, TUV-S, NOM, Energy Star | | | | | | |
| Regulation | VSE:TUV/ERGO,CE ,GOST-R+Hygier | VSE:TUV/ERGO,CE ,GOST-R+Hygienic ,SASO , ENERGY | | | | | |
| | VSI: BSMI, CCC, PSB, C-TICK, MIC | | | | | | |
| | VSCN:CCC | | | | | | |

2. GENERAL specification

| Test Resolution & Frequency | 1440x900 @ 60Hz | | | | |
|----------------------------------|-----------------------------------|--|--|--|--|
| Test Image Size | Full Size | | | | |
| Contract and Brightness Controls | Factory Default: | | | | |
| Contrast and Brightness Controls | Contrast = 70%, Brightness = 100% | | | | |

3. VIDEO INTERFACE

| Analog Input Connector | DB-15 (Analog), |
|-------------------------------------|--|
| Digital Input Connector | DVI-D (Digital), |
| Default Input Connector | Defaults to the first detected input |
| Video Cable Strain Relief | Equal to twice the weight of the monitor for five minutes |
| Video Cable Connector DB-15 Pin out | Compliant DDC 1/2B |
| | 1. Video RGB (Analog) |
| Video Signals | Separate, Composite, and Sync on Green |
| | 2. TMDS (Digital) |
| Video Impedance | 75 Ohms (Analog), 100 Ohms (Digital) |
| Maximum PC Video Signal | 950 mV with no damage to monitor |
| Maximum Mac Video Signal | 1250 mV with no damage to monitor |
| Sync Signals | TTL |
| DDC 1/2B | Compliant with Revision 1.3 |
| Sync Compatibility | Separate Sync, Composite Sync, SOG |
| Video Compatibility | Shall be compatible with all PC type computers, Macintosh |
| video Compatibility | computers, and after market video cards |
| | 640 x 350*, 640 x 480, 720 x 400* (640 x 400*), 800 x 600, 832 x |
| | 624, 1024 x 768, 1152 x 864, 1152 x 870, 1280 x 720, 1280 x |
| Resolution Compatibility | 960, 1280 x 1024 , 1400 x 1050 , 1440 x 900 |
| Resolution Compatibility | |
| | * The image vertical size might not be full screen. |
| | But the image vertical position should be at the center. |
| Exclusions | Not compatible with interlaced video |

4. POWER SUPPLY

| Internal Power Supply | Part Number:ILPI-024 | | |
|--------------------------|--------------------------------------|--|--|
| Input Voltage Range | 90 to 264 VAC (100~240VAC ±10%) | | |
| Input Frequency Range | 47 to 63 Hertz | | |
| Short Circuit Protection | Output can be shorted without damage | | |
| Over Current Protection | 5.0 A typical at 14.0 VDC | | |
| Leakage Current | 3.5mA (Max) at 254VAC / 60Hz | | |

| Efficiency (at 115VA | C Full Load) | | Typical: 80% | | | | |
|----------------------|-------------------|-------|--|---|------------------------------|--|--|
| | | | Minimum: 75% | | | | |
| Fuse | | | Internal and not user replaceable | | | | |
| Power Output | | | 35 V | Vatts (typ) | | | |
| Ripple and Noise | | | Ripp | ole: <3% | | | |
| Max Input AC Currer | nt | | 1.2 | Arms @ 100VAC, 0.6 Arms @240 | OVAC | | |
| Inrush Current (Cold | Stort) | | 40 A | A (max) @ 120VAC | | | |
| Inrush Current (Cold | Start) | | 60 A | A (max) @ 220VAC | | | |
| | | | Sha | Il start and function properly when | n under full load, with all | | |
| Power Supply Cold S | Start | | com | binations of input voltage, input f | requency, and operating | | |
| | | | tem | perature. | | | |
| | | | Sha | Il be able to withstand an ANSI/IE | EEE C62.41-1980 6000V 200 | | |
| Power Supply Transi | ient Immunity | | amp | pere ring wave transient test with | no damage. | | |
| | | | Sha | Il be able to withstand 1.5 times | nominal line voltage for one | | |
| Power Supply Line S | Surge Immunity | | cycl | e with no damage. | | | |
| | | | Shall be able to function properly, without reset or visible screen | | | | |
| Power Supply Missir | ng Cycle Immunity | | artifacts, when $\frac{1}{2}$ cycle of AC power is randomly missing at | | | | |
| | | | nominal input. | | | | |
| | | | The | power supply shall not produce | audible noise that would be | | |
| | | | detectable by the user. Audible shall defined to be in | | | | |
| Davisa Comalo Associ | 4: | | compliance with ISO 7779 (DIN EN27779:1991) Noise | | | | |
| Power Supply Acous | SUCS | | measurements of machines acoustics. Power Switch noise shall | | | | |
| | | | not be considered. | | | | |
| Power Saving Opera | ation(Method) | | VESA DPMS Signaling | | | | |
| Power Consumption | | | | or the original significance of the original significance or the original | | | |
| | | | | | | | |
| | Mode LED | | | Power Consumption | | | |
| | 0 | Green | | 35 W (Typ) | | | |
| | On | | | 42 W (max) | | | |
| | Stand By | Amber | ſ | < 2 W | | | |
| | Active Off Off | | < 1 W | | | | |
| | | | | | | | |
| Recovery Time | | | On I | Mode = N/A, Active Off < 3 sec | | | |
| | | | | | | | |

5. ELECTRICAL REQUIREMENT

Horizontal / Vertical Frequency

| Horizontal Frequency | 30 – 82 kHz |
|-----------------------|------------------------------|
| Vertical Refresh Rate | 56 – 75 Hz |
| Maximum Pixel Clock | 135 MHz |
| Sync Polarity | Independent of sync polarity |

Timing Table

| 1 1111111 | Timing Table | | | | | | | | |
|-----------|--------------|----|--------|----------|-----------|-----------|----------|----------------|--|
| | | | | | | Analo | g | Dic | |
| Item | | Ti | ming | | Separated | Composite | SOG | Digital - TMDS | Remark |
| 1 | 640 x 350 | @ | 70 Hz, | 31.5 KHz | √ | √ | √ | √ | For Analog sync, the image vertical size image will be not full screen (Still at the center) |
| 2 | 640 x 400 | @ | 60 Hz, | 31.5 KHz | ✓ | √ | √ | √ | For Analog sync, the OSD will be 640x480@60Hz |
| 3 | 640 x 400 | @ | 70 Hz, | 31.5 KHz | √ | √ | √ | √ | For Analog sync, the image vertical size image will be not full screen (Still at the center), And the OSD will be 640x400/720x400 (primary=720x400). |
| 4 | 640 x 480 | @ | 50 Hz, | 24.7 KHz | ✓ | √ | √ | | 1257166). |
| 5 | 640 x 480 | @ | 60 Hz, | 31.5 KHz | √ | √ | √ | √ | |
| 6 | 640 x 480 | @ | 67 Hz, | 35 KHz | ✓ | √ | √ | √ | |
| 7 | 640 x 480 | @ | 72 Hz, | 37.9 KHz | ✓ | √ | √ | √ | |
| 8 | 640 x 480 | @ | 75 Hz, | 37.5 KHz | ✓ | ✓ | ✓ | √ | |
| 9 | 640 x 480 | @ | 85 Hz, | 43.3 KHz | ✓ | ✓ | ✓ | ✓ | |
| 10 | 720 x 400 | @ | 70 Hz, | 31.5 KHz | ✓ | √ | √ | √ | For Analog sync, the image vertical size image will be not full screen (Still at the center), And the OSD will be 640x400/720x400 (primary=720x400). |
| 11 | 720 x 480 | @ | 60 Hz, | 31.5 KHz | ✓ | ✓ | √ | √ | For Analog sync, the information OSD shows 640x480 |
| 12 | 720 x 576 | @ | 50 Hz, | 31.3 KHz | ✓ | ✓ | ✓ | ✓ | |
| 13 | 800 x 600 | @ | 56 Hz, | 35.1 KHz | ✓ | ✓ | ✓ | ✓ | |
| 14 | 800 x 600 | @ | 60 Hz, | 37.9 KHz | ✓ | ✓ | ✓ | ✓ | |
| 15 | 800 x 600 | @ | 72 Hz, | 48.1 KHz | ✓ | ✓ | ✓ | ✓ | |
| 16 | 800 x 600 | @ | 75 Hz, | 46.9 KHz | ✓ | ✓ | ✓ | ✓ | |
| 17 | 800 x 600 | @ | 85 Hz, | 53.7 KHz | ✓ | ✓ | ✓ | ✓ | |
| 18 | 832 x 624 | @ | 75 Hz, | 49.7 KHz | ✓ | ✓ | ✓ | ✓ | |
| 19 | 1024 x 768 | @ | 50 Hz, | 39.6 KHz | ✓ | ✓ | ✓ | ✓ | For Analog sync, Switch 1024x768@50Hz and 1280x768@50Hz by [1]+[2] short cut key |

| 20 | 1024 x 768 | @ | 60 Hz, | 48.4 KHz | ✓ | ✓ | ✓ | ✓ | |
|----|-------------|---|--------|-----------|----------|----------|----------|----------|--|
| 21 | 1024 x 768 | @ | 70 Hz, | 56.5 KHz | ✓ | ✓ | ✓ | ✓ | |
| 22 | 1024 x 768 | @ | 75 Hz, | 60 KHz | ✓ | ✓ | ✓ | ✓ | |
| 23 | 1024 x 768 | @ | 75 Hz, | 60.02 KHz | ✓ | ✓ | ✓ | ✓ | |
| 24 | 1024 x 768 | @ | 85 Hz, | 68.7 KHz | ✓ | ✓ | ✓ | ✓ | |
| 25 | 1152 x 864 | @ | 75 Hz, | 67.5 KHz | ✓ | ✓ | ✓ | ✓ | |
| 26 | 1152 x 870 | @ | 75 Hz, | 68.7 KHz | ✓ | ✓ | ✓ | ✓ | |
| 27 | 1280 x 768 | @ | 50 Hz, | 39.6 KHz | ✓ | √ | √ | √ | For Analog sync, Switch 1024x768@50Hz and 1280x768@50Hz by [1]+[2] short cut key |
| 28 | 1280 x 768 | @ | 60 Hz, | 47.4 KHz | ✓ | | | ✓ | |
| 29 | 1280 x 768 | @ | 60 Hz, | 47.8 KHz | ✓ | ✓ | ✓ | ✓ | |
| 30 | 1280 x 768 | @ | 75 Hz, | 60.3 KHz | ✓ | √ | √ | ✓ | For Analog sync, Switch 1024x768@75Hz and 1280x768@75Hz by [1]+[2] short cut key |
| 31 | 1280 x 960 | @ | 50 Hz, | 49.4 KHz | ✓ | ✓ | ✓ | ✓ | |
| 32 | 1280 x 960 | @ | 60 Hz, | 60.0 KHz | ✓ | ✓ | ✓ | ✓ | |
| 33 | 1280 x 960 | @ | 75 Hz, | 75.2 KHz | ✓ | ✓ | ✓ | ✓ | |
| 34 | 1280 x 1024 | @ | 50 Hz, | 52.7 KHz | ✓ | ✓ | > | > | |
| 35 | 1280 x 1024 | @ | 60 Hz, | 64 KHz | ✓ | ✓ | ✓ | ✓ | |
| 36 | 1280 x 1024 | @ | 70 Hz, | 74.8 KHz | ✓ | ✓ | ✓ | ✓ | |
| 37 | 1280 x 1024 | @ | 72 Hz, | 76.8 KHz | | | | ✓ | |
| 38 | 1280 x 1024 | @ | 75 Hz, | 80 KHz | ✓ | ✓ | ✓ | ✓ | |
| 39 | 1360 x 768 | @ | 60 Hz, | 47.7 KHz | ✓ | | | ✓ | |
| 40 | 1400 x 1050 | @ | 50 Hz, | 54.1 KHz | ✓ | ✓ | ✓ | ✓ | |
| 41 | 1400 x 1050 | @ | 60 Hz, | 64.7 KHz | ✓ | | | ✓ | |
| 42 | 1400 x 1050 | @ | 60 Hz, | 65.3 KHz | ✓ | ✓ | | ✓ | |
| 43 | 1400 x 1050 | @ | 75 Hz, | 82.3 KHz | ✓ | ✓ | ✓ | ✓ | |
| 44 | 1440 x 900 | @ | 60 Hz, | 55.5 KHz | ✓ | | | ✓ | |
| 45 | 1440 x 900 | @ | 60 Hz, | 55.9 KHz | ✓ | ✓ | ✓ | ✓ | |
| 46 | 1440 x 900 | @ | 75 Hz, | 70.6 KHz | ✓ | ✓ | ✓ | ✓ | |

^{*1.} Tolerance \geq ±2KHz.

Primary Presets

1440x900 @ 60Hz

User Presets

Number of User Presets (recognized timings) Available: 10 presets total in FIFO configuration

Changing Modes

- Maximum Mode Change Blank Time for image stability: 5 seconds (Max), excluding "Auto Adjust" time
- Under DOS mode (640 x 350, 720 x 400 & 640 x 400), it should recall factory setting when execute "Auto Adjust"
- The monitor needs to do "Auto Adjust" the first time a new mode is detected (see section "0-Touch™ Function Actions")
- While running Change Mode, Auto Adjust or Memory Recall, the image shall blank

^{*2.} Any timing not in the list, it should display as normal or show on "OUT OF RANGE" OSD message without blanking.

^{*3.} The image quality of 85Hz mode might be worse than 75Hz.

2.6 FRONT PANEL CONTROLS AND INDICATORS

Front Panel Hardware Controls

| Power Switch (Front Head) | Power Control, soft Power Switch. |
|---|--|
| Power LED (Front Head) | Blue – ON |
| | Orange –Power Saving Mode |
| | Dark = Soft Power Switch OFF |
| Front Panel Controls (Head) | [1] BUTTON 1 |
| [1][2][⁽⁾][v][A] | [2] Button 2 |
| | [⁽⁾] Power |
| | [▼] DOWN ARROW BUTTON |
| | [▲] Up arrow button |
| | |
| | Note: Power Button, Button 1 and Button 2 must be one-shot |
| | logic operation. (i.e. there should be no cycling) |
| Reaction Time | OSD must fully appear within 0.5s after pushing Button 1 |

Short Cuts Function from the button(s)

| [1] | Main Menu | | | | |
|---|--|--|--|--|--|
| [2] | Input toggle (Analog or Digital) | | | | |
| [▼] or [▲] | To immediately activate Brightness /Contrast menu. | | | | |
| [▼]+[▲] | Recall both of Contrast and Brightness to default | | | | |
| [1] + [2] | Toggle 720x400 and 640x400 mode when input 720x400 or 640x400 mode | | | | |
| [1] + [▼] + [▲] | White Balance. (Not shown on user's guide) | | | | |
| (Keep pushing 3 sec) | | | | | |
| [1] + [▼] | Power Lock | | | | |
| [1] + [▲] | OSD Lock | | | | |
| [2] + [⁽⁾] | Factory Mode | | | | |
| Remark : All the short cuts function are only available while OSD off | | | | | |

Function descriptions

OSD Lock short cuts function for the buttons

The OSD lock will be activated by pressing the front panel control buttons "(1), & (\triangle)" for 10 seconds. If the user then tries to access the OSD by pressing any of the buttons "1", " ∇ ", " \triangle ", "2" a message will appear on the screen for 3 seconds showing "OSD Locked". The OSD lock will be deactivated by pressing the front panel control buttons "(1), & (\triangle)" again for 10 seconds.

Note1: When the OSD is locked will lock all functions, including "Volume" and "Mute"

Note 2: Status bar indicating OSD Lock or Unlock is in progress and when complete it will indicate "OSD Locked"

Note 3: OSD Lock should not lock Power Button and Power Lock function

Power Lock short cuts function for the buttons

The power button lock will be activated by pressing the front panel control buttons "(1), & (▼)" for 10 seconds. Locking the power button means that the user won't be able to turn off the LCD while the power button is locked. If the user presses the power button while it is locked, a message will appear on the screen for 3 seconds showing "Power Button Locked". It also means that with the power button locked, the LCD would automatically turn back

"On" when power is restored after a power failure. If the power button is not in the locked mode, then power should return to it's previous state when power is restored after a power failure. The power button lock will be deactivated by pressing the front panel control buttons "(1), & (∇)" again for 10 seconds.

Note 1: Status bar indicating Power Button lock or unlock is in progress and when complete it will indicate "Power Button Locked"

Note 2: Power should only be lockable in the "On State"

Memory Recall Actions

Memory Recall action on the analog and digital mode as below

- 1. Recall white balance to factory setting
- 2. Set the factory defaults as shown in Section 4-8
- 3. Clean all the mode setting buffer
- 4. Execute Auto Image Adjust

Note: Memory Recall should have no effect for Language, Power Lock, User Color Settings or Input Priority

Resolution Notice Actions

- 1. Resolution Notice OSD should show on screen after changing to non-native mode for 30 sec
- 2. For auto input select function, it shall meet the requirement in Appendix D.
- 3. The OSD should disappear after 10 sec or by pushing button [1] or [2]

Resolution Notice function should be disabled when push button [2] under Resolution Notice OSD

0-Touch™ Function Actions

- 1. Execute Auto Image Adjust when new mode detected, and save the settings to buffer for further use
- 2. It should be reset by Memory Recall function(Should not reset by power off, power unplug and others)

OSD Auto Save

The OSD shall save new settings when it is turned off by the user or when it times out. There shall not be a separate save

Factory Defaults

| Item | Defaults | Item | Defaults |
|-------------------|----------|-------------------|----------|
| Contrast | 70% | Input Priority | N/A |
| Brightness | 100% | Resolution Notice | Enabled |
| Color Temperature | 6500K | Volume | N/A |
| Sharpness | 100% | Balance | N/A |
| OSD H. Position | 50% | Treble | N/A |
| OSD V. Position | 50% | Bass | N/A |
| OSD Time Out | 15 Sec | | |
| OSD Background | Enabled | | |

2.7 AUDIO INTERFACE (SPEAKER SPECIFICATION)

| Line input signal | 1 Vrms |
|---------------------------------------|---|
| Line input impedance | 10 kOhm |
| Maximum Amp power output (Watt) | 2.0 W (RL=8Ω) |
| Speaker Power rating(Ω /Watt) | $8\Omega/2$ W (typ.) ; $8\Omega/3$ W (max) |
| THD | 10% (Maxmum output @ 1KHZ) |
| Signal to Noise Ratio | 75 dB |
| Frequency response | 200 Hz – 20 Khz |
| SPL. | $82 \pm 3 \text{ dB}$ |
| Line input connection | 3.5 mm stereo jacks |
| Vibration | There should be no audible vibration resonance at volume=100% & treble / bass in def. value |
| Screen image | There should be no affect on the screen image stability under any conditions |
| Connector PC99 requirement Audio in | Lime Green pantone # 577C |
| Cable type / length | 3.5mm stereo cable / 1.8m length |
| Audio DPMS | Speakers stay Off when the rest of the monitor is in power saving Note: There is no guarantee <2 W at power consumption in Active Off mode, when the Audio Cable is connected |


| | LCD PANEL | Туре: | INL | 19" wide Color TFT Active Matrix WXGA LCD. (MT190AW01 V.0) | | | | |
|----------|-----------------------|-----------------------|-----|---|--|--|--|--|
| | 1 st panel | Pixel Pitch | | 0.285mm (H) x0.285mm(V) | | | | |
| | source | Color Filter | | RGB Vertical Stripe | | | | |
| | | Glass | | Anti-Glare treatment and hard-coating 3H | | | | |
| | | Viewing Angle CR > 10 | | Horizontal = 140 Degrees (Min), Vertical = 140 Degrees (Min) | | | | |
| | | | | Horizontal = 160 Degrees (Typ), Vertical = 160 Degrees (Typ) | | | | |
| | | | | | | | | |
| 1 | | Contrast Ratio | | 700:1 (Typ), 500:1 (Min) | | | | |
| ' | | Brightness | | 300 cd/m2 (Typ), 230 cd/m2 (Min), | | | | |
| | | | | | | | | |
| | | Response Time | | Tr = 1.5ms (Typ), Tf =3.5ms (Typ). Tr+Tf = Total = 5ms (Typ) | | | | |
| | | | | Tr = 6.5ms (Max), Tf = 8.5ms (Max) Tr+Tf = Total = 15ms (Max) | | | | |
| | | | | | | | | |
| | | | | 16.2 million colors (6 bits + 2 bits FRC) | | | | |
| | | Color Depth | | 40,000 Hrs (Min) | | | | |
| | | Backlight Life | | | | | | |
| | INPUT | Video | | RGB Analog (75 ohms, 0.7 Vp-p); DVI-D | | | | |
| 2. | SIGNAL | Sync | | H/V Separated (TTL), Composite, SOG | | | | |
| | | | | F _H :30~82kHz, F _V :50~85Hz | | | | |


| | COMPATIBILI | PC | | VGA up to 1440 x 900 non-interlaced |
|----|----------------------------|-----------------------|----------|--|
| 3. | TY | | | |
| | | Мас | | Power Macintosh up to 1440 x 900 |
| | RESOLUTIO | Max | | 1440 x 900 @ 60, 75 Hz NI |
| | N | | | 1400 x 1050 @ 60, 75 Hz NI |
| | | | | 1280 x 1024 @ 60, 75,85 Hz NI |
| | | | | 1024 x768 @ 60, 75,85 Hz NI |
| | | | | 800 x 600 @ 60, 75 ,85Hz NI |
| | | | | 640 x 480 @ 60, 75 Hz NI |
| | CONNECTO | Signal | Head | 15 pin mini D-sub |
| | R | | | DVI-I |
| | | Power | | Audio in stereo Jack |
| | | | | |
| | | | Head | 3 Pin AC Plug, (CEE22) |
| | POWER Voltage AC/DC | | AC/DC | AC 100 – 240 VAC 50-60 Hz (auto switch) |
| | | Consumption | Internal | 35W (Typ) / 43W (Max) |
| | | | Power | |
| | SPEAKER | PEAKER Stereo Speaker | | 2w x2 , |
| | | | | |
| | ERGONOMIC Tilt Down | | Down | 5 Degrees |
| | S | | Up | 20 Degrees |
| | CONTROLS | Physical | LCD | [1], [2] , Power (Soft) , Down[▼], Up[▲] |
| | | | Head | |
| | | OSD | | Auto Image Adjust ^{*1} |
| | | | Main | Contrast/Brightness*2*4 |
| | | | Menu | Input Select |
| | | | | Analog, Digital |
| | | | | Audio Adjust |
| | | | | Volume* ⁴ , Mute* ⁴ |
| | | | | Color Adjust |
| | | | | SRGB, 9300K, 7500K,6500K(default), 5400, User Color [R, G, B] |
| | | | | Information |
| | | | | Resolution, H Frequency, V Frequency, Pixel Clock, Serial Number, |
| | | | | Model Number, |
| | | | | "www.ViewSonic.com" |
| | | | | Manual Image Adjust |
| | | | | Horizontal. Size ^{*1} , H/V. Position ^{*1} , Fine Tune ^{*1} , Sharpness ^{*3} |
| | | | | Setup Menu |
| | | | | Language [English, French, German, Italian, Spanish, Finnish, |
| | | | | Japanese, |

| | | | Traditional Chinese, Simplified Chinese], Resolution Notice, OSD |
|------------|----------------|------|--|
| | | | Position, |
| | | | OSD Timeout, OSD Background |
| | | | Memory Recall |
| | | | |
| | | | [1]: Main Menu |
| | | | [2]: Input Select |
| | | | [▲] or [▼]: Brightness/Contrast |
| | | | [▲] + [▼]: Recall Contrast and Brightness |
| | | | [1] and [▼]: Power lock/unlock |
| | | | [1] and [▲]: OSD lock/unlock |
| | | | |
| | | | *1 These functions are not available in Digital Mode |
| | | | *2 These functions are not available under sRGB Mode |
| | | | *3 These functions are not available under Native Resolution Mode |
| | | | * ⁴ These functions setting can be recalled to default by [▼]+[▲] |
| BANDWIDTH | Pixel Clock | | Digital 140 Mhz (Max) Analog 140 Mhz (Max) |
| DISPLAY | | | 410.4 (H) x 256.5 (V) |
| AREA | | | |
| | Temperature | | 32°F to 104°F (0°C to 40°C) |
| CONDITION | Humidity | | 20% to 80% (no condensation) |
| STORAGE / | Temperature | | -4°F to 140°F (-20°C to 60°C)° |
| SHIPPING | Humidity | | 10% to 90% (no condensation) |
| CONDITION | | | |
| DIMENSIONS | Physical | | 450 mm (W) x 434 mm (H) x 209 mm (D) |
| | | | 17.7" (W) x 17" (H) x 8.2" (D) |
| | | | 450 mm (AA) = 0.44 mm (L1) = 0.5 5 mm (D) |
| | Panel Only | | 450 mm (W) x 341 mm (H) x 65.5mm (D) |
| | | base | 17.7" (W) x 13.4" (H) x 2.6"(D) |
| | Packaging | | 545 mm (W) x 515 mm (H) x 162 mm (D) |
| | | | 21.5" (W) x 20.3" (H) x6.4" (D) |
| WEIGHT | Net | | 5.2kg (11.5 lbs) |
| | Net(w/o stand) | | 4.7kg (10.4 lbs) |
| | Gross | | 6.7kg (14.8 lbs) |
| REGULATIO | | | Global: CB, MPR II, WEEE,ROHS , ISO13406-2 |
| NS | | | VSA:UL, cUL, FCC-B, TUV-S, NOM, Energy Star |
| | | | VSE:TUV/ERGO,CE ,GOST-R+Hygienic ,SASO , ENERGY |
| | | | VSI: BSMI, CCC, PSB, C-TICK, MIC |
| | | | VSCN:CCC |
| 1 | 1 | i | |

| | RELIABILITY | MTBF | | 100,000hrs (demonstrated) excluding Light source | | |
|---|-----------------|---|-------------|--|--|--|
| | | | | Light Source MTBF: 40K hrs (Min) | | |
| | POWER | "On" | Green | Normal | | |
| , | SAVING | "Sleep" | Amber | <2W | | |
| | FUNCTION | N "Off" | | <1W | | |
| | LOGISTICS | Container Load | 20'/40' | 560/1120 pcs (Palletized) | | |
| | | Pallet Load | Air/Sea | 56/56 pcs | | |
| | | UPC-A Code | | 7 66907 21621 9 | | |
| | | ITF-14 Code | | 0 07 66907 21621 9 | | |
| | | Serial Format | | QCXyywwxxxxx | | |
| | | Country of | | China | | |
| | | Origin | | | | |
| , | SECURITY | | | Kennsington lock on the bottom right side | | |
| , | Wall Mount VESA | | | 100mm x 100mm | | |
| | ACCESSORI | | | Power Cable | | |
| | ES | | | 15 Pin VGA Video Cable | | |
| | | | | DVI-D Cable | | |
| | | | | Audio Cable | | |
| | | | | Quick Start Guide | | |
| | | | | ViewSonic Wizard CD-ROM w/ 17 Language User Guide | | |
| | EU Packaging | 1. Weight of the | e individua | al (empty) shipping carton Weight =903 g/box | | |
| | Information | 2. Weight and r | materials | of the poly foam Weight = 200g/piece, 2 pieces per box, Material | | |
| | | = EPS | | | | |
| | | 3. Weight and r | material o | f the empty accessory plastic bags Weight = 2g/bag, Material= | | |
| | | PE | | | | |
| | | 4. Weight and material of the plastic handle Weight = 10 g/piece, Material=PE Plastic | | | | |
| | | 5. Weight and material of the PE bag that covers the monitor Weight = 19g/bag, | | | | |
| | | Material=PE | Material=PE | | | |
| | | 6. Weight / Mat | erial of Pa | allets: | | |
| | | 7. A/E/M/U/ S/0 | G/J//K/P n | nodel -Weight =12+/-3kg, Material= Solid Wood (Fumigation) | | |


Adjusting the Screen Image

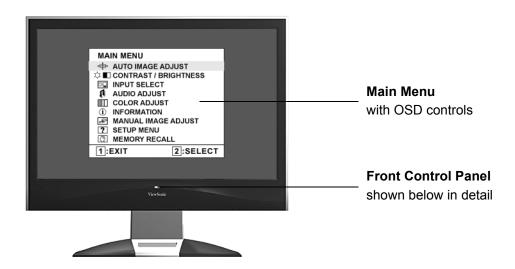

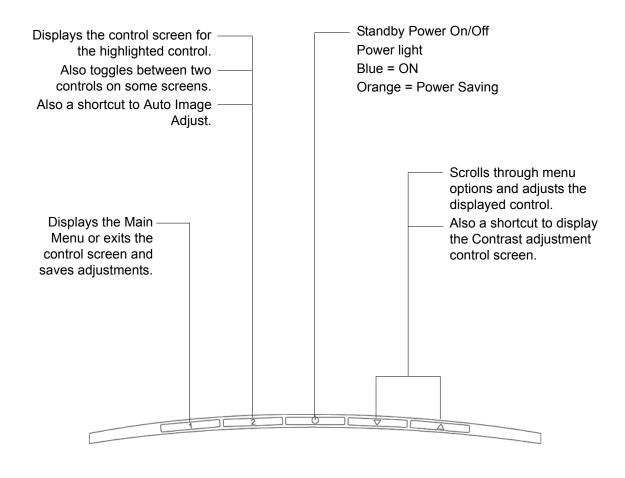


Do the following to adjust the display setting:

1. To display the Main Menu, press button [1].

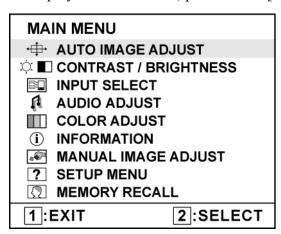

NOTE: All OSD menus and adjustment screens disappear automatically after about 15 seconds. This is adjustable through the OSD timeout setting in the setup menu.

- 2. To select a control to adjust, press ▲ or ▼to scroll up or down in the Main Menu.
- **3.** After the desired control is selected, press button [2]. A control screen like the one shown below appears.

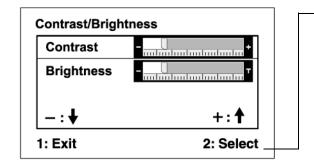

The command line at the bottom of the control screen tells what to do next from this screen. You can toggle between control screens, adjust the selected option, or exit the screen.

- **4.** To adjust the setting, press the up \triangle or down ∇ buttons.
- 5. To save the adjustments and exit the menu, press button [1] twice.

The following tips may help you optimize your display:

- Adjust the computer's graphics card so that it outputs a 1440 x 900 @ 60Hz video signal to the LCD display. (Look for instructions on "changing the refresh rate" in the graphics card's user guide.)
- If necessary, make small adjustments using H. POSITION and V. POSITION until the screen image is <u>completely visible</u>. (The black border around the edge of the screen should barely touch the illuminated "active area" of the LCD display.)

Main Menu Controls

Adjust the menu items shown below by using the up \triangle and down ∇ buttons.

Control Explanation



Auto Image Adjust sizes and centers the screen image automatically.




Contrast adjusts the difference between the image background (black level) and the foreground (white level).



Brightness adjusts background black level of the screen image.



Input Select toggles between inputs if you have more than one computer connected to the VX1935wm.






Audio Adjust

Volume increases the volume, decreases the volume, and mutes the audio. **Mute** temporarily silences audio output.



Color Adjust provides several color adjustment modes, including preset color temperatures and a User Color mode which allows independent adjustment of red (R), green (G), and blue (B). The factory setting for this product is 6500K (6500 Kelvin).

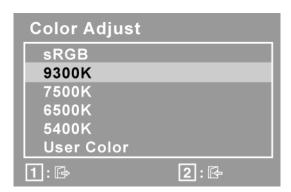

sRGB-This is quickly becoming the industry standard for color management, with support being included in many of the latest applications. Enabling this setting allows the LCD display to more accurately display colors the way they were originally intended. Enabling the sRGB setting will cause the Contrast and Brightness adjustments to be disabled.

9300K-Adds blue to the screen image for cooler white (used in most office settings with fluorescent lighting).

7500K - Adds blue to the screen image for cooler white (used in most office settings with fluorescent lighting).

6500K-Adds red to the screen image for warmer white and richer red.

5400K-Adds green to the screen image for a darker color.

User Color Individual adjustments for red (R), green (G), and blue (B).

- **1.** To select color (R, G or B) press button [2].
- **2.** To adjust selected color, press \triangle and ∇ .

Important: If you select RECALL from the Main Menu when the product is set to a Preset Timing Mode, colors return to the 6500K factory preset.




Information displays the timing mode (video signal input) coming from the graphics card in the computer, the LCD model number, the serial number, and the ViewSonic® website URL. See your graphics card's user guide for instructions on changing the resolution and refresh rate (vertical frequency). **NOTE:** VESA 1440 x 900 @ 60Hz (recommended) means that the resolution is 1440 x 900 and the refresh rate is 60 Hertz.

| nformation | | |
|----------------|----------|------|
| H. Frequency: | XX | kHz |
| V. Frequency: | XX | Hz |
| Resolution: | XXX | MHz |
| Pixel Clock: | XXXXXXXX | |
| Serial Number: | xxxxxxxx | ХХ |
| Model Number: | XXXXXXXX | XX |
| www.ViewSoni | c.com 1: | Exit |



Manual Image Adjust Sub-menu

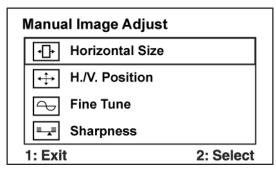




H. Size (Horizontal Size) adjusts the width of the screen image.



H./V. Position (Horizontal/Vertical Position) moves the screen image left or right and up or down.

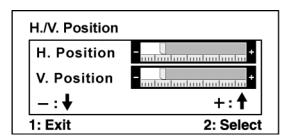



Fine Tune sharpens the focus by aligning text and/or graphics with pixel boundaries.


NOTE: Try Auto Image Adjust first.



Sharpness adjusts the clarity and focus of the screen image.



Setup Menu displays the menu shown below:

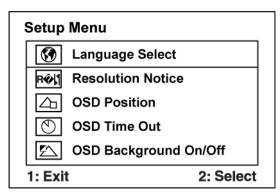





Language Select allows the user to choose the language used in the menus and control screens.



Resolution Notice allows the user to enable or disable this notice.

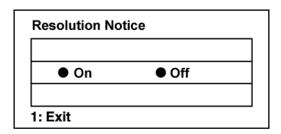

If you enable the Resolution Notice shown above and your computer is set at a resolution other than 1440 x 900, the following screen appears.





OSD Position allows the user to move the OSD menus and control screens.



OSD Timeout sets the length of time the OSD screen is displayed. For example, with a "30 second" setting, if a control is not pushed within 30 seconds, the display screen disappears.



OSD Background allows the user to turn the OSD background On or Off.



Memory Recall returns the adjustments back to factory settings if the display is operating in a factory Preset Timing Mode listed in the Specifications of this manual.

4. Circuit Description

4.1 Switching Mode Power Supply

4.1.1 AC Current Input Circuit

P801 is a connector for connecting AC Power. F801 is a fuse to protect all the circuit. AC input voltage is from 90v to 264V. R801 and R802 joined between two inputting main circuit to prevent man from shock. L801 is used to clear up low frequency wave. C801 and C802 are used to discharge the waves that L801 produced. High frequency waves are damped by C801 and C802. D801 is a rectifier which composed of 4 build-in diodes, it inverts AC to DC.

4.1.2 High Voltage to Low Voltage Control Circuit

C804 is used to smooth the wave from rectifier. IC802 is a highly integrated PWM controller. When rectified DC high voltage is applied to the HV pin during start-up, the MOSFET Q804 is initially off, and the Vcc pin capacitor is charged. When the Vcc pin voltage reaches approximately 10V, the control circuitry is activated and the soft-start begins. The soft-start circuit gradually increases the duty cycle of the MOSFET from zero to the maximum value over approximately 4ms. If no external feedback/supply current is fed into the FB pin by the end of the soft-start, the current Setpoint will be above the fault level, FAULT flag is raised, if the FAULT duration exceeds 80ms, the output controller disable

Resistor R808, R809, R810, R811 are for line over voltage shutdown(OVP)

When PWM is turned off, the main current flow will be consumed through R804 and D802, This will prevent MOSFET Q804 from being damaged under large current impulse and voltage spike.

D803 and C807 to provide internal Auxiliary voltage to Vcc pin during normal operation. Otherwise, error amplifier and feedback current input the FB pin for duty cycle control.

4.1.3 DC 5V and DC 14V Output Circuit

For DC 5V, D805 is used to rectify the inducted current. R828 and C814 are used to store energy when current is reversed. The parts including C818, C822, C820,L803 are used to smooth the current waves.

For DC 14V, D803 is used to rectify the inducted current. R827 and C813 are used to store energy when current is reversed. The parts including C815, C817 and L802 are used to smooth the current waves.

4.1.4 Feedback and OVP Protect Circuit

Pin R of IC803 is supplied 2.5-v stable voltage. It connects to 5V and 14V output through R822, R823 and R824. R822, R823 and R824 are output sampling resistor. When the sampling voltage more than 2.5V or less than 2.5V, current of FB IC802 will change, this can change the voltage from T801.

OVP Protect Circuit: When output is overvoltage, the auxiliary winding voltage will be increased, when it reaches about 14V. Q803 is triggered . It makes the IC802 Pin 1 exceed 5V, then the IC802 output will be disabled.

Q801, R816, R817 and ZD803 make up of dummy loading circuit. For start-up sequence, during 5V output take place high loading first, this dummy loading circuit operated to insure 14V

not be increased.

4. 2 Inverter Circuit

1R503, ZD501, R502, Q501 components convert +14V voltage into +5.0V voltage, and the voltage supply to IC501. The extra PWM pulse signal (BRIGHTNESS signal)input to control IC through R512, R514, C510, The LCT pin is set to a DC voltage of 0.7V by using a resistor divider(R507, R516), change the duty of PWM pulse, will regulate the lamp current. The ON/OFF voltage connect to pin10 of IC501 through D501, R501, A voltage of 2V to pin10 of IC501 enables the IC and activates the striking timer. The SSTCMP pin of IC501 performs the soft function, the C511 set the time of SST. The operation frequency determined by external capacitor C512, C521 and resistor R508 connected at CT pin of IC501. C515 connect the TIMER pin of IC501, the capacitor to set striking time and shunt down delay time. DRV!, DRV2 output for power MOSFET U501, U502.

2.OZ9938 provides two drive signals forU501, U502, and they work in push pull topology driving, two transformers are connected in parallel with each transformer driving two lamps in series. Turningeach N-Channel MOSFET "on/off" complementarily, produces an alternating current through the transformer primary and secondary. The "on" duration of the switches determines the amount of energy delivered to the CCFLs. R504, C504, R505, C505, R532, C529, R530, C522 are snubber networks, they suppress Voltage transient spike in drain of power MOSFET.

3. R506, R510, C509, C513, C514, R525, R531, C528, C525, and C527 are connected betweenhigh voltage output connector and ground, the divided AC voltage is inverted DC voltage through D502, D503, D508, and D509. The sense voltage feedback to VSEN (pin 6 of IC501) for an over voltage/over current condition during normal operation. R528, R533 are current sense resistor, current sense signal feed back to Isense (pin 5 of IC501) for lamp "ON" detection.

4.3 I/F Board Circuit

4.2.1 Power Input

+5V is from the power board and supply for U101(LD1117AL-3.3V), U105(TSUM56AL-1) and panel. +3.3V output is generated from +5V through C101 and C103 filtering, and U101 outputs. +3.3V is used for U105 (MCU & Scaler: TSUM16AL). +1.8V output is generated from +3.3V through U102 outputs. +1.8V is only used for U105.

4.2.2 MCU & Scaler(TSUM16AL)

The frequency of XTAL1 is 14.318MHz. U105 # 48 is defined as panel-enable. When the I/O port is high, Q101 and Q103 are conducted. And then after C108 and C109 filtering, obtain the voltage of VLCD, which will be connected to CN104. U105 # 85 is defined as CCFL-enable. When the I/O port is low, Q106 is pulled up and the backlights are on; When the I/O port is high, Q106 is conducted and the backlights are off. U105 # 35 is defined as DET-VGA, connected with CN103 #5. U105 # 84 is a pin of hardware reset. U105 # 54-# 55,# 58-# 65, # 67-# 74, # 77-# 78 output LVDS digital data of 8 bit to panel control circuit through CN104. U105 # 86 generates a PWM waveform by regulating the duty to control the brightness of the backlights.

U103 is EEPROM used for saving EDID data, which is connected by SCL and SDA pins with # 31 and # 30 of TSUM56AL-1.

U106 is a flash memory, U106 # 2, # 1, # 6, # 5 are the communications with U105 # 37-# 40.
U108 is EEPROM used for saving user's OSD setting. U108 is connected by SCL and SDA pin with # 44 and # 43 of TSUM16AL.

4.2.3 VGA Input

Signal R, G, B input through CN103 #1, #2, #3, and C112, C113 and C114 filtering the high frequency

noise. Signal HSYNC and VSYNC input through CN103 #13 and #14, and C125, R137, C126, R136 filtering. Then the analog signal enters U105, and then U104 deals with it internally. In addition, TVS101, TVS102, TVS103, TVS104 (the four are BAV99), ZD101, ZD105, ZD106, ZD107, ZD108(they are constant voltage diode of 5V6) are ESD protector. Signal DDC-SCL inputs via CN103 #15, and then passes through ZD101 for ESD protection, goes into EDID EEPROM IC U103. Signal DDC-SDA inputs via CN103 #12, and then passes through ZD107 for ESD protection, goes into EDID EEPROM IC U103. CN103 #5 is defined as cable detect pin, this detector realizes via R124 and U105 # 35,The PC-5V of U103 is supplied by PC via CN103 #9 with D103 for ESD protection, or supplied by Monitor self via D103.U103 is an EEPROM IC, which is a kind of memory and used for saving EDID data.

4.2.4 Button Control

Button "Key-Power" is defined as power on/off, which is connected to U105 # 90 through CN105 # 6.

Button "Key-2" is defined as two functions of selecting and adjustment, which is connected to U105 #94 through CN105 # 5.

Button "Key-Up" is defined as plus, which is connected to U105 # 95 through CN105 # 8.

Button "Key-Down" is defined as minus, which is connected to U105 # 99 through CN105 # 7.

Button "Key-1" is defined as two functions of menu and exit, which is connected to U105 # 89 through CN105 # 4.

LED indicator on the front bezel is defined as follows:

- a. When press button "Key-Power", U105 # 91 is pulled down and U105 # 92 is pulled high, so Q102 is conducted and the LED indicator is green.
- b. When in power-saving mode, U105 # 91 is pulled high and U105 # 92 is pulled down, so Q105 is conducted and the LED indicator is orange.

4.4 FACTORY PRESET TIMING TABLE

| | F _H (KHz) | Sync | Total | Active | Sync Width | Back Porch | Pixel |
|----------------|----------------------|----------|------------|------------|------------|------------|------------|
| TIMING | F _V (Hz) | Polarity | (Dot/Line) | (Dot/Line) | (Dot/Line) | (Dot/Line) | Freq.(MHz) |
| | 31.469 | + | 800 | 640 | 96 | 48 | |
| 640*350@70Hz | 70.086 | _ | 449 | 350 | 2 | 60 | 25.175 |
| IBM | 31.469 | _ | 800 | 640 | 96 | 48 | |
| 640*400@70Hz | 70.086 | + | 449 | 400 | 2 | 35 | 25.175 |
| IBM | 31.469 | _ | 900 | 720 | 108 | 54 | |
| 720*400@70Hz | 70.087 | + | 449 | 400 | 2 | 35 | 28.322 |
| | 24.700 | _ | 800 | 640 | 96 | 48 | |
| 640*480@50Hz | 50.000 | _ | 494 | 480 | 2 | 8 | 19.760 |
| VESA | 31.469 | _ | 800 | 640 | 96 | 40 | 05.475 |
| 640*480@60Hz | 59.940 | _ | 525 | 480 | 2 | 25 | 25.175 |
| 0.40*400.00711 | 35.000 | _ | 864 | 640 | 64 | 96 | 00.040 |
| 640*480@67Hz | 66.667 | _ | 525 | 480 | 3 | 39 | 30.240 |
| VESA | 37.861 | _ | 832 | 640 | 40 | 120 | 04 500 |
| 640*480@72Hz | 72.809 | - | 520 | 480 | 3 | 20 | 31.500 |
| VESA | 37.500 | _ | 840 | 640 | 64 | 120 | 04 500 |
| 640*480@75Hz | 75.000 | _ | 500 | 480 | 3 | 16 | 31.500 |
| VESA | 43.269 | _ | 832 | 640 | 56 | 80 | 00.000 |
| 640*480@85Hz | 85.008 | - | 509 | 480 | 3 | 25 | 36.000 |
| VESA | 35.156 | + | 1024 | 800 | 72 | 128 | 00.000 |
| 800*600@56Hz | 56.250 | + | 625 | 600 | 2 | 22 | 36.000 |
| VESA | 37.879 | + | 1056 | 800 | 128 | 88 | 40.000 |
| 800*600@60Hz | 60.317 | + | 628 | 600 | 4 | 23 | 40.000 |
| VESA | 48.077 | + | 1040 | 800 | 120 | 64 | 50.000 |
| 800*600@72Hz | 72.188 | + | 666 | 600 | 6 | 23 | 50.000 |
| VESA | 46.875 | + | 1056 | 800 | 80 | 160 | 40.500 |
| 800*600@75Hz | 75.000 | + | 625 | 600 | 3 | 21 | 49.500 |
| VESA | 53.674 | + | 1048 | 800 | 64 | 152 | 50.050 |
| 800*600@85Hz | 85.061 | + | 631 | 600 | 3 | 27 | 56.250 |
| MAC | 49.725 | _ | 1152 | 832 | 64 | 224 | 57.000 |
| 832*624@75Hz | 74.550 | _ | 667 | 632 | 3 | 39 | 57.283 |
| VESA | 48.363 | _ | 1344 | 1024 | 136 | 160 | 6E 000 |
| 1024*768@60Hz | 60.004 | _ | 806 | 768 | 6 | 29 | 65.000 |
| VESA | 56.476 | - | 1328 | 1024 | 136 | 144 | 75.000 |
| 1024*768@70Hz | 70.069 | _ | 806 | 768 | 6 | 29 | 75.000 |
| VESA | 60.023 | + | 1312 | 1024 | 96 | 176 | 78.750 |
| 1024*768@75Hz | 75.029 | + | 800 | 768 | 3 | 28 | 70.700 |

| | | | | l | | | |
|----------------|--------|---|------|------|-----|-----|---------|
| VESA | 68.677 | + | 1376 | 1024 | 96 | 208 | 94.500 |
| 1024*768@85Hz | 84.997 | + | 808 | 768 | 3 | 36 | |
| 1024*768@72Hz | 57.700 | - | 1360 | 1024 | 136 | 144 | 78.472 |
| 1024 700@72112 | 72.125 | _ | 800 | 768 | 6 | 26 | 10.412 |
| VESA | 67.500 | + | 1600 | 1152 | 128 | 256 | 108.000 |
| 1152*864@75Hz | 75.000 | + | 900 | 864 | 3 | 32 | 100.000 |
| MAC | 68.681 | _ | 1456 | 1152 | 128 | 144 | 100.000 |
| 1152*870@75Hz | 75.062 | _ | 915 | 870 | 3 | 39 | 100.000 |
| VESA | 60.000 | + | 1800 | 1280 | 112 | 312 | 108.000 |
| 1280*960@60Hz | 60.000 | + | 1000 | 960 | 3 | 36 | 100.000 |
| 1280*960@75Hz | 75.000 | + | 1800 | 1280 | 112 | 312 | 130.000 |
| 1280 900@73112 | 75.000 | + | 1000 | 960 | 3 | 36 | 130.000 |
| VESA | 63.981 | + | 1688 | 1280 | 112 | 248 | 108.000 |
| 1280*1024@60Hz | 60.020 | + | 1066 | 1024 | 3 | 38 | 100.000 |
| VESA | 79.976 | + | 1688 | 1280 | 144 | 248 | |
| 1280*1024@75Hz | 75.025 | + | 1066 | 1024 | 3 | 38 | 135.000 |
| | 75.025 | + | 1066 | 1024 | 3 | 38 |] |

4.5 Power On/Off Sequence


4.5.1 Hardware Power ON

When power cord is plugged into AC socket, SMPS starts work and provides U105 with VCC5V. When VCC5V inputs, U105 resets circuit active, sets U105 all registers to preset modes, and then monitor goes into stand-by mode. That means hardware power on has been completed.

4.5.2 Software Power ON/OFF


When press power key, U105 # 90 recieves low pulse, and then U105 will do the power on/off.

- If Power ON, U105 # 91(LED_Green) will send out Low potential, and then LED green on.
- If Power OFF, U105 # 91(LED_Green) will send out High potential, and then LED Off. The Panel_Vcc, Backlight_En, CLK/DATA output to panel will follow the following sequency.

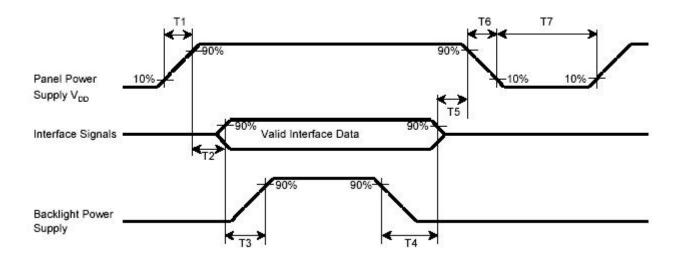

| T1 (ms) | T2 (ms) | T3 (ms) | T4 (ms) | T5 (ms) | T6 (ms) | T7 (ms) |
|---------|---------|---------|---------|---------|---------|---------|
| 0.1~10 | 0.5~10 | >200 | >100 | 0~50 | 0.1~25 | >1000 |

4.6 AC Outlet Pin Assignment



| Pin | Symbol | Description |
|-----|--------|-------------|
| 1 | L | Live |
| 2 | N | Neutral |
| 3 | Е | GND |

4.7 Inner Connector Pin Assignment

4.7.1 CN501, CN502, CN503, CN504 (Connect to Panel Backlight, SM02B-BHSS-1-TB or equivalent)

| Pin | Symbol | Description |
|-----|--------|-----------------------|
| 1 | H.V. | High voltage for lamp |
| 2 | L.V. | Low voltage for lamp |

4.7.2 CN101 (Power BD to Interface BD)

| Pin No. | Symbol | Description |
|---------|------------|---|
| 1 | VCC5V | +5.1V INPUT |
| 2 | VCC5V | +5.1V INPUT |
| 3 | GND | GND |
| 4 | ON/OFF | CCFL on/off control |
| 5 | BRIGHTNESS | Panel luminance control (CCFL brightness) |
| 6 | GND | Ground |
| 7 | VOL | Volume control input |
| 8 | MUTE | Mute control input |

4.7.3 CN105 (Interface BD to Keypad)

| Pin No. | Symbol | Description |
|------------|-------------|--|
| 1 | LED_ GREEN | Orange LED lighting control |
| 2 | LED_ ORANGE | Green LED lighting control |
| 3 | GND | Ground |
| 4 | KEY_POWER | DC power on/off control, |
| 5 | KEY_UP&▲ | OSD "▲" control to adjust value to increase, |
| 6 | KEY_DOWN&2 | Select control and auto adjustment control, |
| 7 | GND | OSD "▼" control to adjust value to decrease |
| 8 | KEY_1 | OSD menu and exit |

4.7.4 CN104 (Connect I/F BD to panel, FI-X30S-H or Equivalent)

| Pin No. | Symbol | Function |
|---------|--------|---|
| 1 | RXO0- | minus signal of odd channel 0(LVDS) |
| 2 | RXO0+ | plus signal of odd channel 0(LVDS) |
| 3 | RXO1- | minus signal of odd channel 1(LVDS) |
| 4 | RXO1+ | plus signal of odd channel 1(LVDS) |
| 5 | RXO2- | minus signal of odd channel 2(LVDS) |
| 6 | RXO2+ | plus signal of odd channel 2(LVDS) |
| 7 | GND | Ground |
| 8 | RXOC- | minus signal of odd clock channel (LVDS) |
| 9 | RXOC+ | plus signal of odd clock channel (LVDS) |
| 10 | RXO3- | minus signal of odd channel 3(LVDS) |
| 11 | RXO3+ | plus signal of odd channel 3(LVDS) |
| 12 | RXE0- | minus signal of even channel 0(LVDS) |
| 13 | RXE0+ | plus signal of even channel 0(LVDS) |
| 14 | GND | Ground |
| 15 | RXE1- | minus signal of even channel 1(LVDS) |
| 16 | RXE1+ | plus signal of even channel 1(LVDS) |
| 17 | GND | Ground |
| 18 | RXE2- | minus signal of even channel 2(LVDS) |
| 19 | RXE2+ | plus signal of even channel 2(LVDS) |
| 20 | RXEC- | minus signal of even clock channel (LVDS) |
| 21 | RXEC+ | plus signal of even clock channel (LVDS) |
| 22 | RXE3- | minus signal of even channel 3(LVDS) |
| 23 | RXE3+ | plus signal of even channel 3(LVDS) |
| 24 | GND | Ground |
| 25 | GND | Ground |
| 26 | GND | Ground or Open |
| 27 | GND | Ground |
| 28 | VCC | Power supply (5.0 V) |
| 29 | VCC | Power supply (5.0 V) |
| 30 | VCC | Power supply (5.0 V) |

4.7.5 CN103 (D-SUB Connector)

| | 18 Stribe (2 302 Stribetor) | | | | | |
|-----|-----------------------------|-----|--------------|-----|-----------------------|--|
| Pin | Symbol | Pin | Symbol | Pin | Symbol | |
| 1 | Red video input | 6 | Red GND | 11 | GND | |
| 2 | Green video input | 7 | Green GND | 12 | Serial data (SDA) | |
| 3 | Blue video input | 8 | Blue GND | 13 | H / H+V SYNC | |
| 4 | GND | 9 | +5V(from PC) | 14 | VSYNC | |
| 5 | Cable Detect | 10 | GND | 15 | Data clock line (SCL) | |

4.8 Key Parts Pin Assignment

4.8.1 IC802 (NCP1337, Power Control IC)

| Pin | Symbol | I/O | Description |
|-----|--------|-----|---|
| 1 | во | I | Brown-out and external triggering |
| 2 | FB | I | Sets the peak current setpoint |
| 3 | cs | I | Current sense input and overpower compensation adjustment |
| 4 | GND | | IC ground |
| 5 | DRV | 0 | Output driver |
| 6 | Vcc | I | IC supply |
| 7 | NC | N/A | N/A |
| 8 | HV | I | High-voltage pin |

4.8.2 IC501 (OZ9938GN, CCFL inverter controller IC)

| Pin No. | Symbol | I/O | Description |
|---------|--------|-----|--|
| 1 | DRV1 | 0 | Drive output |
| 2 | VDDA | ı | Supply voltage input |
| 3 | TIMER | I | Timing capacitor to set striking time and shut down delay time |
| 4 | DIM | I | Analog dimming or Internal LPWM dimming or external PWM pulse input for dimming function |
| 5 | ISEN | I | Current sense feedback |
| 6 | VSEN | ı | Voltage sense feedback |
| 7 | OVPT | ı | Over-voltage/over-current protection threshold setting pin |
| 8 | NC | | |
| 9 | NC | | |
| 10 | ENC | ı | ON/OFF control of IC |
| 11 | LCT | I | Timing capacitor to set internal PWM dimming frequency and also a pin for analog dimming selection |
| 12 | SSTCMP | ı | Capacitor for soft start time and loop compensation |
| 13 | СТ | ı | Timing resistor and capacitor for operation and striking frequency |
| 14 | GNDA | | Ground for analog signals |
| 15 | DRV2 | 0 | Drive output |
| 16 | PGND | | Ground for power paths |

4.8.3 **U105(TSUM56AL-1)**

| Pin | Symbol | I/O | Description |
|-----|--------|-----|---------------|
| 1 | NC | | Not connected |
| 2 | GND | | Ground |
| 3 | NC | | Not connected |
| 4 | NC | | Not connected |

| 5 | GND | | Ground |
|----|-------------------|-------|---|
| 6 | NC | | Not connected |
| 7 | NC | | Not connected |
| 8 | AVDD_DC | I | ADC Power |
| 9 | NC | | Not connected |
| 10 | NC | | Not connected |
| 11 | GND | | Ground |
| 12 | NC | | Not connected |
| 13 | NC | | Not connected |
| 14 | AVDD_DC | I | ADC Power |
| 15 | REXT | | External resistor 390 ohm to AVDD_ADC |
| 16 | AVDD_PLL | I | PLL Power |
| 17 | BIN0M | I | Reference ground for analog blue input |
| 18 | BIN0P | I | Analog blue input |
| 19 | GIN0M | I | Reference ground for analog green input |
| 20 | GIN0P | I | Analog green input |
| 21 | SOGIN0 | I | Sync-on-green input |
| 22 | RIN0M | I | Reference ground for analog red input |
| 23 | RIN0P | I | Analog red input |
| 24 | AVDD_ADC | I | ADC Power |
| 25 | REFM | | Internal ADC bottom de-coupling pin |
| 26 | REFP | | Internal ADC top de-coupling pin |
| 27 | HSYNC0 | I | Analog HSYNC input |
| 28 | VSYNC0 | I | Analog VSYNC input |
| 29 | GND | | Ground |
| 30 | DDCA_SDA/RS232_TX | I/O | DDC Data for Analog Interface; 4mA driving strength/UART Transmitter/GPIO |
| 31 | DDCA_SCL/RS232_RX | I/O | DDC Clock for Analog Interface/UART Receiver/GPIO |
| 32 | VDDP | I | Digital Output Power |
| 33 | GND | | Ground |
| 34 | VDDC | I | Digital Core Power |
| 35 | GPIO_P15/PWM0 | I/O | General Purpose Input/Output; 4mA driving strength/Pulse Width |
| | 0.10 | .,, 0 | Modulation Output; 4mA driving strength |
| 36 | NC | | Not Connected |
| 37 | SDO | I | SPI Flash Serial Data Output |
| 38 | SCZ | 0 | SPI Flash Chip Select |
| 39 | SCK | 0 | SPI Flash Serial Clock |
| 40 | SDI | 0 | SPI Flash Serial Data Input |
| 41 | NC | | Not Connected |
| 42 | NC | | Not Connected |

| 43 | GPIO_P11/I2C_MDA | I/O | General Purpose Input/Output; 4mA driving strength/I2C Master Data |
|----|------------------|-----|---|
| 44 | GPIO_P10/I2C_MCL | I/O | General Purpose Input/Output; 4mA driving strength/I2C Master Clock |
| 45 | NC | | Not Connected |
| 46 | NC | | Not connected |
| 47 | NC | | Not connected |
| 48 | GPIO_P27/PWM1 | I/O | General Purpose Input/Output; 4mA driving strength/Pulse Width Modulation Output; 4mA driving strength |
| 49 | VDDP | I | Digital Output Power |
| 50 | GND | | Ground |
| 51 | VDDC | I | Digital Core Power |
| 52 | MODE[0] | I | Chip Configuration Input |
| 53 | MODE[1] | I | Chip Configuration Input |
| 54 | LVA3P | 0 | A-Link Positive LVDS Differential Data Output |
| 55 | LVA3M | 0 | A-Link Negative LVDS Differential Data Output |
| 56 | VDDP | I | Digital Output Power |
| 57 | GND | | Ground |
| 58 | LVACKP | 0 | A-Link Positive LVDS Differential Clock Output |
| 59 | LVACKM | 0 | A-Link Negative LVDS Differential Clock Output |
| 60 | LVA2P | 0 | A-Link Positive LVDS Differential Data Output |
| 61 | LVA2M | 0 | A-Link Negative LVDS Differential Data Output |
| 62 | LVA1P | 0 | A-Link Positive LVDS Differential Data Output |
| 63 | LVA1M | 0 | A-Link Negative LVDS Differential Data Output |
| 64 | LVA0P | 0 | A-Link Positive LVDS Differential Data Output |
| 65 | LVA0M | 0 | A-Link Negative LVDS Differential Data Output |
| 66 | VDDC | I | Digital Core Power |
| 67 | LVB3P | 0 | B-Link Positive LVDS Differential Data Output |
| 68 | LVB3M | 0 | B-Link Negative LVDS Differential Data Output |
| 69 | LVBCKP | 0 | B-Link Positive LVDS Differential Clock Output |
| 70 | LVBCKM | 0 | B-Link Negative LVDS Differential Clock Output |
| 71 | LVB2P | 0 | B-Link Positive LVDS Differential Data Output |
| 72 | LVB2M | 0 | B-Link Negative LVDS Differential Data Output |
| 73 | LVB1P | 0 | B-Link Positive LVDS Differential Data Output |
| 74 | LVB1M | 0 | B-Link Negative LVDS Differential Data Output |
| 75 | VDDP | I | Digital Output Power |
| 76 | GND | | Ground |
| 77 | LVB0P | 0 | B-Link Positive LVDS Differential Data Output |
| 78 | LVB0M | 0 | B-Link Negative LVDS Differential Data Output |
| 79 | GND | | Ground |
| 80 | BYPASS | | For External Bypass Capacitor |

| 81 | NC | | Not connected |
|-----|---------------|-----|--|
| 82 | VDDC | I | Digital Core Power |
| 83 | GND | | Ground |
| 84 | RST | | Chip Reset; High Reset |
| 85 | GPIO_P12 | I/O | General Purpose Input/Output; 4mA driving strength |
| 86 | PWM1/GPIO_P25 | I/O | Pulse Width Modulation Output; 4mA driving strength/General Purpose Input/Output; 4mA driving strength |
| 87 | RSTN | ı | Chip Reset; Low Reset |
| 88 | GPIO_P00/SAR1 | I/O | General Purpose Input/Output; 4mA driving strength/SAR ADC Input |
| 89 | GPIO_P01/SAR2 | I/O | General Purpose Input/Output; 4mA driving strength/SAR ADC |
| 90 | GPIO_P02/SAR3 | I/O | General Purpose Input/Output; 4mA driving strength/SAR ADC Input |
| 91 | GPIO_P06 | I/O | General Purpose Input/Output; 6/12mA programmable driving |
| 92 | GPIO_P07 | I/O | General Purpose Input/Output; 6/12mA programmable driving |
| 93 | PWM0/GPIO_P26 | I/O | Pulse Width Modulation Output; 4mA driving strength/General Purpose Input/Output; 4mA driving strength |
| 94 | GPIO_P13 | I/O | General Purpose Input/Output; 4mA driving strength |
| 95 | GPIO_P14 | I/O | General Purpose Input/Output; 4mA driving strength |
| 96 | XIN | I | Crystal Oscillator Input |
| 97 | XOUT | 0 | Crystal Oscillator Output |
| 98 | AVDD_MPLL | I | MPLL Power |
| 99 | GPIO_P16/PWM2 | I/O | General Purpose Input/Output; 4mA driving strength/ |
| 100 | NC | | Not connected |

5. Adjustment Procedure

5.1 Key Function Description

| CONTROL KEY | KEYS FUNCTION |
|-------------|---|
| [AUTO] [2] | By pressing [AUTO] key, "Auto Image Adjust" is performed |
| [MENU] [1] | By pressing [MENU] key, Main menu display |
| [▼][▲] | A. When "MENU OSD" display, press these keys to change the contents of an adjustment item, or change an adjustment value B. When "MENU OSD" is un-display, press these keys to change brightness and contrast |
| [POWER] | Power on or power off the monitor |

5.2 Hot Key Operation

| Hot Key Function | | | | |
|---|---|--|--|--|
| Item | Function Detail | | | |
| [A] + [♥] | Recall Contrast or Brightness while in the Contrast or Brightness adjustment; | | | |
| [▲]+[▼] | Recall both Contrast and Brightness when the OSD is not open | | | |
| [1] +[2] | Toggle 720x400 and 640x400 mode when input 720x400 or 640x400 mode | | | |
| [1] + [▼] + [▲] | White Balance (Not shown on user's guide) | | | |
| (keep pushing 5 sec) | White Balance (Not shown on user's guide) | | | |
| [1] + [▼] | Power Lock | | | |
| [1] + [▲] | OSD Lock | | | |
| [▼] + [▲]+ [⁽⁾] Enter Factory Mode | | | | |
| Remark: All the function above are only available while OSD off | | | | |

5.3 OSD Control

5.3.1 OSD table

| Layer 1 | Layer 2 | Layer 3 |
|---------------------|--------------------|----------------|
| Auto Image Adjust | | |
| Contrast/Brightness | Contrast (+ / -) | |
| | Brightness (+ / -) | |
| Audio | Volume | Volume (+ / -) |
| | Mute | On/Off |
| Color Adjust | sRGB | |
| | 9300K | |
| | 6500K | |
| | 5400K | |
| | User Color | Red (+ / -) |
| | | Green (+ / -) |
| | | Blue (+ / -) |

| Information | | |
|--|---|---------------------|
| | H/V Position | H Position (+ / -) |
| Manual Image Adjust Setup Menu | II/V FOSITIOII | V Position (+ / -) |
| Manual Image Adjust | H Size | + / - |
| | H/V Position H Size Fine Tune Sharpness Language Select Menu Resolution Notice OSD Position OSD Time Out OSD Background | + / - |
| H/V Position H Size Fine Tune Sharpness Language Select etup Menu Resolution Notice OSD Position OSD Time Out OSD Background | + / - | |
| | | English |
| | H Size Fine Tune Sharpness Language Select Resolution Notice OSD Position OSD Time Out | French |
| | | German |
| | | Italian |
| | Language Select | Spanish |
| | | Finnish |
| Satur Manu | | Japanese |
| Setup Menu | | Simplified Chinese |
| | | Traditional Chinese |
| | Resolution Notice | On/Off |
| | OSD Desition | H Position (+ / -) |
| | OSD Position | V Position (+ / -) |
| | OSD Time Out | |
| | OSD Background | On/Off |
| Memory Recall | | |

5.3.2 OSD lock Menu function

| OSD Lock Menu Function Check | | | | | |
|------------------------------|----------------------|-----------------------------------|--|--|--|
| Item | Phenomenon | | | | |
| | | Press any of buttons"1", "▼", | | | |
| Activate OSD lock | [1] + [▲] 10S | "▲", "2" will appear "OSD Locked" | | | |
| | | 3s | | | |
| Deactivate OSD lock: | [1] + [▲] 10S(again) | | | | |

NOTICE:

When the OSD is locked will lock all functions.

Status bar indicating OSD Lock or Unlock is in progress and when complete it will indicate "OSD Locked"

OSD Lock should not lock Power Button and Power Lock function

5.3.3 Power lock Menu function

| Power Lock Menu Function Check | | | | | |
|--------------------------------|----------------------|----------------------------------|--|--|--|
| Item | Method | Phenomenon | | | |
| | | Can not turn off the LCD; | | | |
| | | Press the power button will | | | |
| | | appear "Power Button Locked" | | | |
| Activate Power Lock | [1] + [▼] 10S | OSD 3s; | | | |
| | | LCD would automatically turn | | | |
| | | back "On" when power is restored | | | |
| | | after a power failure | | | |
| Deactivate Power Lock | [1] + [▼] 10S(again) | | | | |

NOTICE:

Status bar indicating Power Button lock or unlock is in progress and when complete it will indicate "Power Button Locked"

Power should only be lockable in the "On State"

5.3.4 Resolution notice function

| | Resolution Notice Menu | | | | | |
|------------------------|-----------------------------------|-------------|--|--|--|--|
| Item | Method | Phenomenon | | | | |
| | Resolution Notice OSD should show | | | | | |
| Activate Resolution | on screen after changing to | | | | | |
| Notice Menu | non-native mode for 30 sec, | | | | | |
| Notice Meriu | And it should disappear after 10s | | | | | |
| | or by pushing button [1] or [2] | | | | | |
| Deactivate | Push button [2] under Resolution | | | | | |
| Resolution Notice Menu | Notice OSD, select Disable | | | | | |

5.3.5 Factory Mode Introduction

When input the signal, press "power key" to turn off the monitor. Press" $[\nabla] + [\Delta] + [\dot{\Box}]$ "at the same time so as to enter factory mode. After power on, press 'Menu[1]' key, you can see the Factory menu.

INL-V0 : Currently using panel model name

V3 060922 : Currently using firmware version information.

Auto Color : Automatically calibrate chip ADC parameter by using chip internal DAC

Color Temperature: The R, G, B of 9300K and 6500K and 5400K and User Mode

Colors are all generated from scaling back end.

5.4 Burn-in pattern

If it is a new monitor, and in factory mode, if no VGA signal input, Burn-in pattern will self generate automatically. Burn in patterns are: full Red, Green, Blue, White and Black. You can not escape from Burn-in pattern until plug in VGA Cable or press the power key to turn the monitor off and then turn it on.

5.5 Auto Color (Automatically calibrate chip ADC parameter by using chip internal DAC)

If it is a new-built set and it is first time to do the "auto color", please confirm the following steps:

- -Connect the VGA cable with the standard video pattern generator and display 5-mosic pattern on the monitor.
- Press "Power" to power off the monitor.
- Press" [▼] +[▲] +[Û] "simultaneously to enter factory mode.
- Press "Menu[1]", then press "Auto[2]" to execute Auto color item.
- After the "Auto Color" process finished, please press "Power" to restart monitor.


5.6 EDID (Rewrite EDID data to EEPROM)

If we need to rewrite the EEPROM data, please confirm the following steps.

- 1. Plug in VGA Cable; we can rewrite the EDID data to EEPROM by using "EDID Rewrite" program.
- 2. If the "EDID Rewrite" process finished, please pull out VGA cable and press "2"+" ▲" at the same time.
- 3. Pull out AC power cable or press power key to restart.


5.7 Upload firmware to MCU via VGA Cable

5.7.1 Connect ISP board between monitor and PC as below configure

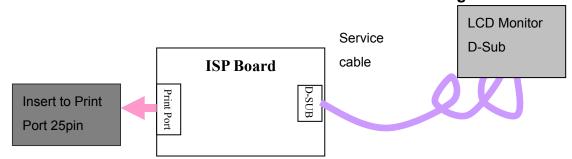


5.7.2 Using mStar ISP Tool Update FW:

(1). Select "Read", Choose the corresponding firmware, load to MCU.

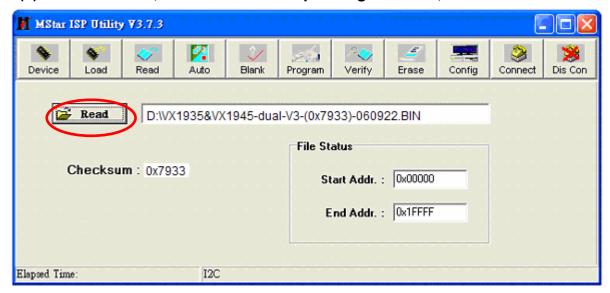


(2). Select "Connect", auto connect for ISP.

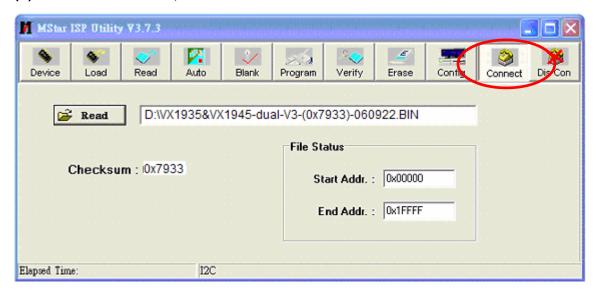

(3). Select "Run", start ISP.



(4). When the picture show "Verify OK", ISP finished.

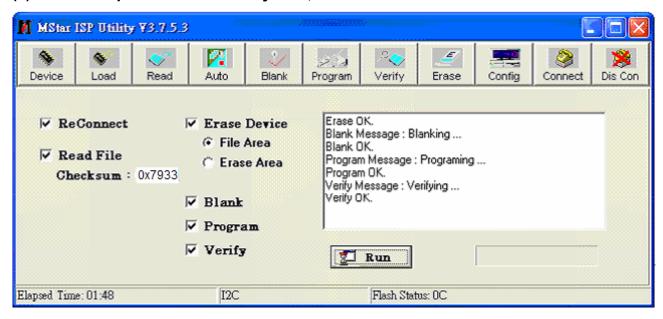

5.7.3 After repair, to ensure the quality you should do the following test and adjustment

| Item | Content | Equipment |
|-----------------------|---|--|
| Test OSD function | 1.Signal is set as 1280x1024@60Hz 2. LCM button are from left to right, checking whether each single function key and compound function key can be worked. | Chroma Signal Generator |
| Contrast Check | Set input mode to 1280x1024@60Hz Set Pattern to 32 gray shades Set contrast to the max. The brightest 6~8 shades brightness cannot be distinguished. | Chroma Signal Generator |
| Color Temperature | Do "Auto color" at 640 x 480@60Hz, 5-Mosic pattern Measure color temperature, check it complies with the following temperature: 5400K x=0.335 +/- 0.02, y=0.350 +/- 0.02 6500K x=0.313 +/- 0.02, y=0.329 +/- 0.02 9300K x=0.283 +/- 0.02, y=0.298 +/- 0.02 | Chroma Signal Generator and color analyzer |
| Modes switching check | Use Chroma Pattern Generator to make sequence. VESA (640x480 800x600 1024x768 1280x1024), MAC 832x624 DOS (640x350 720x400), the detail supported modes and power saving signal. Confirm the above timing modes must be full screen and the picture must be normal. LED is Orange at power saving mode. | Chroma Signal Generator |

| V management at | 1. Set brightness to default value 100 and contrast to default value | | | Chroma Signal |
|------------------|--|--------------------------|----------------------------------|---------------------|
| Y measurement at | 70 at 6500K | | | Generator and Color |
| default setting | 2. At full white patter, I | Measure Y, which should | d be \geq 250cd/m ² | Analyzer |
| | 1. Mode: 1280x1024@ | 060Hz | | |
| Panel Flicker | 2. Set Brightness& co | ntrast to default value | | Equipment:: |
| check | 3. Do "Auto Image Ad | iust" | | Chroma Signal |
| CHECK | 4. Shut down PC to ch | eck whether there's glit | ter on the center of the | Generator & PC |
| | picture. | | | |
| | 1. Mode: 1440x900 |)@60Hz | | |
| | 2. Pattern: full white | | | |
| | 3. Brightness: Max. | | | Chroma signal |
| | 4. Contrast: Default | | | generator and Power |
| Power saving | 5. Check power co | nsumption at each mode | es | meter |
| | State | Power Consumption | LED color | AC input: 230V/50Hz |
| | Normal | ≤ 42W | Blue | |
| | Stand By | < 2W | Orange | |
| | Power Key Off | <1W | No | |

Packing For Shipping And Disassembly Procedure

Packing For Shipping

- 1. Packing Procedure
 - 1.1. Paste protection film to protect the monitor. (Figure 1)
 - 1.2. Put the monitor in the PE bag and seal the bag with tape. (Figure 2)





Figure 1 Figure 2

- 1.3. Put the cushions on the monitor.
- 1.4. Place the monitor into the carton and then put all the accessories into the carton. At last, close the carton and seal it with tape. (Figure 3)

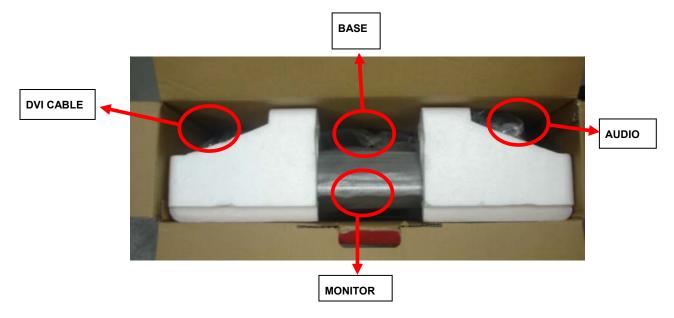


Figure 3

Disassembly Procedure













BASE



HINGE COVER







STAND







FRONT COVER












BACK COVER





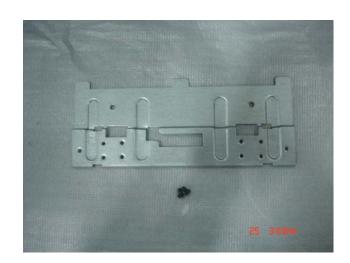







PANEL







CHASSIS







I/F BOARD

P/I BOARD





KEYPAD BOARD

SPEAKER





LVDS


KEY-POWER CABLE

6. Troubleshooting Flow Chart

1. Common Acknowledge

- If you change the interface board, be sure that the U103, U105, U106 and U108 these three components also changed to the new I/F board because there was program inside. If not, please re-write EDID and upload firmware into U106 via VGA Cable.
- If you adjust clock and phase, please do it at the condition of Windows shut down pattern.
- If you confirm the R.G.B. color is normal or not, please do it under 16-grey scalar pattern.
- This LCM is analog interface. So if the entire screen is an abnormal color that means the problem happen in the analog circuit part, if only some scale appears abnormal color that stand the problem happen in the digital circuit part.
- If you check the H/V position, please use the crosshatch pattern.
- This LCM support more than 30 timing modes, if the input timing mode is out of specification, the picture may appears abnormally.
- If brightness uneven, repairs Inverter circuit or change a new panel.
- If you find the vertical line or horizontal line lost on the screen, please change panel.
- If you find the speaker don't working, please don't plug in audio cable, unless change new speaker.


2. No Power & Power LED Off

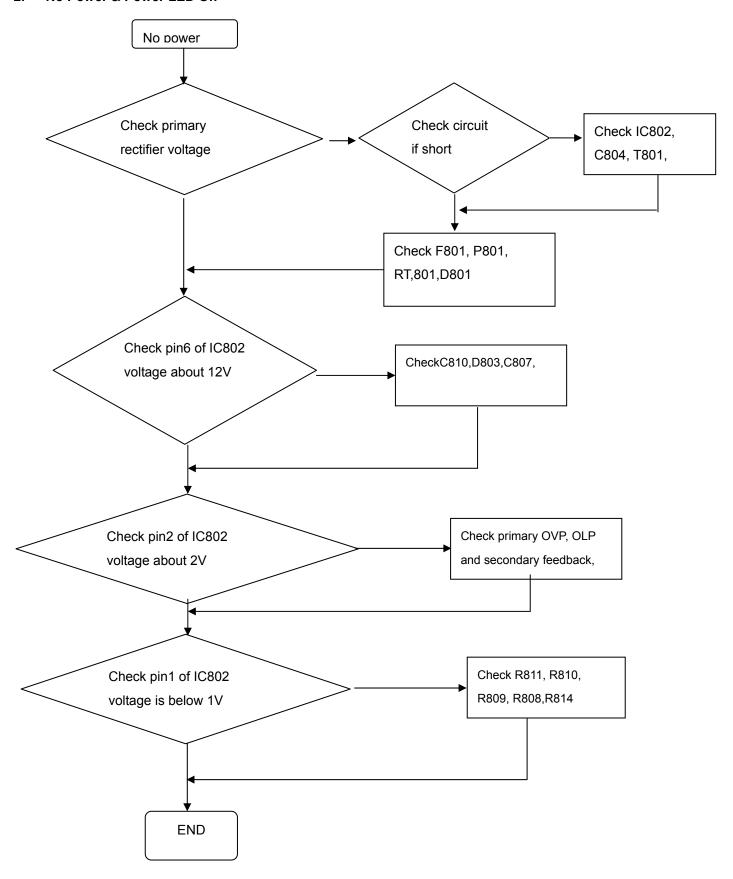


3. DC output voltage is unstable




4. Output power is unstable

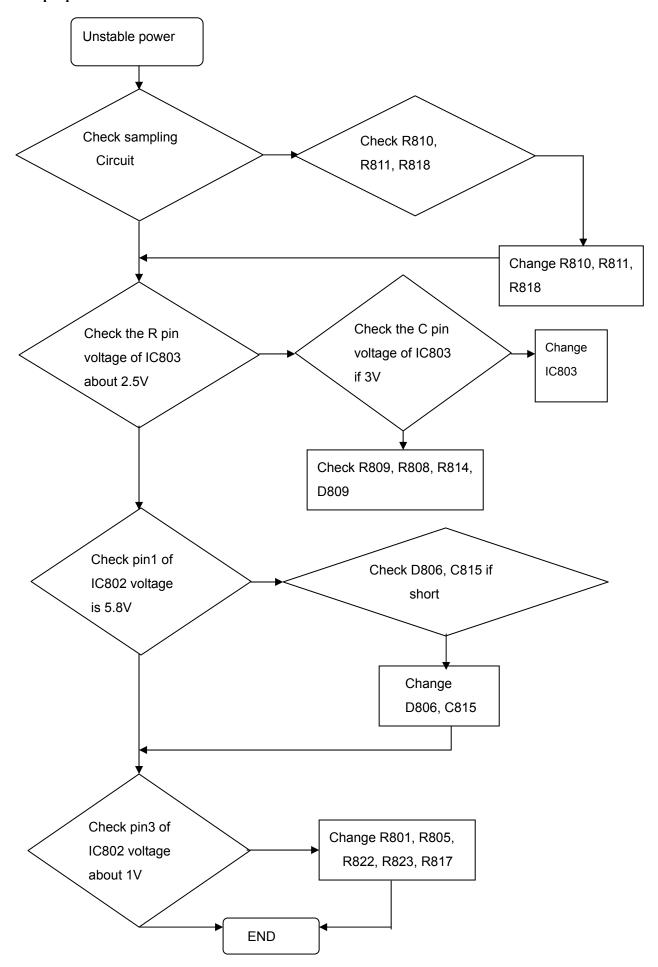


5. Backlight can't be turned on

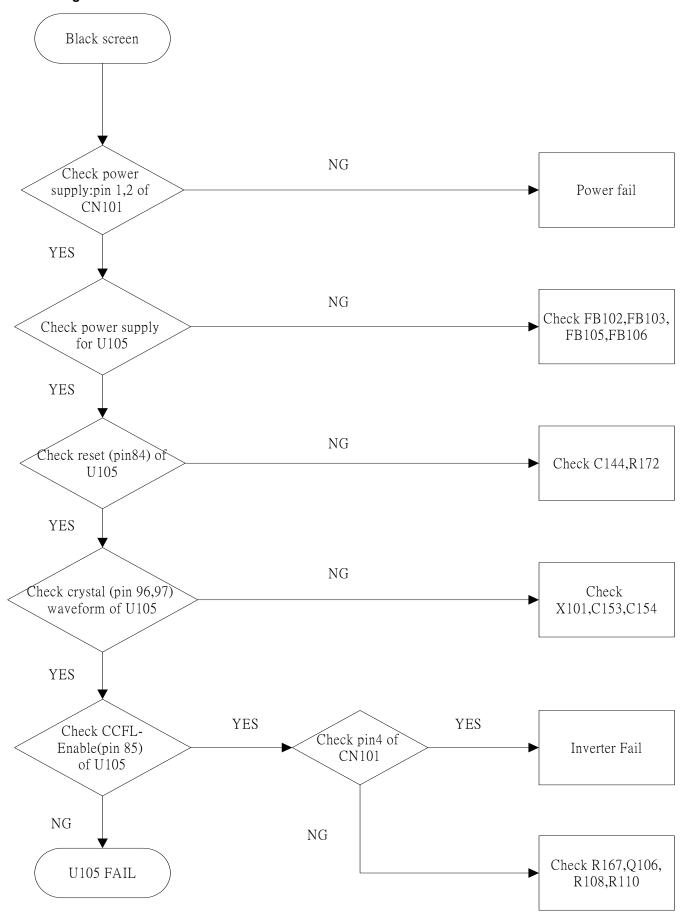


6. Black Screen and backlight turn on

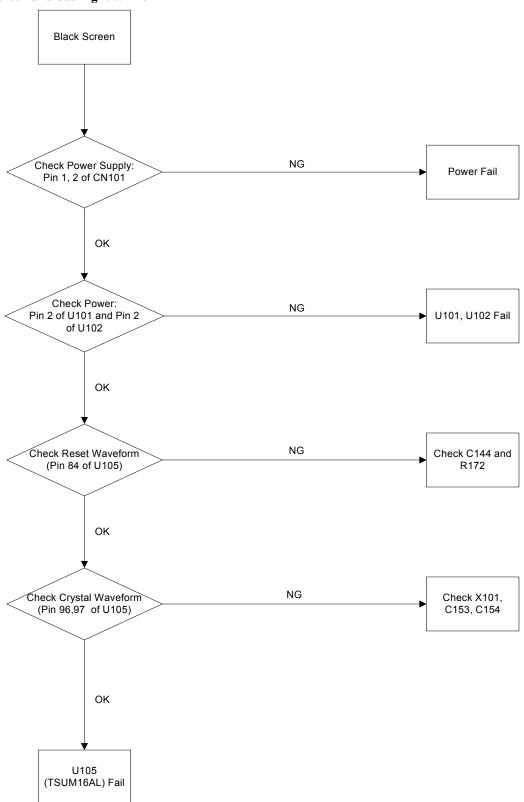

7. White Screen

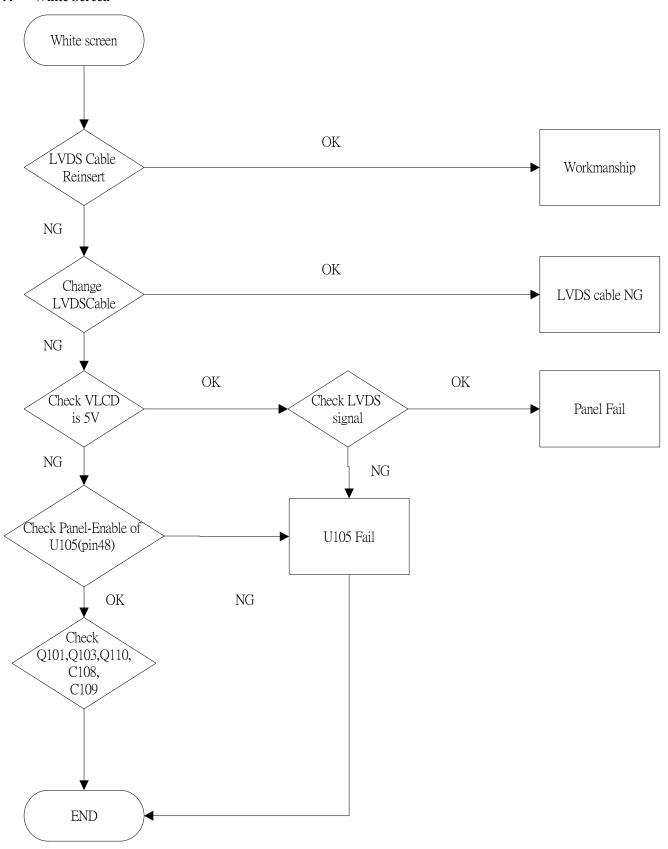

8. Bad Screen

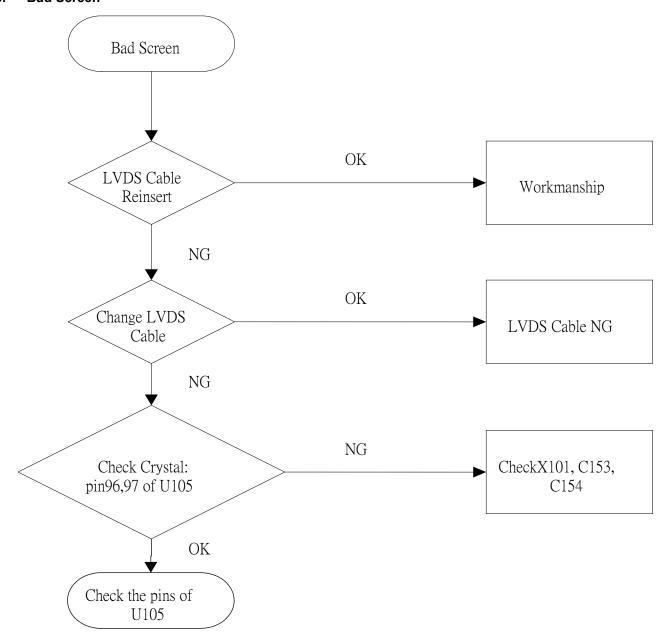

7. Recommended Spare Parts List

Pedestal - (Stand)

RECOMMENDED SPARE PARTS LIST (VX1935wm-3)

ViewSonic Model Number: VS11444

27 Plastics:

Serial No. Prefix: QCX Rev: 1a Item Description ECR/ECN ViewSonic P/N Location Universal number# Accessories: Power Cord - 10A/250V BLK 6FT CHINA A-00005255 453070800170F Kit Accessory (VX1935) A-00008065 703000003600R B-00008169 790741300600R Interface Board 790741500000R Assembly: Key Board B-00008170 PCBA,P/I BOARD, LP1909-612 790741400600R B-00008171 6 Cabinets: Cover - Left Hinge C-00008187 501020210410R Cover - Right Hinge C-00008188 501020210510R 8 Base Assembly C-00008189 714020007910R 9 Front Panel 714030007910R C-00008190 10 C-00008191 714050007910R Back Cover Cables: CABLE, D-SUB 15P MALE 6FT BLACK/BLUE, SZ40 11 CB-00005254 453010100100R 12 Audio Cable - 1P 6FT BLACK/GREEN CP03B06P0 CB-00008002 453030300120R Video Cable - DVI-D 18+1P MALE 6FT CB-00008070 13 453030300180R Flat Cable - LVDS FFC 30P 158mm, ROHS 430303000690R 14 CB-00008071 Wire - 8P 200mm UL1571#28 ROHS 15 CB-00008072 430300800800R LCD PANEL 19" MT190AW01-V0-G1,AM19000040 16 Electronic E-00008016 631102090600R Speaker - 2.0W 8Ω 370mm, R/G/B W/CASE 17 Components: E-00008137 618100200120R 18 Packing Material: EPE+PE Bag - L540xW500xT0.05mm P-00008032 506120302400R 19 20 Craft Box P-00008177 506020012500R Foam - EPS Left P-00008178 506040010100R Foam - EPS Right P-00008179 506040010110R Foam - EPS Top P-00008180 506040010111R BAG,PLASTIC - W(545+165)xL1100xT0.05mm P-00008181 506120006200R Generic Foam Set P-00001347 30833 Genric Box P-00002515 EPE+PE Bag - W330xL300xT0.3mm P-00008182 506120303000F

PL-00008048

714010007910R

Remark 1: Above listed items are examples, supplier can expand the rows to add more necessary items.

Remark 2: All revised RSPLs with newly added items or any change made should be highlighted and correlated with the ECN/ECR approved by ViewSonic Corporation. This is to eliminate repeated cross checks of each item between this version and prior versions.

BOM LIST (VX1935wm-3)

ViewSonic Model Number: VS11444


Rev: 1a

Serial No. Prefix: OCX

| NA | | Serial No. Prefix | : QCX | | | | |
|--|------|-------------------|---------------|--|----------------|-------------------|-------|
| 1 | Item | ViewSonic P/N | Ref. P/N | Description | Location | Universal number# | Q'ty |
| 1. P-00000812 Onlo 2010/20000 RACEPLEST (1) 540-W000 100 Storm, PRINTITU I. | | | | TAPE,WRAPPING TYPE(VIEWSONIC),50mmx75M,L | | | 0.513 |
| P. POROMEN SOC. P. POROMEN P. PORT P | 2 | | 506380001800R | TAPE,WRAPPING TYPE,48mmx50M ROHS LE1915 | | | 1.6 |
| 5 | 3 | P-00008032 | 506120302400R | BAG,EPE+PE,L540xW500xT0.05mm,PRINTED, LE | | | 100 |
| NA | 4 | P-00008181 | 506120006200R | BAG,PLASTIC,W(545+165)xL1100xT0.05mm,LE1 | | | 100 |
| P. P. P. P. P. P. P. P. P. | 5 | P-00008182 | 506120303000R | | | | 100 |
| P0008177 50004010160R CUSHION_EPS-R_VX1951_EP1909 10 -010 P0008179 50004010110R CUSHION_EPS-R_VX1951_EP1909 10 -011 P0008180 50004010110R CUSHION_EPS-R_VX1951_EP1000 10 -011 P0008180 5000401011R CUSHION_EPS-R_VX1951_EP1000 13 -013 P0008180 50004010101 CUSHION_EPS-R_VX1951_EP1000 13 -013 P0008180 50004010101 CUSHION_EPS-R_VX1951_EP1000 13 -013 P0008180 F0008180 CUSHION_EPS-R_VX1951_EP1000 13 -014 P0008180 CUSHION_EPS-R_VX1951_EP1000 13 -015 P0008180 CUSH | 6 | N/A | 506431003100R | FILM,PROTECTION,UNPRINTED,430x280x0.1mm, | | | 100 |
| P. P. P. P. P. P. P. P. | 7 | N/A | 506431000300R | FILM,PE 500mmx900M ROHS | | | 0.3 |
| 10 | 8 | P-00008177 | 506020012500R | CARTON, VIEWSONIC (VX1935), LP1909 | | | 100 |
| 11 P. P. P. P. P. P. P. | 9 | P-00008178 | 506040010100R | CUSHION,EPS-L,VX1935, LP1909 | | | 100 |
| 12 NA S06150022-030 | 10 | P-00008179 | 506040010110R | CUSHION,EPS-R,VX1935, LP1909 | | | 100 |
| 13 | 11 | P-00008180 | 506040010111R | CUSHION,EPS-TOP,VX1935, LP1909 | | | 100 |
| 14 | 12 | N/A | 506150002630R | PALLET,L1150xW1110xH120mm,LP1909 | | | 1.389 |
| 15 N.A | 13 | N/A | 506039005600R | CORNER PAPER,2035x50x50xT3mm,LP1702 | | | 5.556 |
| 15 | | | | | | | 5.556 |
| NA | 15 | N/A | 506038004800R | CARDBOARD,L1150xW1110xT4mm ROHS LP1909 | | | 3.57 |
| 17 | | | | · · · · · · · · · · · · · · · · · · · | | | 3.57 |
| NA | | | | | | | 100 |
| 19 | | | | · · · · | | | 100 |
| NA | | | | | | | 100 |
| N/A \$0063900006000R LABEL, HAPOT PASS, LE1709 10 | | | | | | | 200 |
| 23 N/A | | | | | | | 100 |
| NA | | | | · · · | | | 100 |
| CR-00005254 \$3501000100R CABLE_D-SUB 15P MALE 6FT BLACK_BILE_SZ40 10 | | | | · · · · · · · · · · · · · · · · · · · | | | 100 |
| 10 10 10 10 10 10 10 10 | | | | | | | 100 |
| CB-00008070 45303900180R CABLE_DVL-D IS+IP_MALE_6TT_PCS9 BLACKISA 10 | | | | 7 | | | 100 |
| 10 | | | | · · | | | |
| NA \$60692001400R CARD.WARRANTY, LE1709 10 10 10 10 10 10 10 | | | | · · · · · · · · · · · · · · · · · · · | | | |
| NA \$66330200200R CARDATER SERVICE, LE1709, L130xW80 10 | | | | | | | |
| 10 | | | | · · · · · · · · · · · · · · · · · · · | | | |
| 10 | | | | | | | |
| 10 | | | | | | | |
| N/A | | | | | | | |
| N/A S09116608510R SCREW_P.CROSS.M4*8_BILACK.NI.KNT.OK) 40 | | | | | | | 100 |
| 10 | | | | | | | 100 |
| 10 | | | | | | | 400 |
| 37 | | | | | | | 200 |
| 10 | | | | | | | 100 |
| C-0000818S S01020210510R COVER_HINGER_I.P1909 | | | | | | | 400 |
| E-00008137 618100200120R SPEAKER 2.0W 80: 370mm, R.G/B W.CASE 10 10 11 11 12 12 14 14 15 14 15 14 15 15 | | | | · · | | | 100 |
| 10 | | | | · · · · | | | 100 |
| C-00008189 714020007910R ASSY_BASE_VX1935_LP1909 10 | | | | · · · · · · · · · · · · · · · · · · · | | | 100 |
| 43 C-00008190 714030007910R ASSY_BEZEL_LP1909 10 10 10 10 10 10 10 | 41 | | | | | | 100 |
| 44 | 42 | | | · · · · | | | 100 |
| 45 | 43 | C-00008190 | 714030007910R | ASSY,BEZEL, LP1909 | | | 100 |
| 46 PL-0008048 714010007910R ASSY,STAND, LP1909 10 47 N/A 501260203510R STAND,ERONT, LP1909 10 48 N/A 501260203610R STAND,REAR, LP1909 10 49 N/A 501040200410R CLIP,CABLE,UP, LP1909 10 50 N/A 501040200510R CLIP,CABLE,UP, LP1909 10 51 N/A 502060003410R HINGE, LP1909 10 52 N/A 509112608100R SCREW,P,CROSS,T:T-4*8,Zn ROHS 20 53 N/A 509116618100R SCREW,P,CROSS,M4*18,Zn ROHS 10 54 C-00008189 714020007910R ASSY,BASE,VX1935, LP1909 10 55 N/A 501202010310R COVER,BASE, LP1909 10 56 N/A 501202010310R COVER,BASE, LP1909 10 57 N/A 50217000310R PLATE,BASE, LP1909 10 58 N/A 5091266100R SCREW,P,CROSS,T.T-4*6,Zn 30 59 N/A 50302000410R | 44 | C-00008191 | 714050007910R | ASSY,BACK COVER, LP1909 | | | 100 |
| A7 | 45 | N/A | 714078661000R | ASSY,PANEL(V0/G1&2&3),W/SPK,LP1909-6I2 | | | 100 |
| 48 | 46 | PL-00008048 | 714010007910R | ASSY,STAND, LP1909 | | | |
| 49 | 47 | N/A | 501260203510R | STAND,FRONT, LP1909 | | | 100 |
| 50 N/A 501040200510R CLIP,CABLE,DOWN, LP1909 10 51 N/A 502060003410R HINGE, LP1909 10 52 N/A 509112608100R SCREW,P,CROSS,T.T-4*8,Zn ROHS 20 53 N/A 509116618100R SCREW,P,CROSS,M4*18,Zn ROHS 10 54 C-00008189 714020007910R ASSY,BASE,VX1935, LP1909 10 55 N/A 501202010310R COVER,BASE, LP1909 10 56 N/A 50120000310R COVER,BASE, LP1909 10 57 N/A 502170000310R PLATE,BASE, LP1909 10 58 N/A 509112606100R SCREW,P,CROSS,T.T-4*6,Zn 30 59 N/A 509112606100R SCREW,P,CROSS,T.T-4*8,Zn 30 60 N/A 503020002700R RUBBER,FOOT,LI4.8*W9.6*T3.5mm,ROHS LE171 40 61 N/A 503020002700R RUBBER,FOOT,LI4.8*W9.6*T3.5mm,ROHS LE171 40 62 N/A 506431003500R FILM-1,PROTECTION,FOR BASE LP1909 10 63 | 48 | N/A | 501260203610R | STAND,REAR, LP1909 | | | 100 |
| 51 N/A 502060003410R HINGE, LP1909 10 52 N/A 509112608100R SCREW,P,CROSS,T.T-4*8,Zn ROHS 20 53 N/A 509116618100R SCREW,P,CROSS,M4*18,Zn ROHS 10 54 C-00008189 714020007910R ASSY,BASE,VX1935,LP1909 10 55 N/A 501240204910R BASE, LP1909 10 56 N/A 5012000310R COVER,BASE, LP1909 10 57 N/A 502170000310R PLATE,BASE, LP1909 10 58 N/A 509112606100R SCREW,P,CROSS,T.T-4*6,Zn 30 59 N/A 509122606100R SCREW,P,CROSS,T.T-4*6,Zn 30 60 N/A 50302000410R GASKET,EMI,WSkH12k1,L2mm(TWO-SIDED ADHESI 10 60 N/A 50302000410R RUBBER,FOOT,L14.8*W9-6*T3.5mm,ROHS LE171 40 61 N/A 506431003500R FILM-1,PROTECTION,FOR BASE LP1909 10 63 N/A 506431003500R FILM-2,PROTECTION,FOR BASE LP1909 10 64 | 49 | N/A | 501040200410R | CLIP,CABLE,UP, LP1909 | | | 100 |
| 52 N/A 509112608100R SCREW,P,CROSS,T.T-4*8,Zn ROHS 20 53 N/A 509116618100R SCREW,P,CROSS,M4*18,Zn ROHS 10 54 C-00008189 714020007910R ASSY,BASE,VX1935, LP1909 10 55 N/A 501240204910R BASE, LP1909 10 56 N/A 50120201310R COVER,BASE, LP1909 10 57 N/A 502170000310R PLATE,BASE, LP1909 10 58 N/A 509112606100R SCREW,P,CROSS,T.T-4*6,Zn 30 59 N/A 503060002410R GASKET,EMI,WSKH12xL.12mm(TWO-SIDED ADHESI 10 60 N/A 503020004010R RUBBER,FOOT,FRONT, LP1909 10 61 N/A 50302000410R RUBBER,FOOT,FRONT, LP1909 10 61 N/A 50302000410R RUBBER,FOOT,FICH,S*W9,6*T3.5mm,ROHS LE171 40 62 N/A 506431003500R FILM-1,PROTECTION,FOR BASE LP1909 10 63 N/A 506431003500R FILM-2,PROTECTION,FOR BASE LP1909 10 | 50 | N/A | 501040200510R | CLIP, CABLE, DOWN, LP1909 | | | 100 |
| 52 N/A 509112608100R SCREW,P,CROSS,T.T-4*8,Zn ROHS 20 53 N/A 509116618100R SCREW,P,CROSS,M4*18,Zn ROHS 10 54 C-00008189 714020007910R ASSY,BASE,VX1935, LP1909 10 55 N/A 501240204910R BASE, LP1909 10 56 N/A 50120201310R COVER,BASE, LP1909 10 57 N/A 502170000310R PLATE,BASE, LP1909 10 58 N/A 509112606100R SCREW,P,CROSS,T.T-4*6,Zn 30 59 N/A 503060002410R GASKET,EMI,WSKH12xL.12mm(TWO-SIDED ADHESI 10 60 N/A 503020004010R RUBBER,FOOT,FRONT, LP1909 10 61 N/A 50302000410R RUBBER,FOOT,FRONT, LP1909 10 61 N/A 50302000410R RUBBER,FOOT,FICH,S*W9,6*T3.5mm,ROHS LE171 40 62 N/A 506431003500R FILM-1,PROTECTION,FOR BASE LP1909 10 63 N/A 506431003500R FILM-2,PROTECTION,FOR BASE LP1909 10 | | | 502060003410R | · · · · | | | 100 |
| 53 N/A 509116618100R SCREW,P,CROSS,M4*18,Zn ROHS 10 54 C-00008189 714020007910R ASSY,BASE,VX1935, LP1909 1 55 N/A 501240204910R BASE, LP1909 10 56 N/A 501020210310R COVER,BASE, LP1909 10 57 N/A 502170000310R PLATE,BASE, LP1909 10 58 N/A 509112606100R SCREW,P,CROSS,T.T-4*6,Zn 30 59 N/A 503060002410R GASKET,EMI,W8xH12xL12mm(TWO-SIDED ADHESI 10 60 N/A 503020004010R RUBBER,FOOT,FRONT, LP1909 10 61 N/A 503020004010R RUBBER,FOOT,L14.8*W9.6*T3.5mm,ROHS LE171 40 62 N/A 506431003500R FILM-1,PROTECTION,FOR BASE LP1909 10 63 N/A 506431003500R FILM-2,PROTECTION,FOR BASE LP1909 10 64 N/A 50643100350R FILM-3,PROTECTION,FOR BASE LP1909 10 65 N/A 50643100350R FILM-4,PROTECTION,FOR BASE LP1909 10 | | | 509112608100R | , | | | 200 |
| 54 C-00008189 714020007910R ASSY,BASE,VX1935, LP1909 10 55 N/A 501240204910R BASE, LP1909 10 56 N/A 501020210310R COVER,BASE, LP1909 10 57 N/A 502170000310R PLATE,BASE, LP1909 10 58 N/A 509112606100R SCREW,P,CROSS,T.T-4*6,Zn 30 59 N/A 503060002410R GASKET,EMI,W8xH12xL12mm(TWO-SIDED ADHESI 10 60 N/A 503020004010R RUBBER,FOOT,FRONT, LP1909 10 61 N/A 503020002700R RUBBER,FOOT,FRONT, LP1909 10 62 N/A 506431003500R FILM-1,PROTECTION,FOR BASE LP1909 10 63 N/A 506431003550R FILM-2,PROTECTION,FOR BASE LP1909 10 64 N/A 506431003550R FILM-3,PROTECTION,FOR BASE LP1909 10 65 N/A 50643100350R FILM-4,PROTECTION,FOR BASE LP1909 10 66 C-00008190 714030007910R ASSY,BEZEL, LP1909 10 < | | | | | | | 100 |
| 55 N/A 501240204910R BASE, LP1909 10 56 N/A 501020210310R COVER,BASE, LP1909 10 57 N/A 502170000310R PLATE,BASE, LP1909 10 58 N/A 509112606100R SCREW,P,CROSS,T.T-4*6,Zn 30 59 N/A 503060002410R GASKET,EMI,W8xH12xL12mm(TWO-SIDED ADHESI 10 60 N/A 503060002410R RUBBER,FOOT,FRONT, LP1909 10 61 N/A 503020002700R RUBBER,FOOT,L14.8*W9.6*T3.5mm,ROHS LE171 40 62 N/A 506431003500R FILM-1,PROTECTION,FOR BASE LP1909 10 63 N/A 506431003510R FILM-2,PROTECTION,FOR BASE LP1909 10 64 N/A 506431003520R FILM-3,PROTECTION,FOR BASE LP1909 10 65 N/A 506431003530R FILM-4,PROTECTION,FOR BASE LP1909 10 66 C-00008190 714030007910R ASSY,BEZEL, LP1909 10 67 N/A 5010200310R BEZEL, LP1909 10 6 | | | | 11 1 | | | |
| 56 N/A 501020210310R COVER,BASE, LP1909 10 57 N/A 502170000310R PLATE,BASE, LP1909 10 58 N/A 509112606100R SCREW,P,CROSS,T.T-4*6,Zn 30 59 N/A 503060002410R GASKET,EMI,W8xH12xL12mm(TWO-SIDED ADHESI 10 60 N/A 50302000410R RUBBER,FOOT,FRONT, LP1909 10 61 N/A 50302000410R RUBBER,FOOT,FRONT, LP1909 10 61 N/A 503020002700R RUBBER,FOOT,FRONT, LP1909 10 62 N/A 506431003500R FILM-1,PROTECTION,FOR BASE LP1909 10 63 N/A 506431003510R FILM-2,PROTECTION,FOR BASE LP1909 10 64 N/A 506431003530R FILM-3,PROTECTION,FOR BASE LP1909 10 65 N/A 506431003530R FILM-4,PROTECTION,FOR BASE LP1909 10 66 C-00008190 714030007910R ASSY,BEZEL, LP1909 10 67 N/A 501030205010R BUTTON,FUNCTION KEY, LP1909 10 | | | | · · · · | | | 100 |
| 57 N/A 502170000310R PLATE,BASE, LP1909 10 58 N/A 509112606100R SCREW,P,CROSS,T.T-4*6,Zn 30 59 N/A 503060002410R GASKET,EMI,W3xH12xL12mm(TWO-SIDED ADHESI 10 60 N/A 503020004010R RUBBER,FOOT,FRONT, LP1909 10 61 N/A 503020002700R RUBBER,FOOT,L14.8*W9.6*T3.5mm,ROHS LE171 40 62 N/A 506431003500R FILM-1,PROTECTION,FOR BASE LP1909 10 63 N/A 506431003510R FILM-2,PROTECTION,FOR BASE LP1909 10 64 N/A 506431003520R FILM-3,PROTECTION,FOR BASE LP1909 10 65 N/A 506431003530R FILM-4,PROTECTION,FOR BASE LP1909 10 66 C-00008190 714030007910R ASSY,BEZEL, LP1909 10 67 N/A 501010208310R BEZEL, LP1909 10 68 N/A 501030205010R BUTTON,FUNCTION KEY, LP1909 10 69 N/A 506102000400R LOGO PLATE, VIEWSONIC, LE1709(THREE BIRDS | | | | · · · | | | 100 |
| 58 N/A 509112606100R SCREW,P,CROSS,T.T-4*6,Zn 30 59 N/A 503060002410R GASKET,EMI,W8xH12xL12mm(TWO-SIDED ADHESI 10 60 N/A 503020004010R RUBBER,FOOT,FRONT, LP1909 10 61 N/A 503020002700R RUBBER,FOOT,L14.8*W9.6*T3.5mm,ROHS LE171 40 62 N/A 506431003500R FILM-1,PROTECTION,FOR BASE LP1909 10 63 N/A 506431003510R FILM-2,PROTECTION,FOR BASE LP1909 10 64 N/A 506431003520R FILM-3,PROTECTION,FOR BASE LP1909 10 65 N/A 506431003530R FILM-4,PROTECTION,FOR BASE LP1909 10 66 C-00008190 714030007910R ASSY,BEZEL, LP1909 10 67 N/A 501010208310R BEZEL, LP1909 10 68 N/A 501030205010R BUTTON,FUNCTION KEY, LP1909 10 69 N/A 501120104910R LENS, LP1909 10 70 N/A 506102000300R LOGO PLATE,VIEWSONIC, LE1709(THREE BIRDS) 10 <td></td> <td></td> <td></td> <td></td> <td> </td> <td></td> <td>100</td> | | | | | | | 100 |
| 59 N/A 503060002410R GASKET,EMI,W8xH12xL12mm(TWO-SIDED ADHESI 10 60 N/A 503020004010R RUBBER,FOOT,FRONT, LP1909 10 61 N/A 503020002700R RUBBER,FOOT,L14.8*W9.6*T3.5mm,ROHS LE171 40 62 N/A 506431003500R FILM-1,PROTECTION,FOR BASE LP1909 10 63 N/A 506431003510R FILM-2,PROTECTION,FOR BASE LP1909 10 64 N/A 506431003520R FILM-3,PROTECTION,FOR BASE LP1909 10 65 N/A 506431003530R FILM-4,PROTECTION,FOR BASE LP1909 10 66 C-00008190 714030007910R ASSY,BEZEL, LP1909 10 67 N/A 501030208310R BEZEL, LP1909 10 68 N/A 501030208310R BUTTON,FUNCTION KEY, LP1909 10 69 N/A 501120104910R LENS, LP1909 10 70 N/A 506102000400R LOGO PLATE,VIEWSONIC, LE1709(THREE BIRDS 10 71 N/A 506431003400R FILM,PROTECTION,FOR BEZEL-TOP LP1909 | | | | , , | | | 300 |
| 60 N/A 503020004010R RUBBER,FOOT,FRONT, LP1909 10 61 N/A 503020002700R RUBBER,FOOT,L14.8*W9.6*T3.5mm,ROHS LE171 40 62 N/A 506431003500R FILM-1,PROTECTION,FOR BASE LP1909 10 63 N/A 506431003510R FILM-2,PROTECTION,FOR BASE LP1909 10 64 N/A 506431003520R FILM-3,PROTECTION,FOR BASE LP1909 10 65 N/A 506431003530R FILM-4,PROTECTION,FOR BASE LP1909 10 66 C-00008190 714030007910R ASSY,BEZEL, LP1909 10 67 N/A 501010208310R BEZEL, LP1909 10 68 N/A 501030205010R BUTTON,FUNCTION KEY, LP1909 10 69 N/A 501120104910R LENS, LP1909 10 70 N/A 50120104910R LOGO PLATE,VIEWSONIC, LE1709(THREE BIRDS 10 71 N/A 506102000300R LOGO PLATE,VIEWSONIC, LE1709 10 72 N/A 506431003400R FILM,PROTECTION,FOR BEZEL-TOP LP1909 10 | | | | 11 1 | | | 100 |
| 61 N/A 503020002700R RUBBER, FOOT, L14.8*W9.6*T3.5mm, ROHS LE171 40 62 N/A 506431003500R FILM-1, PROTECTION, FOR BASE LP1909 10 63 N/A 506431003510R FILM-2, PROTECTION, FOR BASE LP1909 10 64 N/A 506431003520R FILM-3, PROTECTION, FOR BASE LP1909 10 65 N/A 506431003530R FILM-4, PROTECTION, FOR BASE LP1909 10 66 C-00008190 714030007910R ASSY, BEZEL, LP1909 10 67 N/A 501010208310R BEZEL, LP1909 10 68 N/A 501030205010R BUTTON, FUNCTION KEY, LP1909 10 69 N/A 501120104910R LENS, LP1909 10 70 N/A 506102000400R LOGO PLATE, VIEWSONIC, LE1709(THREE BIRDS) 10 71 N/A 506102000300R LOGO PLATE, VIEWSONIC, LE1709 10 72 N/A 506431003400R FILM, PROTECTION, FOR BEZEL-TOP LP1909 10 73 N/A 506431003410R FILM, PROTECTION, FOR BEZEL-MIDD | | | | | | | 100 |
| 62 N/A 506431003500R FILM-1,PROTECTION,FOR BASE LP1909 10 63 N/A 506431003510R FILM-2,PROTECTION,FOR BASE LP1909 10 64 N/A 506431003520R FILM-3,PROTECTION,FOR BASE LP1909 10 65 N/A 506431003530R FILM-4,PROTECTION,FOR BASE LP1909 10 66 C-00008190 714030007910R ASSY,BEZEL, LP1909 10 67 N/A 50101020810R BEZEL, LP1909 10 68 N/A 501030205010R BUTTON,FUNCTION KEY, LP1909 10 69 N/A 501120104910R LENS, LP1909 10 70 N/A 506102000400R LOGO PLATE,VIEWSONIC, LE1709(THREE BIRDS) 10 71 N/A 506102000300R LOGO PLATE,VIEWSONIC, LE1709 10 72 N/A 506431003400R FILM,PROTECTION,FOR BEZEL-TOP LP1909 10 73 N/A 506431003410R FILM,PROTECTION,FOR BEZEL-MIDDLE LP1909 20 | | | | · · · · · · · · · · · · · · · · · · · | | | 400 |
| 63 N/A 506431003510R FILM-2,PROTECTION,FOR BASE LP1909 10 64 N/A 506431003520R FILM-3,PROTECTION,FOR BASE LP1909 10 65 N/A 506431003530R FILM-4,PROTECTION,FOR BASE LP1909 10 66 C-00008190 714030007910R ASSY,BEZEL, LP1909 10 67 N/A 501010208310R BEZEL, LP1909 10 68 N/A 501030205010R BUTTON,FUNCTION KEY, LP1909 10 69 N/A 501120104910R LENS, LP1909 10 70 N/A 506102000400R LOGO PLATE,VIEWSONIC, LE1709(THREE BIRDS 10 71 N/A 506102000300R LOGO PLATE,VIEWSONIC, LE1709 10 72 N/A 506431003400R FILM,PROTECTION,FOR BEZEL-TOP LP1909 10 73 N/A 506431003410R FILM,PROTECTION,FOR BEZEL-MIDDLE LP1909 20 | | | | | | | 100 |
| 64 N/A 506431003520R FILM-3,PROTECTION,FOR BASE LP1909 10 65 N/A 506431003530R FILM-4,PROTECTION,FOR BASE LP1909 10 66 C-00008190 714030007910R ASSY,BEZEL, LP1909 10 67 N/A 501010208310R BEZEL, LP1909 10 68 N/A 50103020510R BUTTON,FUNCTION KEY, LP1909 10 69 N/A 501120104910R LENS, LP1909 10 70 N/A 50610200400R LOGO PLATE,VIEWSONIC, LE1709(THREE BIRDS) 10 71 N/A 506102000300R LOGO PLATE,VIEWSONIC, LE1709 10 72 N/A 506431003400R FILM,PROTECTION,FOR BEZEL-TOP LP1909 10 73 N/A 506431003410R FILM,PROTECTION,FOR BEZEL-MIDDLE LP1909 20 | | | | , , | | | 100 |
| 65 N/A 506431003530R FILM-4,PROTECTION,FOR BASE LP1909 10 66 C-00008190 714030007910R ASSY,BEZEL, LP1909 10 67 N/A 501010208310R BEZEL, LP1909 10 68 N/A 501030205010R BUTTON,FUNCTION KEY, LP1909 10 69 N/A 501120104910R LENS, LP1909 10 70 N/A 506102000400R LOGO PLATE,VIEWSONIC, LE1709(THREE BIRDS) 10 71 N/A 506102000300R LOGO PLATE,VIEWSONIC, LE1709 10 72 N/A 506431003400R FILM,PROTECTION,FOR BEZEL-TOP LP1909 10 73 N/A 506431003410R FILM,PROTECTION,FOR BEZEL-MIDDLE LP1909 20 | | | | i i | | | 100 |
| 66 C-00008190 714030007910R ASSY,BEZEL, LP1909 67 N/A 501010208310R BEZEL, LP1909 10 68 N/A 501030205010R BUTTON,FUNCTION KEY, LP1909 10 69 N/A 501120104910R LENS, LP1909 10 70 N/A 506102000400R LOGO PLATE, VIEWSONIC, LE1709(THREE BIRDS) 10 71 N/A 506102000300R LOGO PLATE, VIEWSONIC, LE1709 10 72 N/A 506431003400R FILM, PROTECTION, FOR BEZEL-TOP LP1909 10 73 N/A 506431003410R FILM, PROTECTION, FOR BEZEL-MIDDLE LP1909 20 | | | | i i | | | 100 |
| 67 N/A 501010208310R BEZEL, LP1909 10 68 N/A 501030205010R BUTTON, FUNCTION KEY, LP1909 10 69 N/A 501120104910R LENS, LP1909 10 70 N/A 506102000400R LOGO PLATE, VIEWSONIC, LE1709(THREE BIRDS) 10 71 N/A 506102000300R LOGO PLATE, VIEWSONIC, LE1709 10 72 N/A 506431003400R FILM, PROTECTION, FOR BEZEL-TOP LP1909 10 73 N/A 506431003410R FILM, PROTECTION, FOR BEZEL-MIDDLE LP1909 20 | | | | i i | | | 100 |
| 68 N/A 501030205010R BUTTON,FUNCTION KEY, LP1909 10 69 N/A 501120104910R LENS, LP1909 10 70 N/A 506102000400R LOGO PLATE, VIEWSONIC, LE1709(THREE BIRDS 10 71 N/A 506102000300R LOGO PLATE, VIEWSONIC, LE1709 10 72 N/A 506431003400R FILM, PROTECTION, FOR BEZEL-TOP LP1909 10 73 N/A 506431003410R FILM, PROTECTION, FOR BEZEL-MIDDLE LP1909 20 | | | | · · · · | | | 100 |
| 69 N/A 501120104910R LENS, LP1909 10 70 N/A 506102000400R LOGO PLATE, VIEWSONIC, LE1709(THREE BIRDS 10 71 N/A 506102000300R LOGO PLATE, VIEWSONIC, LE1709 10 72 N/A 506431003400R FILM, PROTECTION, FOR BEZEL-TOP LP1909 10 73 N/A 506431003410R FILM, PROTECTION, FOR BEZEL-MIDDLE LP1909 20 | | | | , | | | 100 |
| 70 N/A 506102000400R LOGO PLATE, VIEWSONIC, LE1709(THREE BIRDS 10 71 N/A 506102000300R LOGO PLATE, VIEWSONIC, LE1709 10 72 N/A 506431003400R FILM, PROTECTION, FOR BEZEL-TOP LP1909 10 73 N/A 506431003410R FILM, PROTECTION, FOR BEZEL-MIDDLE LP1909 20 | | | | · · · · · · · · · · · · · · · · · · · | | | 100 |
| 71 N/A 506102000300R LOGO PLATE, VIEWSONIC, LE1709 10 72 N/A 506431003400R FILM, PROTECTION, FOR BEZEL-TOP LP1909 10 73 N/A 506431003410R FILM, PROTECTION, FOR BEZEL-MIDDLE LP1909 20 | | | | · · · · · · · · · · · · · · · · · · · | | | 100 |
| 72 N/A 506431003400R FILM,PROTECTION,FOR BEZEL-TOP LP1909 10 73 N/A 506431003410R FILM,PROTECTION,FOR BEZEL-MIDDLE LP1909 20 | | | | | | | 100 |
| 73 N/A 506431003410R FILM,PROTECTION,FOR BEZEL-MIDDLE LP1909 20 | | | | · · · · · · · · · · · · · · · · · · · | | | 100 |
| | | | | · | | | 100 |
| 74 N/A 506431003420R FILM, PROTECTION, FOR BEZEL-BOTTOM LP1909 10 | | | | · | | | 200 |
| | 74 | N/A | 506431003420R | FILM,PROTECTION,FOR BEZEL-BOTTOM LP1909 | | | 100 |

| Item | ViewSonic P/N | Ref. P/N | Description | Location | Universal number# | Q'ty |
|------|---------------|---------------|--|----------|-------------------|------|
| 75 | N/A | 506390500100R | LABEL,ENERGY STAR, LE1709 | | | 100 |
| 76 | C-00008191 | 714050007910R | ASSY,BACK COVER, LP1909 | | | |
| 77 | N/A | 501020210210R | COVER,BACK, LP1909 | | | 100 |
| 78 | N/A | 506430300003R | FILM,PET,L115xW30xT0.05mm, LE1741 | | | 100 |
| 79 | N/A | 714078661000R | ASSY,PANEL(V0/G1&2&3),W/SPK,LP1909-6I2 | | | |
| 80 | HW-00005270 | 509000000700R | BOLT,#4-40x11.8,Ni FOR D-SUB/DVI CONN.RO | | | 400 |
| 81 | N/A | 509146304200R | SCREW,P,CROSS,W/WAS,M3*4,Zn-Cc,ROHS | | | 400 |
| 82 | HW-00005269 | 509146305300R | SCREW,PW,CROSS,W/WAS,M3*5,NI | | | 400 |
| 83 | N/A | 509146306102R | SCREW,P,CROSS W/W-SPR,M3*6,Zn,ROHS | | | 100 |
| 84 | E-00008016 | 631102090600R | LCD PANEL 19" MT190AW01-V0,AM19000040, Main Source | | | 100 |
| 85 | N/A | 631102090610R | LCD PANEL 19" MT190AW01-V0,AM19000040, 3nd Source | | | |
| 86 | N/A | 631102090720R | LCD PANEL 19" MT190AW01-V0,AM19000040, 2nd Source | | | |
| 87 | B-00008169 | 790741300600R | PCBA,I/F BOARD, LP1909-612 | | | 100 |
| 88 | B-00008170 | 790741500000R | PCBA,KEYPAD BOARD, LP1909 | | | 100 |
| 89 | B-00008171 | 790741400600R | PCBA,P/I BOARD, LP1909-612 | | | 100 |
| 90 | CB-00008071 | 430303000690R | HRN LVDS FFC 30P 158mm, ROHS | | | 100 |
| 91 | CB-00008072 | 430300800800R | HRN ASS'Y 8P 200mm UL1571#28 ROHS | | | 100 |
| 92 | N/A | 701000002300R | ASSY,CHASSIS, LP1909 | | | 100 |
| 93 | N/A | 701000002300R | ASSY,CHASSIS, LP1909 | | | |
| 94 | N/A | 502090304510R | CHASSIS, LP1909 | | | 100 |
| 95 | N/A | 502080000110R | SUPPORT,HINGE, LP1909 | | | 100 |
| 96 | N/A | 509116606510R | SCREW,P,CROSS,M4*6,BLACK,NL ROHS (NYLOK) | | | 200 |
| 97 | N/A | 505040503100R | INSULATOR,PP,22x20x12X0.3mm,GLUE(3M), LE | | | 100 |
| 98 | N/A | 505040503400R | INSULATOR,PP,10x15x10X0.3mm,GLUE(3M), LE | | | 300 |

8. Exploded Diagram and Exploded Parts List

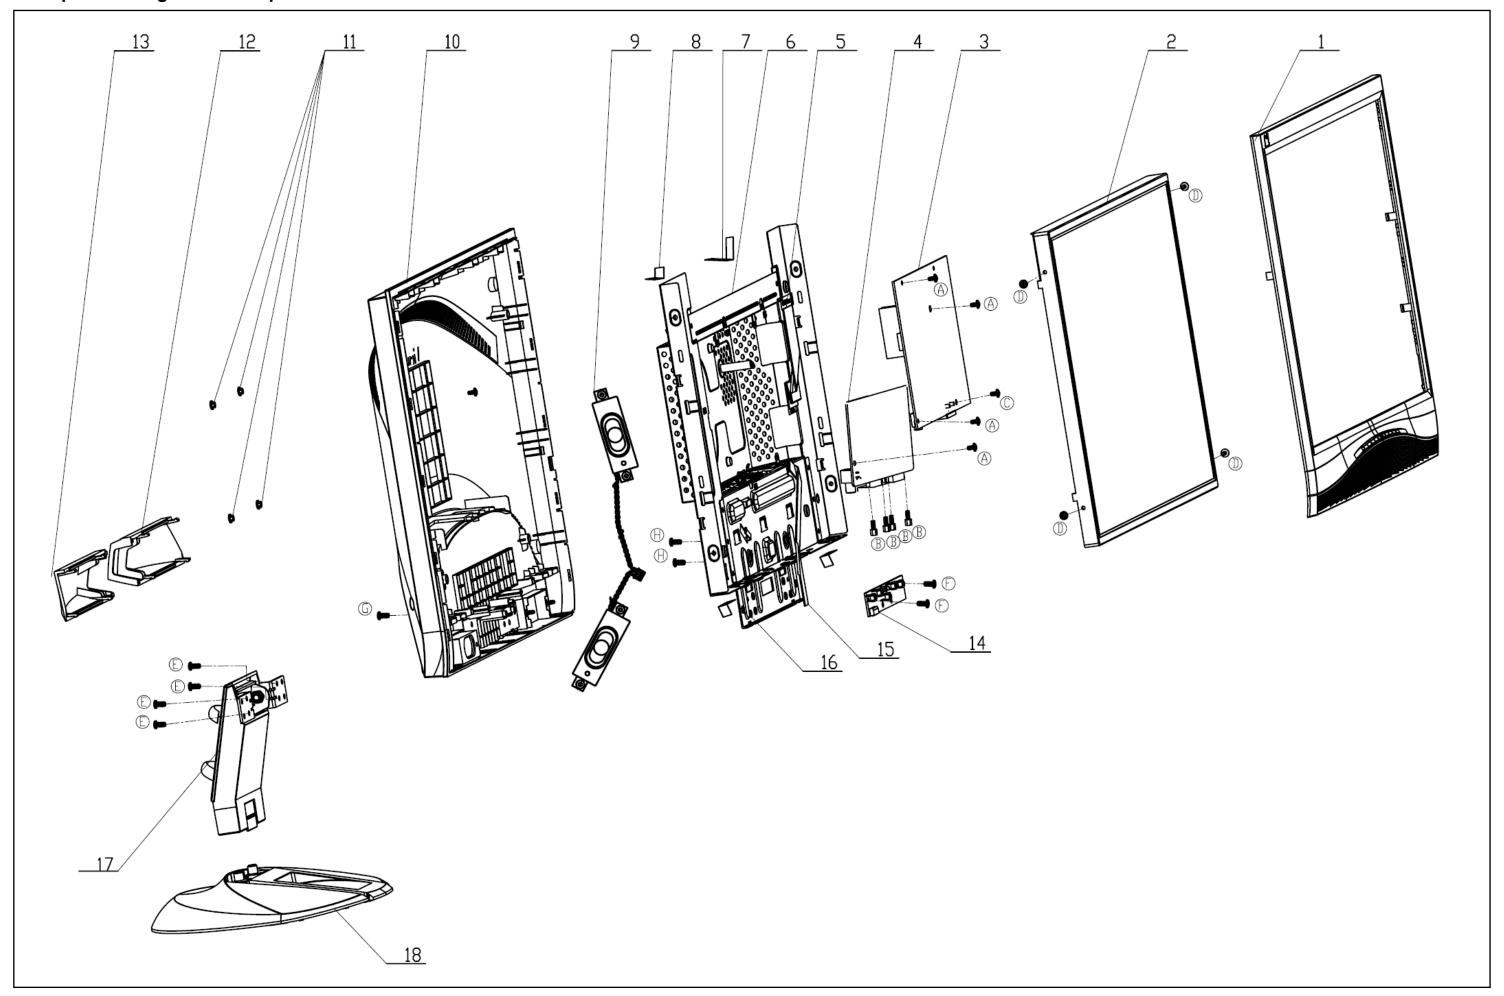


EXPLODED PARTS LIST (VX1935wm-3)

ViewSonic Model Number: VS11444

Rev: 1a

Serial No. Prefix: QCX


| Item | ViewSonic P/N | Ref. P/N | Description | Q'ty |
|------|---------------|---------------|--|------|
| 1 | C-00008190 | 714030007910R | ASSY, BEZEL,LP1909 | 1 |
| 2 | E-00008016 | 631102090600R | LCD PANEL 19" MT190AW01-V0-G1,AM19000040 | 1 |
| 3 | B-00008171 | 790741400600R | PCBA,P/I BOARD, LP1909-612 | 1 |
| 4 | B-00008169 | 790741300600R | PCBA,I/F BOARD, LP1909-612 | 1 |
| 5 | CB-00008071 | 430303000690R | HRN LVDS FFC 30P 158mm, ROHS | 1 |
| 6 | N/A | 701000002300R | ASSY, CHASSIS, LP1909 | 1 |
| 7 | N/A | 505040503100R | INSULATOR, PP, 22*20*0.3mm, GLUE(3M) | 1 |
| 8 | N/A | 505040503400R | INSULATOR, PP, 10*15*10*0.3mm, GLUE(4M) | 3 |
| 9 | E-00008137 | 618100200120R | SPEAKER 2.0W 8Ω 370mm, R/G/B W/CASE | 1 |
| 10 | C-00008191 | 714050007910R | ASSY, BACK COVER, LP1909 | 1 |
| 11 | N/A | 503040000310R | RUBBER, COVER,(B),LE1534 | 4 |
| 12 | C-00008187 | 501020210410R | COVER, HINGE-L,LP1909 | 1 |
| 13 | C-00008188 | 501020210510R | COVER, HINGE-R,LP1909 | 1 |
| 14 | B-00008170 | 790741500000R | PCBA,KEYPAD BOARD, LP1909 | 1 |
| 15 | CB-00008072 | 430300800800R | HRN ASS'Y 8P 200mm UL1571#28 ROHS | 1 |
| 16 | N/A | 502080000110R | SUPPORT,HINGE,LP1909 | 1 |
| 17 | PL-00008048 | 714010007910R | ASSY,STAND,LP1909 | 1 |
| 18 | C-00008189 | 714020007910R | ASSY,BASE,VX1935,LP1909 | 1 |
| Α | HW-00005269 | 509146305300R | SCREW,PW,CROSS,W/WAS,M3*5,NI | 4 |
| В | HW-00005270 | 509000000700R | BOLT,#4-40*11.8,NI | 4 |
| C | N/A | 509146306102R | SCREW,P,CROSS,W/W-SPR,,M3*6,Zn,ROHS | 1 |
| D | N/A | 509146304200R | SCREW,P,CROSS,W/WAS,M3*4,Zn-Cc,ROHS | 4 |
| Е | N/A | 509116608510R | SCREW,P,CROSS,M4*8,BLACK,NL(NYLOK) | 4 |
| F | N/A | 509112308100R | SCREW,P,CROSS,T3*8, Zn | 2 |
| G | N/A | 509112340100R | SCREW,P,CROSS,T,T3*10,Zn,ROHS | 1 |
| Н | N/A | 509116606510R | SCREW,P,CROSS,M4*6,BLACK,NL ROHS | 2 |

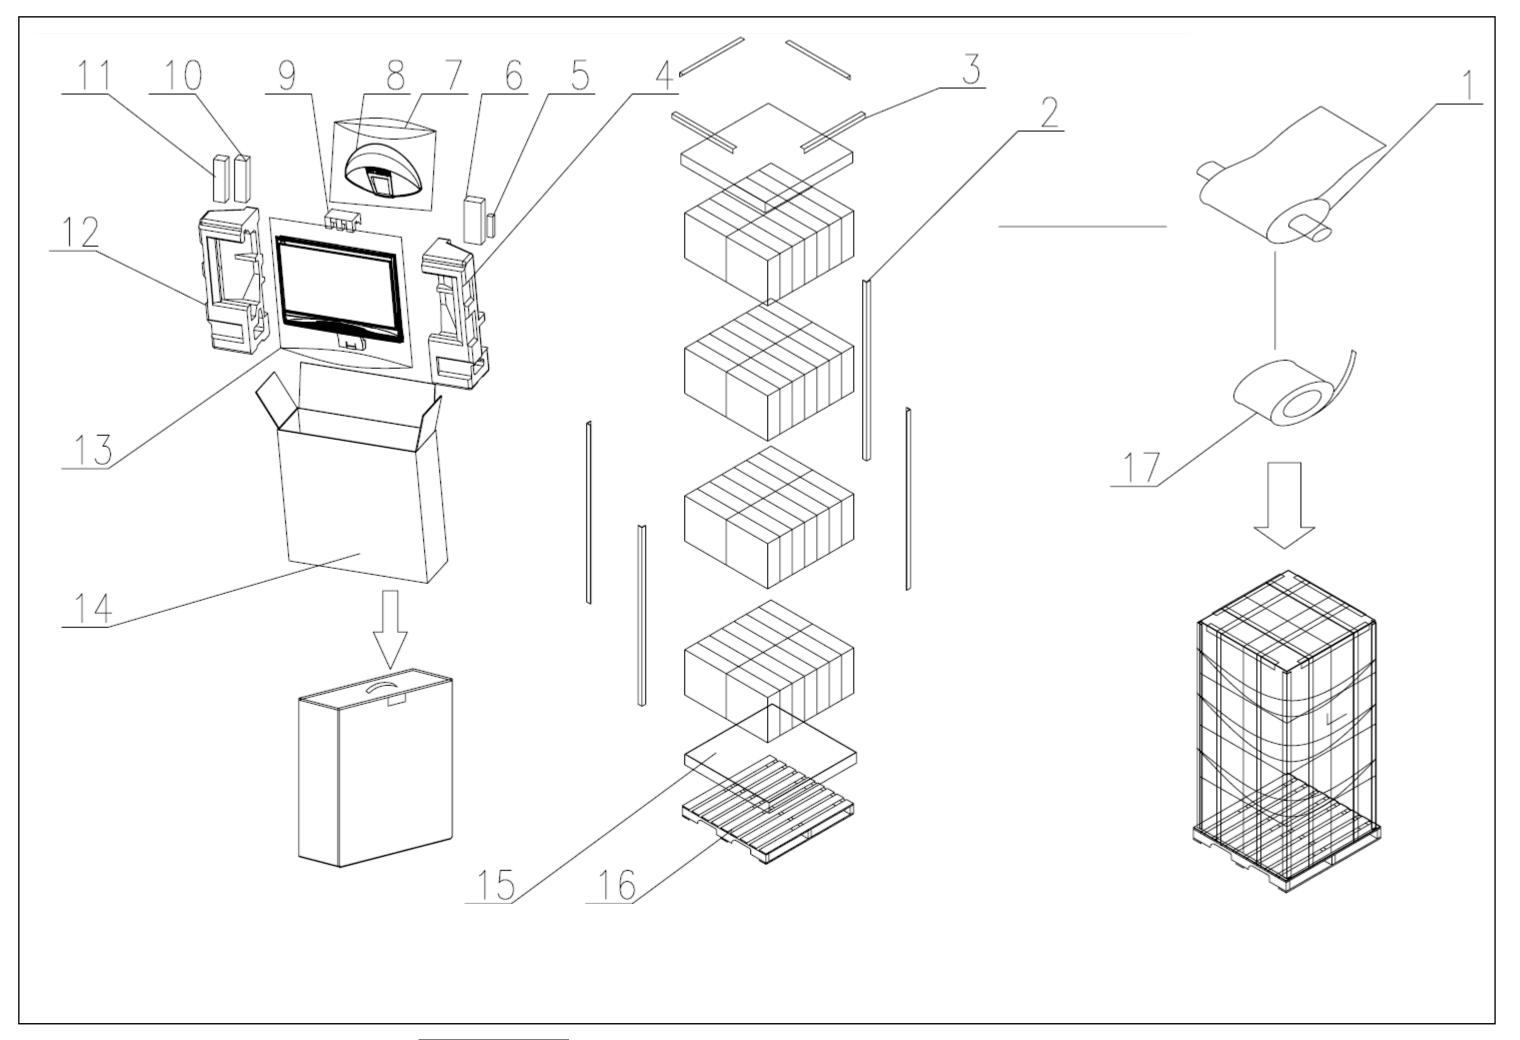



PACKING PART LIST (VX1935wm-3) ViewSonic Model Number: VS11444

Rev: 1a


| Item | ViewSonic P/N | Ref. P/N | Location | Q'ty |
|------|---------------|---------------|--|--------|
| 1 | N/A | 506431000300R | FILM, PE500mm*900M ROHS | 0.0018 |
| 2 | N/A | 506039004600R | CORNER PAPER,2035*50*50*T3mm | 4/56 |
| 3 | N/A | 506039005000R | CORNER PAPER,870*50*50*T5mm, LE1918 | 4/56 |
| 4 | P-00008179 | 506040010110R | CUSHION, EPS-R,VX1935,LP1909 | 1 |
| 5 | CB-00008002 | 453030300120R | CABLE,AUDIO 1P 6FT BLACK/GREEN CP03B06P0 | 1 |
| 6 | A-00005255 | 453070800170R | PWRCORD 10A/250V BLK 6FT CHINA.RVV 3Gx0. | 1 |
| 7 | P-00008182 | 506120303000R | BAG,EPE+PE,W330*L300*T0.3mm,CYCLE PRINTED LP1909 | 1 |
| 8 | C-00008189 | 714020007910R | ASSY,BASE,VX1935,LP1909 | 1 |
| 9 | P-00008180 | 506040010111R | CUSHION, EPS-TOP,VX1935,LP1909 | 1 |
| 10 | CB-00008070 | 453030300180R | CABLE,DVI-D 18+1P MALE 6FT PC99(BLACK)SA | 1 |
| 11 | CB-00005254 | 453010100100R | CABLE,D-SUB 15P MALE 6FT BLACK/BLUE,SZ40 | 1 |
| 12 | P-00008178 | 506040010100R | CUSHION,EPS-L,VX1935,LP1909 | 1 |
| 13 | P-00008032 | 506120302400R | BAG,EPE+PE,L540*W500*T0.05mm,PRINTED,LE1939 | 1 |
| 14 | P-00008177 | 506020012500R | CARTON, VIEWSONIC (VX1935), LP1909 | 1 |
| 15 | N/A | 506038004800R | CARDBOARD,L1150*W1110*T4mm ROHS LP1909 | 2/56 |
| 16 | N/A | 506150002630R | PALLET,L1150*W1110*H120mm,LP1909 | 1/56 |
| 17 | N/A | 506380002100R | TAPE,WRAPPING TYPE(VIEWSONIC), 50mm*75M,LE1708 | 0.016 |

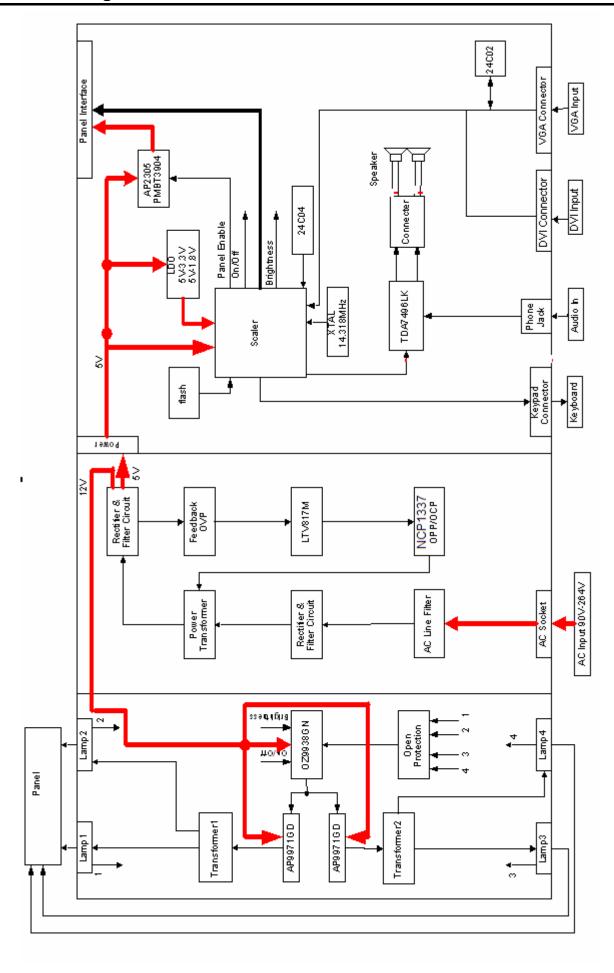

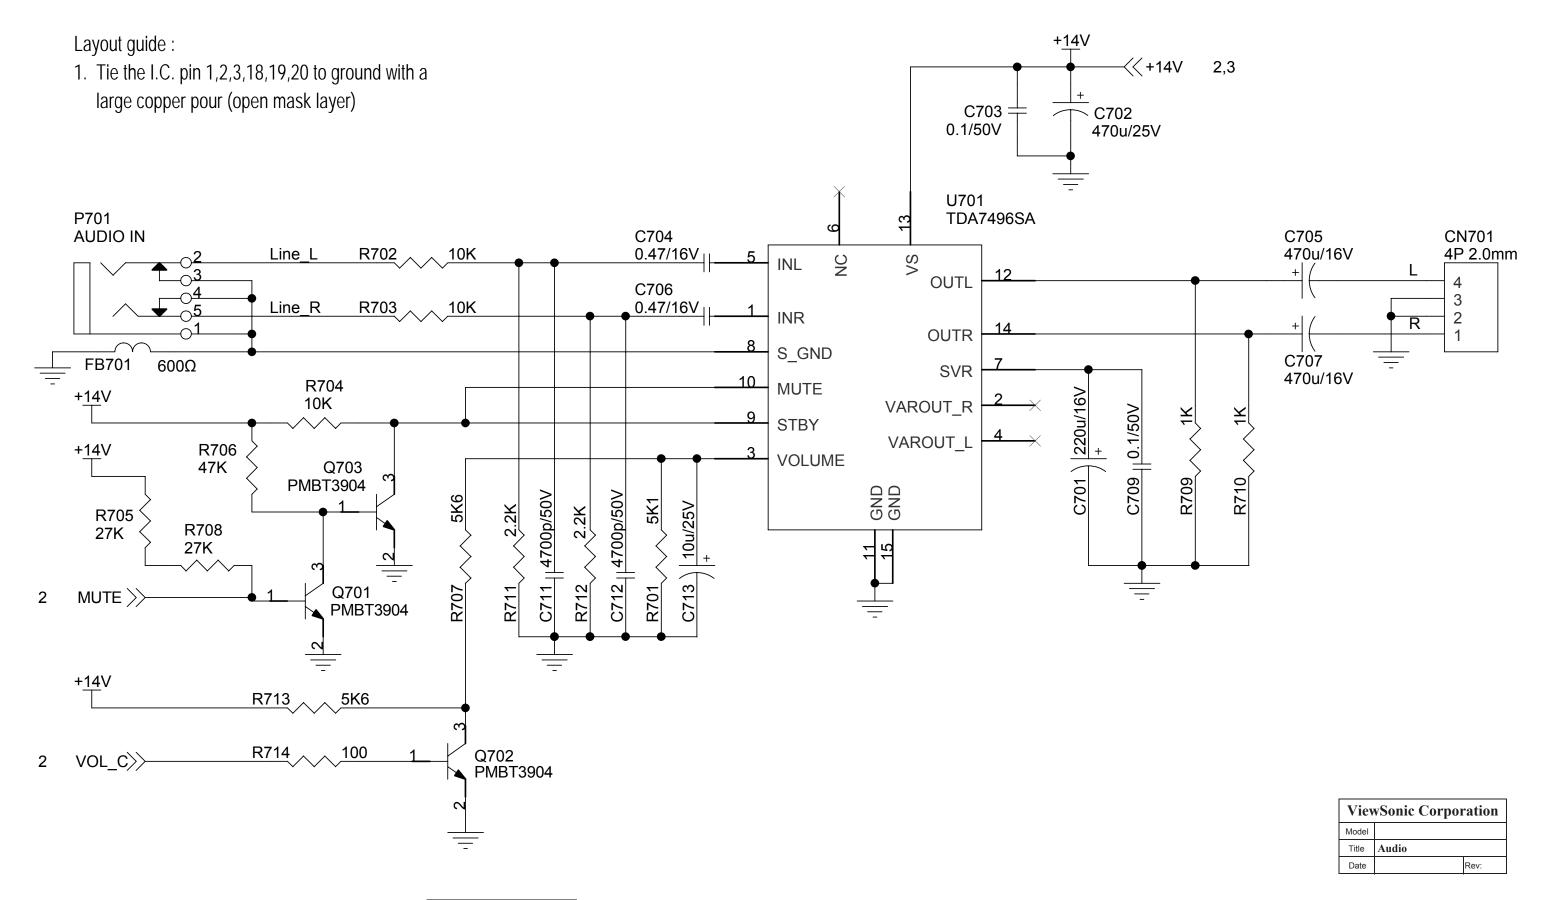


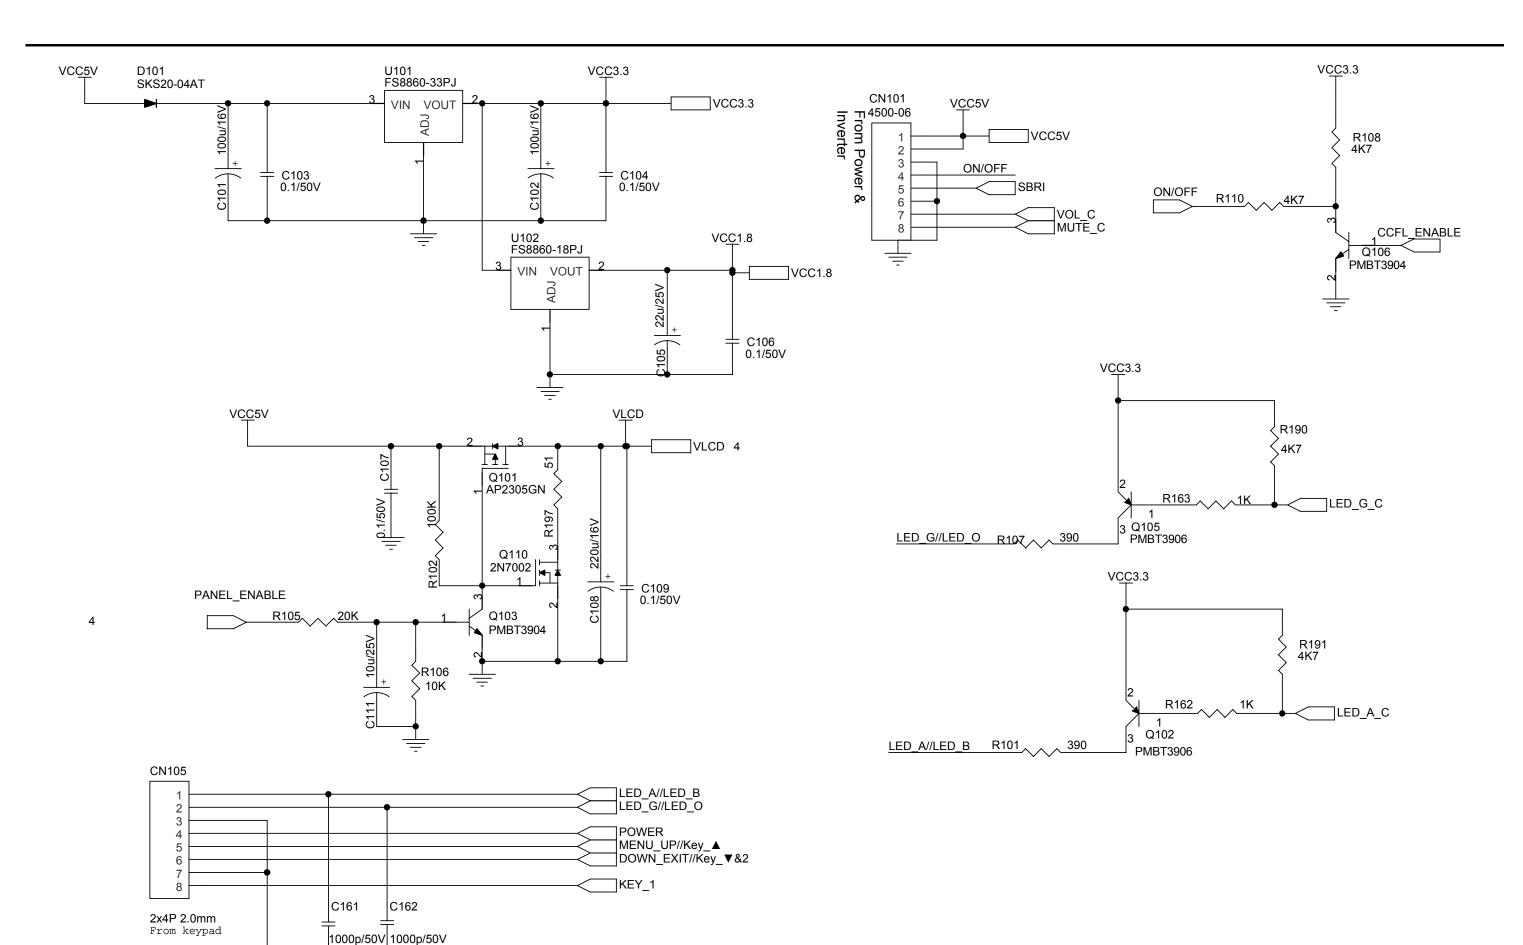



| ViewSonic Corporation | | | |
|-----------------------|----------|------|--|
| Model | | | |
| Title | DC to DC | | |
| Date | | Rev: | |

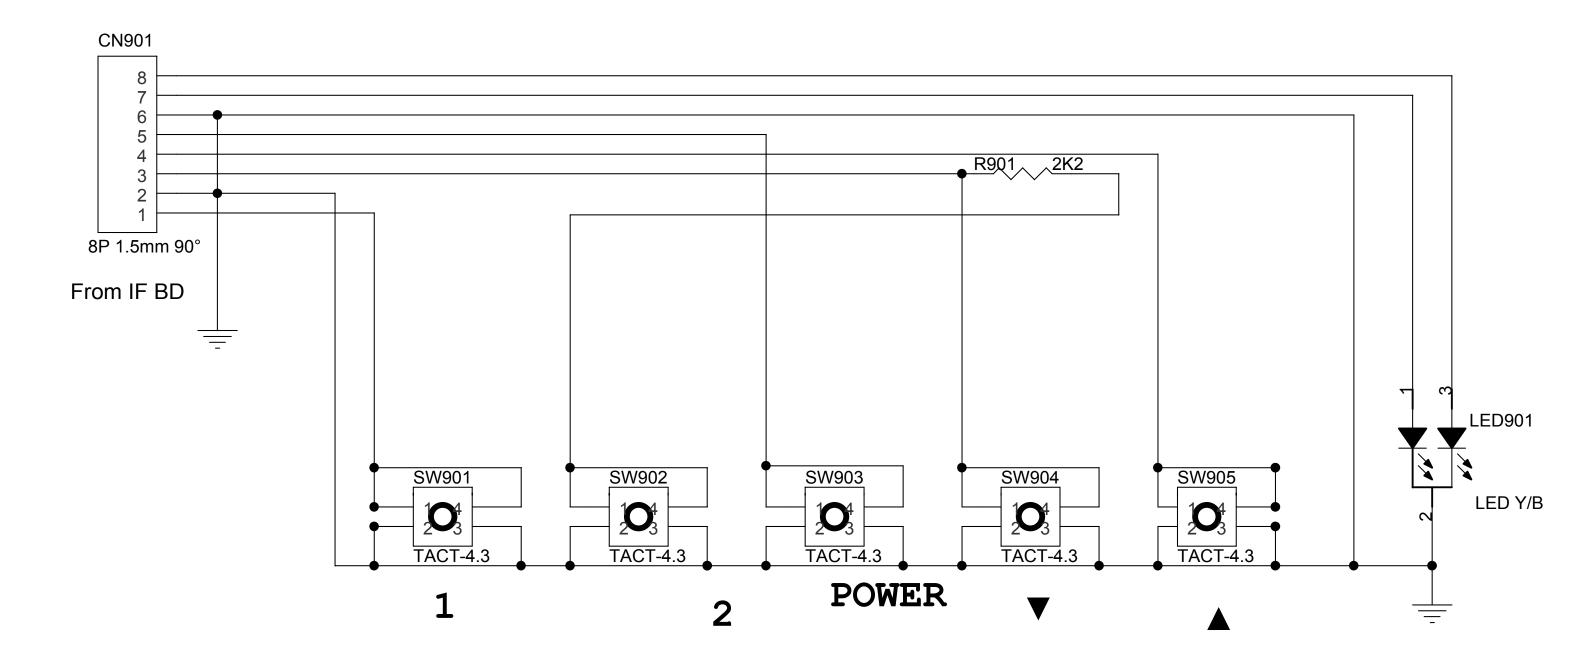



| Viev | ViewSonic Corporation | | | |
|-------|------------------------------|------|--|--|
| Model | | | | |
| Title | Keypad | | | |
| Date | | Rev: | | |

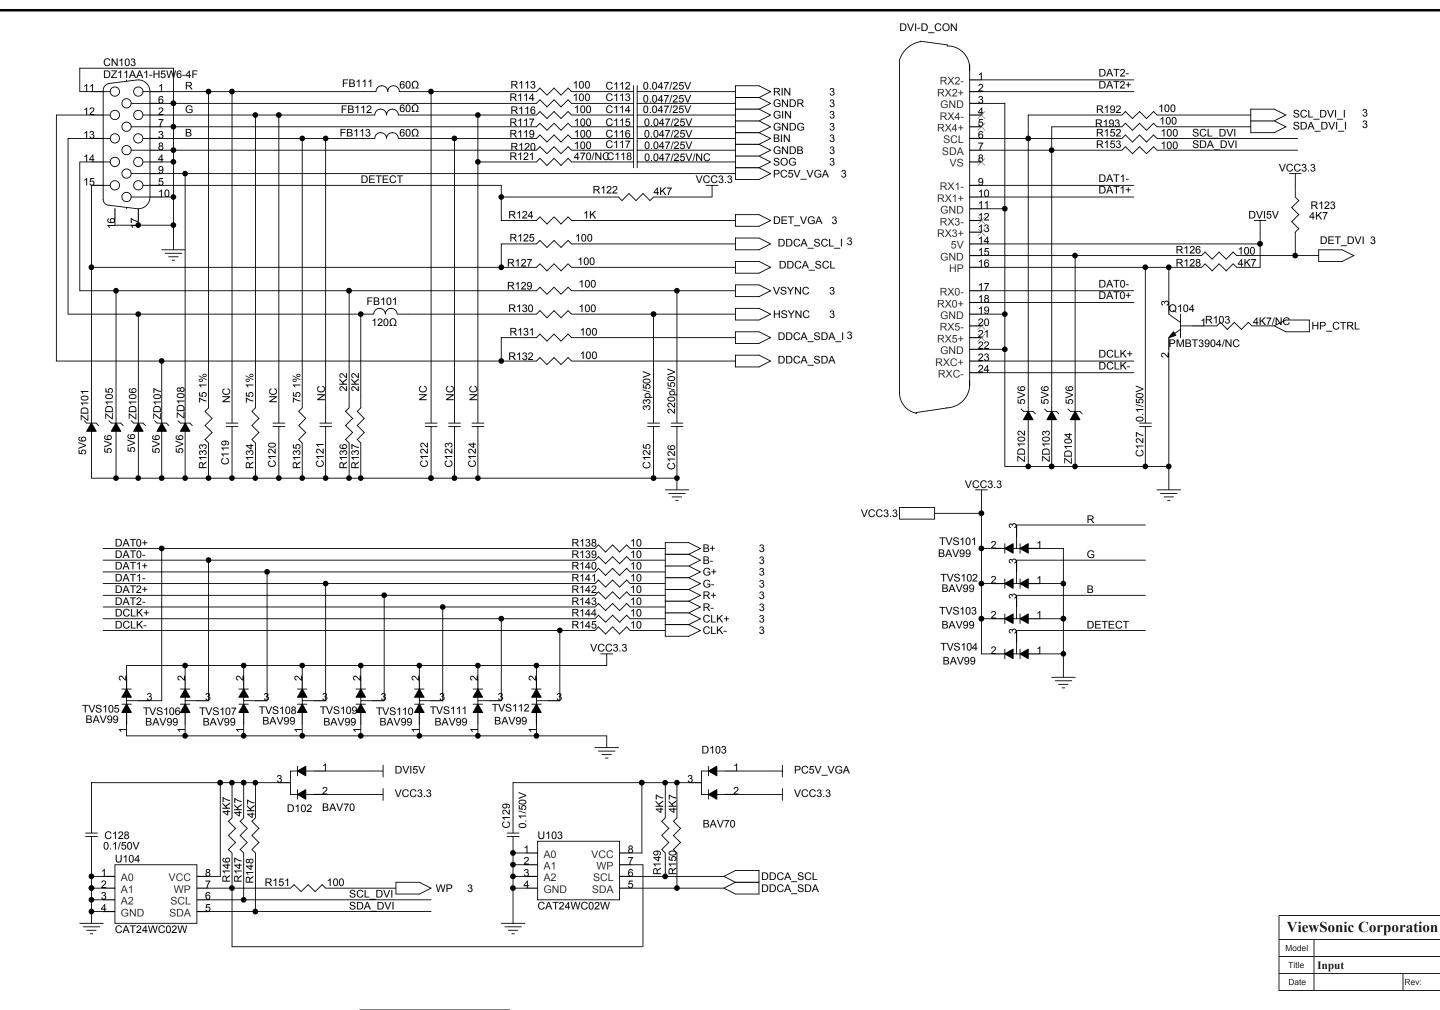


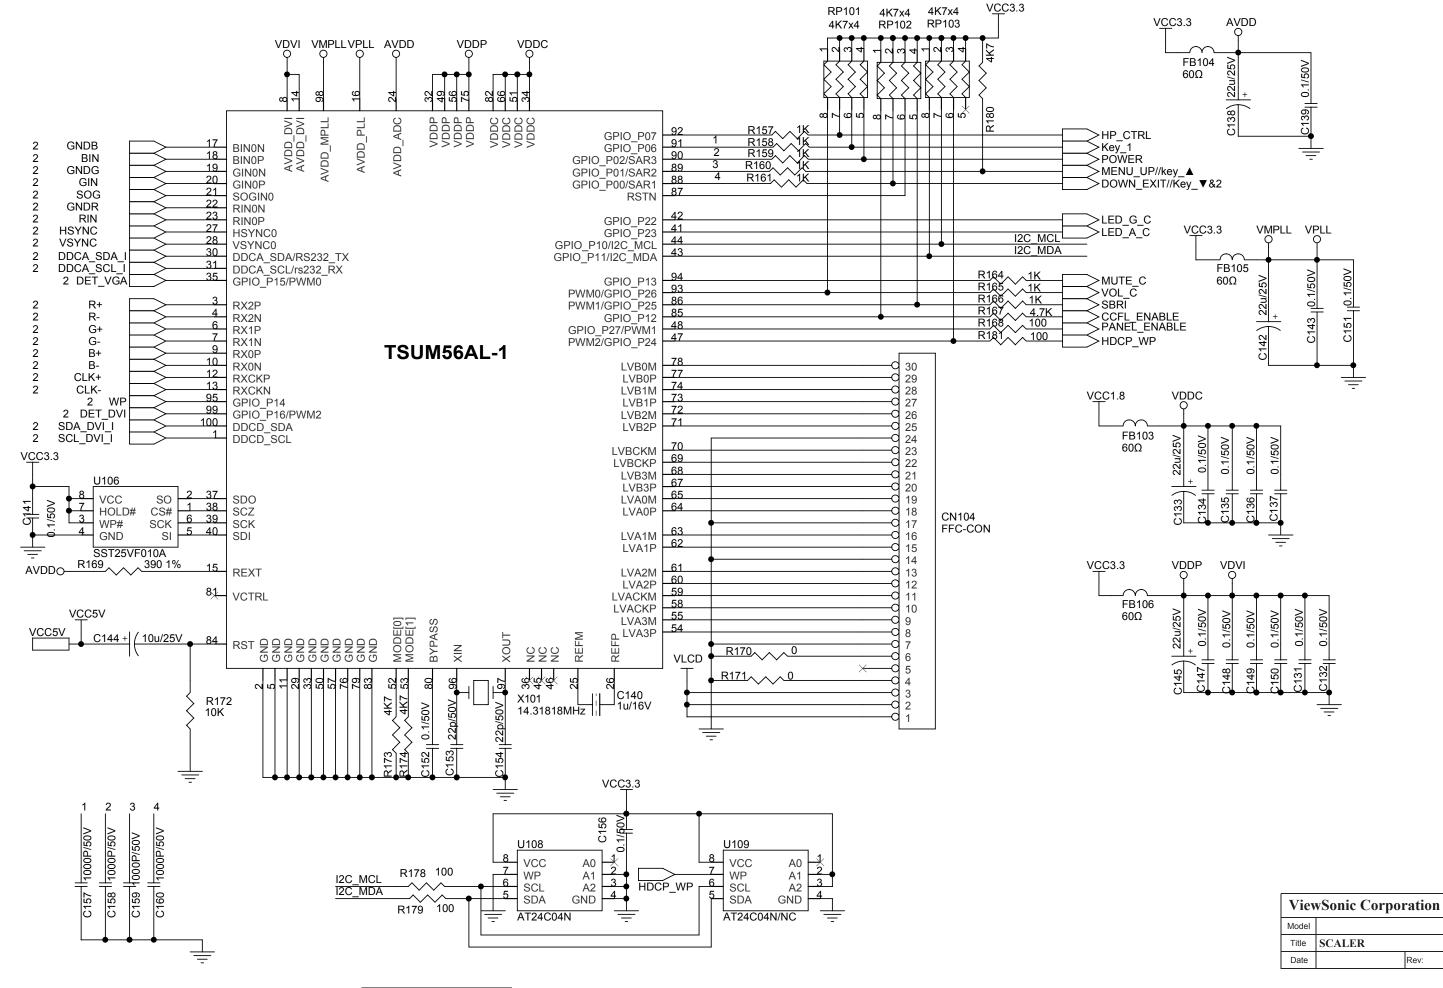

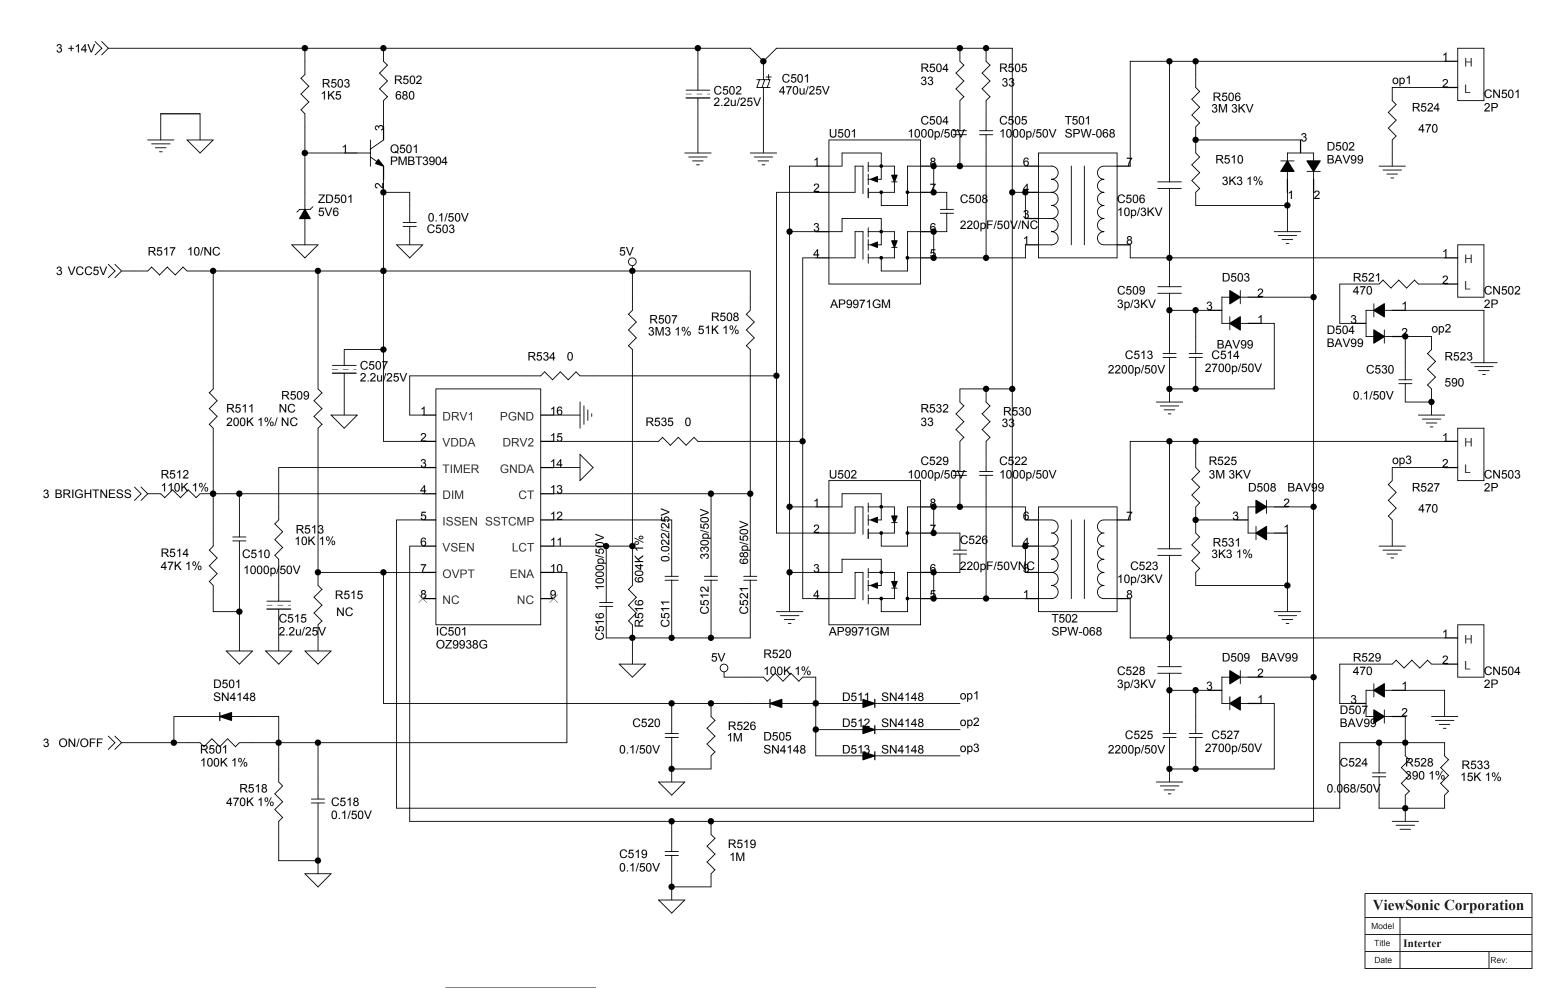


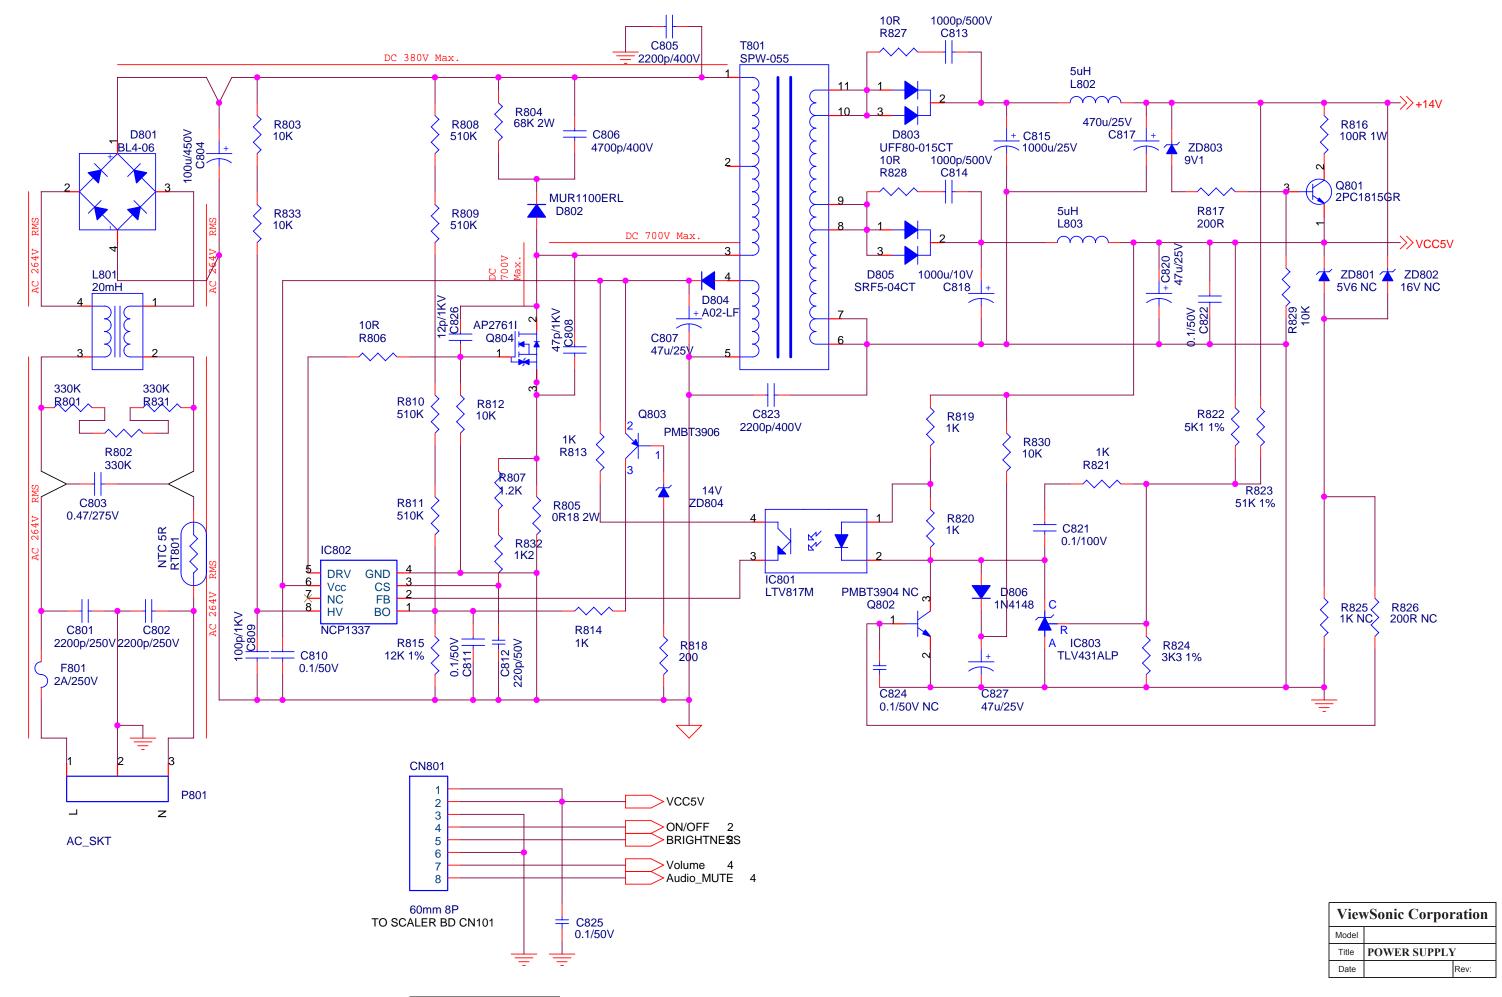


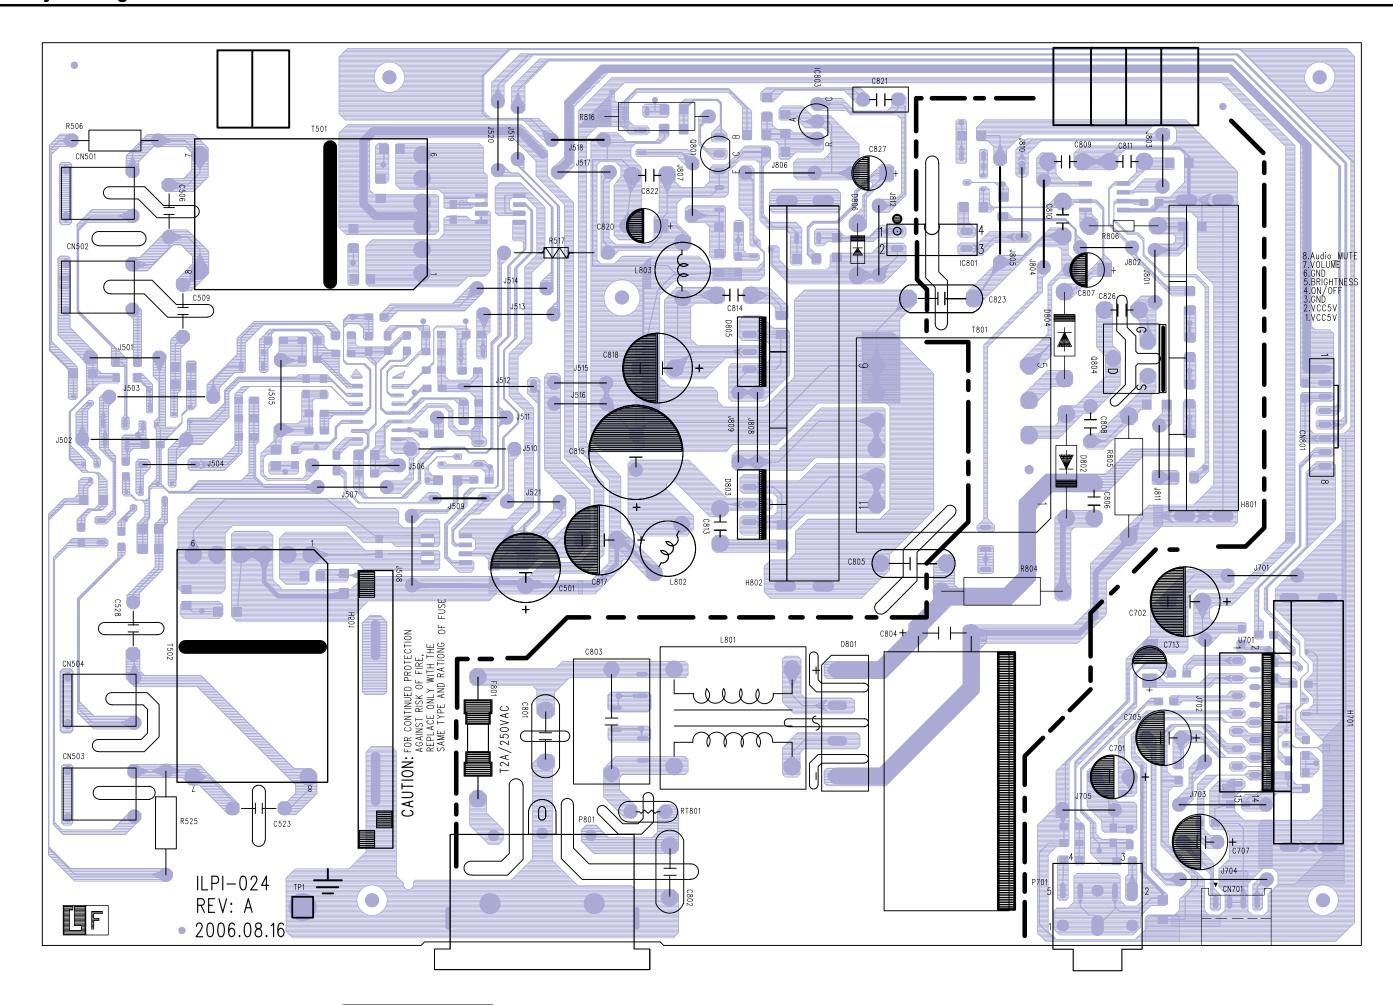

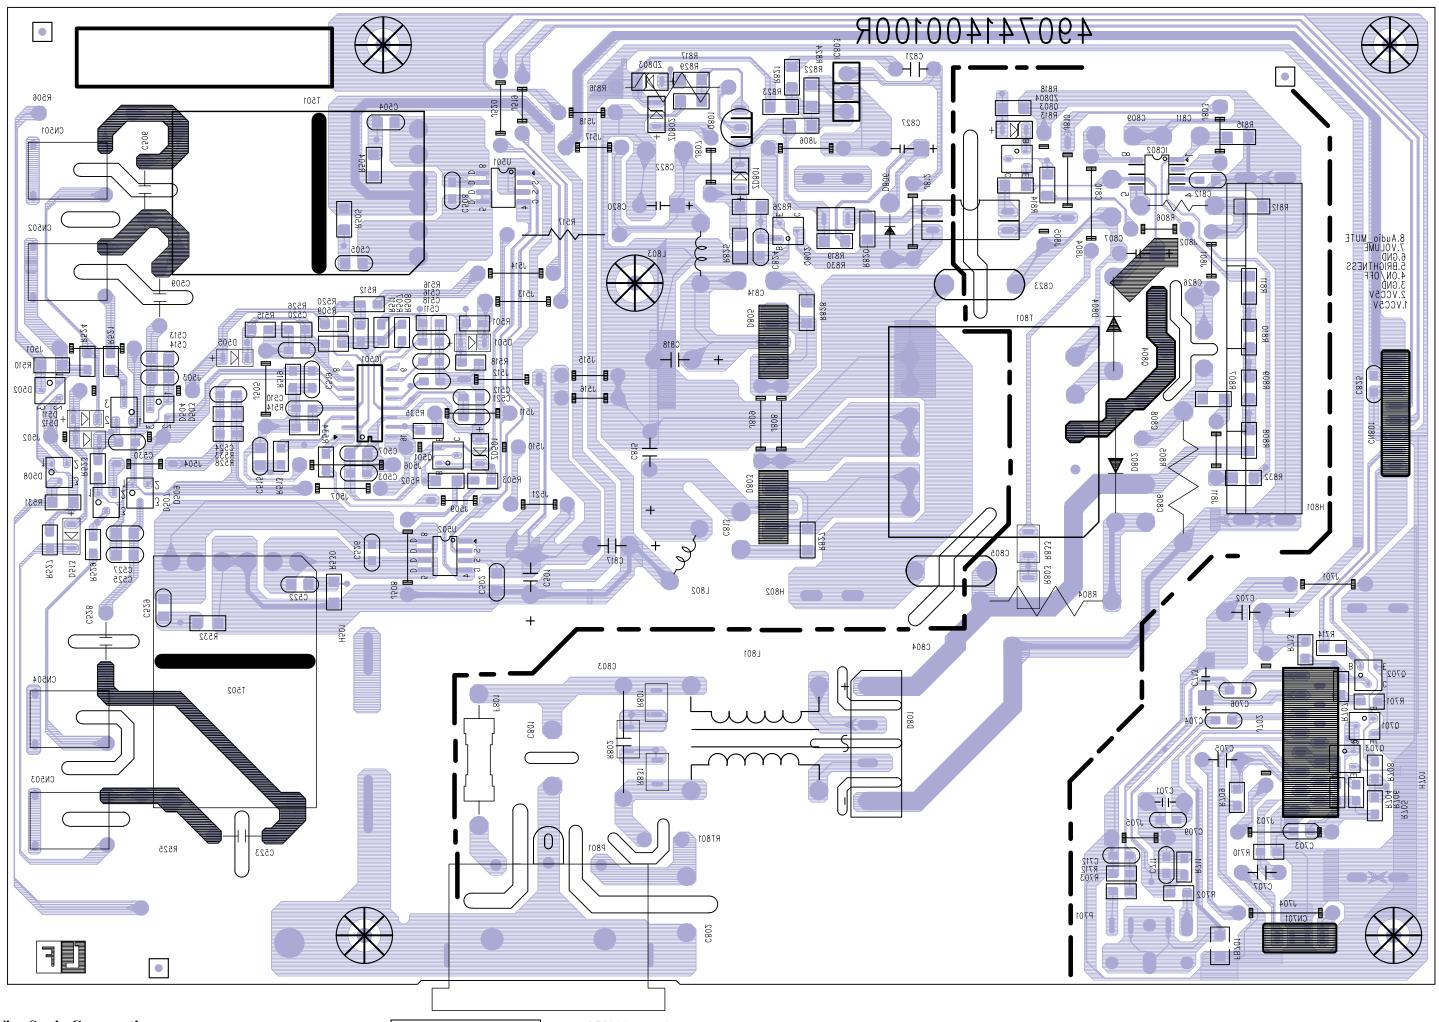

SILKSCREEN TOP

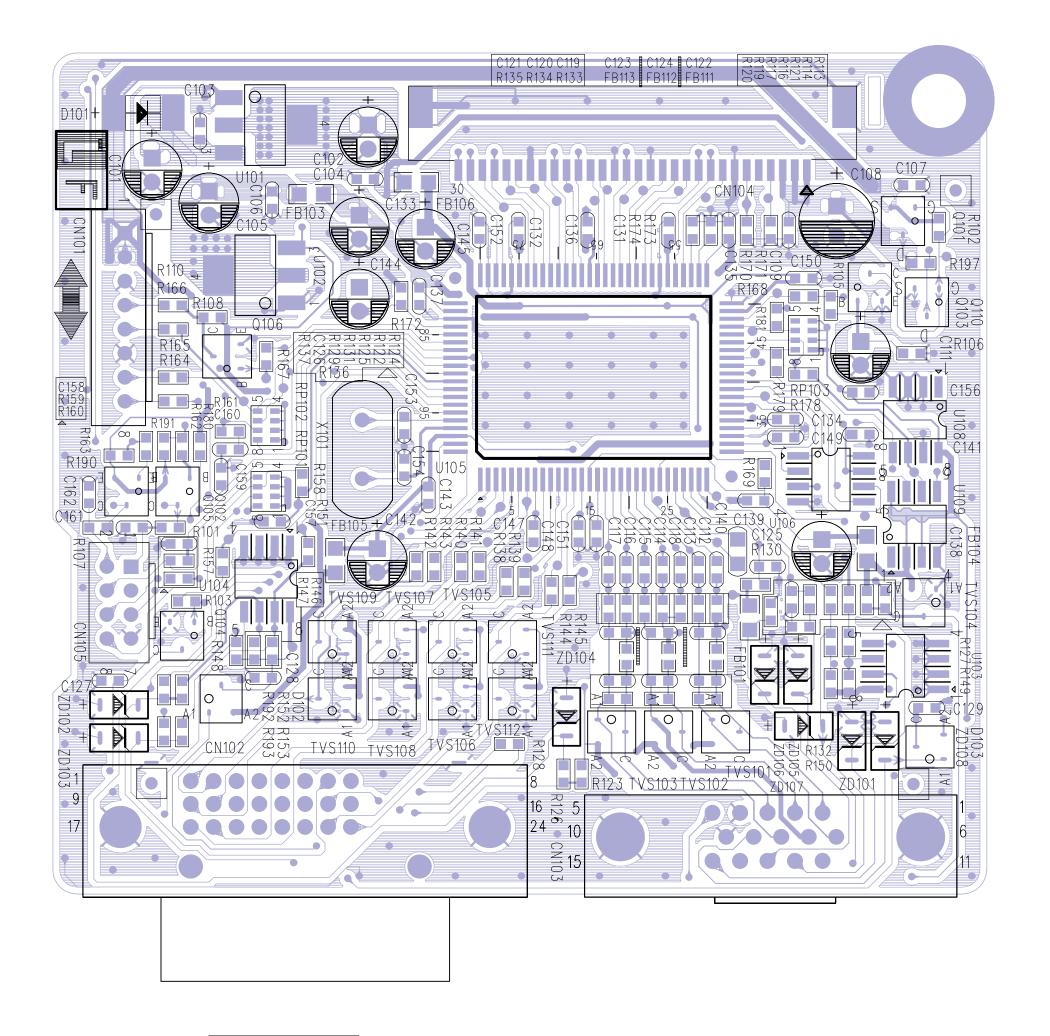

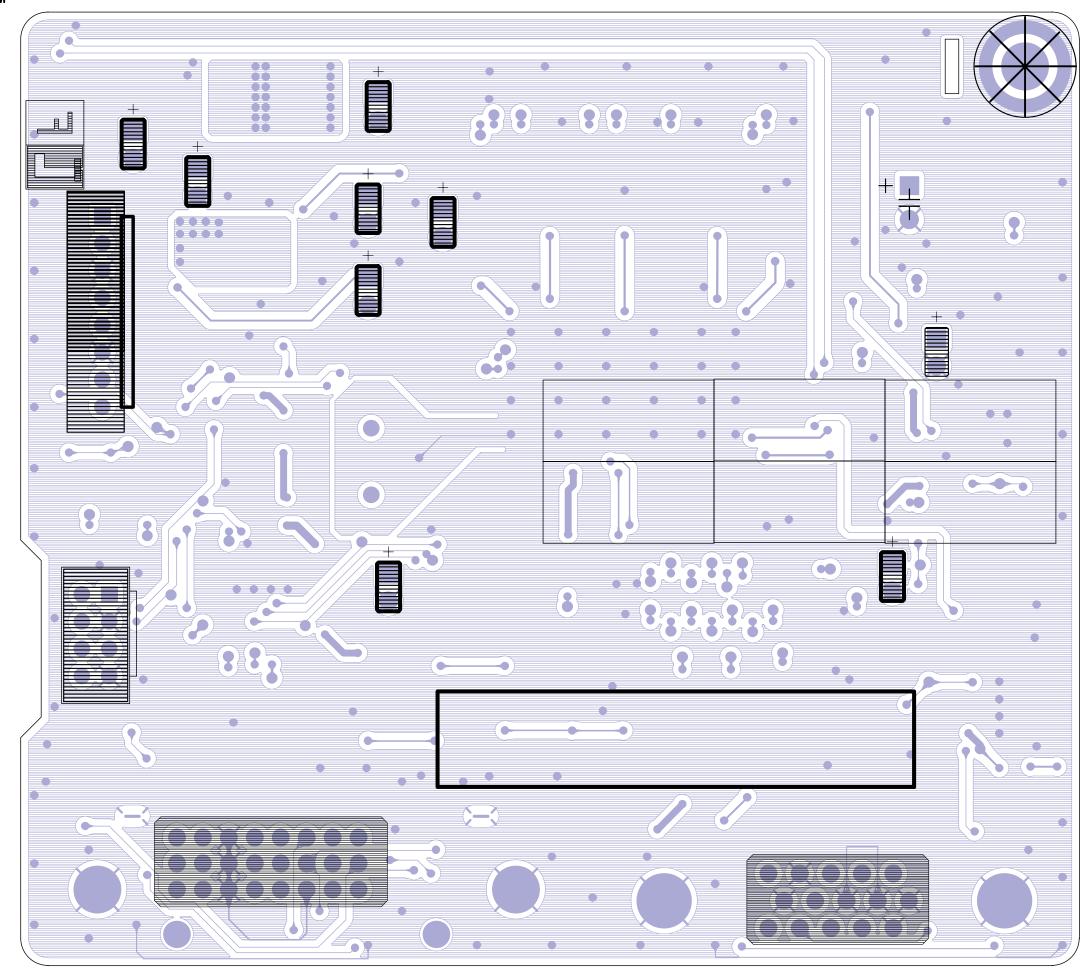

* Reader's Response*

Dear Readers:

Thank you in advance for your feedback on our Service Manual, which allows continuous improvement of our products. We would appreciate your completion of the Assessment Matrix below, for return to ViewSonic Corporation.

Assessment

A. What do you think about the content of this Service Manual?

| Unit | Excellent | Good | Fair | Bad |
|---|-----------|------|------|-----|
| 1. Precautions and Safety Notices | | | | |
| 2. Specification | | | | |
| 3. Front Panel Function Control Description | | | | |
| 4. Circuit Description | | | | |
| 5. Adjustment Procedure | | | | |
| 6. Troubleshooting Flow Chart | | | | |
| 7. Recommended Spare Parts List | | | | |
| 8. Exploded Diagram and Exploded Parts List | | | | |
| 9. Block Diagrams | | | | |
| 10. Schematic Diagrams | | | | |
| 11.PCB Layout Diagrams | | | | |

B. Are you satisfied with this Service Manual?

| Item | Excellent | Good | Fair | Bad |
|---------------------------|-----------|------|------|-----|
| 1. Service Manual Content | | | | |
| 2. Service Manual Layout | | | | |
| 3. The form and listing | | | | |

C. Do you have any other opinions or suggestions regarding this service manual?

Reader's basic dada:

| Name: | Title: | |
|----------|--------|--|
| Company: | | |
| Add: | | |
| Tel: | Fax: | |
| E-mail: | | |

After completing this form, please return it to ViewSonic Quality Assurance in the USA at facsimile 1-909-839-7943. You may also e-mail any suggestions to the Director, Quality Systems & Processes (marc.maupin@viewsonic.com)