



Navigate IQGEO Map



WHEN TO USE THIS JOB AID

Use this when you log into IQGeo and need to orient yourself on the map before starting field work.



KNOW THE MAIN MAP

1. SEARCH

Use Search to locate a transmission pole, address, assigned order or other map feature.

2. TOOLBAR

Use the toolbar to move between view, return home, manage bookmarks, show current location and access other available tools.

3. DETAILS & LAYERS PANEL

Use Details to review selected asset information. Use Layers to turn map information on or off for the task.

4. BASEMAP


Use Basemap to change the map background. Select OSM when working offline.

5. ZOOM CONTROLS

Use the zoom controls to move closer to or farther from the map area.

6. MAP TOOLS & STATUS AREA

Use the bottom-right tools and status indicators to check map behavior, view options and system status.

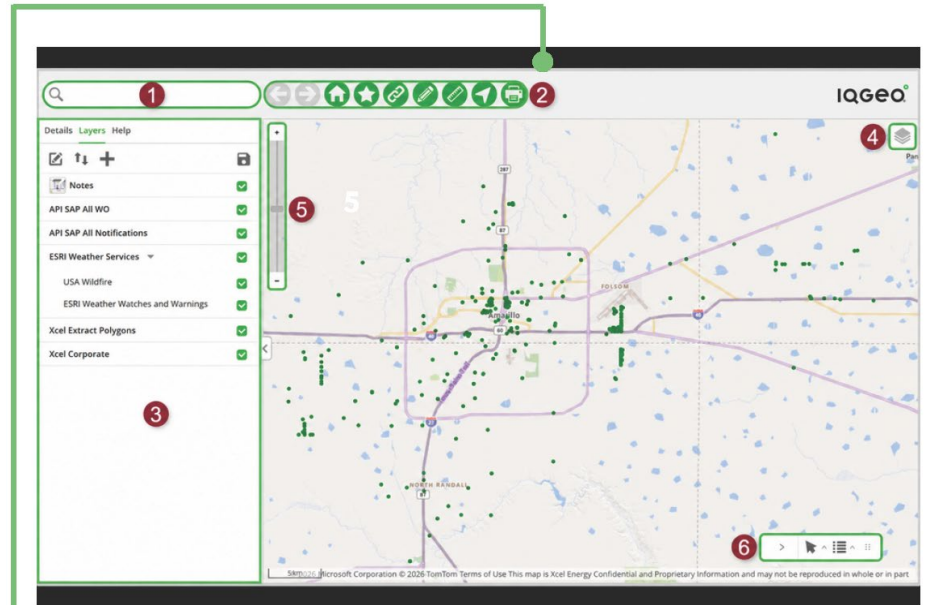

2

Navigate between views and return to the Home bookmark

Share a link to a view or an object

Measure distances and areas

Print a map
*not available in Anywhere



Save and manage map Bookmarks

Add objects.

Show current location *



QUICK STEPS

1. Search for the assigned work, asset or location
2. Confirm the correct map area opens
3. Turn on only the layers needed for the task
4. Select the correct base map for your connection status
5. Use zoom and pan to inspect the area
6. Select the asset and review Details before taking action



FIELD REMINDERS



Keep the map clean. Turn off unnecessary layers to reduce clutter and improve performance.



Match the basemap to your connection. Use OSM when working offline. Bing and Aerial require a connection.



Confirm before you act. Select the asset and review Details before entering inspection, correction or defect information.



COMMON ISSUES

Issue	What to Check
Assets don't appear	Check layer visibility, zoom level and selected extract
Map background is blank or gray	Check basemap. Switch OSM if offline.
Search doesn't return expected results	Confirm search term, assigned work and permissions
Toolbar option is missing or unavailable	Check role permissions or ask an administrator



If a required asset layer or assigned work item is missing **after** you check layers, sync status and permissions, **contact your administrator.**