

User manual

- [User manual](#)
 - [1. Homepage](#)
 - [2. Register](#)
 - [3. Login](#)
 - [4. Dashboard](#)
 - [5. Settings](#)
 - [6. Admin area](#)
 - [7. Connecting new heating thermostats](#)
 - [8. Troubleshooting](#)
-

1. Homepage



HdM PUX Lab Heating Control

Keep an eye on the room temperature in the HdM PUX Lab,
control it as needed, and schedule heating times using the
Nextcloud calendar.



1. You can use the help function to call up the operating instructions, installation instructions and information on the source code.
2. You can choose between German and English.
3. You can choose between day and night mode.
4. The login and register buttons are located in the centre. The website can only be used with a user account.

2. Register

Sign up



Use the correct Nextcloud string for your account, this must match the calendar entry name in the Heating Control Nextcloud calendar. This is used to connect your settings with the Nextcloud calendar. Each calendar entry must start with this string.

Username	1
Username	
Password	2
Password	
Room	3
Nextcloud-String	4
Nextcloud-String	
This string must match the name of your calendar entries in the heating control calendar!	
Invitation code	5
Invitation code	
Sign up	6

Already registered? [Log in now](#)

1. Decide on a user name.
2. Decide on a password that is at least 7 characters long.

3. Enter the room in which you are sitting. If it is not clear which room applies, select 'n001' and set the room in the settings after logging in. After logging in, you will see a representation of the building in the dashboard.
 4. Use the title of your calendar entries (e.g. "ab12@n5") from the heating control Nextcloud calendar as the calendar string. The title is used to switch the heating on and off according to its presence. Each calendar entry must begin with or contain this string.
 5. You need the current invitation code from an admin. The default code is **smarthome**. Please enter the code case-sensitively.
 6. Finalise the registration.
-

3. Login

Login

The login form consists of three main components, each highlighted with a red border and a red number in the top right corner:

- 1** **Username**: A text input field with a light gray border and rounded corners. The placeholder text "Username" is displayed in a light gray font.
- 2** **Password**: A text input field with a light gray border and rounded corners. The placeholder text "Password" is displayed in a light gray font.
- 3** **Login**: A blue button with rounded corners and the text "Login" in white, centered.

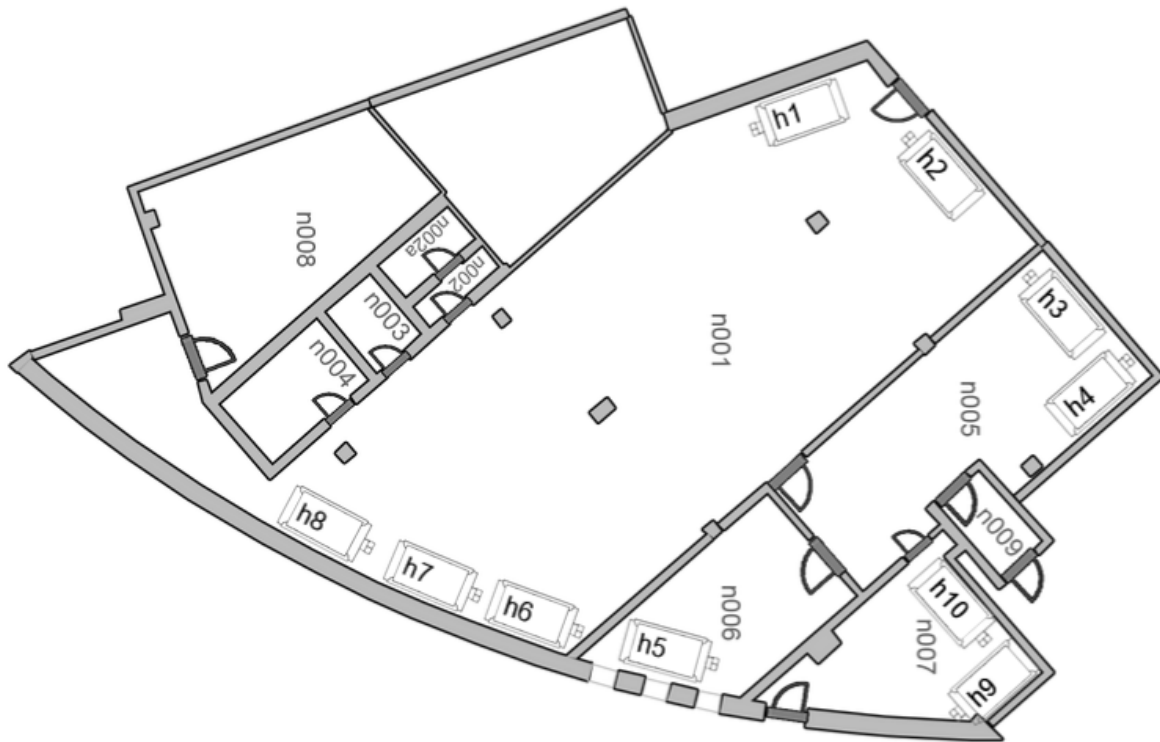
[Not registered yet? Create an account](#)

1. Enter your user name.
2. Enter your password.
3. If the login is successful, you should be redirected to the dashboard.

If you have forgotten your password, please contact an admin. They can delete your account so that you can create a new account.

4. Dashboard

Dashboard

[Show Mapping](#)

On the dashboard, you can see the currently saved radiators that are relevant for your room. The target temperature and the current temperature of the heating are also displayed.

The target temperature describes the temperature that should currently be reached.

The current temperature is the temperature that the device is measuring.

An offset value can be assigned in the Fritz!Box if the temperature deviates due to the heat of the heating.

Device List

Heating Device 1 Room n001 h10

Status: Active

23°C

Confirm

In the device list, you can see the current information about the saved radiators.

If you set the radiator manually via the dashboard, it will maintain the set temperature for the rest of the day until it switches off at night.

5. Settings

Logged in as: admin 1

Temperature 2
Change the temperature to your preference. This value will be used to regulate the heating. Adjust the temperature between 8°C and 28°C.
16 8°C 28°C

Room affiliation 3
Assign yourself to a room to control the heating in that room. You can only be assigned to one room at a time.
n001 n005 n006 n007

Calendar-String 4
Here you can customise the text that is required for the Nextcloud calendar events.
e.g., ab12@n5
Save

5

Sepia mode

Sepia mode is a color scheme that reduces the amount of blue light emitted by the screen. This can help reduce eye strain and improve sleep quality.

6

Font size

Adjusts font sizes for all pages.

7

Line height

Adjusts whitespace between text lines for all pages.

This is an example text.
Adjust the value above for changes.

8

Logout

Click here to log out of the application

1. Firstly, you will see the name of the logged-in user.
2. Set the desired temperature: The radiators relevant to you in your room are set according to your saved temperature.
3. In the room assignment, you can customise your associated room. The room names can be found on the dashboard.
4. Use the title of your calendar entries (e.g. "ab12@n5") from the heating control Nextcloud calendar as the calendar string. The title is used to switch the heating on and off according to its presence. Each calendar entry must begin with or contain this string.
5. You can optionally activate a sepia mode for all pages.
6. You can adjust the font size for all pages of the heating control.
7. You can adjust the line spacing for all pages of the heating control.
8. Lastly, you can log out using the logout button.

6. Admin area

Admin area

Device management

1

Add, remove, and manage devices that are connected to the heating control system. Use the ID from the router to verify and add the device.

Name Identifier Type Heater Add device

Name	Identifier	Type	Heater	Room	Action
near server	12345678	FRITZ!DECT 301	h10	n001	<button>Remove</button>
front door	77793561	FRITZ!DECT 301	h3	n005	<button>Remove</button>
left corner	14365378	FRITZ!DECT 301	h9	n001	<button>Remove</button>

Invitation code

2

The invitation code is required to create an account. Here you can find or change the code and export an invitation link.

smarthome Copy link

Nightly Shutoff

3

Time of nightly shutoff, select the hour when the heating should turn off and on. The heating will be set to the default temperature during this time.

Shutoff Time (turns off from this hour)

On Time (turns on from this hour)

Default temperature

4

The default temperature is used when no other temperature is set. Adjust the temperature between 8°C and 28°C.

20

Preheating Minutes per Degree

5

The preheating minutes per degree is used to calculate the time needed to reach the desired temperature.

5

Synchronize between calendar and heating

6

Enables the minutly synchronization between calendar and heating. ATTENTION: This function deactivates the system.

☒ Enable ☐ Disable

Save

This area is only visible to admins. Further information on user management can be found in the installation instructions.

1. New devices can be added, managed and removed in device management. See: [Connecting new heating thermostats](#).
2. You can customise the invitation code and provide it as a link for a new user. The code is required during registration to create an account.
3. The nightly switch-off specifies between which hours of the day the standard temperature should be set.
4. For the default temperature, you can select a temperature to be used as the default value. This is set when nobody is present in the office.
5. The preheating time in minutes per degree indicates how far in advance the heating switches on before an employee enters the building. *For example, the heating is started 20 minutes before arrival if it is currently 18 degrees in the building and the employee has selected 22 degrees.*
6. You can deactivate the synchronisation between the calendar and heating with the last setting. This means that the calendar events from Nextcloud are no longer taken into account when setting the desired temperature.

You can save the changed setting options for the current heating control via **Save**.

7. Connecting new heating thermostats

When adding new devices, it is advisable to use the Fritz!Box interface to make the settings correctly.

1. **Name:** Assign a name of your choice to know which device is meant.
2. **ID:** Set the same ID that was stored for the device in the Fritz! For example **09995 0688917**. This can be viewed on the Fritz!Box page <http://fritz.box> under Smart Home -> Operation -> {Name of the device}.
 - 1 **Type of device:** Select **FRITZ!DECT 301** or **FRITZ!DECT 302** according to the type of device involved.
3. **Room and heating:** Select which heating is involved. The IDs and rooms can be viewed via the dashboard.
 - 1 **Add device:** If all details are correct, the device will be added. If the system cannot find a device with the specified ID, no device is created.

8. Troubleshooting

What should I do if I have forgotten my password or user name?

As the registration works via an invitation code, no personal data such as your e-mail address is required. However, this means that there is no secure way to recover the password. Therefore, please register again.

If you have forgotten your username, you can contact an admin who will be able to help you.