

MANUALI UTFNTF TECHNICAL MANUAL

MU 017 **Rev. 00** 05-02-2004

SPC01: regolatore di carica fotovoltaico per batterie al piombo

- Tensione nominale: 12Vdc
- Tensione max da modulo FV: 22Vdc
- Corrente max da modulo FV: 1.2A
- Potenza max modulo FV: 20Wp
- Tensione di ricarica e fine carica: 14.1V
- Temperatura max corpo regolatore: 85°C
- Protezione con resina epossidica
- Diodo di blocco integrato
- Protetto da inversione di polarità
- Protetto da sovracorrente verso batteria
- Connessione con faston



SPC01: photovoltaic charge regulator for Pb batteries


> Nominal voltage: 12Vdc Maximum PV voltage: 22Vdc Maximum PV current: 1.2A

Charge & end-charge voltage: 14.1V Max temperature regulator body: 85°C

Maximum PV power: 20Wp

Epoxy resin protection

- Integrated blocking diode
- Polarity inversion protection
- Battery overcurrent protection
- Faston connection

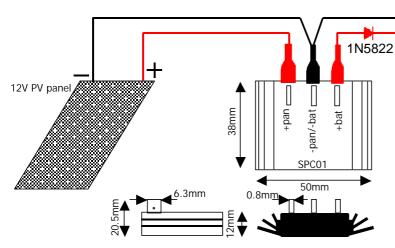

+pan: PV panel positive connection

12V Pb battery

- pan/-bat: PV panel negative connection

- pan/-bat: Pb battery negative connection

+bat: Pb battery positive connection

Note: Il diodo 1N5822 elimina la scarica della batteria dovuta al consumo del regolatore SPC01, nei periodi in cui il sistema è immagazzinato.

Posizionamento:

Il regolatore è dotato di distanziatore isolante adesivo ed è anche attaccabile

- sul retro del modulo FV
- dentro la scatola contatti del modulo FV

Cablaggio:

- Utilizzare faston per le connessioni al regolatore
- Collegare i poli negativi del modulo FV e della batteria al contatto centrale del regolatore (usare unico faston per contenere i due cavi)
- Collegare il + bat al + batteria
- Collegare il + pan al + pannello

Indicatore carica-scarica:

Misurando con voltmetro la tensione di batteria, quando il modulo FV è scollegato, è scarica se Vbat< 11.5 V carica se Vbat 12.6 V MAI lasciare scarica la batteria!

Parallelaggio:

Più SPC01 possono caricare la stessa batteria.

Per dimensionamento e orientamento sistema si rimanda sul sito internet <u>www.western.it</u> alla sezione "L'energia fotovoltaica"

Versione aggiornata di questo manuale è sul www.western.it alla sezione "Manuali utente"


Recapiti/Addresses:

Western CO. Via Pasubio 1

I-63037 San Benedetto del Tronto (AP) ITALY

Telephone: +39 0735 751248 Fax: +39 0735 751254

e-mail: westcom@insinet.it www.western.it

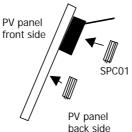

PVpan

SPC01

PVnan



The regulator has got a distance piece adhesive layer and it can also be attached

- on PV module's back surface
- inside the PV module's junction box

Cabling:

- Use faston for all connections with regulator
- Connect negative poles of PV panel and battery to the central contact of regulator (use only one faston to place the two cables)
- Connect +bat to + battery
- Connect +pan to + PV module

Charge index:


By measuring battery voltage with a voltmeter, when PV module is disconnected, the battery is discharged if Vbat< 11.5 V and it is charged if Vbat 12.6 V Never leave battery discharged!



More SPC01 can charge the same battery.

For system sizing and orientation we advise to consult www.western.it at "L'energia fotovoltaica" section

Updated version of this manual is on www.western.it at "Technical manuals" section

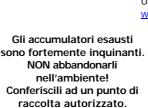

Pb battery



Exhausted batteries are highly polluting DO NOT leave them in the environment. Bring them in an authorized collecting center.

