


编译安装

源码文件夹

1. **rs_driver_update**
2. **rs_lidar_src**

先决条件

1. 设置ip

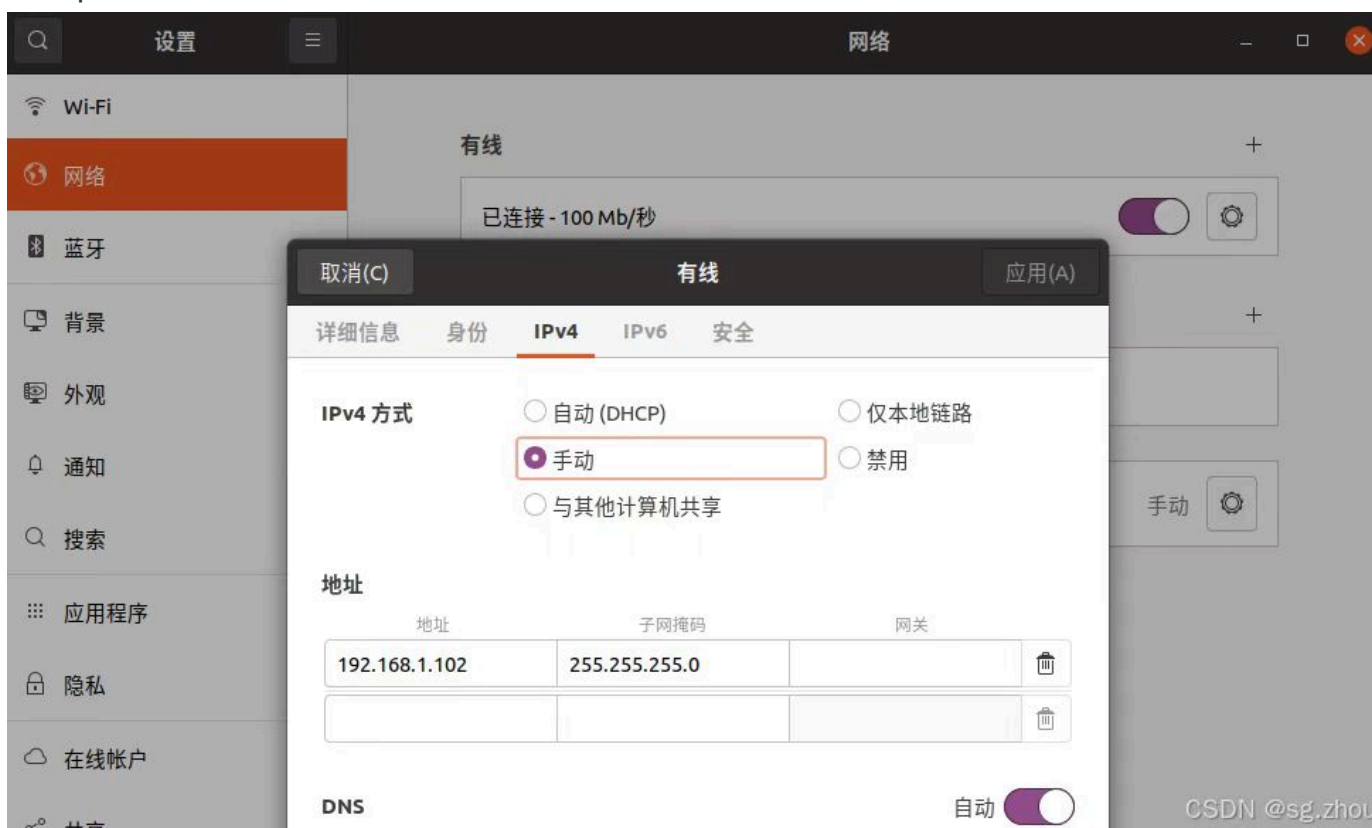

-查看是否可以ping通

```
bash : ping 192.168.1.102
```

2. C++编译器支持: `g++ >= 7.0`(C++17)
3. CMake `>= 3.10`
4. Python编译器支持: `3.6<=Python<=3.14`
5. **rs_driver_update**依赖:

```
sudo apt-get install libpcap-dev  
libeigen3-dev libboost-dev libpcl-dev
```

6. **rs_lidar_src**依赖:

- 在**RS_LIDAR_Python**目录下执行

```
pip install -r ./python/requirements.txt
```

rs_driver_update编译安装

- 在rs_driver_update目录下执行

```
mkdir build && cd build
cmake .. && make -j4
sudo make install
```

- 若编译失败可以尝试修改CMakeLists.txt中

```
option(COMPILER_TOOL_VIEWER "Build point cloud visualization tool" ON)
option(COMPILER_TOOL_PCDSAVER "Build point cloud pcd saver tool" ON)
option(COMPILER_TESTS "Build rs_driver unit tests" ON)
```

ON->OFF不影响python包的使用

rs_lidar_src编译安装

编译配置自定义

```
option(BUILD_PYTHON_PACKAGES "Build Python packages" ON)
option(COMPILER_DEMO "Compile demo programs" ON)
option(USE_PCL_POINT_TYPE "Use PCL point cloud type instead of custom type" ON)
option(EXECUTIONLIB "Include execution in .cpp" OFF)
option(PRINT_PARAMETER "cout parameters of lidar to console" OFF)
option(PRINT_DEBUG "cout debug to console" OFF)
option(PRINT_MSG "cout brief message of every frames to console when 'getPointCloud' ca
option(RS_TIME_RECORD "cout time record to console" OFF)
```



- *cpp*目录下执行

```
chmod +x cmake_make.sh
chmod +x clean_build.sh
chmod +x run_demo_pcap.sh
```

```
./cmake_make.sh
./run_demo_pcap.sh
```

- *python*目录下执行

```
chmod +x bdist_wheel.sh
chmod +x clean_build.sh
chmod +x pip_install_wheel.sh
chmod +x run_demo_pcap.sh
```

```
./bdist_wheel.sh
./pip_install_wheel.sh
./run_demo_pcap.sh
```

若无效请尝试

```
# 关闭防火墙
sudo ufw disable || true
```