ANTIPHON

MOBILE TEST BENCH

ἀντίφωνος · antíphōnos

Ancient Greek — “sounding in response”

Independent devices. Coordinated execution.

PUBLIC PREVIEW

USER MANUAL

Windows Edition

Created by Mateusz Gałązka · GNZ

© 2026 Mateusz Gałązka. All rights reserved.

Contents

This manual follows the operator workflow from first launch to evidence review. Every contents entry is linked in the PDF; bookmarks mirror the section and subsection structure.

01 **Introduction and scope** 03

02 **Installation and first launch** 04

03 **First Run Experience** 05

04 **TESTBED and ADB device setup** 08

05 **TEST CASES and saved scripts** 09

06 **Classic NIGHT RUN** 11

07 **CALL / Streaming / Browsing workflows** 12

08 **Safe Pause / Resume / STOP** 13

09 **Results, evidence and logs** 14

10 **Device Lanes Night Run** 15

11 **Per-device execution and timeline** 16

12 **Troubleshooting and limitations** 17

13 **Quick reference** 18

PUBLIC PREVIEW

Free edition: maximum two distinct physical devices and two hours of active Night Run execution per session; unlimited separate sessions; no trial expiry, license key or activation. The compiled Public Preview channel enforces the limits, and paused time is excluded.
Windows x64 is available as a self-contained unsigned installer. M1/M2 Device Lanes and shared CALL are available; broader device, radio and network qualification remains incomplete. Preview Terms require owner/legal approval before public redistribution.

© 2026 Mateusz Gałązka (GNZ) · ANTIPHON

ORIENTATION / CURRENT BUILD

01 Introduction and scope

Antiphon configures Android test resources, runs controlled mobile workflows and preserves their execution evidence.

A single-device workflow uses M1; CALL requires two distinct phones with explicit MO/MT roles. USB and Wireless ADB are endpoints for a physical device, not separate phones. This manual covers the integrated Public Preview 0.1.0 Windows build.

> **ἀντίφωνος · antíphōnos**
>
> Ancient Greek — “sounding in response”
>
> Independent devices. Coordinated execution.

Product status at a glance

AREA	STATUS IN THIS BUILD
Classic Sequential	Available. Initial supervised hardware tests passed; wider hardware and overnight qualification remain incomplete.
Device Lanes / MO-MT CALL	Available for verified M1/M2. Shared CALL joining is implemented; the owner-reported Browsing/Streaming/CALL run is scenario-specific, not universal certification.
First Run Experience	Available. Preview Terms acceptance is recorded locally. Final legal terms require owner/legal approval before public redistribution.
Distribution	Self-contained Windows x64 installer with a compiled Public Preview identity. It is unsigned and has no license activation, key or expiry.

Safety baseline

BEFORE YOU TOUCH A DEVICE

Use authorised devices, test numbers, URLs and accounts; supervise initial runs and CALL workflows.
Wait for PAUSED - SAFE FOR DEVICE INTERVENTION before servicing a device. Keep the same physical phone for resume.
Never reset the shared ADB server during execution. Root is optional, not a repair shortcut.
Missing metrics or page-load proof are not zeros or success. Review logs and exports for private data before sharing.

© 2026 Mateusz Gałązka (GNZ) · ANTIPHON

Free Public Preview edition

POLICY	BEHAVIOR IN THIS RELEASE
Physical devices	Maximum two distinct physical devices per session: M1 and M2. M3/M4 execution is not part of Public Preview.
Night Run active duration	Maximum two hours of active execution per session. Paused time is excluded. Classic pause-aware timing and Device Lanes active-time enforcement apply.
Sessions and expiry	Unlimited separate sessions; no trial expiration, activation or license key.
Extended capabilities	Available on request; no automated licensing or entitlement service is claimed.

LIMITS ARE ENFORCED BY THE COMPILED PREVIEW CHANNEL

At a limit, admission closes and the existing bounded STOP, cleanup, restoration and quarantine contracts apply. Developer settings or environment variables cannot remove the Public Preview limits.

SETUP / WINDOWS x64

02 Installation and first launch

Windows x64 currently; Linux version in development. Use the official Public Preview installer and verify its channel and version in Settings > About.

Before you begin

REQUIREMENT	WHY IT MATTERS
Windows x64	The supported desktop target for the current build.
Official Antiphon Public Preview installer	Download only from the official release. Verify its SHA-256, then confirm the compiled channel and version in Settings > About.
Android Platform Tools	Provides the public adb executable used for discovery and device communication.
Host USB driver	Required for reliable USB ADB on the target phone or tablet.
Test device	Developer options and USB debugging enabled; screen unlocked for authorisation.
Optional: Wireless debugging	Use only when the device and network support Android's pairing workflow.
Authorised test data	Use approved URLs, phone numbers, accounts and test environments.

Install and launch

1. Install Google Android Platform Tools and the appropriate device USB driver.
2. Start Antiphon. If ADB is not detected, open Settings > Devices and select the executable.
3. Connect by USB, unlock the phone and approve debugging authorisation.

© 2026 Mateusz Gałązka (GNZ) · ANTIPHON

4 On a fresh profile, complete first-run setup; after READY, MAIN opens. On an established profile, reopen setup only when needed.

The public installer is self-contained and includes its .NET runtime. Startup needs no account, internet connection, license key or activation. The installer is currently unsigned, so Windows SmartScreen may show a warning; verify the published SHA-256 before installing.

Profiles and local data

Developer and PrivatePreview builds use isolated default profiles. Settings, scripts, Results and logs are stored in the per-user application profile; explicit custom paths can differ. Use Settings > About to confirm the active file paths, release channel and build identity.

DATA	LOCATION AND BEHAVIOUR
Settings	Per-user profile; the settings file is read at startup. Path and ADB changes may require a restart.
Scripts / testcases	Saved definitions are stored as YAML in the configured library.
Results	Persisted execution evidence in the configured Results root.
Logs / diagnostics	Local application and shell logs; diagnostics can be copied or saved from Settings > About.

What a first launch may show

STARTING STATE	EXPECTED BEHAVIOUR
Fresh Windows profile	Splash > First Run Experience > READY > MAIN.
Completed profile	Splash > MAIN; no wizard.
Established profile created before the First Run Experience	The wizard is not forced. Reopen it from Settings > General > OPEN FIRST-RUN SETUP.
Corrupt or unreadable settings	Defaults are used with a warning; the original file is preserved. The wizard may be skipped safely.
ADB unavailable	The application can open. Readiness shows a warning with a route to Settings > Devices.

FIRST RUN / PUBLIC PREVIEW

03 First Run Experience

The First Run Experience prepares a new Windows profile: it introduces the workspace, records explicit acceptance of the Preview Terms, and reports the real local environment before MAIN opens.

When the wizard appears

- On a fresh profile with no existing Antiphon settings file.
- When a previous onboarding record is partial, for example if the operator exited after accepting the terms.

© 2026 Mateusz Gałązka (GNZ) · ANTIPHON

- When the operator explicitly reopens it from Settings > General > OPEN FIRST-RUN SETUP.

An existing settings file without onboarding records is treated as an established profile. Antiphon does not force a new wizard onto that profile; the operator can reopen setup deliberately.

Step 1 - Welcome

The welcome page summarises the three workspaces: run and monitor tests, manage devices and queues, and review results and logs. Choose EXIT to leave setup, or CONTINUE to review the preview terms.

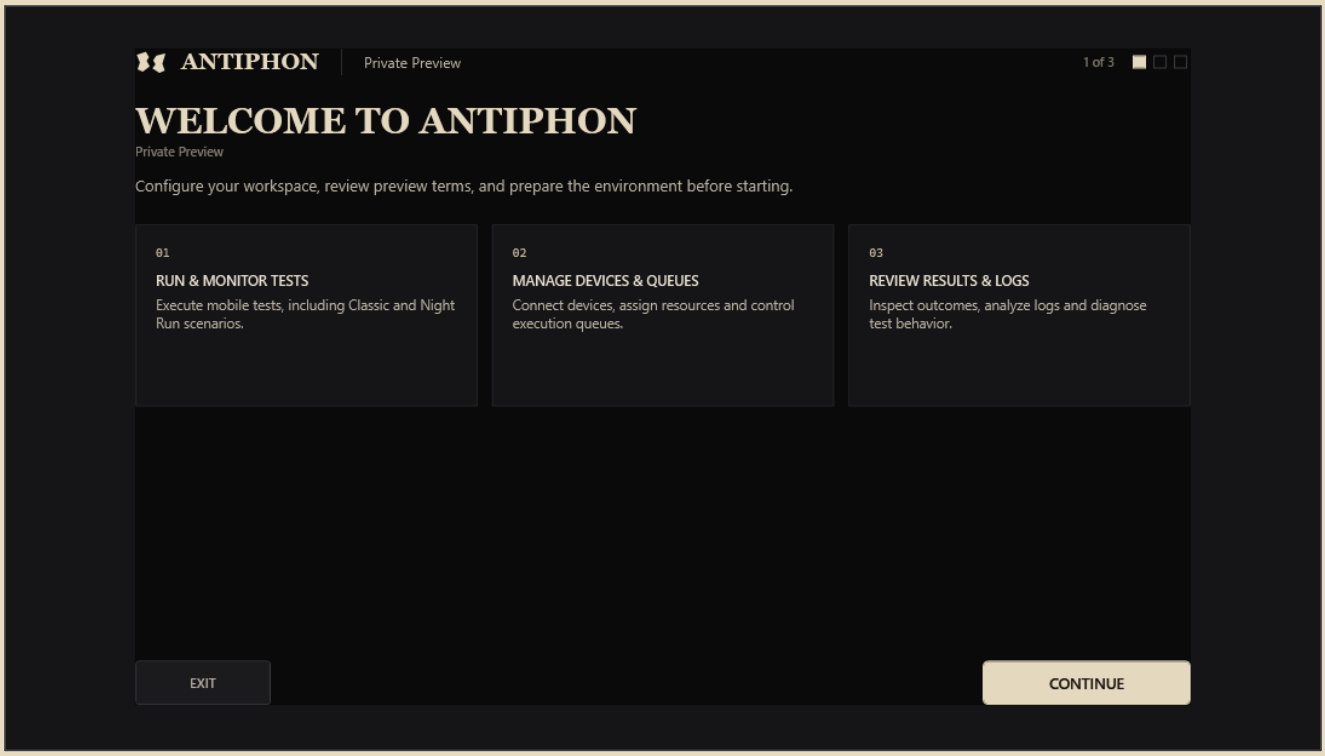


FIG. 01 Welcome: CONTINUE opens the terms; EXIT leaves setup.

Step 2 - Preview Terms

Read the private-preview terms and select the acceptance checkbox. CONTINUE remains disabled until the acceptance is explicit. Use BACK to return to the welcome page.

© 2026 Mateusz Gałązka (GNZ) · ANTIPHON



FIG. 02 Preview Terms: CONTINUE stays disabled until acceptance is explicit.

PREVIEW TERMS AND ACCEPTANCE

CONTINUE requires explicit acceptance. Its version and UTC timestamp are stored per user; exiting setup does not mark it complete.
The application implements no license key, activation server or trial countdown. Final legal terms require owner/legal approval before public redistribution.

Step 3 - Environment Readiness

Readiness checks are read-only and advisory. They use the same services as normal startup; they do not restart ADB, request root or mutate device settings. A warning does not prevent START ANTIPHON.

CHECK	WHAT IS VERIFIED	WHAT A WARNING MEANS
ADB	The configured ADB executable resolves and the local client responds to a version check.	ADB is unavailable or the check failed. The row actions offer Settings > Devices.
Workspace	The settings path is readable and the nearest existing user-data ancestor is writable.	A path is not writable. Review Settings > Paths; the application may still open.
Devices	The existing read-only discovery path reports connected and known devices.	No devices are connected, or discovery is unavailable. Connect devices later; startup is not blocked.
License / Preview	The compiled release identity reports the real channel, access label and version.	The preview/license state is unavailable for this build. No activation is fabricated.
Diagnostics	Existing log and diagnostic paths are available.	The paths are not writable. Review Settings > Paths and About diagnostics.

© 2026 Mateusz Gałązka (GNZ) · ANTIPHON

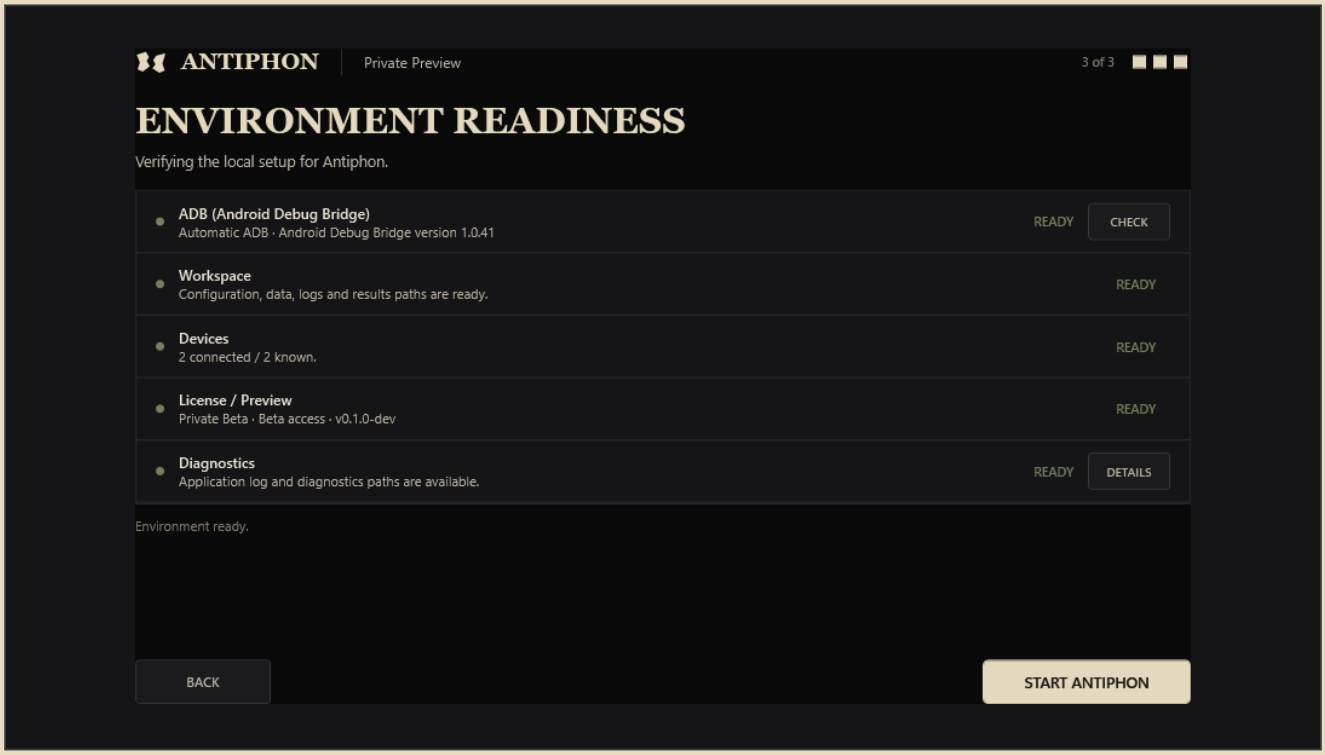


FIG. 03 Environment Readiness: factual local checks with routes to existing Settings.

Step 4 - READY and MAIN

START ANTIPHON records setup completion and opens MAIN through the short READY transition. A normal restart skips setup. Reopen it from Settings > General > OPEN FIRST-RUN SETUP; existing settings and accepted terms are retained.

DEVICES / ADB

04 TESTBED and ADB device setup

TESTBED is where physical devices become explicit test resources. Discovery, authorisation, assignment and validation are separate steps; an endpoint address is not a device identity.

Connect a device

1. Enable developer options and USB debugging, connect by USB, unlock and approve authorisation.
2. For Wireless ADB, use the supported Android pairing/connect workflow on an approved network. Keep pairing codes and endpoints private.

Discover and assign

Open TESTBED and select RESCAN DEVICES. Assign an available device to the logical slot required by your testcase while execution is idle. Assignments remain associated with the physical device during an active run.

© 2026 Mateusz Gałązka (GNZ) · ANTIPHON

OBSERVED STATE	MEANING	OPERATOR ACTION
READY / connected	The device is authorised and available for assignment.	Assign it to the required slot.
OFFLINE	The endpoint is known but not currently reachable.	Check cable, power, screen state and driver; rescan.
UNAUTHORIZED	The computer has not been authorised on the device.	Unlock the device and approve the debugging prompt; rescan.
No devices	The scan completed but reported no connected device.	Check USB, driver and authorisation. An empty scan is different from a failed scan.
ADB error	The ADB client or executable could not complete discovery.	Check Settings > Devices, the executable path and the application log.

Identify physical M1 and M2

Unlock both phones. Confirm model and live transport, then assign the intended phone to M1 and its partner to M2 while idle. The Public Preview scope is M1/M2; M3/M4 Device Lanes execution is not enabled. USB ↔ Wireless may change during maintenance only after same-device verification; assignment stays frozen during execution.

SIM slots, subscription and RAT compatibility

1. Check the testcase SIM requirement against the active subscription on each target phone.
2. A testcase requiring SIM 1 may be BLOCKED if the active subscription is on SIM 2. Edit the testcase to the intended slot or correct the phone configuration deliberately.
3. Do not assume Antiphon selects or switches the active SIM automatically. Unlock the phone, verify subscription/service and run validation again.
4. Use only RAT requirements supported by the target device. Preflight observes readiness; do not bypass identity, subscription or cleanup safeguards.

DEFINITIONS / QUEUES

05 TEST CASES and saved scripts

A testcase is a saved definition, not a running result. TEST CASES defines the resources, loops and type-specific parameters that the queue will execute.

© 2026 Mateusz Gałązka (GNZ) · ANTIPHON

Anatomy of a saved testcase

PART	WHAT IT CONTROLS
Definition / metadata	Identity, name and the testcase type shown in the library and queue.
Devices / pairs	Required logical slots, DUT/REF roles and MO/MT pairing where applicable.
Loops / duration	How many logical loops and how long the execution may run.
Type parameters	Handler, URLs, visits, dwell, test destination, route or other type-specific values.
Validation / save	VALIDATE checks the definition; SAVE persists it as YAML in the configured library.

Select an existing testcase or use the editor to create a definition. Preserve unsaved drafts when the editor asks whether to discard them. The validation message is the authority for the selected definition.

Compose the queue

1. Select ADD TO QUEUE for the chosen saved definition.
2. Review the queue and assignments in TESTBED. MAIN also exposes + ADD TESTCASE and OPEN QUEUE.
3. Select START QUEUE deliberately. Adding an item does not start it.
4. Read Preflight: a blocker or repairable condition prevents the affected testcase from starting; warnings can allow it.
5. Preflight does not automatically repair devices or change your environment.

YAML and sensitive parameters

The library stores YAML definitions. Protect URLs, phone numbers, accounts and private parameters in those files. Use only the application's documented validation and commands; do not add unsupported fields or assume that an accepted command proves a successful real-world result.

01 **Define** > 02 **Validate** > 03 **Save** > 04 **Queue** > 05 **Execute**

Five editable starter templates

INSTALLED STARTER	AVAILABILITY BOUNDARY
Browsing	Four ordered public URLs; visitsPerLoop 4 visits each URL once.
Streaming	Official Kapitan Bomba live route; availability and playback are not guaranteed.
Universal CALL	Replace the placeholder with an approved destination and correct subscriptions.
Data Connectivity	Classic execution only; not qualified for Device Lanes.
Network Toggle	Classic execution only; not qualified for Device Lanes.

The installer creates these five editable starters only when the corresponding files are missing. It never overwrites an existing user-edited YAML file during install or upgrade. Open a starter, duplicate or rename it through the

© 2026 Mateusz Gałązka (GNZ) · ANTIPHON

editor/library workflow, validate and save. For Browsing, the visit target controls how many ordered URLs are visited; setting it below four leaves later URLs unvisited.

> UNAVAILABLE PUBLIC PREVIEW CLAIMS
>
> Data Connectivity and Network Toggle are available as Classic testcases but are not qualified for Device Lanes. Network Recovery, Reboot Recovery, advanced KPI and unsupported custom operations are not Public Preview capabilities. CALL KPI has no verified production modem collector: do not promise RSRP, RSRQ, RSSI, SINR or PCI.

CLASSIC / SEQUENTIAL

06 Classic NIGHT RUN

Classic Night Run repeats an ordered queue under explicit iteration, deadline and failure policies. Choose CLASSIC SEQUENTIAL for this ordered workflow; Device Lanes is a separate M1/M2 workflow.

Prepare the run

Prepare the normal ordered queue in TESTBED, confirm device assignments and validate the selected testcases. Classic Night Run does not create a second queue; it consumes the existing queue.

Configure and start

1. Open NIGHT RUN after the queue is prepared.
2. Configure an iteration count, a date/time deadline with offset, or both. The first reached limit closes new admissions.
3. Choose the failure and blocked policies and any bounded retry policy supported by the build.
4. Select START NIGHT RUN and supervise the first iterations.

SETTING	WHAT IT CONTROLS	OPERATOR GUIDANCE
Iteration count	Number of complete traversals of the collection.	One iteration traverses the queue; it is not the same as a testcase loop or a retry attempt.
Deadline / offset	The date/time boundary that closes new admissions.	The first reached limit wins. Confirm the local time and offset.
Failure policy	Whether the run continues or stops after failures.	Choose deliberately; the summary reports the stop reason.
Blocked policy	Behaviour when admission or a required resource is blocked.	A blocking condition is not a successful run.
Retries	Bounded retry policy for supported operations.	Retries do not turn an unqualified operation into a passed one.

© 2026 Mateusz Gałązka (GNZ) · ANTIPHON

Summary and interruption

Review status, stop reason, passed/failed/blocked/cancelled counts, retries and unfinished work in the summary. Classic uses normal Preflight, Safe Pause, STOP and Results. Interrupted sessions are reported, never automatically resumed. Initial supervised hardware runs passed; broader overnight and device-matrix qualification remains incomplete. A wall-clock deadline closes admission, allows the existing 120-second drain, then requests STOP if work remains.

WORKFLOWS / EVIDENCE

07 CALL / Streaming / Browsing workflows

CALL, Streaming and Browsing exercise different parts of the device and produce different evidence. Keep the workflow and its proof boundary explicit.

CALL - explicit MO/MT pair

1. Assign two distinct physical phones to the MO and MT roles for the CALL testcase.
2. Configure a valid, approved test destination and the required subscriptions, service and radio conditions.
3. Confirm that the devices are authorised, online and assigned before starting the queue.
4. During a safe maintenance pause, the call is cleaned up and both endpoints must reach a safe/idle state before SAFE is reported.
5. After verified resume, the logical loop can retry according to the existing attempt policy.

- MO originates the call; MT receives it. Both roles are explicit.
- Four-device parallel CALL pause has automated coverage only; it is not hardware acceptance.
- Device Lanes supports shared CALL joining for verified M1/M2. Broader device, radio and network qualification remains incomplete.

Streaming

1. Choose a supported installed playback handler and an approved playable URL or source.
2. Set the intended duration and confirm the handler and connectivity on the device.
3. Add the saved testcase to the queue and start it under supervision.
4. Review playback evidence and any available metrics. Missing samples are not fabricated zeros.

Browsing

1. Choose a supported installed browser and approved URLs.
2. Set visits and dwell time for the bounded browsing loop.
3. Confirm the actual handler and connectivity on the device.

© 2026 Mateusz Gałązka (GNZ) · ANTIPHON

4 During a maintenance pause, complete the current bounded visit and dwell, then reach the HOME cleanup checkpoint before SAFE.

5 After verified resume, continue with the next visit. Do not expect the completed visit to be replayed.

Browsing records command and navigation evidence. An accepted navigation is not proof that a page loaded successfully. Network metrics may be unavailable depending on the configured providers and device data.

CONTROL / SAFE BOUNDARIES

08 Safe Pause / Resume / STOP

PAUSE is a request, not an immediate permission to disconnect. The safe boundary must be reached before device maintenance; STOP is permanent cancellation and cleanup, not a resume point.

PAUSE is a request

WAIT FOR THE SAFE CHECKPOINT

Select PAUSE and wait for PAUSED - SAFE FOR DEVICE INTERVENTION. Requests alone do not permit maintenance. Assignments stay frozen. Reconnect the same physical phone; a verified USB/Wireless endpoint change is allowed. If cleanup is unverified, SAFE is not reported. The run may stop or quarantine the resource; do not force reuse.

Safe pause sequence

1 Request PAUSE. Antiphon stops scheduling new work and closes admission at the safe boundary.

2 Wait for the safe checkpoint. Browsing completes the current bounded visit and dwell before HOME cleanup; Streaming and CALL follow their own cleanup/attempt policies.

3 Repair the same physical device connection. A USB/Wireless transport change may be verified as the same device.

4 Optionally rescan; do not silently substitute a replacement phone.

5 Select RESUME & VERIFY. Identity and endpoint verification must pass before work is released.

6 If verification fails, stay paused, correct the same-device connection and try again. STOP remains available.

Streaming and CALL clean up an interrupted attempt before SAFE. After successful verification, a fresh attempt retries the same logical loop; partial evidence remains separate from the retry. Browsing instead continues after the completed visit.

State model

01 **Running** > 02 **Pause requested** > 03 **SAFE** > 04 **Resume & verify** > 05 **Running**

© 2026 Mateusz Gałązka (GNZ) · ANTIPHON

STOP IS DOMINANT

STOP from any active state permanently cancels the run and joins cleanup/restoration.
A stopped execution is not resumed. A cancelled outcome remains cancelled even if restoration needs attention.

EVIDENCE / LOGS

09 Results, evidence and logs

RESULTS preserves what the application actually observed. Evidence is hierarchical: an execution contains testcases, logical loops and attempts, and the available evidence attached to them.

Results structure

01 **Execution** > 02 **Testcase** > 03 **Logical loop** > 04 **Attempt** > 05 **Evidence**

Open RESULTS and select an execution, testcase, logical loop and attempt to inspect the available timeline, metrics and evidence. A maintenance interruption and a successful retry are separate attempts of one logical loop, not two logical loop results.

- Historical device snapshots are historical records, not live status.
- The date filter and the active Developer/PrivatePreview profile affect which executions are visible.
- Missing metric samples are unavailable data, not zero measurements.

Export and share

Export HTML + JSON writes a human-readable report and versioned JSON from the selected persisted execution. It is not an anonymisation tool. Review the export for phone numbers, URLs, accounts, device identifiers and local paths before sharing.

Diagnostics

1. Open Settings > About to inspect the real release channel, build identity, access label and paths.
2. Use the existing diagnostics actions to copy diagnostics, save a copy or open the logs.
3. Use the Host support-bundle command where provided; it creates a local bundle for review.
4. Review every bundle before sharing it. No automatic upload is performed.

EVIDENCE	WHERE	LIMIT
Timeline / outcome	RESULTS	Reflects the persisted execution, not a live device state.
Metrics	RESULTS / metrics views	Only collected values are shown; unavailable samples are not zeros.
Device snapshots	RESULTS	Historical records; they do not prove the current live status.
Browsing navigation	RESULTS	Accepted navigation evidence; page load is not proven.

© 2026 Mateusz Gałązka (GNZ) · ANTIPHON

EVIDENCE	WHERE	LIMIT
Shared CALL metrics	CALL evidence	Shared CALL metrics may be unavailable by design.
Logs / diagnostics	Settings > About	Local files; review before sharing.

M1 / M2 / INDEPENDENT QUEUES

10 Device Lanes Night Run

Device Lanes runs independent M1/M2 queues with shared CALL rendezvous. It is distinct from Classic Sequential. The owner reports a successful physical M1/M2 Night Run with Browsing, Streaming and CALL; this is scenario-specific evidence, not a guarantee for every device, radio mode or network.

Configure the two queues

1. Assign the two physical devices in TESTBED, unlock their screens and verify subscriptions. Open NIGHT RUN and choose DEVICE LANES rather than CLASSIC SEQUENTIAL.
2. Drag a saved Browsing or Streaming definition from the SCRIPTS palette onto the desired M1 or M2 queue. The same saved testcase can be used in both lanes as independent occurrences.
3. Drop above or below an entry to choose its insertion position. Reorder within a lane or move an independent entry to the other lane. Check the resulting order.
4. Use ADD TESTCASE / ADD TO QUEUE and UP/DOWN as fallbacks. Saved YAML definitions remain distinct from queue occurrences. Save the plan and check its restored order.

Configure a shared CALL

1. Drag a saved generic CALL definition onto one lane. Choose the other assigned phone as partner and the owner role MO or MT; the partner receives the complementary role.
2. Confirm with ADD CALL. One shared CALL is inserted; its partner JOIN CALL indicator is not a duplicate independent call. CANCEL, Escape or closing the dialog must leave queues unchanged.
3. When the owner reaches the CALL, the partner finishes its current testcase and joins at the next safe boundary. Do not expect a mid-testcase interruption to join.
4. After safe CALL cleanup, both independent queues continue. A later failure belongs to that later testcase; a successful CALL does not make the whole session pass.

© 2026 Mateusz Gałązka (GNZ) · ANTIPHON

RUN SETTINGS

MODE	OPERATOR MEANING
RUN ONCE	Each device traverses its own queue once.
REPEAT N	Each device repeats its own queue N times; faster devices can have a different current cycle.
RUN FOR DURATION	Run to the selected active-time budget. Global pause time is excluded; wall time can be longer.

Per-device cycles are not testcase loops or physical attempts. A shared CALL is one operation involving two phones. At the active-duration deadline, new admission closes, remaining work is safely cancelled and cleanup is joined; expiry is not a PASS for unfinished work. Device Lanes active-duration expiry differs from Classic wall-clock deadline drain. Review the recorded stop reason and completed/unfinished work.

Validate before START

Validate the plan and read readiness messages. Confirm correct physical identities, assigned endpoints, unlocked screens, active subscriptions and compatible RAT requirements. START must revalidate resources. Do not bypass a qualification gate, preflight blocker or quarantined device. Data Connectivity and Network Toggle are available for Classic execution but are not qualified for Device Lanes. Network Recovery, Reboot Recovery and unsupported custom operations are outside Public Preview.

EXECUTION / RUNTIME EVIDENCE

11 Per-device execution and timeline

Planned testcases are not execution history. Each device panel separates the configured queue from current activity and actual runtime events.

PANEL	WHAT TO READ
PLANNED QUEUE	Ordered occurrences, target device and shared partner; QUEUED means not yet executed.
CURRENT EXECUTION	Before START: NOT STARTED, no active testcase and no elapsed execution time. During execution: actual testcase, phase/action, cycle and elapsed time.
LIVE TIMELINE	Actual persisted/runtime events only. Before START: No execution events yet. STOP/failure retains events and device error attribution.

© 2026 Mateusz Gałązka (GNZ) · ANTIPHON

CALL and terminal states

STATE/EVIDENCE	INTERPRETATION
Waiting for partner	The owner has reached a shared CALL; its partner is completing current work.
Shared CALL / MO / MT	The participating phones have explicit directed roles.
BLOCKED	A required admission/preflight condition prevented the work.
FAILED	The testcase or infrastructure reported failure; inspect its attributed evidence.
CANCELLED	Work was cancelled; inspect User STOP versus DeadlineReached.
QUARANTINED	Cleanup/restoration safety was not verified; the resource must not be silently reused.
Cleanup Verified / Unverified	Separate safety evidence, not a synonym for testcase PASS/FAIL. Unverified does not mean the phone is safe.

Do not treat the proposed order, a navigation request or a JOIN indicator as a completed action. Keep the recorded run/session ID, operation/ExecutionId, device timeline and cleanup evidence when investigating an incident. Current screenshots of the wide M1/M2 lanes, CALL dialog and runtime timeline still require sanitized capture from the accepted WPF build; no mockup is used here. Illustrations and static captures are labelled and are not live execution evidence.

RECOVERY / LIMITS

12 Troubleshooting and limitations

Stop and inspect the attributed evidence rather than bypassing a readiness or cleanup safeguard.

SCENARIO	ACTION AND EVIDENCE
Screen locked before Streaming	Unlock the phone and verify the handler. Inspect preflight/launch diagnostics; do not classify an unverified launch as successful playback.
Required SIM has no active subscription	Match the testcase SIM slot to the active subscription. SIM 1 can be blocked while only SIM 2 is active. No automatic SIM selection is promised.
Preflight BLOCKED	Read the exact resource/check, correct it deliberately and revalidate. No automatic repair or bypass.
Disconnected device	Pause only when safe or STOP. Resume requires the same physical identity; do not substitute another phone.
Unverified cleanup / quarantine	Treat the device as unsafe for automatic reuse. Inspect cleanup/restoration, preserve the journal and request operator review.
DeadlineReached versus User STOP	Expiry and operator cancellation have different stop reasons; both may leave cancelled unfinished work. Neither turns unfinished work into PASS.
CALL passes, later work fails	Select the later testcase/ExecutionId and its lane events. Retain the successful CALL record; do not attribute the later failure to it without evidence.

© 2026 Mateusz Gałązka (GNZ) · ANTIPHON

KNOWN LIMITATIONS IN PUBLIC PREVIEW 0.1.0

Preview Terms remain subject to owner/legal approval before public redistribution. The installer is unsigned, so SmartScreen may warn. Clean-machine, DPI, Defender and broad hardware-matrix acceptance are incomplete. Device Lanes is limited to verified M1/M2. Data Connectivity and Network Toggle are not Device Lanes-qualified; Network Recovery, Reboot Recovery and unsupported custom operations are outside Public Preview. CALL KPI values remain unavailable. No AI Analyst or commercial licensing system is included. Linux is in development.

REFERENCE / QUICK CARD

13 Quick reference

A compact operator card for the normal Public Preview path. Use the detailed sections for boundaries and evidence rules.

Workspace map

WORKSPACE	PURPOSE
MAIN	Operations hub: readiness, queue, activity, recent results and shortcuts.
TESTBED	Discovery, device assignment, queue review and execution controls.
TEST CASES	Saved definitions, editor, validation and type-specific parameters.
RESULTS	Persisted executions, loops, attempts, evidence and exports.
DEBUG	Developer diagnostic surface; not a PrivatePreview workflow.
NIGHT RUN	Classic Sequential or qualified M1/M2 Device Lanes configuration, timeline and summary.

Common tasks

1. Fresh launch: complete First Run, then open MAIN.
2. Connect a device: enable USB debugging, authorise, open TESTBED, RESCAN DEVICES and assign the required slot.
3. Run: TEST CASES > validate/save > ADD TO QUEUE > review TESTBED > START QUEUE.
4. Pause: PAUSE > wait for SAFE > service the same device > RESUME & VERIFY.
5. Stop permanently cancels and joins cleanup; it does not resume.
6. Review RESULTS and exports after checking for sensitive data.

About & Copyright

Antiphon is an independent, one-person software project created and maintained by Mateusz Gałązka (GNZ).

© 2026 Mateusz Gałązka. All rights reserved.

Antiphon is distributed as proprietary compiled software. Source code is not provided with Public Preview. Usage and redistribution are subject to the accompanying license terms.