STEERING BUTTON BOX

ESP Room 32 | Simple Wiring Guide

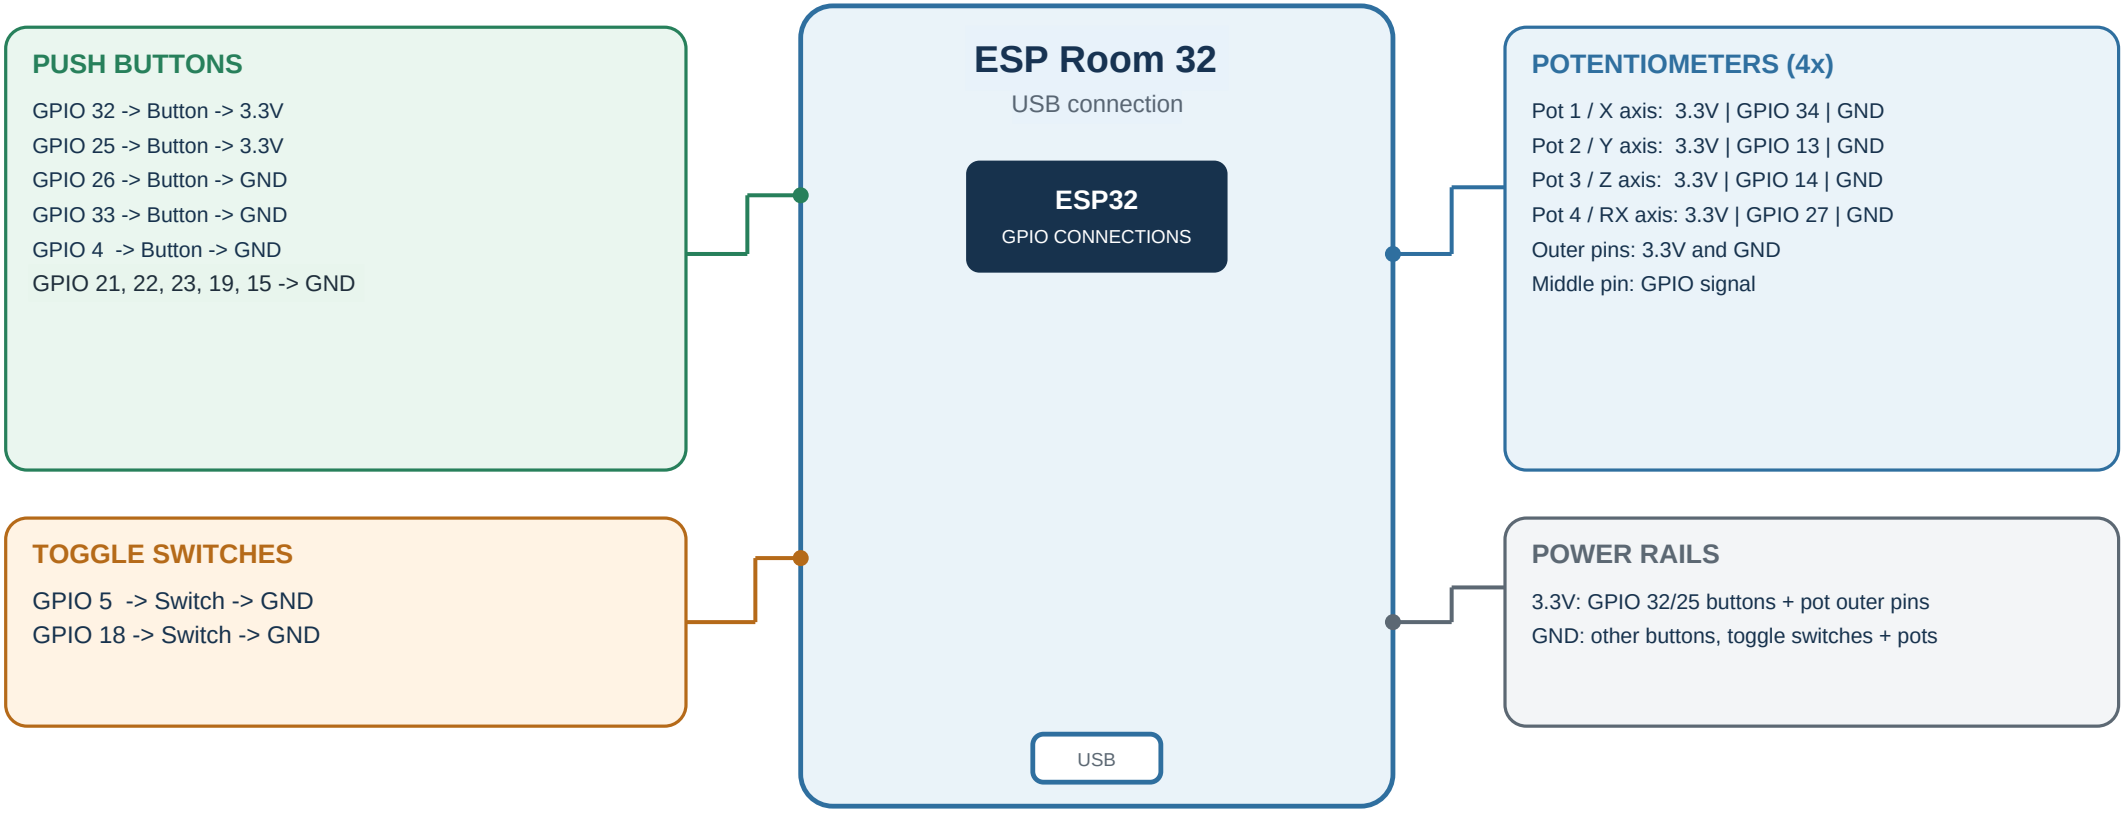

Use 3.3V logic only. Never connect 5V directly to ESP32 GPIO pins.

Contact: +92 345 9714998