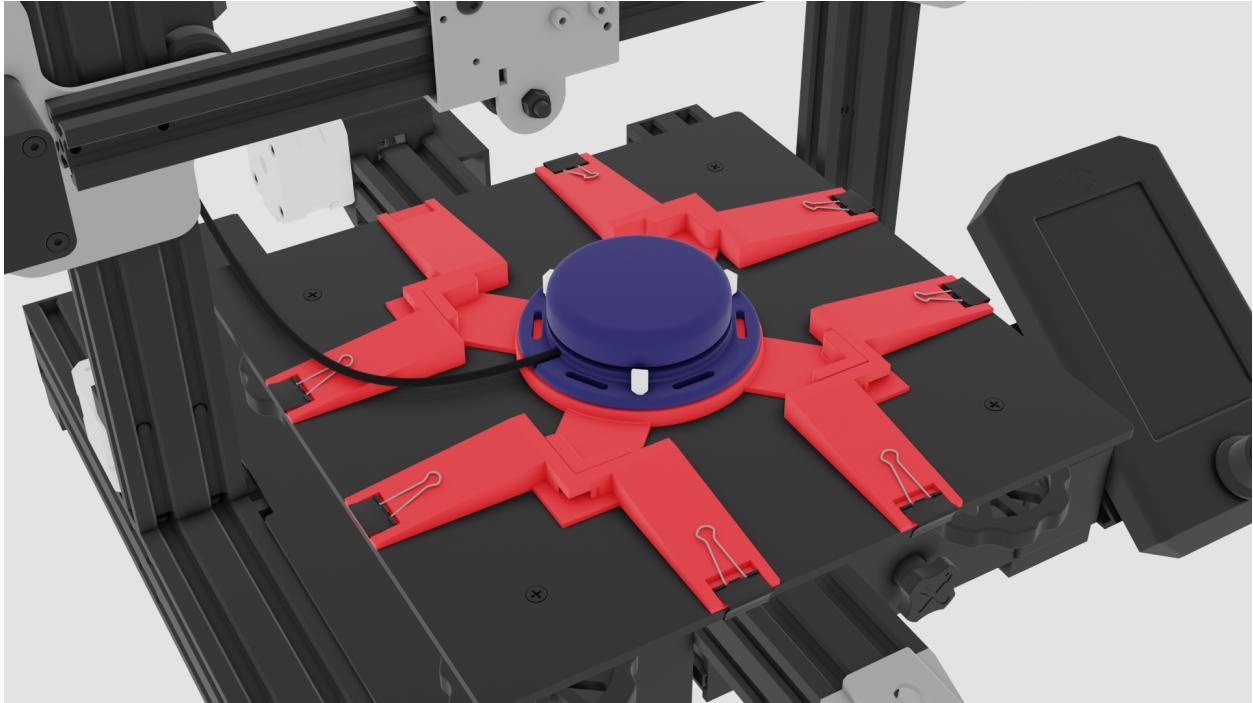


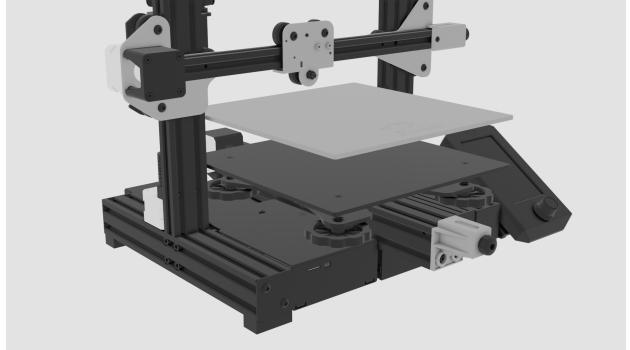
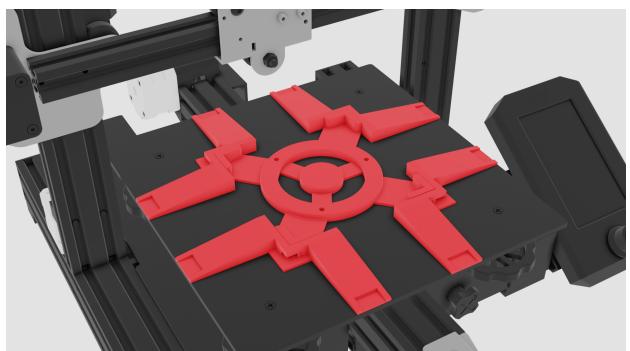
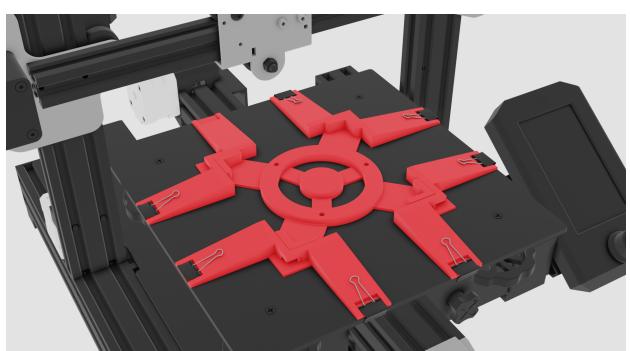
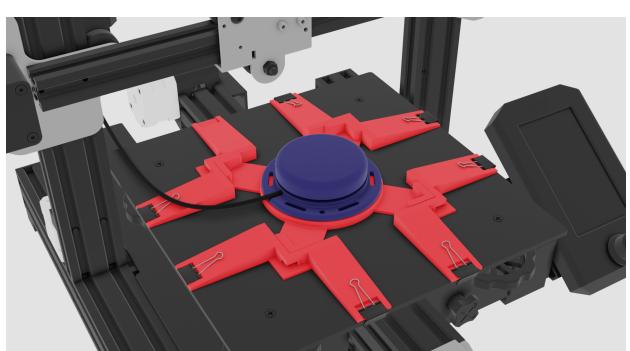
Interact Switch Locking Jig User Guide



Materials

- 1 - Assembled Interact Switch Locking Jig + Snaps
- 1 - Assembled Interact Switch
- 1 - 3.5mm jack cable
- 8 - 16mm / $\frac{1}{2}$ Inch Binder clips (<https://a.co/d/8VkkMiS> or local stationery store)

Instructions

1.	Remove the plate from the printbed	
2.	<p>Place the locking jig onto the printbed</p> <p>Take note of the orientation of the jig</p> <p>Ensure that the edges of the jig adapter is parallel on each side of the printbed</p>	
3.	Hold the jig on the printbed using binder clips	
4.	<p>Place Interact switch on top of the jig</p> <p>Ensure that the hole for 3.5mm cable is facing on the left</p>	

5.	Ensure that circular holes of the switch are aligned to the holes of the jig	
6.	Insert the snaps to hold the switch on to the jig	