NI SCXI™-1366 Installation Guide

Terminal Block for the NI SCXI-1166

このドキュメントには、日本語ページも含まれています。

This guide describes how to install and connect signals to the National Instruments SCXI-1366 terminal block. Refer to the *NI Switches Getting Started Guide* to determine when to install the terminal block.

Introduction

The SCXI-1366 terminal block installs in front of the SCXI-1166 switch module and has screw terminals that provide access to each of the 32 relays. Connections for the trigger output and trigger input signals also are available.




Caution This terminal block is rated for Measurement Category I and intended to carry signal voltages no greater than 150 V. This module can withstand up to 800 V impulse voltage. Do not use this module for connection to signals or for measurements within Categories II, III, or IV. Do not connect to MAINS supply circuits (e.g., wall outlets) of 115 or 230 VAC. Refer to the *NI Switches Getting Started Guide* for more information on measurement categories.

When hazardous voltages (>42.4 $V_{pk}/60$ VDC) are present on any relay terminal, safety low-voltage (\leq 42.4 $V_{pk}/60$ VDC) cannot be connected to any other relay terminal.

Conventions

The following conventions are used in this guide:







This icon denotes a caution, which advises you of precautions to take to avoid injury, data loss, or a system crash.



Italic text denotes variables, emphasis, a cross reference, or an introduction to a key concept. This font also denotes text that is a placeholder for a word or value that you must supply.

1. Unpack the Terminal Block

The terminal block is shipped in an antistatic package to prevent electrostatic damage (ESD) that can damage several components in the terminal block. To avoid such damage when you handle the terminal block, take the following precautions:



Caution *Never* touch the exposed pins of connectors.

- Ground yourself using a grounding strap or by holding a grounded object.
- Touch the antistatic package to a metal part of the chassis before you remove the terminal block from the package.

Remove the terminal block from the package and inspect the terminal block for loose components or any sign of damage. Notify NI if the terminal block appears damaged in any way. Do *not* install a damaged terminal block on a switch terminal block.

Store the terminal block in the antistatic package when not in use.


2. Verify the Components

Make sure you have the following:			
	SCXI-1366 terminal block		
	SCXI chassis		
	SCXI-1166 switch module		
	Number 2 Phillips-head screwdriver		
	1/8 inch flathead screwdriver		
	Wire cutter		
	Wire insulation stripper		

3. Connect Signals

To connect signals to the terminal block, complete the following steps:

- 1. Prepare the signal wire by stripping the insulation no more than 3/16 of an inch.
- 2. Gently pry the terminal block top cover off with a flathead screwdriver.
- 3. Loosen the two $10-32 \times 3/4$ inch screws on the strain-relief bar, leaving plenty of space for the signal cables.
- 4. Pull the signal cables at least one foot through the strain-relief opening shown in Figure 1.
- 5. Connect the safety earth ground to the safety ground lug.
- 6. Connect the wires to the terminals by inserting the stripped end of the wire into the terminal. Secure the connection by tightening the screw for each terminal. When connecting the signals, refer to the connection diagram in Figure 2.
- 7. Tighten the two $10-32 \times 3/4$ inch screws on the strain-relief bar, leaving enough space for the signal wires.
- 8. Snap the top cover onto the base.

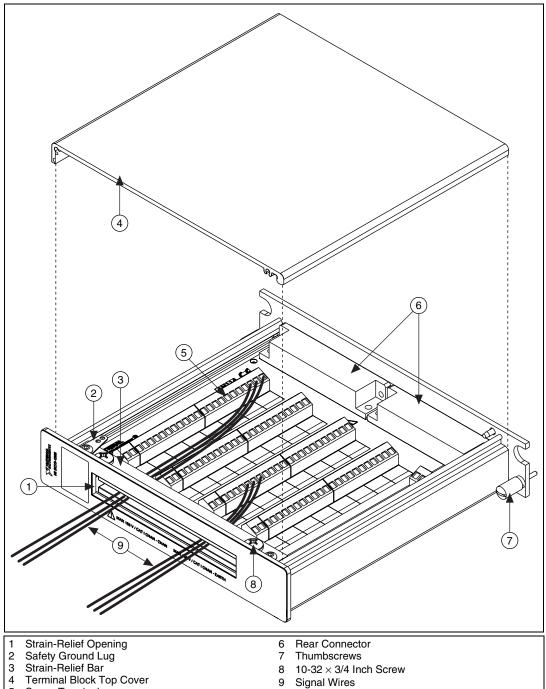

Signal Wires

Figure 1. SCXI-1366 Terminal Block

Screw Terminals

^{10-32 × 3/4} Inch Screw


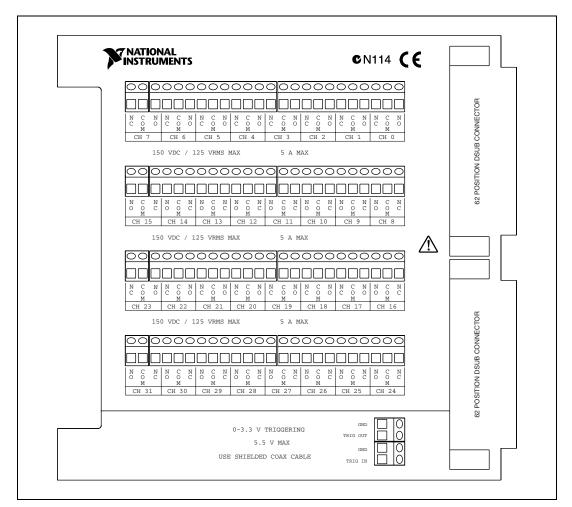


Figure 2. SCXI-1366 Terminal Block Signal Connections

4. Install the Terminal Block

To connect the SCXI-1366 terminal block to the SCXI-1166 front panel, complete the following steps:

- 1. Connect the terminal block front connectors to its mating connectors on the terminal block.
- 2. Tighten the top and bottom thumbscrews on the back of the terminal block rear panel to hold it securely in place.

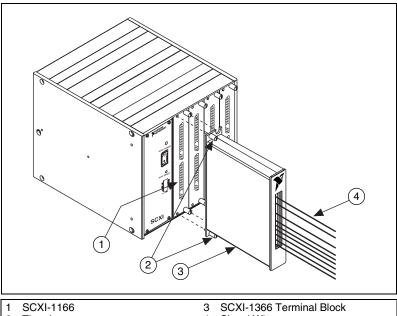

2 Thumbscrews

4 Signal Wires

Figure 3. Installing the SCXI-1366 Terminal Block

Compliance and Certifications

Safety

This product is designed to meet the requirements of the following standards of safety for electrical equipment for measurement, control, and laboratory use:

- IEC 61010-1, EN 61010-1
- UL 3111-1, UL 61010B-1
- CAN/CSA C22.2 No. 1010.1



Note For UL and other safety certifications refer to the product label or visit ni.com.

Electromagnetic Compatibility

Emissions	EN 55011 Class A at 10 m FCC Part 15A above 1 GHz
Immunity	EN 61326:1997 + A2:2001, Table 1
EMC/EMI	. CE, C-Tick, and FCC Part 15 (Class A) Compliant



Note For EMC compliance, you *must* operate this device with shielded cabling.

CE Compliance

This product meets the essential requirements of applicable European Directives, as amended for CE marking, as follows:

Low-Voltage Directive (safety) 73/23/EEC



Note Refer to the Declaration of Conformity (DoC) for this product for any additional regulatory compliance information. To obtain the DoC for this product, click **Declarations** of Conformity Information at ni.com/certification.



NI SCXI™-1366 取り付けガイド

NI SCXI-1166 用端子台

このガイドでは、ナショナルインスツルメンツ製 SCXI-1366 端子台の取り付け方、また信号の接続方法について説明します。端子台を取り付ける順番については、『NI スイッチスタートアップガイド』を参照してください。

はじめに

SCXI-1366 端子台は、SCXI-1166 スイッチモジュールの前面に取り付け、32 の各リレーに接続可能なネジ留め式端子を装備しています。トリガ出力信号およびトリガ入力信号にも接続できます。



注意

この端子台は、Measurement Category I に定格されているため、使用できる信号電圧は 150 V 以下です。また、最大 800 V インパルス電圧に対して耐性があります。Category II、III、または IV の信号を、このモジュールに接続したり測定しないでください。また、115 または 230 VAC のコンセントを使用する電源回路(例: 壁コンセント)に接続しないでください。測定カテゴリについての詳細は、『NI スイッチスタートアップガイド』を参照してください。

危険電圧(>42.4 $V_{pk}/60$ VDC)がリレー端子に接続されている場合、安全低電圧(\leq 42.4 $V_{pk}/60$ VDC)をその他のリレー端子に接続することはできません。

表記規則

このドキュメントでは、以下の表記規則を使用します。



矢印(→)は、ネスト化されたメニュー項目やダイアログボックスのオプションをたどっていくと目的の操作項目を選択できることを示します。たとえば、ファイル→ページ設定→オプションとなっている場合は、ファイルメニューをプルダウンして、ページ設定項目を選択し、最後のダイアログボックスからオプションを選択します。





このアイコンは、注意すべき重要な情報があることを示します。

このアイコンは、負傷、データの損失、システムの破損を防止するための 注意事項を示します。



1. 端子台を箱から取り出す

端子台は、部品に破損をもたらす静電気放電 (ESD) を防止するために静電気防止用袋に包装されて出荷されます。取り扱い中に端子台を破損しないために、以下の予防措置を行ってください。



注意 露出しているコネクタピンには絶対に触れないでください。

- 接地ストラップを使用したり、接地された物体に触れて、身体を接地する.
- 静電防止用袋をシャーシの金属部分に接触させてから、端子台を袋から取り出す。

端子台を箱から取り出し、部品がゆるんでいないかどうか、また、破損 箇所がないかどうか調べます。端子台が破損している場合は、ナショナル インスツルメンツまでご連絡ください。破損している端子台をスイッチ モジュールに取り付けないでください。

端子台は、使用しないときは静電気防止用袋に入れて保管してください。

2. 部品を確認する


下記	己の部品	がある	るこ	とを	確認	しま	す。
$\overline{}$,.			

- SCXI-1366 端子台
- □ SCXIシャーシ
- □ SCXI-1166 スイッチモジュール
- □ No.2 プラスドライバー
- □ 1/8 in. マイナスドライバー
- □ ワイヤカッター
- □ ワイヤストリッパー

3. 信号を接続する

信号を端子台に接続するには、次の手順に従います。

- 1. 信号線の絶縁被覆を取り除きます(4.8 mm 以内)。
- 2. マイナスドライバを使用して、端子台の上部カバーを外します。
- 3. ストレインリリーフバーにある 2 つの 10-32 × 3/4 in. ネジを緩めて、 信号ケーブルを通すスペースを確保します。
- 4. 図 1 に示されているように、信号ケーブルを少なくとも 30 cm 以上 ストレインリリーフバー間の隙間から引き出します。
- 5. アースグランドを接地用圧着端子に接続します。
- 6. ワイヤの裸線を端子に差し込んで接続します。各端子に付いている ネジを締めてワイヤを固定します。信号の接続については、図 2 に 示されている接続ダイアグラムを参照してください。
- 7. 信号ケーブルを通せるだけのスペースを確保しながら、ストレイン リリーフバーにある 2 つの 10-32 × 3/4 in. ネジを締めます。
- 8. 上部カバーをベースにはめ込みます。

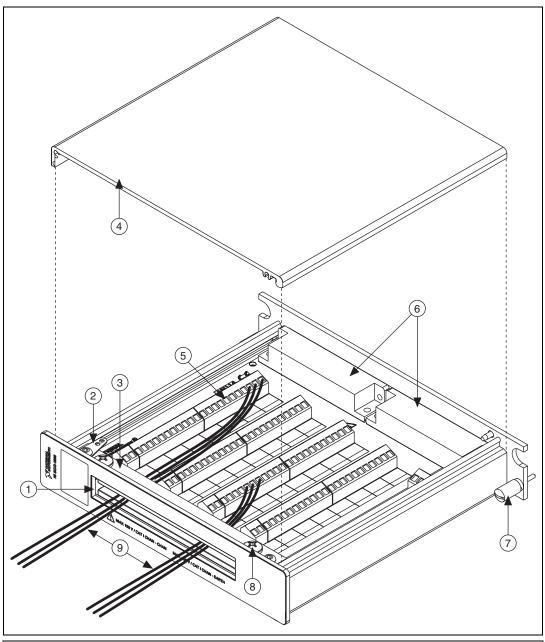

- ストレインリリーフバー間の隙間
- 2 接地用圧着端子
- 3 ストレインリリーフバー 4 端子台の上部カバー
- 5 ネジ留め式端子

- 後部コネクタ
- つまみネジ
- 8 10-32×3/4 in. ネジ
 - 信号線

図1 SCXI-1366 端子台

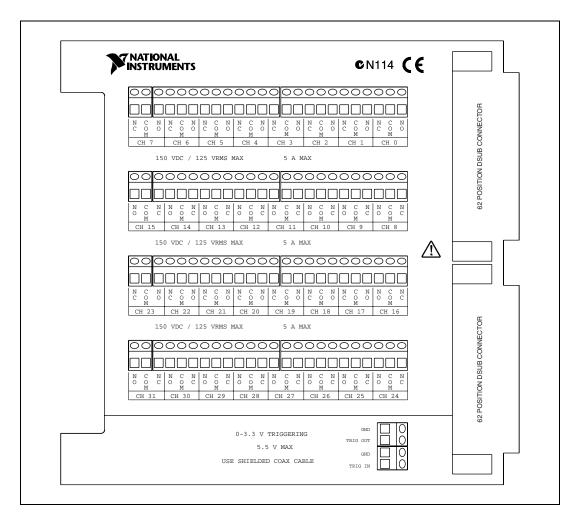


図 2 SCXI-1366 端子台の信号接続

4. 端子台を取り付ける

SCXI-1366 端子台を SCXI-1166 のフロントパネルに接続するには、次の手順に従います。

- 1. 端子台のフロントコネクタを、端子台上のメイトコネクタに接続します。
- 2. 端子台の後部パネル背面にある上下のつまみネジを締めて、端子台をしっかりと固定します。

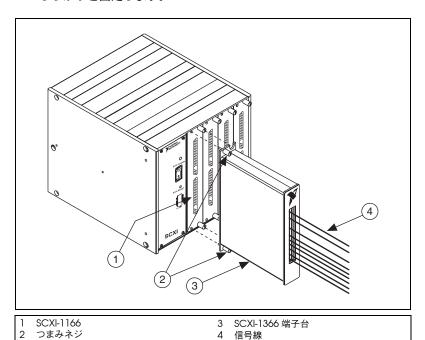


図3 SCXI-1366 端子台を取り付ける

安全性

この製品は、計測、制御、実験に使用される電気装置に関する以下の安全 規格の必要条件を満たすように設計されています。

- IEC 61010-1, EN 61010-1
- UL 3111-1、UL 61010B-1
- CAN/CSA C22.2 No. 1010.1



メモ UL および他の安全保証については、製品のラベルまたは ni.com/jp を参照 してください。

雷磁両立性

エミッション	(不要輻射)	.EN 55011 Class A(10 m)、 FCC Part 15A(1 GHz 以上)
イミュニティ	(電磁環境耐性)	EN 61326:1997 + A2:2001, Table 1
EMC/EMI		. CE、C-Tick、および FCC Part 15(Class A)準拠



メモ

EMC に適合させるには、このデバイスと一緒に必ずシールドケーブルを使用 してください。

CE 適合

この製品は、以下のように、CEマーク改正に基づいて、該当するEC 理事会指令による基本的要件に適合しています。

低電圧指令(安全性).......73/23/EEC

電磁両立性

規格 (EMC) 89/336/EEC



この製品のこのほかの適合規格については、この製品の適合宣言(DoC)を参 照してください。この製品の適合宣言は、ni.com/certification(英語) で、EMC Declarations (英語) をクリックすると入手できます。