INSTALLATION INSTRUCTIONS

NI SCXI™-1377

Terminal Block for the NI SCXI-1130

このドキュメントには、日本語ページも含まれています。

This guide describes how to install and connect signals to the National Instruments SCXI-1377 terminal block to configure the SCXI-1130 as a:

- 256x1, 1-wire multiplexer
- 128x1, 2-wire multiplexer
- 64x1, 4-wire multiplexer
- Multiplexer or matrix configuration using the Independent topology

Refer to the NI Switches Getting Started Guide to determine when to install the terminal block.

Introduction

The SCXI-1377 terminal block installs in front of the SCXI-1130 switch module. The SCXI-1377 uses spring terminals and screw terminals to connect signals to the switch. Screw terminals for the trigger input and trigger output signals are also available.

Conventions

The following conventions are used in this guide:

>>

The » symbol leads you through nested menu items and dialog box options to a final action. The sequence **File**»**Page Setup**»**Options** directs you to pull down the **File** menu, select the **Page Setup** item, and select **Options** from the last dialog box.



This icon denotes a tip, which alerts you to advisory information.







This icon denotes a note, which alerts you to important information.

This icon denotes a caution, which advises you of precautions to take to avoid injury, data loss, or a system crash.

bold

Bold text denotes items that you must select or click in the software, such as menu items and dialog box options. Bold text also denotes parameter names and information on hardware labels.

italic

Italic text denotes variables, emphasis, a cross reference, or an introduction to a key concept. This font also denotes text that is a placeholder for a word or value that you must supply.

monospace

Text in this font denotes text or characters that you should enter from the keyboard, sections of code, programming examples, and syntax examples. This font is also used for the proper names of disk drives, paths, directories, programs, subprograms, subroutines, device names, functions, operations, variables, filenames and extensions, and code excerpts.

1. Unpack the Terminal Block

To avoid damage when you handle the terminal block, take the following precautions:



Caution Never touch the exposed pins of connectors.

- Ground yourself using a grounding strap or by touching a grounded object.
- Touch the antistatic package to a metal part of the chassis before you remove the terminal block from the package.

Remove the terminal block from the package and inspect the terminal block for loose components or any sign of damage. Notify NI if the terminal block appears damaged in any way. Do *not* install a damaged terminal block on a switch module.

Store the terminal block in the antistatic package when not in use.

2. Verify the Components

Ma	ke sure you have the following:
	NI SCXI-1377 terminal block
	SCXI chassis

Ц	NI SCXI-1130 switch module
	1/8 inch flathead screwdriver
	Phillips screwdriver
	Wire cutter
	Wire insulation stripper



Tip NI recommends using 28 AWG wire (ribbon or discrete) for use with the NI SCXI-1377 terminal block.

3. Connect Signals


To connect signals to the terminal block, refer to Figures 1 and 2 while completing the following steps:

- 1. Prepare the signal wire by stripping the insulation no more than 7 mm.
- 2. Remove the top cover screw.
- 3. Unsnap and remove the top cover.
- 4. Loosen the two strain-relief screws on the strain-relief assembly and remove the top strain-relief bar.
- 5. Run the signal wires through the strain-relief opening.
- 6. Open each terminal by pressing the spring pad with a flathead screwdriver. Insert the stripped end of the wire fully into the terminal. Release the spring pad to secure the wire. No bare wire should extend past the spring terminal. Exposed wire increases the risk of a short-circuit causing a failure.



Note When connecting signals to the NI SCXI-1377, refer to Tables 1, 2, and 3 to determine where to connect signals for the chosen topology.

- 7. Replace the strain-relief bar and tighten the two screws on the strain-relief assembly to secure the cables.
- 8. Reinstall the top cover.
- 9. Replace the top cover screw.

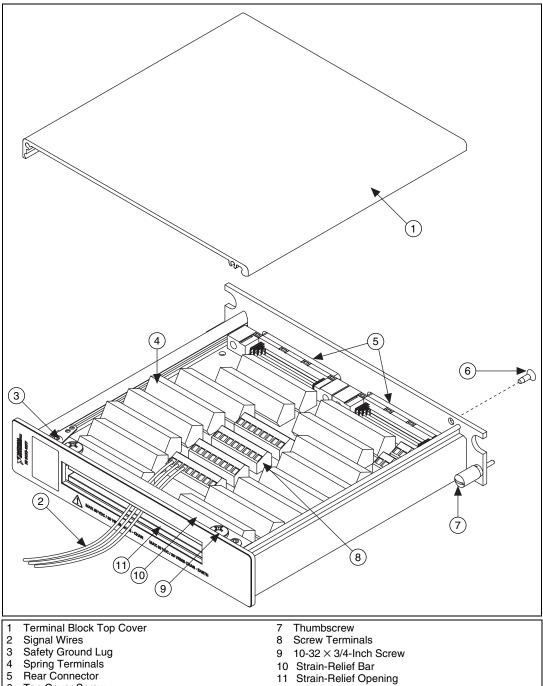

- 3

- Top Cover Screw

- 9 10-32 × 3/4-Inch Screw
- 10 Strain-Relief Bar
- 11 Strain-Relief Opening

Figure 1. SCXI-1377 Terminal Block

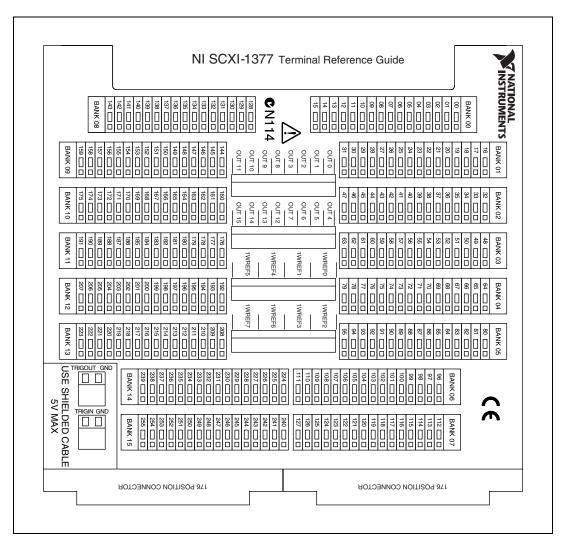


Figure 2. SCXI-1377 Terminal Block Signal Connections

Table 1. 256x1, 1-Wire Multiplexer Topology Mapping

Software	Hardware	
com0	OUT 0	
ch0	CH 00	
ch1	CH 01	
ch2	CH 02	
ch3	CH 03	
ch4	CH 04	
ch5	CH 05	
ch6	CH 06	
ch7	CH 07	
ch8	CH 08	
ch9	CH 09	
ch10	CH 10	
ch11	CH 11	
ch12	CH 12	
ch13	CH 13	
ch14	CH 14	
ch15	CH 15	
ch16	CH 16	
ch17	CH 17	
ch18	CH 18	
ch19	CH 19	
ch20	CH 20	
ch21	CH 21	
ch22	CH 22	
ch23	CH 23	
ch24	CH 24	
ch25	CH 25	
ch26	CH 26	
ch27	CH 27	
ch28	CH 28	
ch29	CH 29	

Table 1. 25	Table 1. 256x1, 1-Wire Multip				
Software	Hardware				
ch64	CH 64				
ch65	CH 65				
ch66	CH 66				
ch67	CH 67				
ch68	CH 68				
ch69	CH 69				
ch70	CH 70				
ch71	CH 71				
ch72	CH 72				
ch73	CH 73				
ch74	CH 74				
ch75	CH 75				
ch76	CH 76				
ch77	CH 77				
ch78	CH 78				
ch79	CH 79				
ch80	CH 80				
ch81	CH 81				
ch82	CH 82				
ch83	CH 83				
ch84	CH 84				
ch85	CH 85				
ch86	CH 86				
ch87	CH 87				
ch88	CH 88				
ch89	CH 89				
ch90	CH 90				
ch91	CH 91				
ch92	CH 92				
ch93	CH 93				
ch94	CH 94				

Software	Hardware
ch128	CH 128
ch129	CH 129
ch130	CH 130
ch131	CH 131
ch132	CH 132
ch133	CH 133
ch134	CH 134
ch135	CH 135
ch136	CH 136
ch137	CH 137
ch138	CH 138
ch139	CH 139
ch140	CH 140
ch141	CH 141
ch142	CH 142
ch143	CH 143
ch144	CH 144
ch145	CH 145
ch146	CH 146
ch147	CH 147
ch148	CH 148
ch149	CH 149
ch150	CH 150
ch151	CH 151
ch152	CH 152
ch153	CH 153
ch154	CH 154
ch155	CH 155
ch156	CH 156
ch157	CH 157
ch158	CH 158

Software	Hardware	
ch192	CH 192	
ch193	CH 193	
ch194	CH 194	
ch195	CH 195	
ch196	CH 196	
ch197	CH 197	
ch198	CH 198	
ch199	CH 199	
ch200	CH 200	
ch201	CH 201	
ch202	CH 202	
ch203	CH 203	
ch204	CH 204	
ch205	CH 205	
ch206	CH 206	
ch207	CH 207	
ch208	CH 208	
ch209	CH 209	
ch210	CH 210	
ch211	CH 211	
ch212	CH 212	
ch213	CH 213	
ch214	CH 214	
ch215	CH 215	
ch216	CH 216	
ch217	CH 217	
ch218	CH 218	
ch219	CH 219	
ch220	CH 220	
ch221	CH 221	
ch222	CH 222	

 Table 1. 256x1, 1-Wire Multiplexer Topology Mapping (Continued)

Software	Hardware	Softw	are	Hardware	Software	Hardware	Software	Hardware
ch30	CH 30	ch9	5	CH 95	ch159	CH 159	ch223	CH 223
ch31	CH 31	ch9	6	CH 96	ch160	CH 160	ch224	CH 224
ch32	CH 32	ch9	7	CH 97	ch161	CH 161	ch225	CH 225
ch33	CH 33	ch9	8	CH 98	ch162	CH 162	ch226	CH 226
ch34	CH 34	ch9	9	CH 99	ch163	CH 163	ch227	CH 227
ch35	CH 35	ch10	00	CH 100	ch164	CH 164	ch228	CH 228
ch36	CH 36	ch10)1	CH 101	ch165	CH 165	ch229	CH 229
ch37	CH 37	ch10)2	CH 102	ch166	CH 166	ch230	CH 230
ch38	CH 38	ch10)3	CH 103	ch167	CH 167	ch231	CH 231
ch39	CH 39	ch10)4	CH 104	ch168	CH 168	ch232	CH 232
ch40	CH 40	ch10)5	CH 105	ch169	CH 169	ch233	CH 233
ch41	CH 41	ch10	06	CH 106	ch170	CH 170	ch234	CH 234
ch42	CH 42	ch10)7	CH 107	ch171	CH 171	ch235	CH 235
ch43	CH 43	ch10	8	CH 108	ch172	CH 172	ch236	CH 236
ch44	CH 44	ch10)9	CH 109	ch173	CH 173	ch237	CH 237
ch45	CH 45	ch11	.0	CH 110	ch174	CH 174	ch238	CH 238
ch46	CH 46	ch11	.1	CH 111	ch175	CH 175	ch239	CH 239
ch47	CH 47	ch11	2	CH 112	ch176	CH 176	ch240	CH 240
ch48	CH 48	ch11	.3	CH 113	ch177	CH 177	ch241	CH 241
ch49	CH 49	ch11	.4	CH 114	ch178	CH 178	ch242	CH 242
ch50	CH 50	ch11	.5	CH 115	ch179	CH 179	ch243	CH 243
ch51	CH 51	ch11	.6	CH 116	ch180	CH 180	ch244	CH 244
ch52	CH 52	ch11	.7	CH 117	ch181	CH 181	ch245	CH 245
ch53	CH 53	ch11	.8	CH 118	ch182	CH 182	ch246	CH 246
ch54	CH 54	ch11	.9	CH 119	ch183	CH 183	ch247	CH 247
ch55	CH 55	ch12	20	CH 120	ch184	CH 184	ch248	CH 248
ch56	CH 56	ch12	21	CH 121	ch185	CH 185	ch249	CH 249
ch57	CH 57	ch12	22	CH 122	ch186	CH 186	ch250	CH 250
ch58	CH 58	ch12	23	CH 123	ch187	CH 187	ch251	CH 251
ch59	CH 59	ch12	24	CH 124	ch188	CH 188	ch252	CH 252
ch60	CH 60	ch12	25	CH 125	ch189	CH 189	ch253	CH 253

Table 1. 256x1, 1-Wire Multiplexer Topology Mapping (Continued)

Software	Hardware
ch61	CH 61
ch62	CH 62
ch63	CH 63

S	oftware	Hardware
ch126		CH 126
	ch127	CH 127

ĺ	Software	Hardware
ch190		CH 190
	ch191	CH 191

Software	Hardware
ch254	CH 254
ch255	CH 255

Table 2. 128x1, 2-Wire Multiplexer Topology Mapping

	Hardware		
Software	+	_	
com0	OUT 0	OUT 1	
ch0	CH 00	CH 16	
ch1	CH 01	CH 17	
ch2	CH 02	CH 18	
ch3	CH 03	CH 19	
ch4	CH 04	CH 20	
ch5	CH 05	CH 21	
ch6	CH 06	CH 22	
ch7	CH 07	CH 23	
ch8	CH 08	CH 24	
ch9	CH 09	CH 25	
ch10	CH 10	CH 26	
ch11	CH 11	CH 27	
ch12	CH 12	CH 28	
ch13	CH 13	CH 29	
ch14	CH 14	CH 30	
ch15	CH 15	CH 31	
ch16	CH 32	CH 48	
ch17	CH 33	CH 49	
ch18	CH 34	CH 50	
ch19	CH 35	CH 51	
ch20	CH 36	CH 52	
ch21	CH 37	CH 53	
ch22	CH 38	CH 54	
ch23	CH 39	CH 55	

,	Hardware			
Software	+	-		
ch42	CH 74	CH 90		
ch43	CH 75	CH 91		
ch44	CH 76	CH 92		
ch45	CH 77	CH 93		
ch46	CH 78	CH 94		
ch47	CH 79	CH 95		
ch48	CH 96	CH 112		
ch49	CH 97	CH 113		
ch50	CH 98	CH 114		
ch51	CH 99	CH 115		
ch52	CH 100	CH 116		
ch53	CH 101	CH 117		
ch54	CH 102	CH 118		
ch55	CH 103	CH 119		
ch56	CH 104	CH 120		
ch57	CH 105	CH 121		
ch58	CH 106	CH 122		
ch59	CH 107	CH 123		
ch60	CH 108	CH 124		
ch61	CH 109	CH 125		
ch62	CH 110	CH 126		
ch63	CH 111	CH 127		
ch64	CH 128	CH 144		
ch65	CH 129	CH 145		
ch66	CH 130	CH 146		

	Hardware		
Software	+	-	
ch85	CH 165	CH 181	
ch86	CH 166	CH 182	
ch87	CH 167	CH 183	
ch88	CH 168	CH 184	
ch89	CH 169	CH 185	
ch90	CH 170	CH 186	
ch91	CH 171	CH 187	
ch92	CH 172	CH 188	
ch93	CH 173	CH 189	
ch94	CH 174	CH 190	
ch95	CH 175	CH 191	
ch96	CH 192	CH 208	
ch97	CH 193	CH 209	
ch98	CH 194	CH 210	
ch99	CH 195	CH 211	
ch100	CH 196	CH 212	
ch101	CH 197	CH 213	
ch102	CH 198	CH 214	
ch103	CH 199	CH 215	
ch104	CH 200	CH 216	
ch105	CH 201	CH 217	
ch106	CH 202	CH 218	
ch107	CH 203	CH 219	
ch108	CH 204	CH 220	
ch109	CH 205	CH 221	

Table 2. 128x1, 2-Wire Multiplexer Topology Mapping (Continued)

	•	aule Z. 12	
	Hardware		
Software	+	-	
ch24	CH 40	CH 56	
ch25	CH 41	CH 57	
ch26	CH 42	CH 58	
ch27	CH 43	CH 59	
ch28	CH 44	CH 60	
ch29	CH 45	CH 61	
ch30	CH 46	CH 62	
ch31	CH 47	CH 63	
ch32	CH 64	CH 80	
ch33	CH 65	CH 81	
ch34	CH 66	CH 82	
ch35	CH 67	CH 83	
ch36	CH 68	CH 84	
ch37	CH 69	CH 85	
ch38	CH 70	CH 86	
ch39	CH 71	CH 87	
ch40	CH 72	CH 88	
ch41	CH 73	CH 89	

	Hardware		
Software	+	_	
ch67	CH 131	CH 147	
ch68	CH 132	CH 148	
ch69	CH 133	CH 149	
ch70	CH 134	CH 150	
ch71	CH 135	CH 151	
ch72	CH 136	CH 152	
ch73	CH 137	CH 153	
ch74	CH 138	CH 154	
ch75	CH 139	CH 155	
ch76	CH 140	CH 156	
ch77	CH 141	CH 157	
ch78	CH 142	CH 158	
ch79	CH 143	CH 159	
ch80	CH 160	CH 176	
ch81	CH 161	CH 177	
ch82	CH 162	CH 178	
ch83	CH 163	CH 179	
ch84	CH 164	CH 180	

	Hardware		
Software	+	-	
ch110	CH 206	CH 222	
ch111	CH 207	CH 223	
ch112	CH 224	CH 240	
ch113	CH 225	CH 241	
ch114	CH 226	CH 242	
ch115	CH 227	CH 243	
ch116	CH 228	CH 244	
ch117	CH 229	CH 245	
ch118	CH 230	CH 246	
ch119	CH 231	CH 247	
ch120	CH 232	CH 248	
ch121	CH 233	CH 249	
ch122	CH 234	CH 250	
ch123	CH 235	CH 251	
ch124	CH 236	CH 252	
ch125	CH 237	CH 253	
ch126	CH 238	CH 254	
ch127	CH 239	CH 255	

Table 3. 64x1, 4-Wire Multiplexer Topology Mapping

	Hardware			
Software	A+	A-	B+	В-
com0	OUT 0	OUT 1	OUT 4	OUT 5
ch0	CH 00	CH 16	CH 64	CH 80
ch1	CH 01	CH 17	CH 65	CH 81
ch2	CH 02	CH 18	CH 66	CH 82
ch3	CH 03	CH 19	CH 67	CH 83
ch4	CH 04	CH 20	CH 68	CH 84
ch5	CH 05	CH 21	CH 69	CH 85
ch6	CH 06	CH 22	CH 70	CH 86

	Hardware			
Software	oftware A+ A- B+		B+	В-
ch32	CH 128	CH 144	CH 192	CH 208
ch33	CH 129	CH 145	CH 193	CH 209
ch34	CH 130	CH 146	CH 194	CH 210
ch35	CH 131	CH 147	CH 195	CH 211
ch36	CH 132	CH 148	CH 196	CH 212
ch37	CH 133	CH 149	CH 197	CH 213
ch38	CH 134	CH 150	CH 198	CH 214
ch39	CH 135	CH 151	CH 199	CH 215

 Table 3. 64x1, 4-Wire Multiplexer Topology Mapping (Continued)


	Hardware			
Software	A+	A-	B+	В-
ch7	CH 07	CH 23	CH 71	CH 87
ch8	CH 08	CH 24	CH 72	CH 88
ch9	CH 09	CH 25	CH 73	CH 89
ch10	CH 10	CH 26	CH 74	CH 90
ch11	CH 11	CH 27	CH 75	CH 91
ch12	CH 12	CH 28	CH 76	CH 92
ch13	CH 13	CH 29	CH 77	CH 93
ch14	CH 14	CH 30	CH 78	CH 94
ch15	CH 15	CH 31	CH 79	CH 95
ch16	CH 32	CH 48	CH 96	CH 112
ch17	CH 33	CH 49	CH 97	CH 113
ch18	CH 34	CH 50	CH 98	CH 114
ch19	CH 35	CH 51	CH 99	CH 115
ch20	CH 36	CH 52	CH 100	CH 116
ch21	CH 37	CH 53	CH 101	CH 117
ch22	CH 38	CH 54	CH 102	CH 118
ch23	CH 39	CH 55	CH 103	CH 119
ch24	CH 40	CH 56	CH 104	CH 120
ch25	CH 41	CH 57	CH 105	CH 121
ch26	CH 42	CH 58	CH 106	CH 122
ch27	CH 43	CH 59	CH 107	CH 123
ch28	CH 44	CH 60	CH 108	CH 124
ch29	CH 45	CH 61	CH 109	CH 125
ch30	CH 46	CH 62	CH 110	CH 126
ch31	CH 47	CH 63	CH 111	CH 127

	Hardware			
Software	A+	A-	B+	В-
ch40	CH 136	CH 152	CH 200	CH 216
ch41	CH 137	CH 153	CH 201	CH 217
ch42	CH 138	CH 154	CH 202	CH 218
ch43	CH 139	CH 155	CH 203	CH 219
ch44	CH 140	CH 156	CH 204	CH 220
ch45	CH 141	CH 157	CH 205	CH 221
ch46	CH 142	CH 158	CH 206	CH 222
ch47	CH 143	CH 159	CH 207	CH 223
ch48	CH 160	CH 176	CH 224	CH 240
ch49	CH 161	CH 177	CH 225	CH 241
ch50	CH 162	CH 178	CH 226	CH 242
ch51	CH 163	CH 179	CH 227	CH 243
ch52	CH 164	CH 180	CH 228	CH 244
ch53	CH 165	CH 181	CH 229	CH 245
ch54	CH 166	CH 182	CH 230	CH 246
ch55	CH 167	CH 183	CH 231	CH 247
ch56	CH 168	CH 184	CH 232	CH 248
ch57	CH 169	CH 185	CH 233	CH 249
ch58	CH 170	CH 186	CH 234	CH 250
ch59	CH 171	CH 187	CH 235	CH 251
ch60	CH 172	CH 188	CH 236	CH 252
ch61	CH 173	CH 189	CH 237	CH 253
ch62	CH 174	CH 190	CH 238	CH 254
ch63	CH 175	CH 191	CH 239	CH 255

4. Install the Terminal Block

To connect the SCXI-1377 terminal block to the SCXI-1130 front panel, refer to Figure 3 and complete the following steps (the SCXI-1130 should already be installed in an SCXI chassis):

- Plug the SCXI-1377 onto the front connectors of the SCXI-1130.
- 2. Tighten the top and bottom thumbscrews on the back of the terminal block rear panel to hold it securely in place.

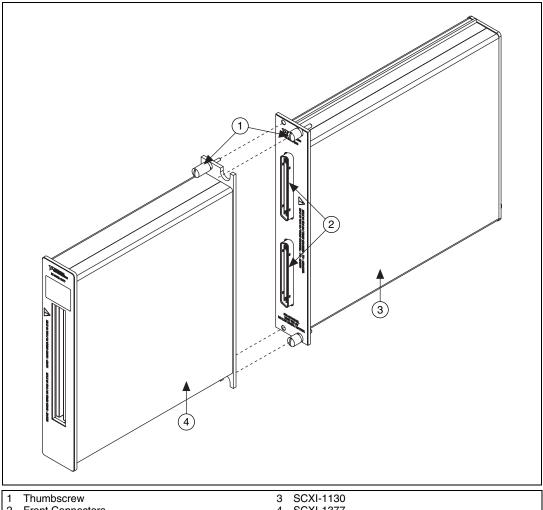

2 Front Connectors

4 SCXI-1377

Figure 3. Installing the SCXI-1377 Terminal Block

Compliance and Certifications

Safety

This product is designed to meet the requirements of the following standards of safety for electrical equipment for measurement, control, and laboratory use:

- IEC 61010-1, EN 61010-1
- UL 3111-1, UL 61010B-1
- CAN/CSA C22.2 No. 1010.1



Note For UL and other safety certifications, refer to the product label, or visit ni.com/certification, search by model number or product line, and click the appropriate link in the Certification column.

Electromagnetic Compatibility

Emissions	EN 55011 Class A at 10 m
	FCC Part 15A above 1 GHz
Immunity	EN 61326:1997 + A2:2001,
	Table 1
FMC/FMI	CE, C-Tick, and FCC Part 15
LIVIC/LIVII	, ,
	(Class A) Compliant



Note For EMC compliance, you *must* operate this device with shielded cabling.

CE Compliance

This product meets the essential requirements of applicable European Directives, as amended for CE marking, as follows:

Low-Voltage Directive (safety)......73/23/EEC

Electromagnetic Compatibility
Directive (EMC)89/336/EEC



Note Refer to the Declaration of Conformity (DoC) for this product for any additional regulatory compliance information. To obtain the DoC for this product, visit ni.com/certification, search by model number or product line, and click the appropriate link in the Certification column.

National Instruments, NI, ni.com, and LabVIEW are trademarks of National Instruments Corporation. Refer to the *Terms of Use* section on ni.com/legal for more information about National Instruments trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering National Instruments products, refer to the appropriate location: **Help»Patents** in your software, the patents.txt file on your CD, or ni.com/patents.

取り付け手順

NI SCXI[™]-1377

NI SCXI-1130 用端子台

このガイドでは、ナショナルインスツルメンツ製 SCXI-1130 を次のよう に構成するために SCXI-1377 端子台の取り付け方および信号の接続方法 について説明しています。

- 256×1、単線式マルチプレクサ
- 128×1、2線式マルチプレクサ
- 64×1、4線式マルチプレクサ
- 独立トポロジを使用したマルチプレクサまたはマトリクス構成

端子台を取り付ける順番については、『NI スイッチスタートアップガイド』を参照してください。

はじめに

SCXI-1377 端子台は、SCXI-1130 スイッチモジュールの前面に取り付けます。SCXI-1377 は、スプリング端子およびネジ留め式端子を使用して信号をスイッチに接続します。トリガ入力信号およびトリガ出力信号用のネジ留め式端子も装備しています。

表記規則

このドキュメントでは、以下の表記規則を使用します。

_

矢印 (→) は、ネスト化されたメニュー項目やダイアログボックスのオプションをたどっていくと目的の操作項目を選択できることを示します。たとえば、ファイル→ページ設定→オプションとなっている場合は、ファイルメニューをプルダウンして、ページ設定項目を選択し、最後のダイアログボックスからオプションを選択します。



このアイコンは、ヒントとなる情報があることを示します。

このアイコンは、注意すべき重要な情報があることを示します。





このアイコンは、負傷、データの損失、システムの破損を防止するための 注意事項を示します。

太字

太字のテキストは、メニュー項目やダイアログボックスのオプションなど、ソフトウェアで選択またはクリックする必要がある項目を示します。 また、太字のテキストは、パラメータ名およびハードウェアラベルにも使用されます。

斜体

斜体のテキストは、変数、強調、相互参照、または重要な概念の説明を示します。また、入力する必要のある言葉や値を表すこともあります。

monospace

このフォントのテキストは、キーボードから入力する必要があるテキストや文字、コードの一部、プログラムサンプル、構文例を示します。また、ディスクドライブ、パス、ディレクトリ、プログラム、サブプログラム、サブルーチンなどの名称、デバイス名、関数、操作、変数、ファイル名および拡張子、コードの引用にも使用されます。

1. 端子台を箱から取り出す

端子台の取り扱い中に破損を回避するには、以下の予防措置を行ってください。



注意 露出しているコネクタピンには絶対に触れないでください。

- 接地ストラップを使用したり、接地された物体に触れて、身体を接地 する。
- 静電気防止用袋をシャーシの金属部分に接触させてから、端子台を袋から取り出す。

端子台を箱から取り出し、部品がゆるんでいないかどうか、また、破損箇所がないかどうか調べます。端子台が破損している場合は、ナショナルインスツルメンツまでご連絡ください。破損している端子台をスイッチモジュールに取り付けないでください。

端子台は、使用しないときは静電気防止用袋に入れて保管してください。

2. 部品を確認する

下記の部品があることを確認します。

- NI SCXI-1377 端子台
- □ SCXIシャーシ
- NI SCXI-1130 スイッチモジュール
- □ 1/8 in. マイナスドライバー

- □ プラスドライバー
- □ ワイヤカッター
- □ ワイヤストリッパー



ヒント NIでは、NISCXI-1377 端子台との使用に、28 AWG ワイヤ(リボン式または単線式)を使用するよう推奨しています。

3. 信号を接続する


信号を端子台に接続するには、図 1 および図 2 を参考にして次の手順に 従います。

- 1. 信号線の絶縁被覆を取り除きます(7 mm 以内)。
- 2. 上部カバーのネジを外します。
- 3. 上部カバーを取り外します。
- 4. ストレインリリーフアセンブリの2つのネジを緩めてストレイン リリーフの上部バーを取り外します。
- 5. 信号線をストレインリリーフの開いた部分に通します。
- 6. マイナスドライバーを使用してスプリングパッドを押し開け、各端子を開きます。被覆を取り除いたワイヤの端を端子に挿入します。スプリングパッドをリリースしてワイヤを固定します。裸線がスプリング端子の外に露出しないように注意してください。ワイヤが露出しているとショートする可能性があり、正しく作動しない場合があります。



メモ 信号線を NI SCXI-1377 に接続する際は、表 1、表 2 および表 3 を参照して、使用するトポロジに対応する信号接続位置を確認します。

- 7. ストレインリリーフバーを元に戻して、ストレインリリーフアセンブリの2つのネジを締めてケーブルを固定します。
- 8. 上部カバーを取り付けます。
- 9. 上部カバーのネジを取り付けます。

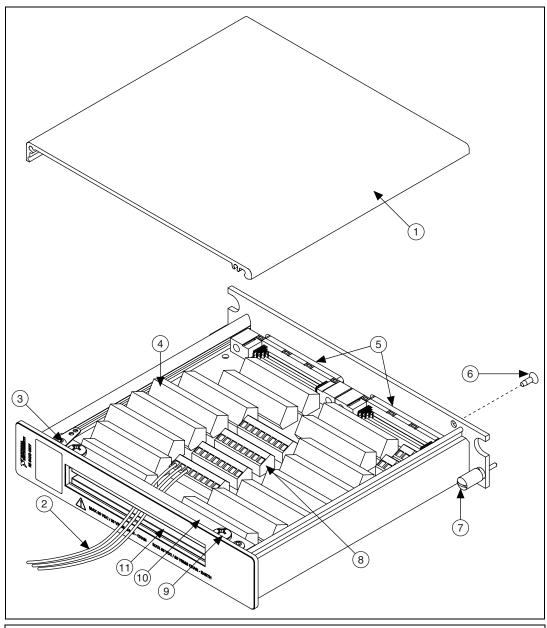

- 端子台の上部カバー
- 信号線
- 3 安全接地用つまみ
- 4 スプリング端子
- 5 後部コネクタ
- 上部カバーのネジ

- つまみネジ
- 8 ネジ留め式端子
- 9 10-32 × 3/4 インチネジ 10 ストレインリリーフバー
- 11 ストレインリリーフバー間の隙間

図1 SCXI-1377 端子台

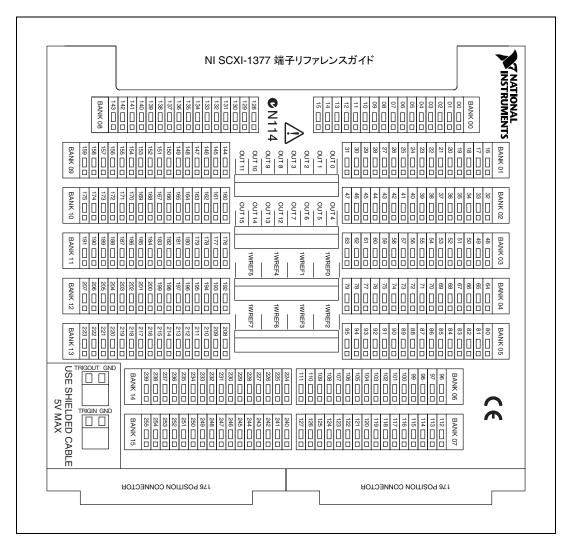


図 2 SCXI-1377 端子台の信号接続

表1 256×1、単線式マルチプレクサトポロジマッピング

ソフト ウェア	ハード ウェア	ソフト ウェア	ハード ウェア	ソフト ウェア	ハード ウェア	ソフト ウェア	ハード ウェア
com0	OUT 0	ch64	CH 64	ch128	CH 128	ch192	CH 192
ch0	CH 00	ch65	CH 65	ch129	CH 129	ch193	CH 193
ch1	CH 01	ch66	CH 66	ch130	CH 130	ch194	CH 194
ch2	CH 02	ch67	CH 67	ch131	CH 131	ch195	CH 195
ch3	CH 03	ch68	CH 68	ch132	CH 132	ch196	CH 196
ch4	CH 04	ch69	CH 69	ch133	CH 133	ch197	CH 197
ch5	CH 05	ch70	CH 70	ch134	CH 134	ch198	CH 198
ch6	CH 06	ch71	CH 71	ch135	CH 135	ch199	CH 199
ch7	CH 07	ch72	CH 72	ch136	CH 136	ch200	CH 200
ch8	CH 08	ch73	CH 73	ch137	CH 137	ch201	CH 201
ch9	CH 09	ch74	CH 74	ch138	CH 138	ch202	CH 202
ch10	CH 10	ch75	CH 75	ch139	CH 139	ch203	CH 203
chll	CH 11	ch76	CH 76	ch140	CH 140	ch204	CH 204
ch12	CH 12	ch77	CH 77	ch141	CH 141	ch205	CH 205
ch13	CH 13	ch78	CH 78	ch142	CH 142	ch206	CH 206
ch14	CH 14	ch79	CH 79	ch143	CH 143	ch207	CH 207
ch15	CH 15	ch80	CH 80	ch144	CH 144	ch208	CH 208
ch16	CH 16	ch81	CH 81	ch145	CH 145	ch209	CH 209
ch17	CH 17	ch82	CH 82	ch146	CH 146	ch210	CH 210
ch18	CH 18	ch83	CH 83	ch147	CH 147	ch211	CH 211
ch19	CH 19	ch84	CH 84	ch148	CH 148	ch212	CH 212
ch20	CH 20	ch85	CH 85	ch149	CH 149	ch213	CH 213
ch21	CH 21	ch86	CH 86	ch150	CH 150	ch214	CH 214
ch22	CH 22	ch87	CH 87	ch151	CH 151	ch215	CH 215
ch23	CH 23	ch88	CH 88	ch152	CH 152	ch216	CH 216
ch24	CH 24	ch89	CH 89	ch153	CH 153	ch217	CH 217
ch25	CH 25	ch90	CH 90	ch154	CH 154	ch218	CH 218
ch26	CH 26	ch91	CH 91	ch155	CH 155	ch219	CH 219
ch27	CH 27	ch92	CH 92	ch156	CH 156	ch220	CH 220
ch28	CH 28	ch93	CH 93	ch157	CH 157	ch221	CH 221
ch29	CH 29	ch94	CH 94	ch158	CH 158	ch222	CH 222

表1 256×1、単線式マルチプレクサトポロジマッピング (続き)

ソフト ウェア	ハード ウェア
ch30	CH 30
ch31	CH 31
ch32	CH 32
ch33	CH 33
ch34	CH 34
ch35	CH 35
ch36	CH 36
ch37	CH 37
ch38	CH 38
ch39	CH 39
ch40	CH 40
ch41	CH 41
ch42	CH 42
ch43	CH 43
ch44	CH 44
ch45	CH 45
ch46	CH 46
ch47	CH 47
ch48	CH 48
ch49	CH 49
ch50	CH 50
ch51	CH 51
ch52	CH 52
ch53	CH 53
ch54	CH 54
ch55	CH 55
ch56	CH 56
ch57	CH 57
ch58	CH 58
ch59	CH 59
ch60	CH 60

ソフト ウェア	ハード ウェア
ch95	CH 95
ch96	CH 96
ch97	CH 97
ch98	CH 98
ch99	CH 99
ch100	CH 100
ch101	CH 101
ch102	CH 102
ch103	CH 103
ch104	CH 104
ch105	CH 105
ch106	CH 106
ch107	CH 107
ch108	CH 108
ch109	CH 109
ch110	CH 110
chlll	CH 111
ch112	CH 112
ch113	CH 113
ch114	CH 114
ch115	CH 115
ch116	CH 116
ch117	CH 117
ch118	CH 118
ch119	CH 119
ch120	CH 120
ch121	CH 121
ch122	CH 122
ch123	CH 123
ch124	CH 124
ch125	CH 125

ソフト ウェア	ハード ウェア
ch159	CH 159
ch160	CH 160
ch161	CH 161
ch162	CH 162
ch163	CH 163
ch164	CH 164
ch165	CH 165
ch166	CH 166
ch167	CH 167
ch168	CH 168
ch169	CH 169
ch170	CH 170
ch171	CH 171
ch172	CH 172
ch173	CH 173
ch174	CH 174
ch175	CH 175
ch 176	CH 176
ch177	CH 177
ch178	CH 178
ch179	CH 179
ch180	CH 180
ch181	CH 181
ch182	CH 182
ch183	CH 183
ch184	CH 184
ch185	CH 185
ch186	CH 186
ch187	CH 187
ch188	CH 188
ch189	CH 189

ソフト ウェア	ハード ウェア	
ch223	CH 223	
ch224	CH 224	
ch225	CH 225	
ch226	CH 226	
ch227	CH 227	
ch228	CH 228	
ch229	CH 229	
ch230	CH 230	
ch231	CH 231	
ch232	CH 232	
ch233	CH 233	
ch234	CH 234	
ch235	CH 235	
ch236	CH 236	
ch237	CH 237	
ch238	CH 238	
ch239	CH 239	
ch240	CH 240	
ch241	CH 241	
ch242	CH 242	
ch243	CH 243	
ch244	CH 244	
ch245	CH 245	
ch246	CH 246	
ch247	CH 247	
ch248	CH 248	
ch249	CH 249	
ch250	CH 250	
ch251	CH 251	
ch252	CH 252	
ch253	CH 253	

表1 256×1、単線式マルチプレクサトポロジマッピング (続き)

ソフト ウェア	ハード ウェア
ch61	CH 61
ch62	CH 62
ch63	CH 63

ソフト ウェア	ハード ウェア
ch126	CH 126
ch127	CH 127

ソフト ウェア	ハード ウェア
ch190	CH 190
ch191	CH 191

ソフト ウェア	ハード ウェア
ch254	CH 254
ch255	CH 255

表 2 128×1、2線式マルチプレクサトポロジマッピング

ソフト	ハードウェア	
ウェア	+	-
com0	OUT 0	OUT 1
ch0	CH 00	CH 16
chl	CH 01	CH 17
ch2	CH 02	CH 18
ch3	CH 03	CH 19
ch4	CH 04	CH 20
ch5	CH 05	CH 21
ch6	CH 06	CH 22
ch7	CH 07	CH 23
ch8	CH 08	CH 24
ch9	CH 09	CH 25
ch10	CH 10	CH 26
chll	CH 11	CH 27
ch12	CH 12	CH 28
ch13	CH 13	CH 29
ch14	CH 14	CH 30
ch15	CH 15	CH 31
ch16	CH 32	CH 48
ch17	CH 33	CH 49
ch18	CH 34	CH 50
ch19	CH 35	CH 51
ch20	CH 36	CH 52
ch21	CH 37	CH 53
ch22	CH 38	CH 54
ch23	CH 39	CH 55

× 1、2 線式マルナフレクサトボロン ハードウェア		
ソフト ウェア	+ -	
ch42	CH 74	CH 90
ch43	CH 75	CH 91
ch44	CH 76	CH 92
ch45	CH 77	CH 93
ch46	CH 78	CH 94
ch47	CH 79	CH 95
ch48	CH 96	CH 112
ch49	CH 97	CH 113
ch50	CH 98	CH 114
ch51	CH 99	CH 115
ch52	CH 100	CH 116
ch53	CH 101	CH 117
ch54	CH 102	CH 118
ch55	CH 103	CH 119
ch56	CH 104	CH 120
ch57	CH 105	CH 121
ch58	CH 106	CH 122
ch59	CH 107	CH 123
ch60	CH 108	CH 124
ch61	CH 109	CH 125
ch62	CH 110	CH 126
ch63	CH 111	CH 127
ch64	CH 128	CH 144
ch65	CH 129	CH 145
ch66	CH 130	CH 146

ソフト	ハードウェア	
ウェア	+	-
ch85	CH 165	CH 181
ch86	CH 166	CH 182
ch87	CH 167	CH 183
ch88	CH 168	CH 184
ch89	CH 169	CH 185
ch90	CH 170	CH 186
ch91	CH 171	CH 187
ch92	CH 172	CH 188
ch93	CH 173	CH 189
ch94	CH 174	CH 190
ch95	CH 175	CH 191
ch96	CH 192	CH 208
ch97	CH 193	CH 209
ch98	CH 194	CH 210
ch99	CH 195	CH 211
ch100	CH 196	CH 212
ch101	CH 197	CH 213
ch102	CH 198	CH 214
ch103	CH 199	CH 215
ch104	CH 200	CH 216
ch105	CH 201	CH 217
ch106	CH 202	CH 218
ch107	CH 203	CH 219
ch108	CH 204	CH 220
ch109	CH 205	CH 221

表 2 128×1、2線式マルチプレクサトポロジマッピング (続き)

		X Z 120 ^
ソフト	ハードウェア	
ウェア	+	-
ch24	CH 40	CH 56
ch25	CH 41	CH 57
ch26	CH 42	CH 58
ch27	CH 43	CH 59
ch28	CH 44	CH 60
ch29	CH 45	CH 61
ch30	CH 46	CH 62
ch31	CH 47	CH 63
ch32	CH 64	CH 80
ch33	CH 65	CH 81
ch34	CH 66	CH 82
ch35	CH 67	CH 83
ch36	CH 68	CH 84
ch37	CH 69	CH 85
ch38	CH 70	CH 86
ch39	CH 71	CH 87
ch40	CH 72	CH 88
ch41	CH 73	CH 89

	ハードウェア	
ソフト ウェア	+	-
ch67	CH 131	CH 147
ch68	CH 132	CH 148
ch69	CH 133	CH 149
ch70	CH 134	CH 150
ch71	CH 135	CH 151
ch72	CH 136	CH 152
ch73	CH 137	CH 153
ch74	CH 138	CH 154
ch75	CH 139	CH 155
ch76	CH 140	CH 156
ch77	CH 141	CH 157
ch78	CH 142	CH 158
ch79	CH 143	CH 159
ch80	CH 160	CH 176
ch81	CH 161	CH 177
ch82	CH 162	CH 178
ch83	CH 163	CH 179
ch84	CH 164	CH 180

ソフト	ハードウェア		
ウェア	+	-	
ch110	CH 206	CH 222	
chlll	CH 207	CH 223	
ch112	CH 224	CH 240	
ch113	CH 225	CH 241	
ch114	CH 226	CH 242	
ch115	CH 227	CH 243	
ch116	CH 228	CH 244	
ch117	CH 229	CH 245	
ch118	CH 230	CH 246	
ch119	CH 231	CH 247	
ch120	CH 232	CH 248	
ch121	CH 233	CH 249	
ch122	CH 234	CH 250	
ch123	CH 235	CH 251	
ch124	CH 236	CH 252	
ch125	CH 237	CH 253	
ch126	CH 238	CH 254	
ch127	CH 239	CH 255	

表3 64×1、4線式マルチプレクサトポロジマッピング

	ハードウェア			
ソフト ウェア	A+	A -	B+	B-
com0	OUT 0	OUT 1	OUT 4	OUT 5
ch0	CH 00	CH 16	CH 64	CH 80
chl	CH 01	CH 17	CH 65	CH 81
ch2	CH 02	CH 18	CH 66	CH 82
ch3	CH 03	CH 19	CH 67	CH 83
ch4	CH 04	CH 20	CH 68	CH 84
ch5	CH 05	CH 21	CH 69	CH 85
ch6	CH 06	CH 22	CH 70	CH 86

	ハードウェア			
ソフト ウェア	A+	A -	B+	В-
ch32	CH 128	CH 144	CH 192	CH 208
ch33	CH 129	CH 145	CH 193	CH 209
ch34	CH 130	CH 146	CH 194	CH 210
ch35	CH 131	CH 147	CH 195	CH 211
ch36	CH 132	CH 148	CH 196	CH 212
ch37	CH 133	CH 149	CH 197	CH 213
ch38	CH 134	CH 150	CH 198	CH 214
ch39	CH 135	CH 151	CH 199	CH 215

表3 64×1、4線式マルチプレクサトポロジマッピング (続き)


	ハードウェア			
ソフト ウェア	A+	A -	B+	B-
ch7	CH 07	CH 23	CH 71	CH 87
ch8	CH 08	CH 24	CH 72	CH 88
ch9	CH 09	CH 25	CH 73	CH 89
ch10	CH 10	CH 26	CH 74	CH 90
chll	CH 11	CH 27	CH 75	CH 91
ch12	CH 12	CH 28	CH 76	CH 92
ch13	CH 13	CH 29	CH 77	CH 93
ch14	CH 14	CH 30	CH 78	CH 94
ch15	CH 15	CH 31	CH 79	CH 95
ch16	CH 32	CH 48	CH 96	CH 112
ch17	CH 33	CH 49	CH 97	CH 113
ch18	CH 34	CH 50	CH 98	CH 114
ch19	CH 35	CH 51	CH 99	CH 115
ch20	CH 36	CH 52	CH 100	CH 116
ch21	CH 37	CH 53	CH 101	CH 117
ch22	CH 38	CH 54	CH 102	CH 118
ch23	CH 39	CH 55	CH 103	CH 119
ch24	CH 40	CH 56	CH 104	CH 120
ch25	CH 41	CH 57	CH 105	CH 121
ch26	CH 42	CH 58	CH 106	CH 122
ch27	CH 43	CH 59	CH 107	CH 123
ch28	CH 44	CH 60	CH 108	CH 124
ch29	CH 45	CH 61	CH 109	CH 125
ch30	CH 46	CH 62	CH 110	CH 126
ch31	CH 47	CH 63	CH 111	CH 127

	ハードウェア			
ソフト ウェア	A+	A -	B+	В-
ch40	CH 136	CH 152	CH 200	CH 216
ch41	CH 137	CH 153	CH 201	CH 217
ch42	CH 138	CH 154	CH 202	CH 218
ch43	CH 139	CH 155	CH 203	CH 219
ch44	CH 140	CH 156	CH 204	CH 220
ch45	CH 141	CH 157	CH 205	CH 221
ch46	CH 142	CH 158	CH 206	CH 222
ch47	CH 143	CH 159	CH 207	CH 223
ch48	CH 160	CH 176	CH 224	CH 240
ch49	CH 161	CH 177	CH 225	CH 241
ch50	CH 162	CH 178	CH 226	CH 242
ch51	CH 163	CH 179	CH 227	CH 243
ch52	CH 164	CH 180	CH 228	CH 244
ch53	CH 165	CH 181	CH 229	CH 245
ch54	CH 166	CH 182	CH 230	CH 246
ch55	CH 167	CH 183	CH 231	CH 247
ch56	CH 168	CH 184	CH 232	CH 248
ch57	CH 169	CH 185	CH 233	CH 249
ch58	CH 170	CH 186	CH 234	CH 250
ch59	CH 171	CH 187	CH 235	CH 251
ch60	CH 172	CH 188	CH 236	CH 252
ch61	CH 173	CH 189	CH 237	CH 253
ch62	CH 174	CH 190	CH 238	CH 254
ch63	CH 175	CH 191	CH 239	CH 255

4. 端子台を取り付ける

SCXI-1377 端子台を SCXI-1130 フロントパネルに接続するには、図 3 を参照して、次の手順を行ってください (SCXI-1130 は既に SCXI シャーシに取り付けられている状態)。

- 1. SCXI-1377 を SCXI-1130 のフロントコネクタにはめ込みます。
- 2. 端子台の後部パネル背面にある上下のつまみネジを締めて、端子台をしっかりと固定します。

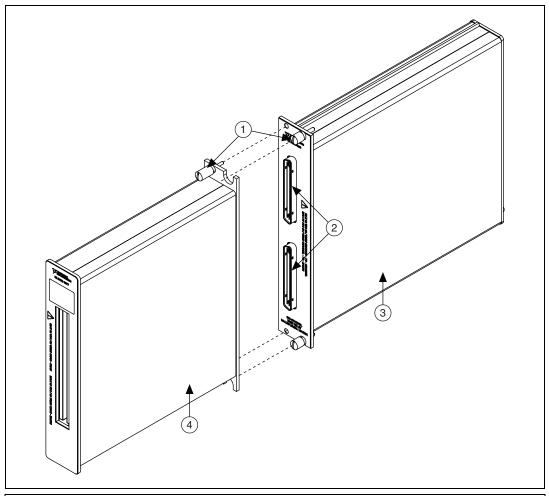

1 つまみネジ

3 SCXI-1130 4 SCXI-1377

2 フロントコネクタ

図3 SCXI-1377 端子台を取り付ける

安全性

この製品は、計測、制御、実験に使用される電気装置に関する以下の安全 規格の必要条件を満たすように設計されています。

- IEC 61010-1, EN 61010-1
- UL 3111-1、UL 61010B-1
- CAN/CSA C22.2 No. 1010.1



メモ

UL および他の安全保証については、製品ラベルを参照するか、ni.com/certification (英語) にアクセスして型番または製品ラインで検索し、保証の欄の該当するリンクをクリックしてください。

電磁両立性

エミッション	(不要輻射)	.EN 55011 Class A(10 m 時)、 FCC Part 15A(1 GHz 以上)
イミュニティ	(電磁環境耐性)	.EN 61326:1997 + A2:2001、 Table 1
EMC/EMI		.CE、C-Tick、および FCC Part 15(Class A)適合



メモ

EMC に適合させるには、このデバイスと一緒に必ずシールドケーブルを使用してください。

CF 適合

この製品は、以下のように、CEマーク改正に基づいて、該当するEC理事会指令による基本的要件に適合しています。

低電圧指令(安全性)......73/23/EEC

電磁両立性

規格 (EMC)......89/336/EEC



メモ

この製品のこのほかの適合規格については、この製品の適合宣言(DoC)を参照してください。この製品の適合宣言を入手するには、ni.com/certification(英語)にアクセスして型番または製品ラインで検索し、該当するリンクをクリックしてください。

National Instruments、NI、ni.com、および LabVIEW は National Instruments Corporation (米国ナショナルインスツルメツ社) の商標です。National Instruments の商標の詳細については、ni.com/legal の 「Ferms of Use」 セクションを参照してください。本文書中に記載されたその他の製品をおよび企業名は、それぞれの企業の商標または商号です。 National Instruments の製品を保護する特許については、ソフトウェアに含まれているpatents.txtファイル、または ni.com/patentsのうち、該当するリソースから参照してください。