


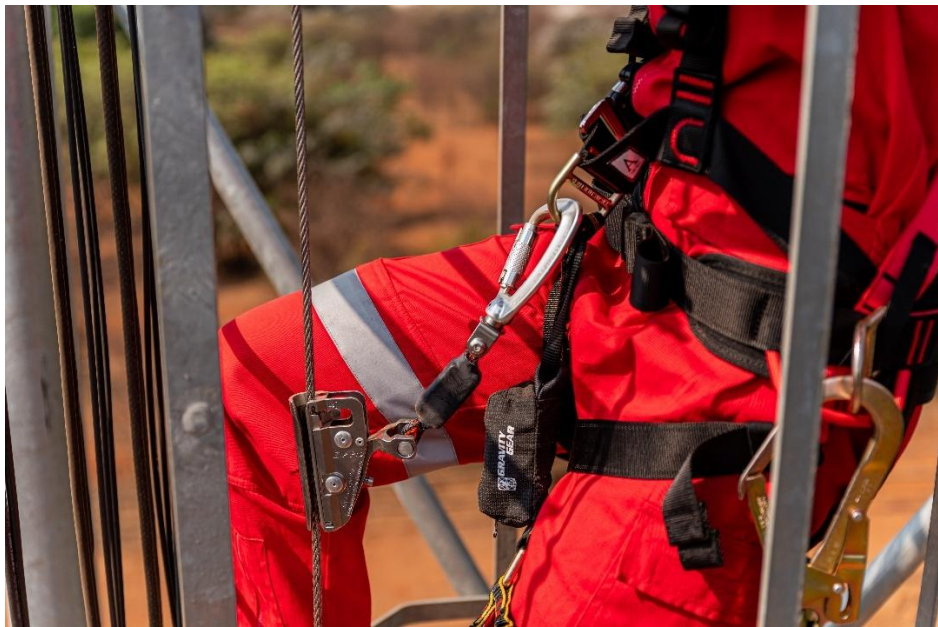

Index

1.	Scope and intent	5
2.	Abbreviations and definitions	5
3.	General information.....	6
3.1.	Description	6
3.2.	Design	6
3.3.	Requirements.....	7
3.4.	Fall clearance.....	8
3.5.	Fall Arrest Glider.....	9
3.6.	Torque requirements	12
3.7.	Usage	12
3.8.	Usage limitations.....	14
3.9.	Warranty	16

3.10.	Warranty and Terms and conditions	17
3.11.	Training.....	17
3.12.	Basic installation steps:	18
3.13.	Pre use inspections checks	20
3.14.	Maintenance	21
4.	Parts list and installation instructions:	22
4.1.	Top Bracket Assembly.....	22
4.2.	Cable and cable clamp	25
4.3.	Intermediate bracket	28
4.4.	Intermediate anchor	29
4.5.	Tensioner	33
4.6.	Glider enclosure	39
4.7.	Anti-pivot bar.....	41

4.8.	Glider with shock absorber	42
4.9.	Certification Plate and tag	45
5.	Certification	48
6.	Gravity Quality System	53
6.1.	Installing the software	53
6.1.	Set your GEO Tag Information	55
6.2.	Set the camera resolution	57
6.3.	How to manually sync your phone with SC	60
6.4.	Starting a new Inspection Form	61
6.5.	Completing an existing Inspection form	62
6.6.	Completing questions	63

1. Scope and intent

This manual is a guideline for all certified installers for the installation of the GVS. It will also be used as training material to become a certified installer.

2. Abbreviations and definitions

A4 316 Stainless Steel

GVS **Gravity Vertical System**

kg Kilogram

kN Kilo Newton

Nm Newton-Meter – the measure of force used to tighten (torque) bolts and nuts.

PPE Personal Protective Equipment

Torque The measure of the resistance of a fastener to further tightening.

3. General information

3.1. Description

The GVS provides fall protection for persons climbing fixed ladders or similar structures and conforms to the EN353-1 standard.

The GVS is designed to eliminate or substantially reduce a fall risk that would otherwise lead to serious injury or death of people working on elevated structures.

The GVS is fixed to the structure via the top, and bottom bracket assemblies. In addition, the lifeline is supported at intervals of less than 10m with intermediate brackets. These intermediate brackets help to reduce the load in the event of a fall and to keep the cable stable.

3.2. Design

Before installation, a site study is essential, either by a survey of the premises with the necessary measurements taken, or from technical drawings supplied.

This site study will allow you to determine the utilization mode: appropriateness of the structure and fixings, placing of anchor assemblies, cable length, number of users, etc.

This study will take into consideration the design requirements of the EN 353-1 standard.

3.3. Requirements

3.3.1. Structure

The structure on which the GVS is to be installed, must withstand the possible forces in case of a fall. The structural integrity and the structure's ability to sustain the imposed loads must be verified by a Professional Engineer.

The top anchor of the system must be able to sustain the following loads without failing:

- 3.3.1.1. 15KN for 1 User
- 3.3.1.2. 16KN for 2 Users
- 3.3.1.3. 17KN for 3 Users
- 3.3.1.4. 18KN for 4 Users

3.4. Fall clearance

It is essential to check the free space between the user and any obstacle. The operator's fall distance is influenced by the PPE that they use, as well as the methods they employ to work at height.

Work that takes place close to the ground is often the highest risk in terms of fall distance, and additional precautions should be taken when connecting and disconnecting from PPE.

In the event of a fall, the shock-absorber can deploy 16cm when exceeding 100kg load and a maximum of 30cm.

3.5. Fall Arrest Glider

There are two main types of Fall Arrest Gliders

3.5.1. Fall Arrest Glider with a shock absorber

When a GVS is installed without a shock absorber device at the top, the Fall Arrest Glider with a shock absorber is required. The Fall Arrest Glider incorporates a shock-absorbing textile element. This shock absorber limits the forces (on both structure and person) during a fall event to a maximum of 6kN.

The textile shock-absorbing element must be protected against exposure to the elements such as UV light, as this damages the textile fibres.



3.5.2. Fall Arrest Glider without a shock absorber

When a GVS is installed with a shock absorber at the top of the system, the Fall Arrest Glider must not have a shock absorber. The system will not work with 2 shock absorbers.



It is **forbidden** to manipulate the Fall Arrest Glider during ascent or descent as handling the Fall Arrest Glider may interfere with the fall arresting mechanism. If necessary, handle the Fall arrest Glider by its connector, never handle the body of the fall arrester in service.

3.5.3. Captive or non-Permanent Glider

The Fall Arrest Glider with a shock absorber and without a shock absorber can be permanently attached to the system (Captive) or it can be assembled and dismantled as and when required.

To assemble and dismantle the non-permanent Fall Arrest Glider.


ASSEMBLY AND DISMANTLING

Assembly:

Rotate the cam upwards and introduce the Gravity glider on the wire cable, the security will automatically be opened by pushing the Gravity glider on the wire cable.

Dismantling:

Rotate the cam upwards, push the trigger to open the security and take the Gravity glider out of the line.

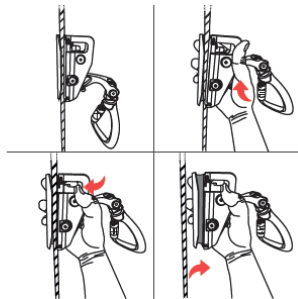

3.6. Torque requirements

When installing the GVS, fasteners on the various components, they must be tightened to the torque values indicated below.

The installer must ensure that torque tools are calibrated and have a current and valid torque certificate.

General torque:

3.6.1. M10 bolts and nut: 32Nm

3.6.2. M12 bolts and nut: 50Nm

3.6.3. Cable clamp grub screws: 20Nm

3.7. Usage

The GVS may only be used in a vertical orientation.

Maximum one (1) user per Fall Arrest Glider.

Safe use of the system is limited to between 50kg (110 lbs) and 150kg (330 lbs). This includes the user's weight, clothing, PPE, tools and installation hardware.

The PPE used will form an essential part of the fall protection system. A full-body harness with a sternum (chest) attachment point, and a helmet rated for work at height must be used with the system.

Ascend and descend the structure in the following manner:

- ASCENT: Climb in a methodical and recommended manner where 3 points are always in contact with the structure, i.e., two hands one foot, one hand two feet, and be aware that impeding any part of any safety device potentially exposes the user to risk.
- DESCENT: To descend, climb down the ladder or ladder rail rungs at a steady rate. If the Glider locks onto the cable, move upward slightly to release the Glider and then continue descending.



Resting at a non-designated position: The Glider should not be used as a work positioning device – it is not designed to suspend the user. When stopping or resting during a climb, users must:

- Use an approved work positioning device or stop at a designated resting platform.
- Always remain in positive contact with the ladder, with both hands and feet.
- Push the traveller above the chest position so that the cam is actively engaged with the wire, without suspending full body weight on it, before attaching a work positioning device.

3.8. Usage limitations

The strength of the system is directly influenced by the structure onto which it is installed. All structural materials must be free of any manufacturing defects or damage (such as ageing, overload, chemical or climatic attack, etc.).

The safe use of the GVS is only assured if it is used in combination with the correct fall arrest PPE (harness, helmet, etc.), that complies with the relevant standards and that are used in accordance with the manufacturer's recommendations.

The installation and use of the parts and accessories, as well as the position and quality of fixing of the anchorage points, must be strictly adhered to as described in this document.

WARNING: The GVS is designed to protect operators against falling from a height and should never be used as a suspension system. Meaning you cannot climb up or down the GVS and stop at a non-resting point and hang on the Fall Arrest Glider while you are resting.

3.9. Warranty

The components of the GVS are covered under limited warranty against any manufacturing defects, which includes any GVS part found to be defective. This limited warranty is applicable for 10 years on fixed structural components like towers and buildings and 2 years on mechanical components like cranes.

The shock-absorbing textile element has a warranty of 5 years after manufacturing, and a maximum lifetime of 10 years. When it is found during an annual inspection, or a pre-use inspection to be no longer serviceable, the shock absorbing textile needs to be replaced, and the GVS must be signed as not safe to use.



3.10. Warranty and Terms and conditions

The warranty does not apply to:

- 3.10.1. The supporting structure.
- 3.10.2. Parts that are damaged by testing, use of the system outside the provisions, or in the event of a fall.
- 3.10.3. Any non-GVS components.

3.11. Training

It is the responsibility of the installer to understand these instructions and to be competent in the correct installation, use and maintenance of the system. All GVS installers must be aware of the consequences of incorrect installation or use of the system.

Training and re-assessments for installers must be done annually to ensure installer proficiency and efficacy. Only Gravity Training may train and declare installers competent for the installation and recertification of GVS. Trainees will be required to prove their ability to install the GVS

3.12. Basic installation steps:

When installing the GVS, it is recommended to start the installation from the top working to the bottom.

Step 1. Position and mount the Top Anchor Assembly on to the ladder.

Step 2. Thread the cable through the cable clamp and then through the top anchor, ensuring that it is seated in the thimble. Thread the cable end back through the cable clamp and tighten the cable clamp bolts.

When a top Shock Absorber is used, thread the cable through the cable clamp and then through the bottom of the Shock Absorber ensuring that it is seated in the thimble. Thread the cable end back through the cable clamp and tighten the cable clamp bolts.



Step 3. Install the intermediate anchor assembly onto the ladder rung.

NOTE: The Intermediate bracket and Intermediate anchor should preferably be assembled as a sub-assembly on the ground, this will eliminate handling multiple loose components that could lead to dropped objects.

NOTE: If Intermediate anchors are needed on the installation, it is advisable to slide the Intermediate sub-assembly onto the cable and hold them in place with a plastic cable tie before attaching the top of the cable to the top anchor. This will allow you to affix them to the ladder when climbing down.

Step 4. Install the captive Glider and Glider Enclosure, if applicable.

Step 5. Install the Bottom Anchor Bracket onto the ladder.

Step 6. Attach the certification plate and tensioner to the Bottom Anchor Bracket.

Step 7. Thread the cable through the cable clamp and then through the bottom anchor, ensuring that it is seated in the thimble. Thread the cable end back through the cable clamp and tighten the cable clamp bolts.

Step 8. Trim the cable.

Step 9. Tighten the nut on the tensioner to tighten the lifeline until the tension indicator shows that the correct tension has been reached.

Step 10. Quality assurance and certification checks.

3.13. Pre use inspections checks

- 3.13.1. Check the tension of the cable using the tension indicator attached to the tensioner.
- 3.13.2. Check that the attaching parts have been tightened properly.
- 3.13.3. Check the condition (in particular the shock-absorbing textile) and operation of the Fall Arrest Glider on the cable by up and down movement on the cable, with a function test to confirm that the Glider locks on the cable with a sudden downward pull.
- 3.13.4. Check the validity of the system on the certification sign at the entry point to the line. Today's date must be before the next inspection dates.

3.14. Maintenance

Before each installation and maintenance, it is essential to validate the strength of the structure onto which the system is attached.

If required, the system can be wiped clean with a soft non-scratch cloth and fresh, cool water.

All bolt and screw tightness can be checked, and the tensioner should be adjusted if necessary.

4. Parts list and installation instructions:

The following is a parts list for the GVS, along with installation instructions.

4.1. Top Bracket Assembly



The top anchor bracket is designed to take the loads generated in the event of a fall occurring.

Designed to be adaptable for most ladder/rung designs (10-40mm rung size).

Material: 316-grade stainless steel

Consists of fixing bar, U-bolts, and anchor eye, with a thimble.

Net weight: 1.6 kg

To install the top bracket assembly, follow these instructions:

- 4.1.1. Fix the anchor eye to the flat side of the fixing bar, through the middle hole, using a Nyloc M12 bolt with flat washers (one each side). Tighten the bolt to a minimum of 50Nm, making sure it is vertically aligned in line with the fixing bar. Punch the protruding thread to ensure the nut is mechanically locked. This attachment is usually done by Gravity Global before delivery to site.
- 4.1.2. It is recommended that the thimble be inserted onto the anchor eye and the cable attached to it before the top anchor assembly is installed onto the ladder rung.
- 4.1.3. Position the fixing bar along the back of the ladder rungs with the flat side against the rungs.
- 4.1.4. Insert the U-bolts from the front side of the ladder rungs through the slots in the fixing bar. Insert the flat washers and the Nyloc nuts and tighten to 32Nm.

NOTE: Bimetal corrosion is when 2 different types of metal touch each other which may cause rust. Adding isolation in the form of electrical tape or a piece of hosepipe between the 2 types of metal will avoid and reduce the bimetal corrosion.

NOTE: Ensure that the U-bolts have sufficient thread length to be fixed tightly onto the ladder rungs – i.e., that the nuts are tightened to the correct torque without running out of thread on the U-bolt shaft. If necessary, change the U-bolts to a correct size.



4.2. Cable and cable clamp

4.2.1. Cable:

Stainless steel cable of 8mm diameter.

Breaking strength >35kN.

Net weight: 0.21kg per metre

4.2.2. Cable clamp:

Aluminium body with stainless steel grub screws.


Breaking strength: N/A

Weight: 0.1kg

4.2.3. Connection of the cable:

Slide the end of the cable through the cable clamp from the correct side, with the cable clamp screws at the top. Loop the cable through the anchor eye of the top anchor assembly, over the thimble, and back through the cable clamp. At least 3cm cable must protrude from the cable clamp. Pay attention to the graphics on the cable clamp and ensure that the cable tail end and eye are correctly orientated.

WARNING! – DO NOT DO THIS

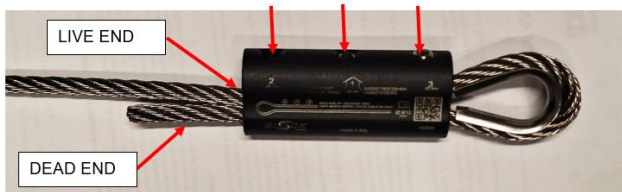

INCORRECT INSTALLATION OF WIRE ROPE CLAMP- Dead end on wrong side and the screws are weakening the rope of Live load bearing side.

WARNING! – DO NOT DO THIS



INCORRECT INSTALLATION OF WIRE ROPE CLAMP-

Tighten the grub screws on the cable clamp in the correct order (centre then closest to the eye then furthest from the eye) to 20Nm each. Insert the cable end cap onto the cable end.



4.3. Intermediate bracket

Used to mount the intermediate anchor to the ladder.

Material: stainless steel 316.

Net weight: 0.315kg

The Intermediate bracket is fitted to the backside of the ladder rung (similar to the top fixing bar) using a stainless-steel U-bolt and two A4 Nyloc nuts. Tighten the Nyloc nuts to 32Nm.

NOTE: Ensure that the rung insulation tube is inserted over the rung before tightening the U-bolts. The rung insulator tube must be positioned in such a way to avoid direct contact between the ladder rungs and the lifeline brackets and U-bolts. The two different types of metal must not touch each other.

The distance between two successive intermediate brackets may not be more than a maximum of 10m, but the distance may be less than 10m apart.

4.4. Intermediate anchor


Intermediate anchors are fitted at 10m intervals, guides the lifeline and assists in absorbing shock loads during a fall event.

Material: stainless steel 316.

Net weight: 0.20kg

Distance between two successive anchors 10 m or less.




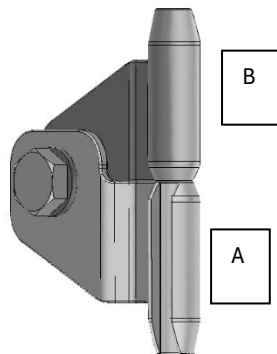


To install an Intermediate Anchor:

- Place an A4 stainless steel flat washer on the M12x30 A4-70 bolt.
- Insert the M12x30 A4-70 stainless steel bolt in the hole of Part A of the Intermediate anchor, through the hole of the Intermediate bracket and then through Part B of the Intermediate anchor.

- Place an A4 stainless steel flat washer on the M12x30 A4-70 bolt and then start threading the nut unto the bolt.
- Tighten the A4 stainless steel Nyloc nut until the screw head and nut come up against the sides of the Intermediate bracket. The bolt should protrude two threads from the nut.
- *It is advisable to not tighten the intermediate anchor assembly until the top and bottom anchor assemblies are set in place.
- The exit angle of the cable should not be more than $\pm 5^\circ$ when exiting an intermediate bracket. This will avoid creating point loads on the cable when the system is tensioned.
- NOTE: It is strongly advised that the Intermediate bracket and Intermediate anchor should be assembled as a sub-assembly so it can be installed as a unit.
- Tighten the U-bolts Nyloc nuts to 32Nm.

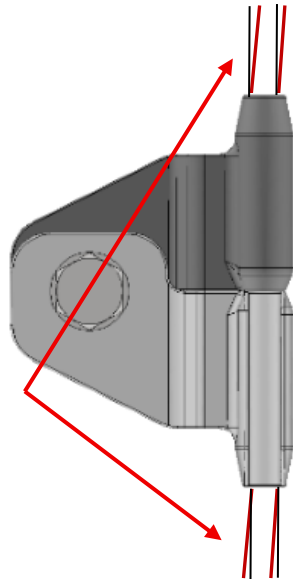

- Tighten the fixing bolt between the intermediate anchor and its bracket to 32Nm.
- The intermediate anchor assembly helps to reduce the shock loads during a fall event and ensures that the cable is always kept in place.

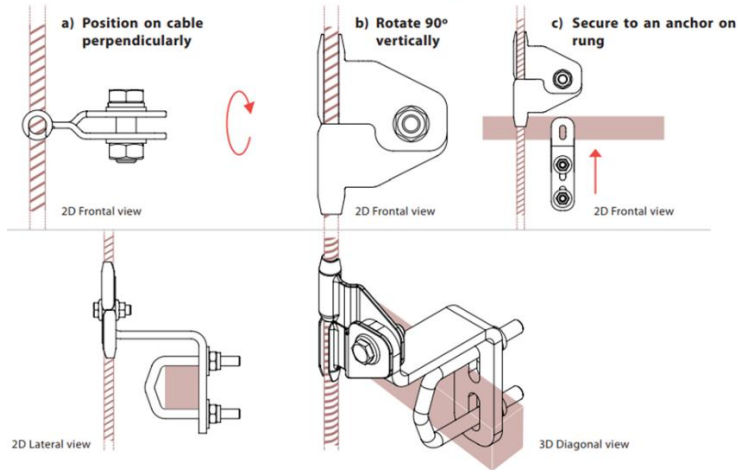

4.5. Tensioner

Tensioning the lifeline of the GVS is part of the Bottom Bracket Assembly.



Material: stainless steel 316 with aluminium tubing.


Breaking strength: N/A

Net weight: 0.635kg.

The cable tensioner is used for setting the tension of the lifeline to the required value, and to absorb any movement in the cable (for example caused by wind loads).

The tension indicator on the tensioner allows instant checking of the correct tension on the lifeline.

To install the tensioner, follow these instructions:

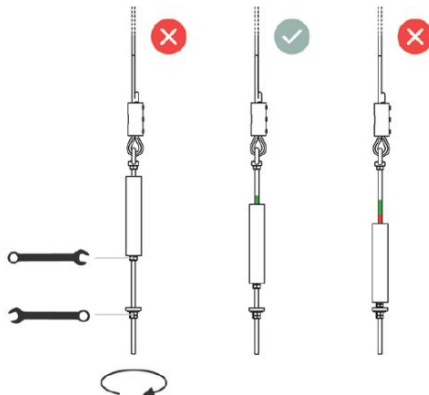

- 4.5.1. Fix the L-bracket to the flat side of the fixing bar, through the middle hole, using an M10 bolt with flat washers (one each side), and Nyloc nut. **Ensure that the certification plate is fitted in between the L-bracket and the fixing bar.** Tighten the bolt to a minimum of 32Nm and making sure that the L-bracket is vertically aligned in line with the fixing bar and with its short side in contact with the fixing bar (its long side should be horizontally orientated below the vertical short side).
- 4.5.2. Position the fixing bar along the back of the ladder rungs with the flat side against rungs. **NOTE: If a Glider Enclosure is fitted to the line (for captive Gliders) the fixing bar must be fitted to the front of the ladder rung and the U-bolts from the back.**
- 4.5.3. Insert the U-bolts from the front side of the ladder rungs through the slots in the fixing bar. Insert the flat washers and the Nyloc and tighten to 32Nm.
- 4.5.4. Remove the bottom nut and washer from the tensioner and push the tensioner threaded rod through the hole in the L-bracket. Thread the washer and nut back on so that the tensioner is attached to the L-bracket, with the anchor eye towards the top. (It is recommended that the thimble be inserted onto the tensioner's anchor eye before the tensioner is installed onto the L-bracket).

NOTE: Ensure that the rung insulation tube is inserted over the rung before tightening the U-bolts. The rung insulator tube must be positioned in such a way as to avoid direct contact between the ladder rungs and the lifeline brackets and U-bolts.

NOTE: For captive (permanent) Gliders, ensure that the Glider/s are threaded with the lifeline before the cable is terminated onto the tensioner. Also, ensure that the Glider Enclosure is threaded with the lifeline before the cable is terminated onto the tensioner. The fixing bar must be positioned on the front of the ladder rung to ensure minimal deflection of the cable through the Glider enclosure.




Bottom fixing bar is attached at the front of the ladder rung to ensure minimal deflection of the cable caused by the Glider Enclosure.

Terminate the cable end through the cable clamp, as per instructions under step 16, making sure to pull any excess cable through the cable clamp before tightening the cable clamp screws.

Cut the cable with a cable cutter, (making sure not to damage the lifeline in the process) ensuring the remaining tail length is at least 3cm long so that the cable end cap can be inserted.

To ensure that the cable end cap remains on the cable, heat the cable tip up using a cigarette lighter (this will heat the cable end cap up enough to stick to the cable as it cools down), or alternatively place some glue on the cable tip. Place the cable end cap on the cable end.

Tension the cable by tightening the tensioning nut, until the **green** tension indicator can be seen below the anchor eye of the tensioner.

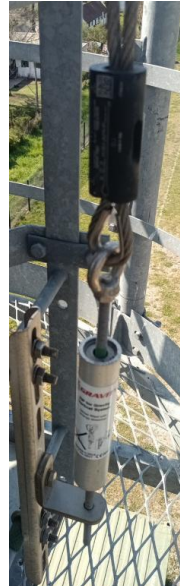

CAUTION: Excessive tension must not be applied through the tensioning unit. If the red indicator shows, tension must be released.

Then check the performance of the system over its entire length in the operating configuration. If not done yet, ensure that intermediate anchor fixings are torqued correctly.

4.6. Glider enclosure

The Glider Enclosure protects captive Gliders from exposure to the elements.

Material: stainless steel 316 with aluminium tubing.

Breaking strength: N/A

Net weight: Different according to capacity (single, double or triple Glider Enclosures).

The Glider enclosure is installed at the bottom end of the lifeline. It is fixed to a ladder rung, just above the lifeline's bottom anchor assembly. Once installed, the Glider enclosure serves as a protective housing for the Glider, to protect it against exposure to the elements.



Care should be taken to ensure that the Glider enclosure is correctly positioned and aligned, so it allows for easy insertion and removal of the Glider, while not deflecting the cable or interfering with the bottom tensioner.

The Glider enclosure is installed by fixing it onto the rung above the bottom anchor assembly, using the bolts provided. The bolts are tightened to 32Nm.

NOTE: Ensure that the rung insulation tube is inserted over the rung before tightening the Glider Enclosure bolts. The rung insulator tube must be positioned in such a way as to avoid direct contact between the ladder rungs and the Glider Enclosure and bolts.



4.7. Anti-pivot bar

The anti-pivot bar prevents the single-glider enclosure from pivoting around the ladder rung on which it is fixed.

Material: stainless steel 316.

Breaking strength: N/A

Net weight: 0.20kg.

The anti-pivot bar is installed at the same time as the glider enclosure. It is located between Glider Enclosure and the ladder rung. When the Glider Enclosure bolts are tightened, it keeps the anti-pivot bar in place.



During installation, it is important to ensure that the anti-pivot bar is adjusted vertically so that its bottom end overlaps the rung below the Glider Enclosure. This will ensure that when the Glider Enclosure pivots downwards around the ladder rung, the anti-pivot bar stops it from moving, as it presses against the front of the rung.

4.8. Glider with shock absorber

The Glider is used to connect the user to the lifeline and is designed to absorb the forces during a fall event.

Material: stainless steel 316 with textile shock absorber.

Breaking strength: N/A

Net weight: 0.64kg.

The Glider is the PPE that attaches the user to the lifeline. It is fitted with a connector that must be attached to the user's chest D-ring of their harness.



Gliders are either removable or captive. A removable Glider must not be left on the lifeline. A captive Glider must be stored in the Glider Enclosure when not in use.

The Fall Arrest Glider accompanies the progression of the user and passes the anchors smoothly; it will lock automatically in case of a fall. The Textile energy absorber will develop between 160mm up to 300mm in the event of a fall expected at 100kg.

To install a captive Glider on the lifeline system, the Glider must be installed, and the locking bolt engaged and tightened. It is sealed in place using the thread locking resin which must fill the hole completely, to prevent the bolt from being removed afterwards – see below.

NOTE: This is usually done by Gravity before the components are dispatched for installation.



Once the Glider is installed onto the lifeline, it must be used along the full length of the lifeline as a function test, before the system can be certified.

4.9. Certification Plate and tag

The certification plate and tag contain important information and is used to identify the lifeline.

Material: stainless steel 316 with aluminium tubing.

Breaking strength: N/A

Net weight: 0.25kg.

Recertification must be performed annually in accordance with EN 365.

The manufacturer's label must be installed in the immediate vicinity of the line, where users attach themselves to the line (in this case, it is fixed on the bottom anchor assembly, between the L-plate and the fixing bar).

To ensure that the required annual inspections are up to date, an Inspection Plate must accompany the system and must show the date of the next inspection on the **green** sticker which must be placed on the Information Plate.



A new inspection **green** date sticker must be applied when the system is recertified.

Manufactured by

GRAVITY

Gravity Global

Gravity Vertical System



**BEYOND THIS AREA WEARING A HARNESS AND
SECURED BY A FALL ARREST SYSTEM ARE
MANDATORY**

Project name
Gravity Access Office
Company
Gravity Access
Installation date
18/09/2025
Length
1m

Serial #
0012345
Location
R21 Business Park
x max. 150kg



EN353:2017

Installed by

GRAVITY
ELEVATING SOLUTIONS

GRAVITY GLOBAL

Unit 2 Lachelle House 97 Sovereign Drive - R21
Corporate Park
Irene, Centurion
South Africa
0861101213
www.gravitygh.co.za




Sticker

1. Manufacturer's information
2. QR code to get direct access to the information related to the installation.
3. Equipment type and applied standards.
4. Installed details
5. Information about the projects and client.
6. Installation date
7. System length
8. Serial number.
9. System location.
10. Maximum number of users and their max weight.
11. It is mandatory to use a rope access harness with an energy absorbing system according to EN355.
12. It is mandatory to read the user manual first.
13. Inspection sticker.

5. Certification

Gravity Global has a quality assurance program called the Gravity Quality System. This is to ensure that every GVS is installed correctly before a certificate is issued.

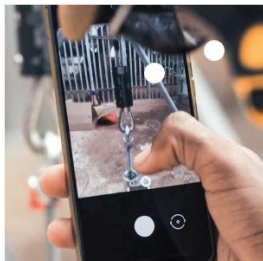

The Gravity Quality System APP is used on a smartphone. The application can be used with or without internet access to capture all the required evidence of the system installation. The information is then verified and reviewed to ascertain the correctness of the installation before a certificate is issued for the system.

No installation may be signed off without Gravity's approval, no certificate will be issued, and all liability will remain with the installer. A certificate will only be issued once Gravity has confirmed that the installation is correct, based on the evidence submitted by the installer. The liability will then shift from the installer to the manufacturer.

If the Gravity Quality system cannot be used, the installer is required to provide Gravity Global with documentation regarding the installation or recertification.

Following are recommendations, and information relating to the documentation required, after installation.

For the installer, user, manufacturer and system owner, the documentation on the installation provides evidence that the installation was performed correctly. Also, it serves as an essential foundation for further examination of the installation.

After installation, the installer sends Gravity Global copies of the documentation for the installation. This original documentation must be kept in the building for subsequent reviews of the GVS.

Documentation on the installation must contain at least the following information:

- 5.1.1. The address and/or location of the installation.
- 5.1.2. The name and contact details of the company that carried out the installation.
- 5.1.3. The name of the person responsible for the installation.
- 5.1.4. The product identification (manufacturer of the anchor, type, model/item);
- 5.1.5. The fixing device (manufacturer, product, and transverse tensile forces eligible).
- 5.1.6. The schematic plan of the installation, for example, a lattice tower, and information relevant to the user, such as the position of the anchor points.
- 5.1.7. Verification is required that the GVS installation:
- 5.1.8. Has been installed per manufacturer's installation instructions.
- 5.1.9. Is consistent with the plan, where applicable.
- 5.1.10. Was attached to the specified support.

- 5.1.11. Has been set as specified (e.g., number of bolts, correct materials, position/location correct).
- 5.1.12. Was put into service according to information supplied by the manufacturer.
- 5.1.13. Came with photographic information / documentation.
- 5.1.14. When several anchor points must be photographed for identification purposes, it is recommended to mark the anchoring devices with numbers and incorporate this numbering in the inspection records of the anchoring device and the ground plan in the installation area.
- 5.1.15. Fixing details and joints must be located as per drawings, where applicable.
- 5.1.16. Torque all fixing nuts and bolts as per indicated specifications.

If the GVS does not pass the certification, a **Red** sticker needs to be placed on the Information Plate stating the system is not safe for use and an action plan must be setup to rectify the problem.

Periodic Examination And Repair History


[illegible]

6. Gravity Quality System


6.1. Installing the software

Step 1. Open the relevant APP store on your smart phone.

Step 2. Download and install the SafetyCulture App.

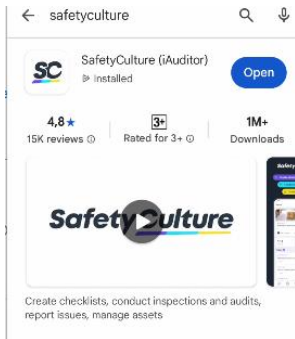


Step 3. Login with your username and password which will be assigned to you.

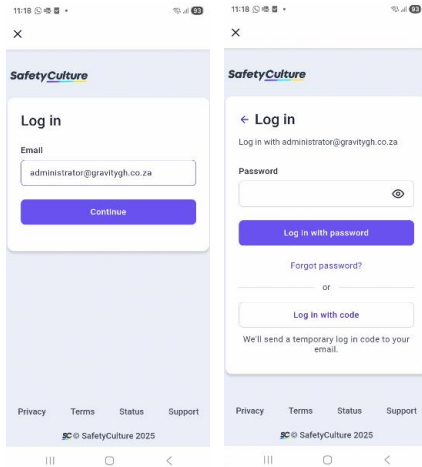


6.1. Set your GEO Tag Information

Step 1. Select More

Step 2. Scroll down and select Settings

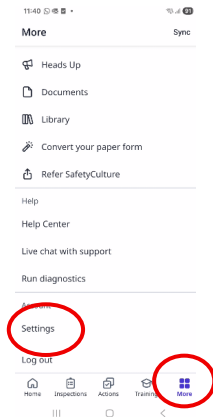


Step 3: Scroll down to PHOTO OPTIONS and ensure both “Add date and time stamp” and “Add coordinates stamp and metadata” is selected.

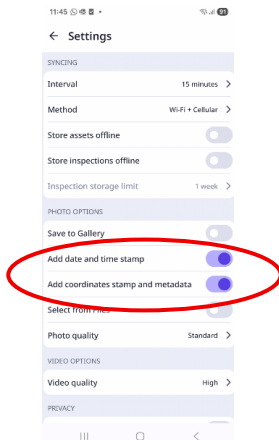


6.2. Set the camera resolution

Step 1. Select More


Step 2. Scroll down and select Settings

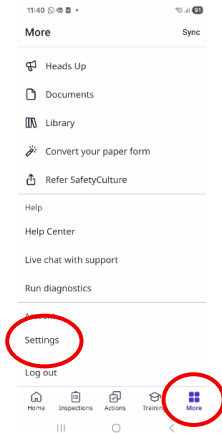

Step 3: Scroll down to PHOTO OPTIONS and ensure “Photo quality” is set to standard.

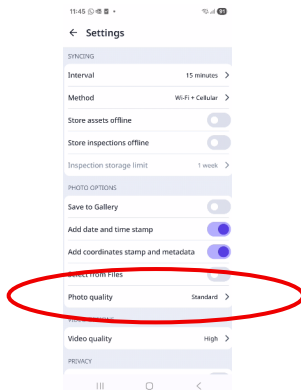


Step 4. To change it, press the right arrow and make your selection from the pop-up box.

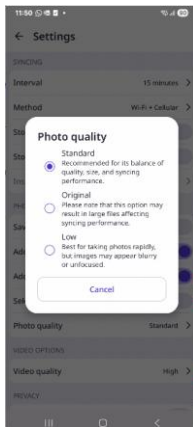


6.3. How to manually sync your phone with SC

Step 1. Select “More” and “Sync”

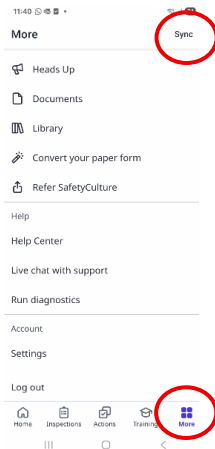


6.4. Starting a new Inspection Form

Step 1. To start a new inspection form, select Inspections and select the relevant Template. Scroll down to the template you require. You will only have access to templates assigned to you.

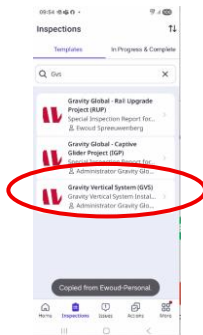


6.5. Completing an existing Inspection form

Step 1. To complete an inspection form, select Inspections, In Progress & Complete and select the relevant Inspection you need to complete. You will only have access to Inspection Forms assigned to you.

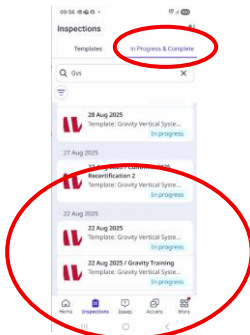


6.6. Completing questions

Step 1: All question that are compulsory to answer have a **Red** line on the side. The line will disappear once the question has been answered. Questions without a **Red** line are optional to complete. You cannot complete the inspection without completing all compulsory questions

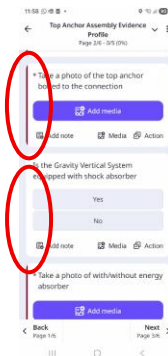

Step 2: Where media is required, select media and take a photo or a video with your camera. In most cases we will not be adding footage from our gallery.

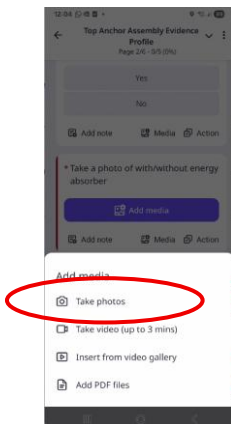

For more information see the manual under Documents on the home page.