



REPRINT Use this function to reprint memory.	the last transaction or any transaction stored in the terminal's
IDLE PROMPT	Touch Credit
TIPS PENDING MORE SALES	Touch More
REPRINT VIEW PRINT RPRT RPRT	Touch Reprint
ENTER INVOICE #	Key invoice number and press Enter or press Enter to reprint last receipt
PRINT CUST RECEIPT YES NO	Touch Yes to print customer receipt.
REPRINT VIEW PRINT RPRT RPRT	Press Clear to return to idle prompt

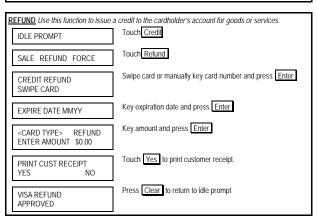


DEBIT SALE (with Cash Back) Use thi	s function to authorize and capture transactions for settlement.
	Touch Debit
IDLE PROMPT	Touch Debit
SALE REFUND	Touch Sale
O'LL TELOTIS	
DEBIT SALE	Swipe card on terminal or pin pad
SWIPF CARD	Debit card can't be manually keyed
SWIFE CARD	bebit card carrebe mandally keyed
	Verify last 4 digits of account number and Touch Yes
LAST FOUR ACCOUNT	
NUMBERS MATCH? ####	
YES NO	
_	Key amount and press Enter
EDS DEBIT SALE	icey amount and press Enter
ENTER AMOUNT \$0.00	
	Ken and had an end and Edua
SALE AMT:\$0.00	Key cash back amount and press Enter
CASH BACK AMT	
\$0.00	
PLEASE ENTER PIN	Instruct customer to enter PIN and press Enter . Do not
	ask customer for the PIN
DIALING	Terminal communicates with the host for approval
DIALING	· · · · · · · · · · · · · · · · · · ·
_	Touch Yes to print customer receipt
PRINT CUST RECEIPT?	Touch Test to print customer receipt
YES NO	
	Droop Close to return to idle prempt
DEBIT SALE	Press Clear to return to idle prompt
APPROVED 000000	
_L	


TIP ADJUSTMENT Use this function IDLE PROMPT	to add the tip amount to a transaction that is in the current batch. Touch Credit
TIPS PENDING MORE SALES	Touch Tips
ENTER INVOICE #	Key invoice number and press Enter
VS SALE 00000 TIP \$0.00 AMOUNT \$1.00 XXXXXXXXXXXXXXXX <prev edit="" next=""></prev>	Touch Edit
NEW TIP \$0.00	Key tip amount press Enter
VS SALE 00000 TIP \$0.10 AMOUNT \$1.10 XXXXXXXXXXXXXXXX <prev edit="" next=""></prev>	Press Clear to return to idle prompt


BALANCE INQUIRY Use this function to perform a Balance Inquiry.	
IDLE PROMPT	Touch Credit
AUTH CLOSE INQUIRY	Touch Inquiry
CREDIT INQUIRY SWIPE CARD	Swipe card or manually key card number and press Enter
EXPIRE DATE MMYY	Key expiration date and press Enter
DIALING	Terminal communicates with the host
APPROVED OK 0000	Press Clear to return to idle prompt

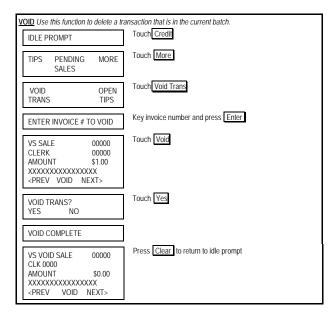

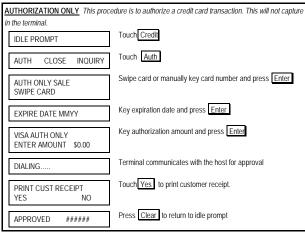

^{© 2009} First Data. All rights reserved. All trademarks and service marks referenced in this material are the property of their respective owners.

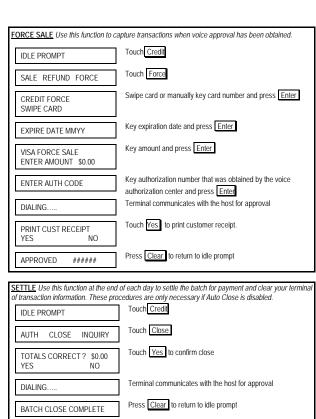

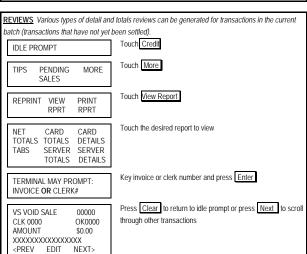

REPORTS Various types of detail and totals reports can be generated for transactions in the current batch (transactions that have not yet been settled).

IDLE PROMPT	Touch Credit
TIPS PENDING MORE SALES	Touch More
REPRINT VIEW PRINT RPRT RPRT	Touch Print Report
NET CARD CARD TOTALS TOTALS DETAILS TABS SERVER SERVER TOTALS DETAILS	Touch the desired report to view
PRINTING REPORT	Press Clear to return to idle prompt

IDLE PROMPT	Touch Credit
SALE REFUND FORCE	Touch Sale
CREDIT SALE SWIPE CARD	Swipe card or manually key card number and press Enter
EXPIRE DATE MMYY	Key expiration date and press Enter
CARD PRESENT? YES NO	Touch Yes if the card is present or Touch No if the card not present
VISA SALE ENTER AMOUNT \$0.00	Key amount and press Enter
ADDRESS	Key the first 5 digits of the customer's address and press
ZIP CODE	Key customer's zip code and press Enter
DIALING	Terminal communicates with the host for approval
COLLECT \$0.00 ACCEPT PARTIAL AMOUNT YES/NO	Touch the desired option
PRINT CUST RECEIPT YES NO	Touch Yes to print customer receipt
APPROVED OK 0000-00 AVS = XXX	Press Clear to return to idle prompt

FIRST DATA FD 400 OUICK REFERENCE GUIDE

Retail (750FD400)

QRG-