



LPC1768_Connection_Guide


1. Connect one end of the **USB cable** to the **System USB Port** and the other end to the **female RS232 (Long gray) cable**

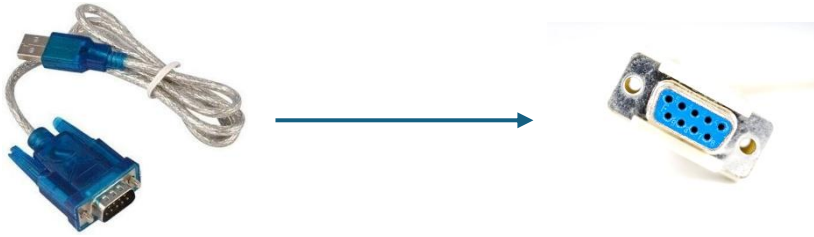

2. Connect the male side of **RS232 (Long gray) cable** to the **female port of the KIT (Left side)**

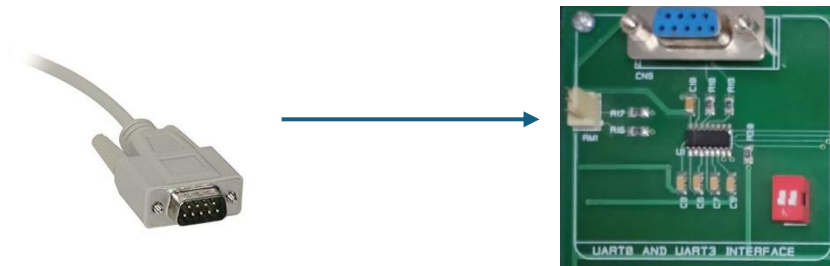

3. On the right side connect the **Power supply cable (Gray Cable)** to the **male port** on the kit

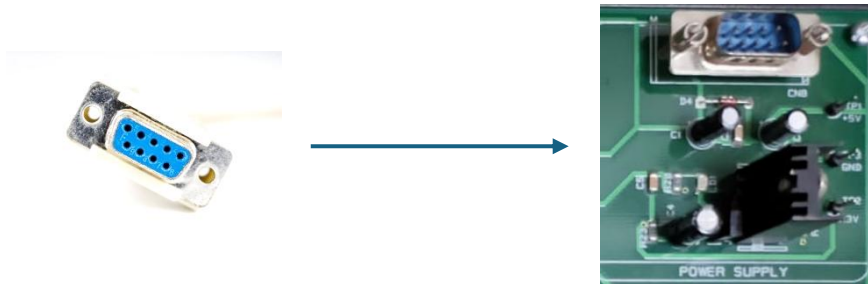

4. Make the necessary connections for the program using the **FRC cable**.
5. Power ON the kit



Warning



ALWAYS POWER-OFF THE KIT WHILE MAKING CONNECTIONS