rgpad — RG35XXH layout

Gamepad → keyboard and mouse. Config: /etc/rgpad.conf, apply: systemctl restart rgpad

Buttons

Select	ENTER
Start	Ctrl (hold)
Menu	next layer (abc → ABC → 123)
L1	ESC
R1	mouse: left button
L2	F10
R2	F9
L3 (left stick press)	mouse: middle (paste in gpm)
R3 (right stick press)	mouse: right button
D-pad ↑	UP
D-pad ↓	DOWN
D-pad ←	LEFT
D-pad →	RIGHT


Sticks and combos

Left stick + X / A / B / Y	character: 8 directions × 4 buttons (p. 2)
Left stick at rest + button	X = Tab, A = Space, B = Backspace, Y = Delete
Right stick	keys mode — see the wheel on page 2
Start + Menu	toggle the mapping (gamepad goes to games)
Vol+ / Vol−	not captured (volume)

How to type a character

1. Deflect the left stick in one of 8 directions.
2. Press X, A, B or Y — buttons go clockwise from the top: X (top), A (right), B (bottom), Y (left).
3. Hold the button for auto-repeat.

Example (abc layer): ↑ + X = a, ↑ + A = b, → + A = j.

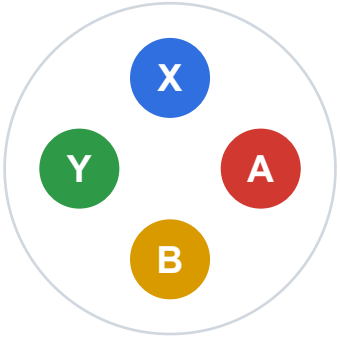


Indicator (red LED)

- off — abc layer
- on — ABC layer
- blinking — 123 layer
- pulsing — mapping disabled

Chords: left stick + X / A / B / Y

Each sector shows the characters for X (top), A (right), B (bottom), Y (left). Center — stick at rest. Menu switches the layer.

layer abc

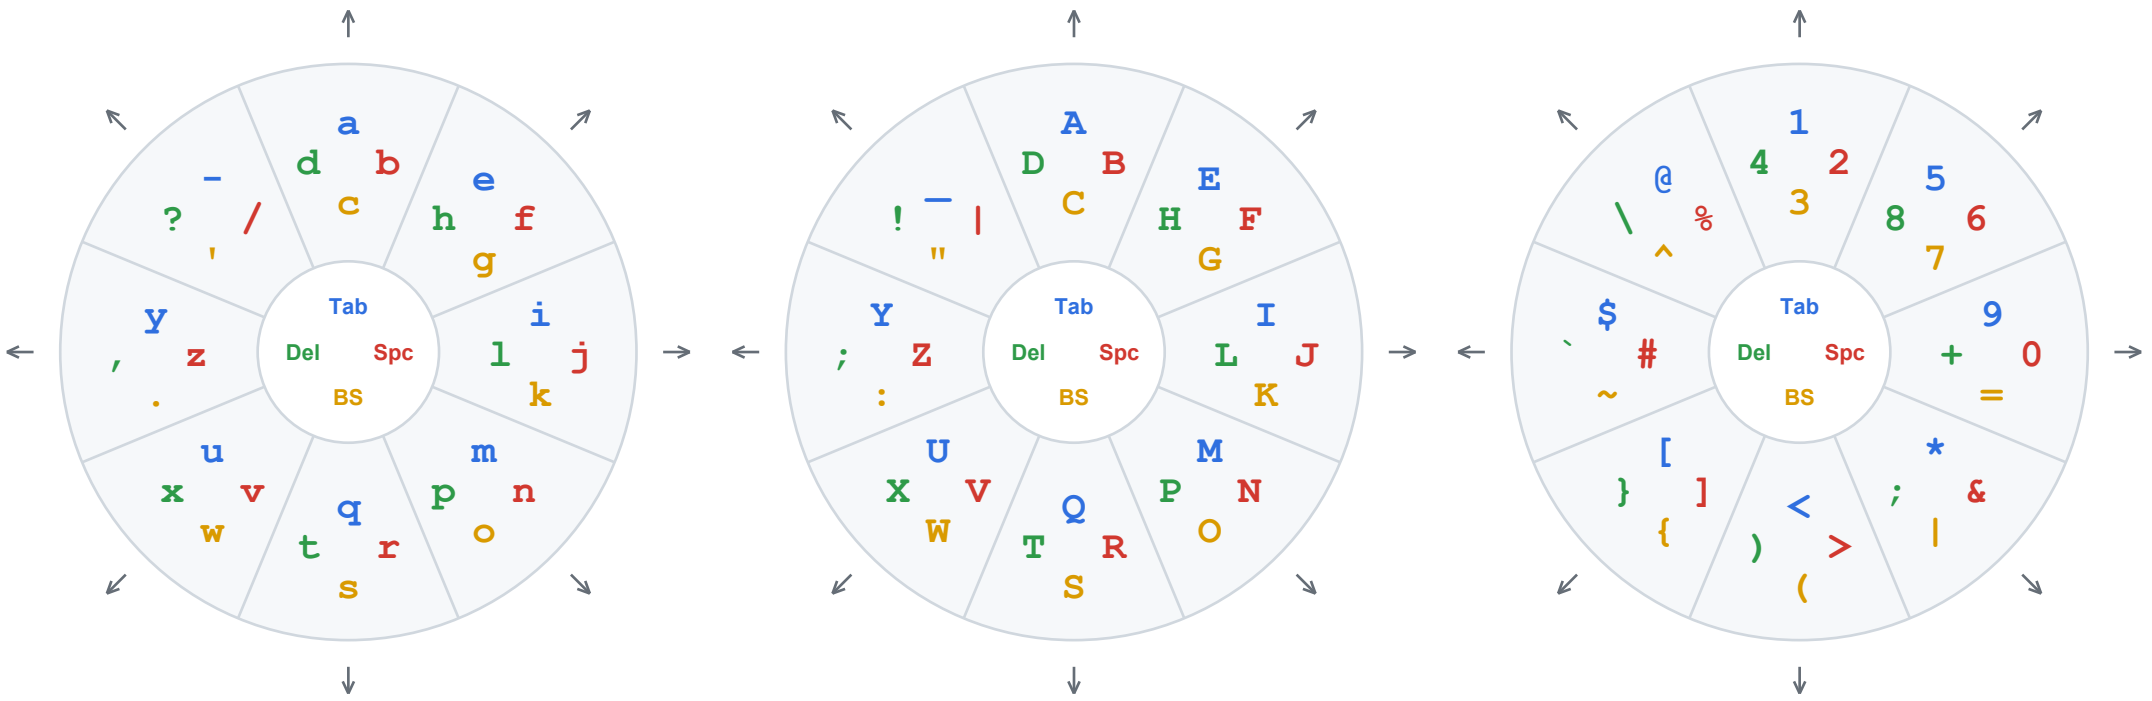

layer ABC

layer 123

Generated from rgpad.conf. Characters are typed on the US layout; hold Start + character = Ctrl+character.

Right stick keys

mode = keys in [right_stick]: each direction holds one key while the stick is deflected past the threshold.

