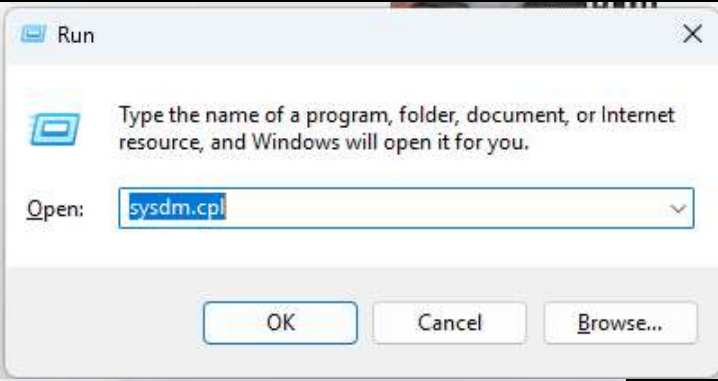
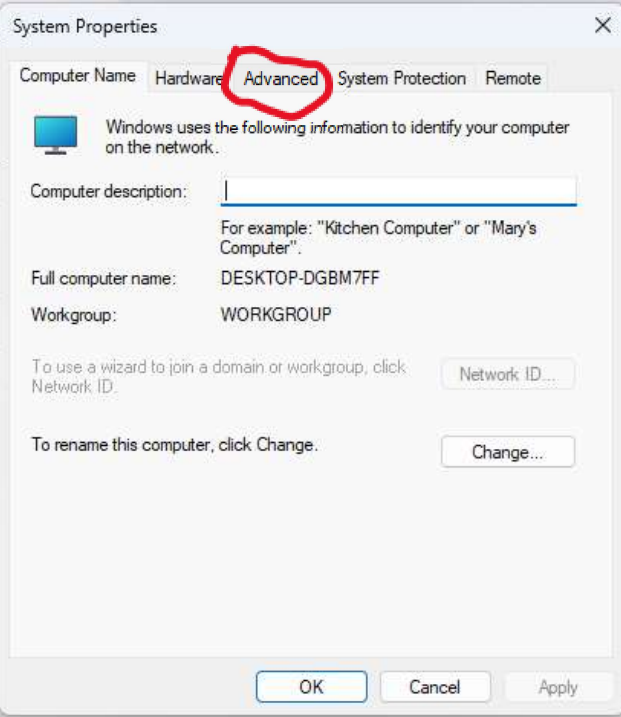
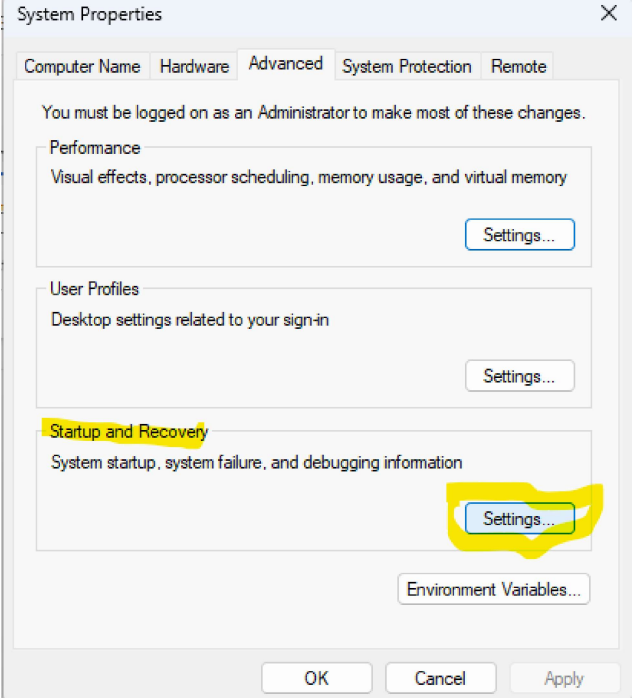
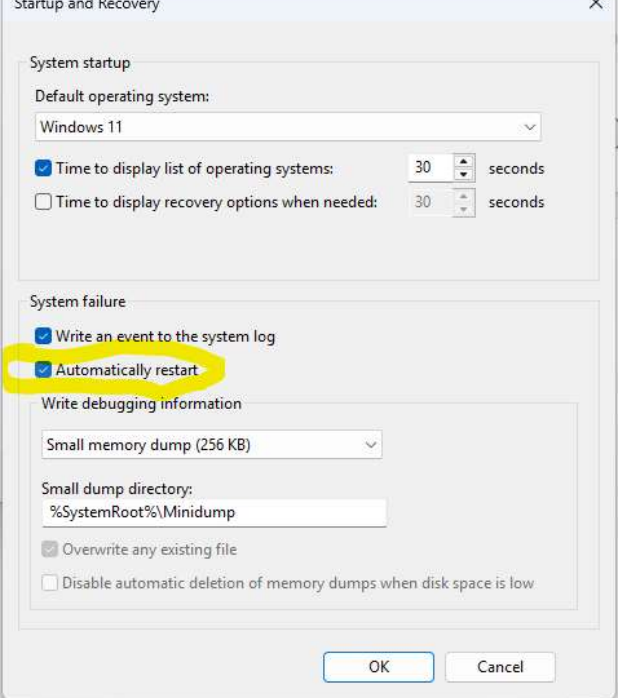


Disable Automatic Restarts (to see error messages)

If your Dell PC suddenly restarts while working, you can disable automatic restarts to see the actual error (Blue Screen) instead of an instant reboot. Follow 5 steps.

1	Press Windows Key + R to open the Run dialog box. Type sysdm.cpl and click the OK button or press Enter to continue.	
2	You will see the System Properties window. Click on the Advanced tab.	

3	On the Advanced tab, look under the <i>Startup and Recovery</i> section and click the Settings button.	 The screenshot shows the 'System Properties' dialog box with the 'Advanced' tab selected. Under the 'Startup and Recovery' section, the 'Settings...' button is highlighted with a yellow circle.
4	On the next window, under <i>System failure</i>, uncheck the box for Automatically restart.	 The screenshot shows the 'Startup and Recovery' dialog box. Under the 'System failure' section, the 'Automatically restart' checkbox is highlighted with a yellow circle.
5	Click OK then OK again on the next window and then restart your PC. The next time your PC hits an error, you should see a blue screen with an error code or message that can provide some information.	