
The Size Class File at a Glance

`size-class-master.xlsx`: the master list that gives every model in the Open Orders report its size class. Two tabs; the macro reads both.

1 Set-up tab

Which size classes exist

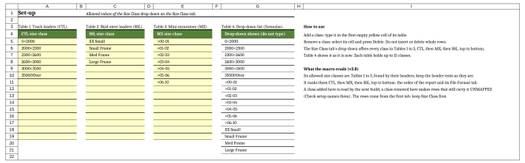

- Three tables: CTL, SSL, MX
- You type the classes in the yellow cells
- Builds the list for the drop-down

2 Size Class tab

Which class each model is in



	A	B	C	D	E
1	HP	Rated Operating Capacity	Name of machine	Size Class	Notes
2	55	1,490	T450	0<2000	class written 0<2000 (sheet: <2000)
3			T550	0<2000	class written 0<2000 (sheet: <2000); REVIEW: HP and ROC blank on the sheet
4	70	2,200	T595	2000<2300	as on the sheet
5			T62	2000<2300	REVIEW: HP and ROC blank on the sheet
6	68	2,300	T64-2	2200<2600	as on the sheet
7	74	2,450	T66-2	2300<2600	as on the sheet
8	74	2,570	T650	2300<2600	as on the sheet
9	74	2,900	T76-2	2600<3000	as on the sheet
10	74		T740	3000<3500	REVIEW: ROC blank on the sheet
11	92	3,475	T770	3000<3500	as on the sheet
12	105	3,800	T86-2	3500?Over	class written 3500?Over (sheet: 3500 & Over)
13	23.5	760	S70	EX Small	as on the sheet
14	49	1,370	S650	Small Frame	as on the sheet
15	68	2,000	S590	Med Frame	as on the sheet
16	68	2,300	S64-2	Med Frame	as on the sheet
17	74	2,690	S650	Med Frame	as on the sheet
18	74	2,400	S66-2	Med Frame	as on the sheet
19	74	2,900	S76-2	Med Frame	as on the sheet
20	92	3,350	S770	Large Frame	as on the sheet
21	105	3,500	S86-2	Large Frame	as on the sheet
22	10.2	2,593	E30	>00-01	as on the sheet; Rated Operating Capacity column holds the operating weight (lb)
23	15	3,774	E37	>01-02	as on the sheet; Rated Operating Capacity column holds the operating weight (lb)
24	15	4,367	E20	>01-02	as on the sheet; Rated Operating Capacity column holds the operating weight (lb)
25	24.8	6,489	E26	>02-03	as on the sheet; Rated Operating Capacity column holds the operating weight (lb)
26	24.8	7,403	E32	>03-04	as on the sheet; Rated Operating Capacity column holds the operating weight (lb)
27	24.8	7,609	E35	>03-04	as on the sheet; Rated Operating Capacity column holds the operating weight (lb)
28	33.2	7,893	E38	>03-04	as on the sheet; Rated Operating Capacity column holds the operating weight (lb)
29	40.4	9,280	E40	>04-05	as on the sheet; Rated Operating Capacity column holds the operating weight (lb)
30	42.6	9,830	E48	>04-05	as on the sheet; Rated Operating Capacity column holds the operating weight (lb)

- One row per model (29 today)
- Name of machine and its Size Class
- Size Class is a drop-down of the Set-up classes

3 The macro reads it

Config sheet of the report builder

- **Choose size class file...** points the macro at this workbook (setting `SizeClassFile`)
- **Check setup** reads both tabs and lists anything wrong, without building
- **Build report** reads them again, then builds

4 The report uses it

Every order row gets a class

- Each order's MODEL_GROUP is looked up by Name of machine
- Rows sorted by class: CTL, then MX, then SSL, in the Set-up order
- A model not on the list is **UNMAPPED** and sorted last

The three families

Family	Machines	Class by	Example class
CTL	Compact track loaders	Rated operating capacity, lb	`2000<2300`
SSL	Skid-steer loaders	Frame size	`Med Frame`
MX	Mini excavators	Operating weight, tonnes	`>01-02`

In this guide

Sheet 1	The file at a glance (this sheet)
Sheet 2	The Size Class tab: one row per model
Sheet 3	The Set-up tab: the list of classes
Sheet 4	How the macro reads the file, and what its messages mean
Sheet 5	**Add a new size class to CTL, SSL or MX**

Most important job: add a new size class — Sheet 5

Set-up tab: type the class in the first empty yellow cell of its table (CTL, SSL or MX). It appears in the drop-down at once; pick it for its models on the Size Class tab, save, then **Check setup** on Config.

Size Class Tab

The first tab: one row per model. The macro reads two columns, Name of machine and Size Class.

	A	B	C	D	E
	① HP	② Rated Operating Capacity	③ Name of machine	④ Size Class	⑤ Notes
1					
2	55	1,490	T450	0<2000	class written 0<2000 (sheet: <2000)
3			T550	0<2000	class written 0<2000 (sheet: <2000); REVIEW: HP and ROC blank on the sheet
4	70	2,200	T595	2000<2300	as on the sheet
5			T62	2000<2300	REVIEW: HP and ROC blank on the sheet
6	68	2,300	T64-2	2300<2600	as on the sheet
7	74	2,450	T66-2	2300<2600	as on the sheet
8	74	2,570	T650	2300<2600	as on the sheet
9	74	2,900	T76-2	2600<3000	as on the sheet
10	74		T740	3000<3500	REVIEW: ROC blank on the sheet
11	92	3,475	T770	3000<3500	as on the sheet
12	105	3,800	T86-2	3500&Over	class written 3500&Over (sheet: 3500 & Over)
13	23.5	760	S70	EX Small	as on the sheet
14	49	1,370	S450	Small Frame	as on the sheet
15	68	2,000	S590	Med Frame	as on the sheet
16	68	2,300	S64-2	Med Frame	as on the sheet
17	74	2,690	S650	Med Frame	as on the sheet
18	74	2,400	S66-2	Med Frame	as on the sheet
19	74	2,900	S76-2	Med Frame	as on the sheet
20	92	3,350	S770	Large Frame	as on the sheet
21	105	3,500	S86-2	Large Frame	as on the sheet
22	10.2	2,593	E10	>00-01	as on the sheet; Rated Operating Capacity column holds the operating weight (lb)
23	15	3,774	E17	>01-02	as on the sheet; Rated Operating Capacity column holds the operating weight (lb)
24	15	4,167	E20	>01-02	as on the sheet; Rated Operating Capacity column holds the operating weight (lb)
25	24.8	6,489	E26	>02-03	as on the sheet; Rated Operating Capacity column holds the operating weight (lb)
26	24.8	7,403	E32	>03-04	as on the sheet; Rated Operating Capacity column holds the operating weight (lb)
27	24.8	7,659	E35	>03-04	as on the sheet; Rated Operating Capacity column holds the operating weight (lb)
28	33.2	7,893	E38	>03-04	as on the sheet; Rated Operating Capacity column holds the operating weight (lb)
29	40.4	9,180	E40	>04-05	as on the sheet; Rated Operating Capacity column holds the operating weight (lb)
30	42.6	9,830	E48	>04-05	as on the sheet; Rated Operating Capacity column holds the operating weight (lb)

CTL

SSL

MX

The five columns

① HP

For people. The macro does not read it.

② Rated Operating Capacity

Loaders: rated operating capacity in lb. Excavators: operating weight in lb. Use it to decide the class; the macro does not read it.

③ Name of machine *read by the macro*

Must match the MODEL_GROUP in the Order Intake export, e.g. `T770`. Case does not matter. Extra words after the name are fine: `T740 Compact Track Loader` matches `T740`.

④ Size Class *read by the macro*

Pick it from the drop-down. Excel refuses any class that is not on the Set-up tab (Sheet 3).

⑤ Notes

For people. `REVIEW:` marks a row with a figure still to confirm (T550, T62, T740).

Add a new model

1. Go to the first empty row under the table (row 31 today).
2. Type the model in **Name of machine**, as the export spells it.
3. Pick its class in **Size Class**. Not in the list? Add the class first (Sheet 5).
4. HP, capacity and Notes are optional. Save.

Good to know

- Row order does not matter; the report sorts by class. The rows are grouped by family only to read easily.
- A model listed twice: the first row is used, the other is reported.
- Keep the header texts in row 1, and keep this tab first in the workbook.

Set-up Tab

The second tab: the size classes that exist. Tables 1 to 3 are typed by you; Table 4 builds itself and feeds the drop-down.

Set-up — *Allowed values of the Size Class drop-down on the Size Class tab.*

Table 1. Track loaders (CTL).

CTL size class (A)
0<2000
2000<2300
2300<2600
2600<3000
3000<3500
3500&Over

Table 2. Skid-steer loaders (SSL).

SSL size class (A)
EX Small
Small Frame
Med Frame
Large Frame

Table 3. Mini excavators (MX).

MX size class (A)
>00-01
>01-02
>02-03
>03-04
>04-05
>05-06
>06-10

Table 4. Drop-down list (formulas).

Drop-down shows (do not type) (B)
0<2000
2000<2300
2300<2600
2600<3000
3000<3500
3500&Over
>00-01
>01-02
>02-03
>03-04
>04-05
>05-06
>06-10
EX Small
Small Frame
Med Frame
Large Frame

How to use

Add a class: type it in the first empty yellow cell of its table.
Remove a class: select its cell and press Delete. Do not insert or delete whole rows.
The Size Class tab's drop-down offers every class in Tables 1 to 3, CTL, then MX, then SSL, top to bottom; Table 4 shows it as it is now. Each table holds up to 15 classes.

What the macro reads (v2.8)

Its allowed size classes are Tables 1 to 3, found by their headers; keep the header texts as they are.
It ranks them CTL, then MX, then SSL, top to bottom: the order of the report and its File Format tab.
A class added here is read by the next build; a class removed here makes rows that still carry it UNMAPPED (Check setup names them). The rows come from the first tab: keep Size Class first.

(A) Tables 1 to 3: you type

- One table per family: CTL (column A), SSL (C), MX (E)
- One class per yellow cell, spelled as the report should show it
- 15 cells per table
- Keep the green header texts exactly: the macro finds the tables by them

(B) Table 4: do not type

- Formulas stack Tables 1 to 3 into one list: CTL, then MX, then SSL; blanks skipped
- This list is the Size Class drop-down
- It updates as you type in Tables 1 to 3

(C) Order matters

- Top to bottom in a table is the order in the report and on its File Format tab
- Keep each table smallest to largest
- The tab shows SSL in the middle; the report still puts MX before SSL

Remove or rename a class

- Remove: select the cell, press Delete. Never insert or delete whole rows
- Models still showing the old class are skipped and end up **UNMAPPED**: pick a new class for them
- Rename: add the new name, re-pick it for the models, delete the old one

How the Macro Reads the File

What happens when you click the Config buttons, and what to do about each message about the size class file.

1 Point at the file

Config: **Choose size class file...** and pick `size-class-master.xlsx`. Once; again only if the file moves.

2 Read the Set-up tab

Finds the three headers, reads each table top to bottom: these are the allowed classes. No Set-up tab at all: the 17 classes built into the macro are used.

3 Read the Size Class tab

Each row: Name of machine and Size Class. A row with an allowed class is used; any other row is skipped with a warning.

4 Check the Run Log

It states how many classes were read, e.g.

`Size classes: 17 from the Set-up tab (CTL 6, MX 7, SSL 4)`

and lists the UNMAPPED model groups.

Messages about the size class file, and the fix

Problems: the build stops until they are fixed	
has no CTL size class header (or MX, SSL)	A green header on Set-up was changed. Retype it exactly: `CTL size class`, `SSL size class`, `MX size class`.
lists no size classes	Tables 1 to 3 are empty. Type the classes back in.
has no Name of machine or Size Class column	A header in row 1 of the Size Class tab was changed, or Size Class is no longer the first tab.
could not be read	The file moved, was renamed or is open elsewhere. **Choose size class file...** again.
Warnings: the build still runs	
`Set-up tab C9:  "Med Frame" is listed again`	A class typed twice. Delete the second one.
`"UNMAPPED" is not a size class name`	UNMAPPED is the macro's own word. Delete it from the table.
`row 31 E145:  no size class - row skipped`	Pick the model's class in column D.
`"XL Frme" is not a size class - row skipped`	The class is not on Set-up (misspelled, removed or renamed). Pick one from the drop-down, or add it (Sheet 5).
`listed again (first in row 8)`	A model on two rows. Delete one.
In the report	
UNMAPPED model groups on the Run Log	Those models are not on the Size Class tab. Add each one (Sheet 2), then build again.

Title	Project	Macro	Rev.	Date	Drawn	Sheet
How It Is Read	**Open Orders by MSA**	**v2.8**	**1**	**2026-10-16**	**Gust F.**	**4 of 5**

Add a New Size Class: CTL, SSL, MX

THE MOST IMPORTANT JOB

The same steps for all three families; only the table changes. Example: `4000&Over` (CTL), `XL Frame` (SSL), `>10-15` (MX), shaded **peach** in the pictures. Use the class names your size class slide gives.

1 Open the file, go to the Set-up tab

2 Find the table of the family

CTL	Table 1	column **A**	e.g. `4000&Over`
SSL	Table 2	column **C**	e.g. `XL Frame`
MX	Table 3	column **E**	e.g. `>10-15`

3 Type the class in the first empty yellow cell

- Spell it as the report should show it; one class per cell
- Largest class? It goes at the bottom, as in the example
- Belongs between two classes? Select the cells from that spot down to the last class, drag their border one cell down, then type in the gap. Never insert whole rows

4 Check Table 4 (column G)

The new class shows in its place in the list: it is now in the drop-down.

5 Give it to the models, on the Size Class tab

Pick the new class in column D for each model in it; a new model goes in the first empty row (Sheet 2). Save and close.

6 Config: Check setup, then Build report

The Run Log counts the new classes (the example): `Size classes: 20 from the Set-up tab (CTL 7, MX 8, SSL 5)`

Do not: type in Table 4, change the green headers, insert or delete whole rows, or type a class twice or the word UNMAPPED. Up to 15 classes per table.

Set-up tab after step 3

	A	B	C	D	E	F	G
3	Table 1. Track loaders (CTL).		Table 2. Skid-steer loaders (SSL).		Table 3. Mini excavators (MX).		Table 4. Drop-down list (formulas).
4	**CTL size class**		**SSL size class**		**MX size class**		**Drop-down shows (do not type)**
5	0<2000		EX Small		>00-01		0<2000
6	2000<2300		Small Frame		>01-02		2000<2300
7	2300<2600		Med Frame		>02-03		2300<2600
8	2600<3000		Large Frame		>03-04		2600<3000
9	3000<3500		**XL Frame** (3)		>04-05		3000<3500
10	3500&Over				>05-06		3500&Over
11	**4000&Over** (3)				>06-10		4000&Over
12					**>10-15** (3)		>00-01
13							>01-02
14							>02-03
15							>03-04
16							>04-05
17							>05-06
18							>06-10
19					(4)		>10-15
20							EX Small
21							Small Frame
22							Med Frame
23							Large Frame
24							XL Frame

Size Class tab after step 5 (header and last rows)

	A	B	C	D	E
1	**HP**	**Rated Operating Capacity**	**Name of machine**	**Size Class**	**Notes**
26	24.8	7,403	E32	>03-04	as on the sheet; Rated Operating Capacity column hold
27	24.8	7,659	E35	>03-04	as on the sheet; Rated Operating Capacity column hold
28	33.2	7,893	E38	>03-04	as on the sheet; Rated Operating Capacity column hold
29	40.4	9,180	E40	>04-05	as on the sheet; Rated Operating Capacity column hold
30	42.6	9,830	E48	>04-05	as on the sheet; Rated Operating Capacity column hold
31			**E145** (5)	**>10-15**	**new model, new class**

Title	Project	Macro	Rev.	Date	Drawn	Sheet
Add a Size Class	**Open Orders by MSA**	**v2.8**	**1**	**2026-10-16**	**Gust F.**	**5 of 5**