

Battery maintenance



Step 1. Check that the battery terminals are tight



- If its loose, tightening the terminals with a spanner.

Step 2. Check if there's no corrosion on terminals (free of acids)




- If terminals are dirty, remove the acids with warm water.

Step 3: Check battery for hold down clamp/ bracket.



- If the bracket or hold down clamp is loose, use a spanner to tighten them.

Step 4: Check battery acid level.

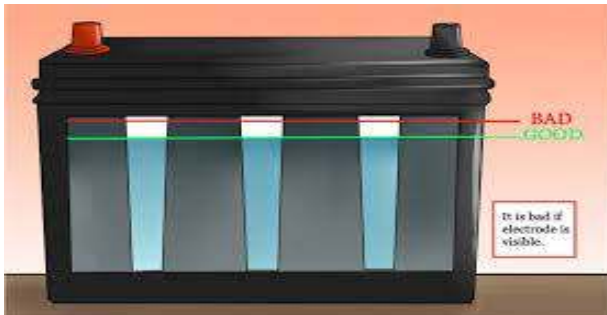

- If its low, top-up.

Step 5: Always maintain that the battery level is 12.5V.



- If the reading is below 12.5V, visit the battery center for further testing.

Feedback

Activity : Worksheet 3

Kwa Thema Skills School

Subject : Maintenance

Grade : Year 2

Date :

Marks :10

Time : 30mins

:(b) _____

:(b) _____

:(b) _____

:(b) _____

:(b) _____