

ISO FUSE SWITCH
(Plate S. P. 1429).

- | Ref. No. | Part. |
|----------|---|
| 300. | End Support Bracket. |
| 301. | Fixed Contact Block (marked "Important - lines this side"). |
| 302. | Fixed Contact Block (no marking). |
| 303. | Side Support Bracket. |
| 304. | Square Front Plate. |
| 305. | Moving Contact. |
| 306. | Split Pin for 305. |
| 307. | Support for 305. |
| 308. | Moving Contact Spring. |
| 309. | Porcelain Body. |
| 310. | Centre Assembly. (consisting of body complete with contacts and lid). |
| 311. | Leather Buffer Washer. |
| 312. | Asbestos Washer for 313. |
| 313. | Porcelain Lid. |
| 314. | Screw for fixing 313. |
| 315. | Bracket for 309. |
| 316. | Asbestos Tube for 309. |
| 317. | Carrier Spindle. |
| 318. | Operating Handle Spring. |
| 319. | Spring Pivot. |
| 320. | Circular Front Plate. |
| 321. | Screw for 320. |
| 322. | Handle. |
| 323. | Circlip for 317. |

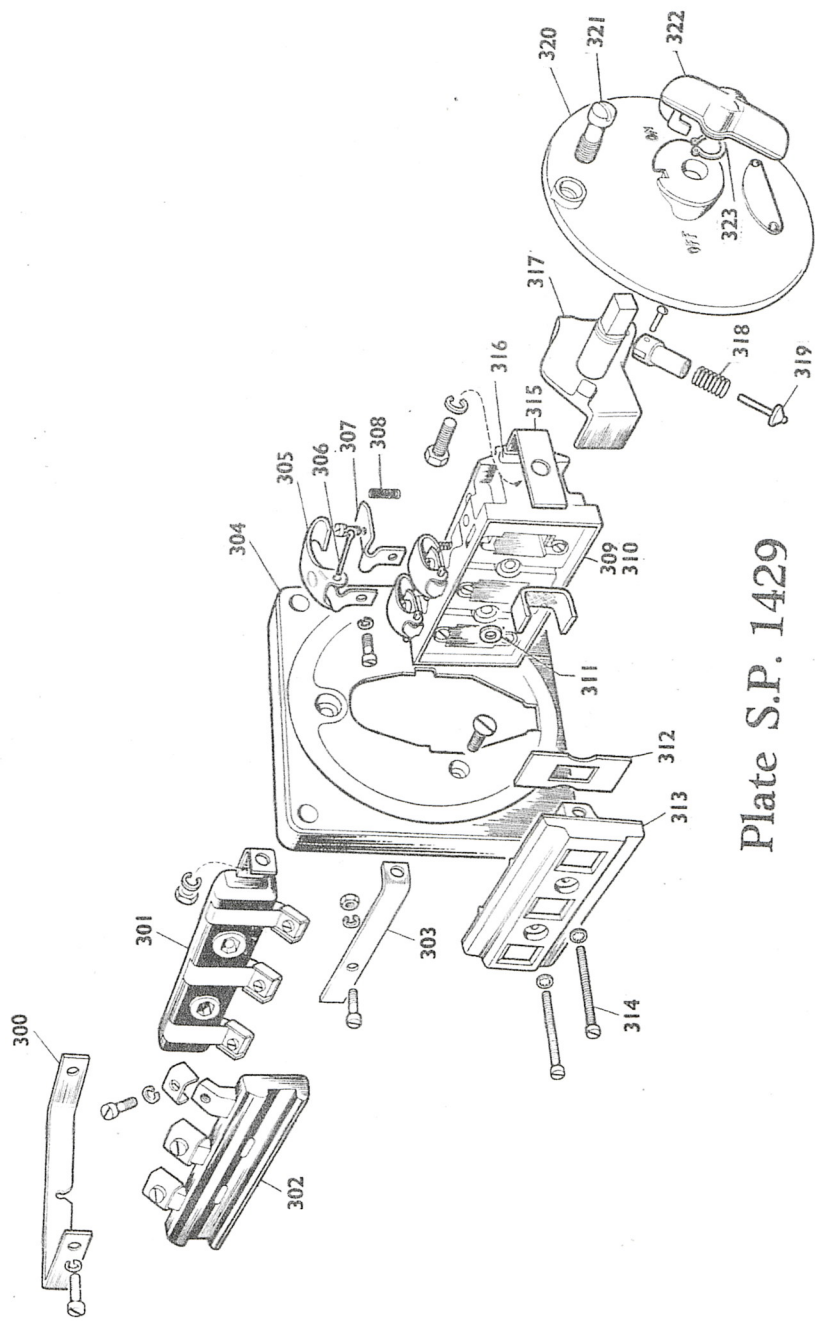


Plate S.P. 1429

IMPORTANT.— WHEN ORDERING SPARES ALWAYS QUOTE INSPECTION NUMBER OF MACHINE.

NO-VOLT CONTACTOR (Plate S. P. 1428).

Ref. No.	Part.	Ref. No.	Part.
250.	Stop Contact Fixed Assembly.	269.	Moving Contact Spring.
251.	Spring for 250.	270.	Main Moving Contact.
252.	Copper Strip Link.	271.	Split Pin for 272.
253.	Main Fixed Contact.	272.	Bakelite Moving Contact Moulding.
254.	Locking Strip for 258.	273.	Moving Contact Assembly complete.
255.	Overload Trip Pin.	274.	Retaining Pin for 269.
256.	Overload Coil (state current rating on 259 when ordering).	275.	Moving Magnet Assembly.
257.	Dashpot Plunger & Washers.	276.	Push-off Spring.
258.	Overload Dashpot Cup.	277.	Insulating Washer for Coil.
259.	Overload Calibration Plate.	278.	Contactor Coil (state coil number or voltage, when ordering).
260.	Terminal Spacing Strip.	279.	Bracket for 280.
261.	Reset Contact Moving Assembly.	280.	Fixed Magnet Assembly.
262.	Spring for 261.	281.	Fixing Screw for 282.
263.	Start Contact Moving Assembly.	282.	Pushbutton Switch.
264.	Spring for 263.	283.	Retaining Plate.
265.	Overload Reset Moulding.	284.	Sudsproof Shroud.
266.	Bakelite Fixed Contact Moulding.	285.	Pushbutton Spring.
267.	Split Pin for 274.	286.	Finger Push (colour Red).
268.	Washer for 269.	287.	Finger Push (colour Black).

IMPORTANT.—WHEN ORDERING SPARES ALWAYS QUOTE INSPECTION NUMBER OF MACHINE.

ALFRED HERBERT LTD., COVENTRY.

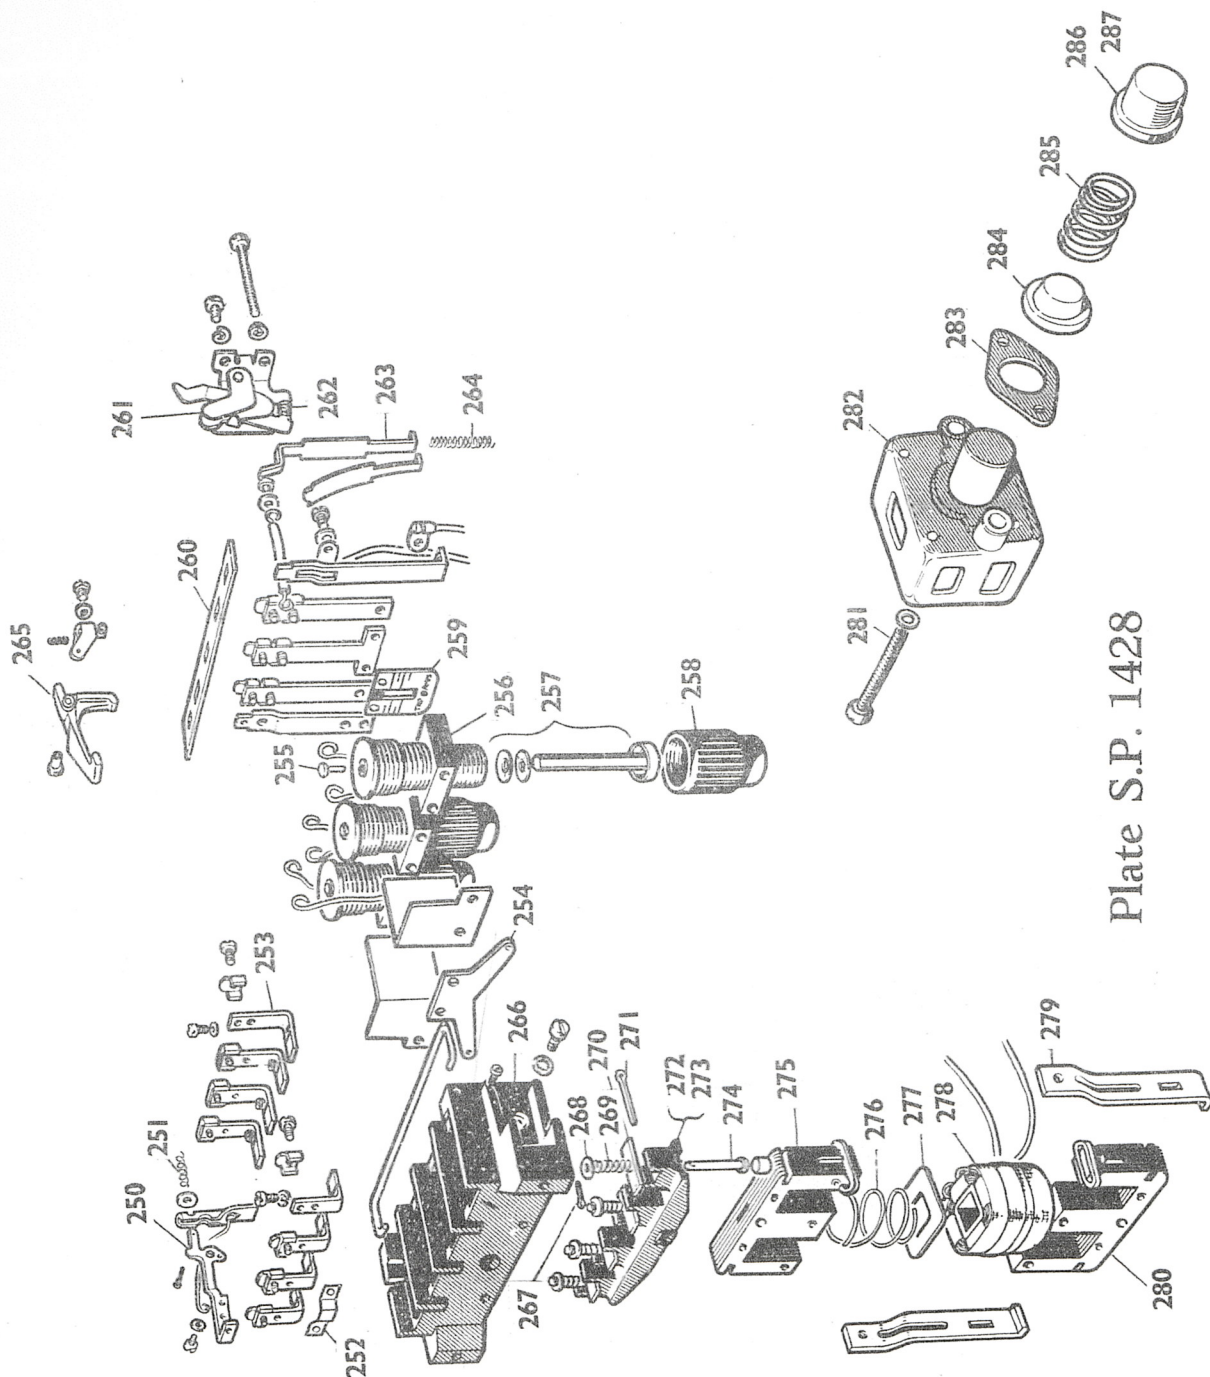


Plate S.P. 1428

TABLE & SADDLE (Plate S.P. 1427).

Ref. No.	Part.	Ref. No.	Part.	Ref. No.	Part.
150.	Table	172.	Pinion Shaft.	193.	Two Wipers.
151.	Two Stops.	173.	Key.	194.	Strip.
152.	Two Bolts.	174.	Pinion 36 T.	195.	Four Screws.
153.	Two Nuts.	175.	Grub Screw.	196.	Two Plates.
154.	Rack.	176.	Ball Journal Bearing.	197.	Ten Screws.
155.	Four Screws.	177.	Circlip.	198.	Handle.
156.	Taper Pin.	178.	Cover Plate.	199.	Handwheel.
157.	Cover.	179.	Three Screws.	200.	Grub Screws
158.	Screw.	180.	Pinion Guard.	201.	Locknut.
159.	Two Screws.	181.	Two Screws.	202.	Oil Plug.
160.	Table Cover.	182.	R.H. Strip.	203.	Three Screws.
161.	Two Screws.	183.	L.H. Strip.	204.	Sleeve.
162.	Screw.	184.	Four Screws.	205.	Bracket.
163.	Washer.	185.	Two Wipers.	206.	Grease Nipple. ^{1/4} BSF
164.	Handle.	186.	Strip.	207.	Two Taper Pins.
165.	Hand Lever.	187.	Five Screws for 186.	208.	Four Screws.
166.	Screw.	188.	Five Nuts.	209.	Key.
167.	Three Screws.	189.	Oiler.	210.	Shaft.
168.	Cover Plate.	190.	Saddle.	211.	Nut (English).
169.	Grease Nipple	191.	Pin.	212.	Nut (Metric).
170.	Circlip	192.	Two Grease Nipples.	213.	Two Grub Screws.
171.	Ball Journal Bearing.				

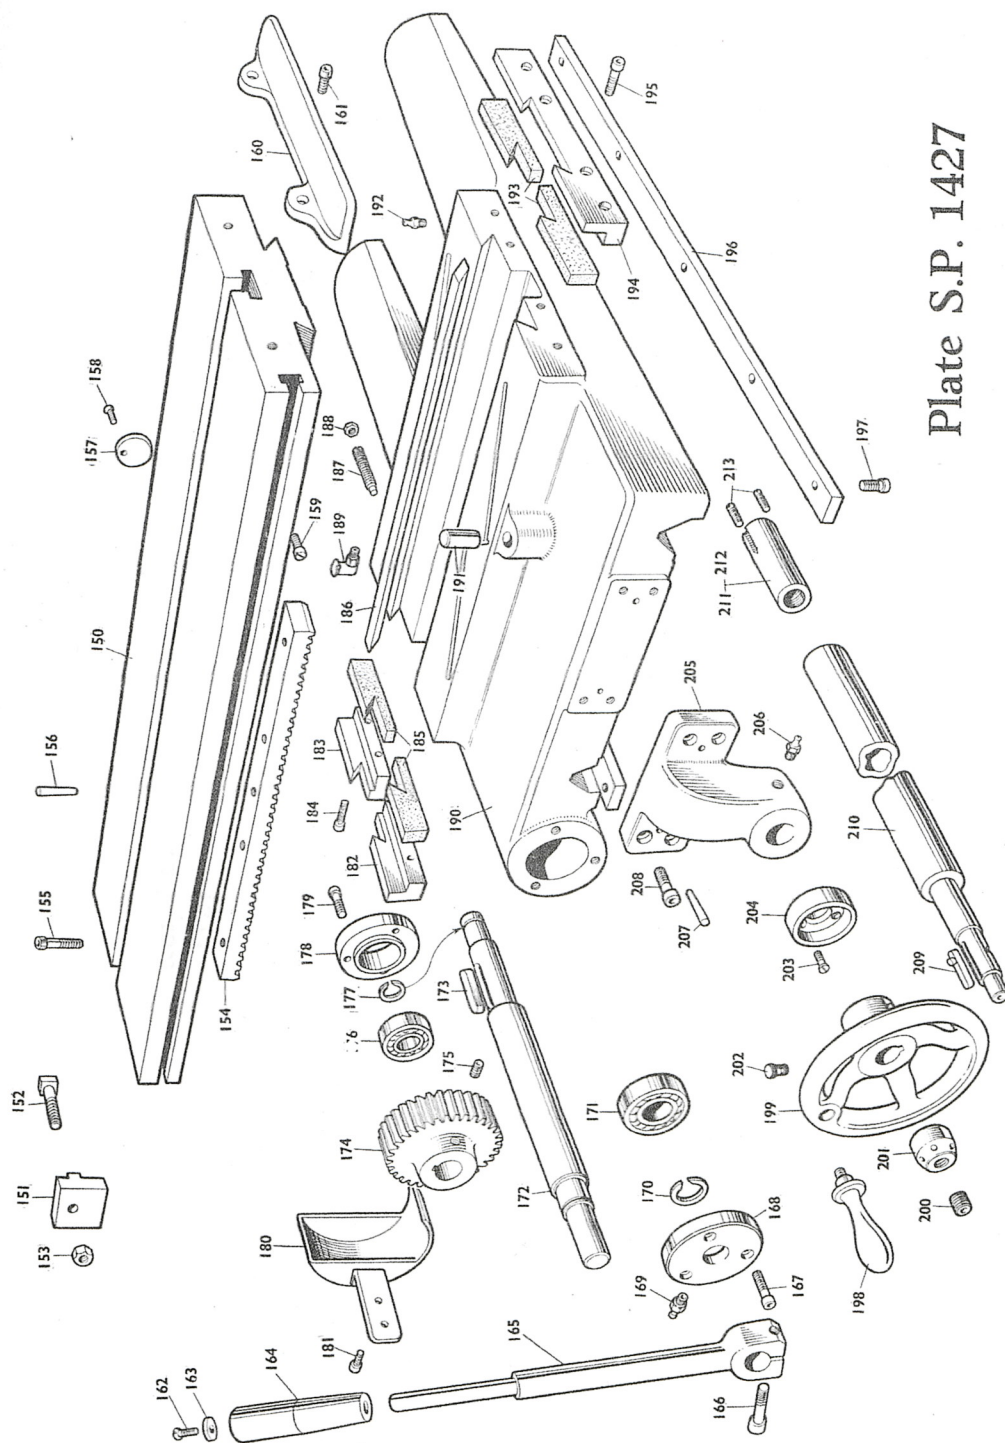


Plate S.P. 1427

SPINDLE & MOTOR DRIVE (Plate S. P. 1426).

Ref. No.	Part.	Ref. No.	Part.
100.	Spacing Tube.	117.	Grinding Wheel.
101.	Roller Bearing.	118.	Bush.
102.	Ring.	119.	Spindle.
103.	Spindle Pulley.	120.	Two Keys.
104.	Locknut complete with 105.	121.	Motor Bracket.
105.	Screw.	122.	Four Studs.
106.	Retaining Plate.	123.	Four Washers.
107.	Three Screws.	124.	Four Nuts.
108.	Two Ball Journal Thrust Bearings. (Supplied as Set).	125.	Four Screws.
109.	Inner Spacing Piece.	126.	Motor.
110.	Outer Spacing Piece.	127.	Washer.
111.	Spacing Bush.	128.	Key.
112.	Nut.	129.	Motor Pulley.
113.	Washer.	130.	Screw.
114.	Locknut.	131.	Vee Belt.
115.	Collar.	132.	Terminal Block.
116.	Pin.	133.	Terminal Cover.
		134.	Domed Head Nut.

IMPORTANT.—WHEN ORDERING SPARES ALWAYS QUOTE INSPECTION NUMBER OF MACHI

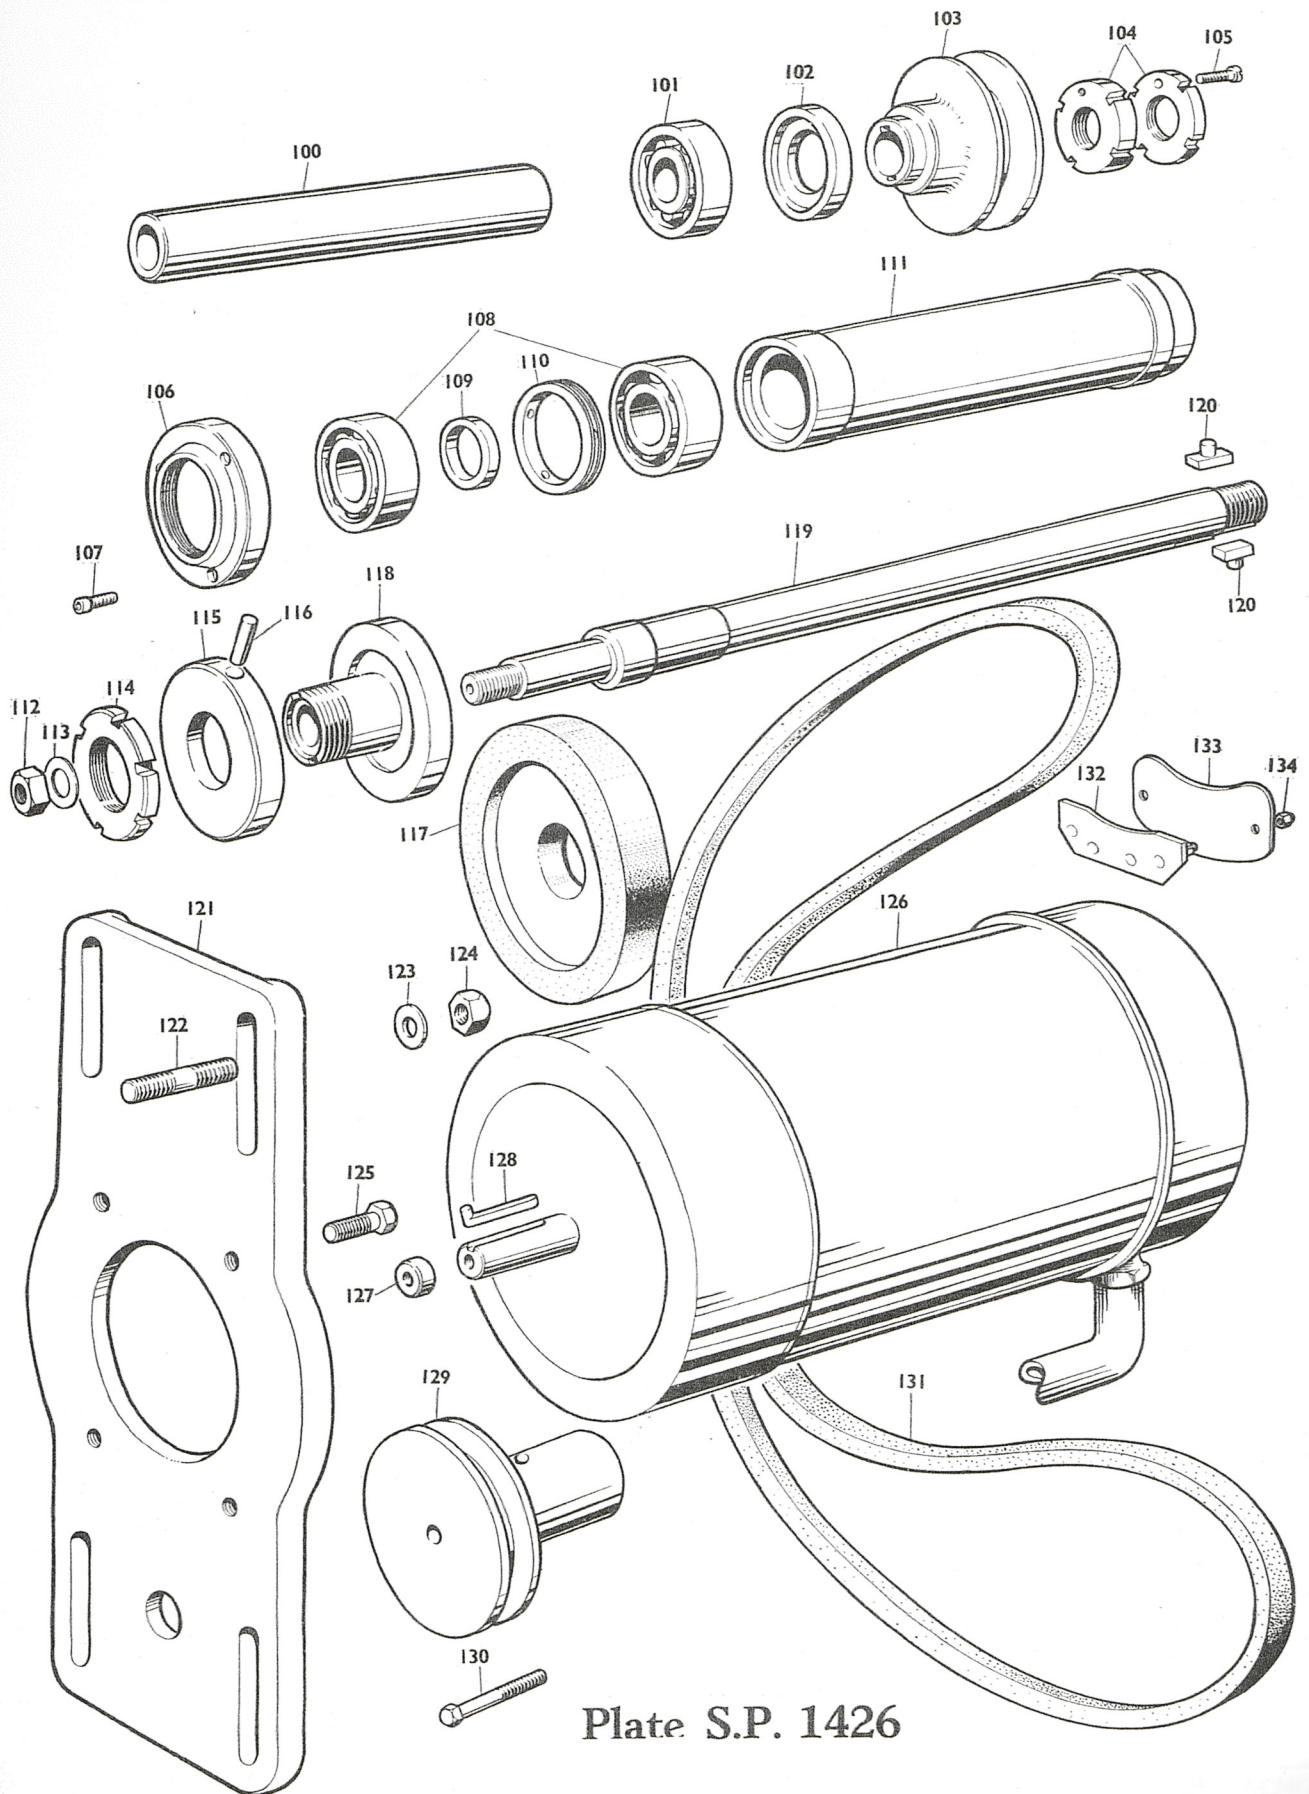



Plate S.P. 1426

COLUMN (Plate S. P. 1425).

Ref. No.	Part.	Ref. No.	Part.
1.	Guard.	45.	Grub Screw.
2.	Two Screws.	46.	Bevel Gear.
3.	Speed Plate.	47.	Bush.
4.	Column Head.	48.	Thrust Bearing.
5.	Two Nipples with Caps.	49.	Plate.
6.	Four Screws.	50.	Two Screws.
7.	Two Taper Pins.	51.	Two Bands.
8.	Switch Plate.	52.	Ten Screws.
9.	Two Brass Bushes.	53.	Bellows Type Guard.
10.	Four Screws.	54.	Sleeve.
11.	Anchor Plate.	55.	Nut. (English).
12.	Plate.	56.	Nut. (Metric).
13.	Two Screws.	57.	Three Screws.
14.	Bellows Type Guard.	58.	Two Taper Pins.
15.	Plate.	59.	Bracket.
16.	Screw. (English).	60.	Two Taper Pins.
17.	Screw. (Metric).	61.	Four Screws.
18.	Pin.	62.	Taper Gib.
19.	Knee.	63.	Gib Screw.
20.	Oiler.	64.	Plate.
21.	Brass Tube.	65.	Four Screws.
22.	Locking Screw.	66.	Brass Pad.
23.	Locking Pin.	67.	Clamping Screw.
24.	Handle.	68.	Locking Handle.
25.	Hand Wheel.	69.	Washer.
26.	Dial. (English).	70.	Screw.
27.	Dial. (Metric).	71.	Brass Pad.
28.	Locking Pad.	72.	Grub Screw.
29.	Key.	73.	Column.
30.	Shaft.	74.	Cover.
31.	Key.	75.	Two Star Wheels.
32.	Pointer.	76.	Two Taper Pins.
33.	Bush.	77.	Two Captive Screws.
34.	Bevel Pinion 16 T.	78.	Washer.
35.	Washer.	79.	Switch Cover.
36.	Screw.	80.	Washer.
37.	Bush Screw.	81.	Eight Screws.
38.	Bush Screw.	82.	Column Base.
39.	Two Grease Nipples.	83.	Four Screws.
40.	Oiler.	84.	Screw.
41.	Screw. (English).	85.	Block Type Pushbutton.
42.	Screw. (Metric).	86.	Retaining Plate.
43.	Key.	87.	Plastic Sudsproof Shroud.
44.	Tube.	88.	Pushbutton Spring.
		89.	Finger Push. (Red or Black)

IMPORTANT.—WHEN ORDERING SPARES ALWAYS QUOTE INSPECTION NUMBER OF MACHINE.

Plate S.P. 1425

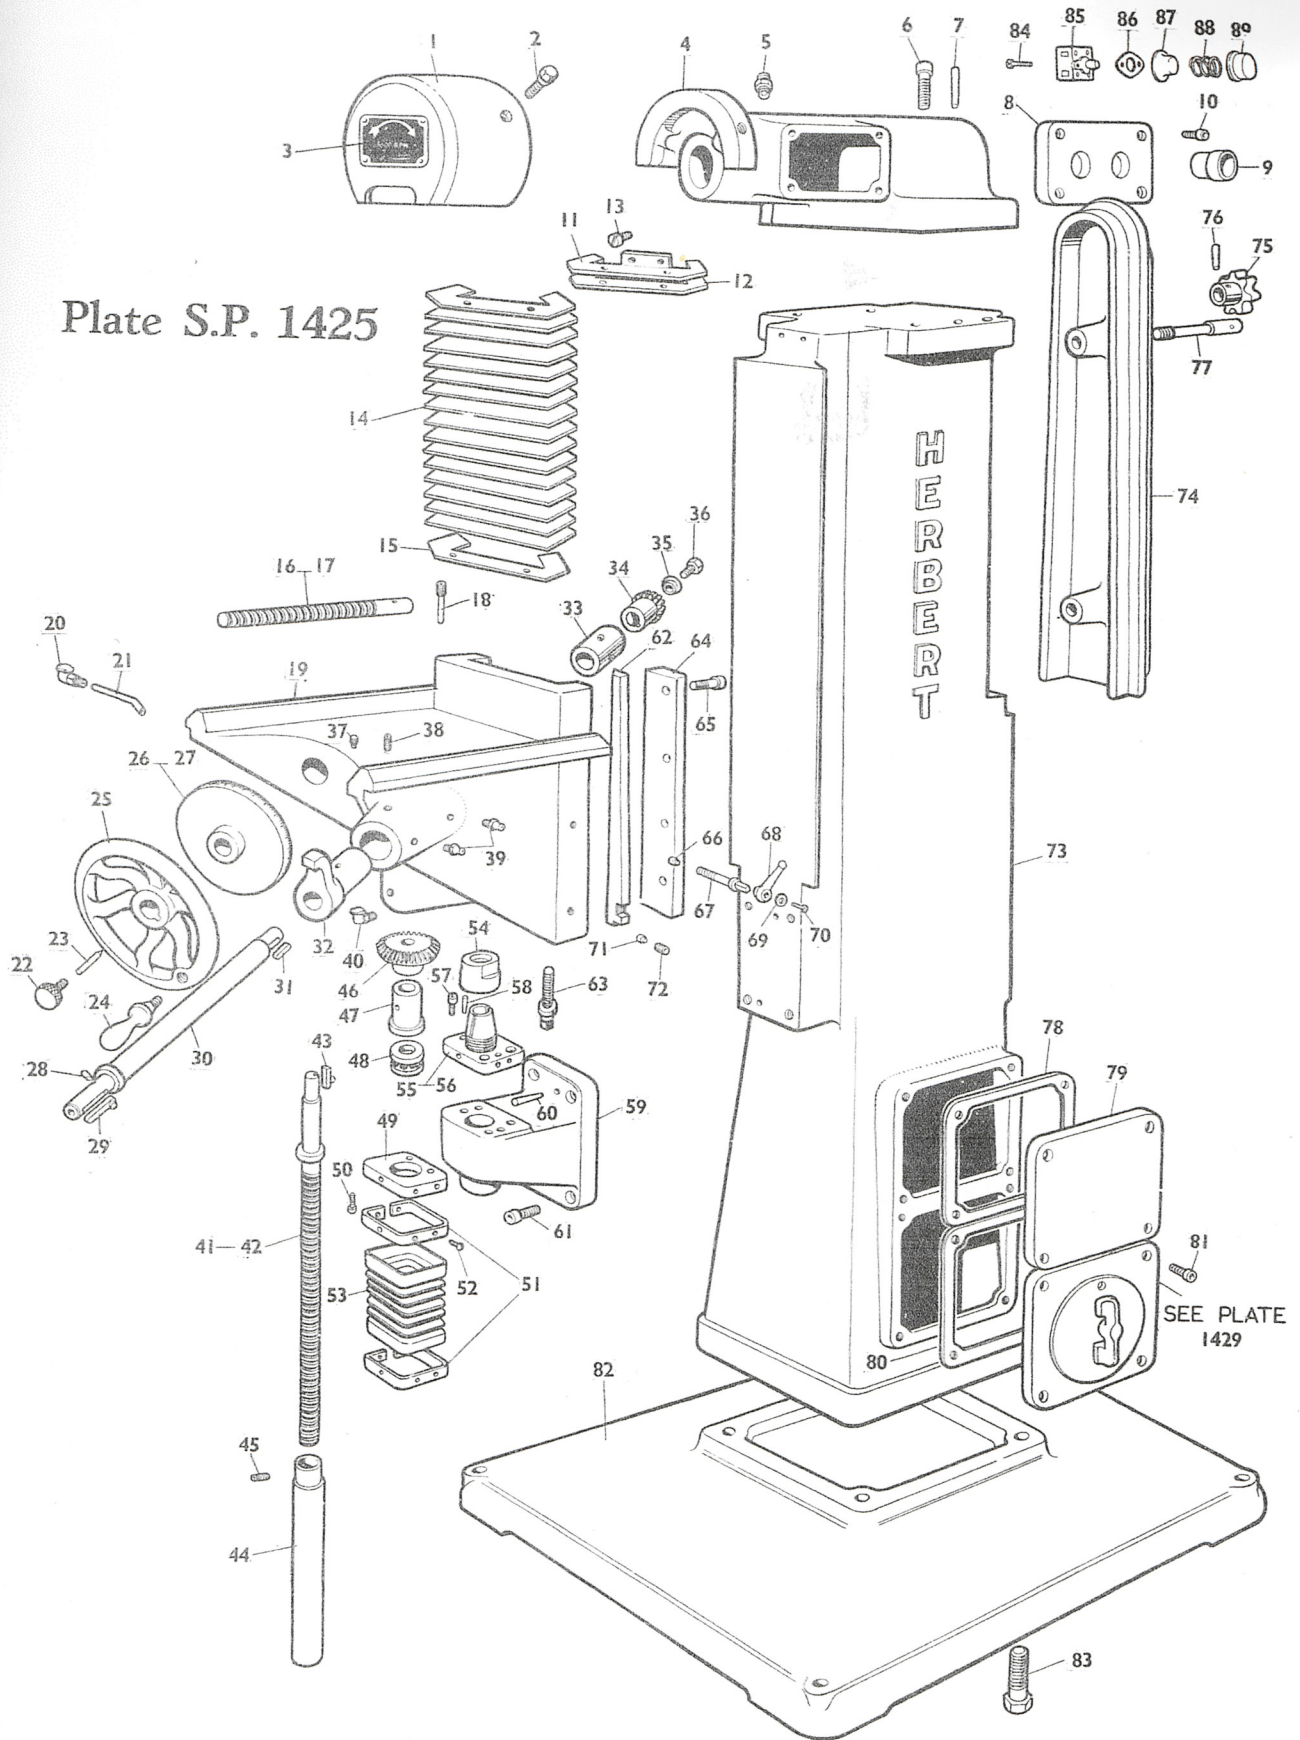

INDEX.

<u>UNIT</u>	<u>PAGE NO.</u>
Column ...	4 - 5
Isofuse Switch ...	12
No Volt Contactor ...	10 - 11
Spindle and Motor Drive ...	6 - 7
Table and Saddle ...	8 - 9


IMPORTANT.

WHEN ORDERING SPARE PARTS IT IS ESSENTIAL TO QUOTE :—

1. **INSPECTION No. of the machine** for which the part is required. This is stamped on the top of the vee slide on the lower column. (Please see illustrations of the machines at the front of this book).
2. **REFERENCE No. of the part** as listed in this book. The reference number is useless as an identification unless the **INSPECTION NUMBER** is also quoted.
3. **THE TYPE AND SIZE OF THE MACHINE** on older types where the Inspection number may have been removed during reconditioning. This information should be accompanied by a dimensioned sketch of the part required or the damaged part itself sent to us.
4. **HOW MANY SIMILAR PARTS ARE REQUIRED.**

NOTE.—The illustrations in this list are not necessarily correct in detail owing to alterations in design, but if the above information is given the correct part will be supplied.

(2)

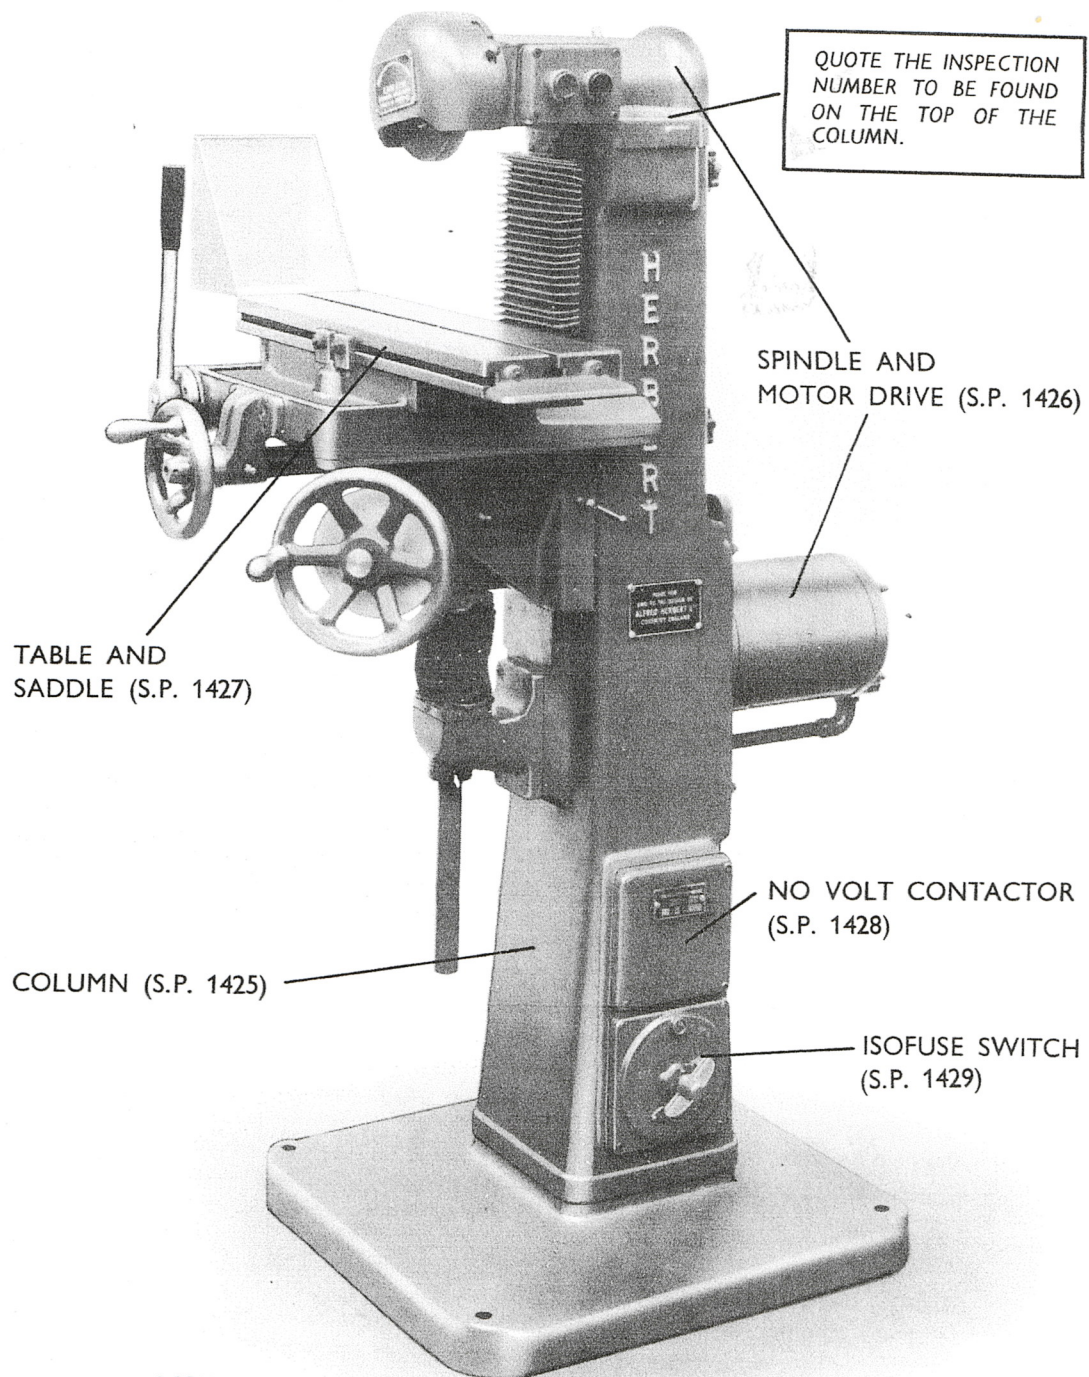

Junior Surface Grinder.

HERBERT

JUNIOR SURFACE GRINDER

SPARE PARTS LIST

FIRST EDITION

ALFRED

HERBERT

LTD., COVENTRY

