


```

-D ILI9488_DRIVER
-D TFT_CS=15
-D TFT_RST=2
;-D TFT_DC=0
-D TFT_DC=5
-D TFT_MOSI=23
-D TFT_SCLK=18
-D TFT_BLP=4
-D TOUCH_CS=22
-D TFT_MISO=19

```

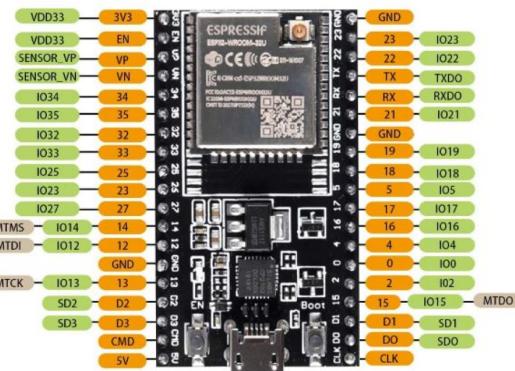

```

not used — PEN
19 — TFT_MISO — TDO
23 — TFT_MOSI — TDI
22 — TOUCH_CS — TCS
18 — TFT_SCLK — TCK
not used — SDO
4 — BL — BL
18 — TFT_SCLK — SCK
23 — TFT_MOSI — SDI
0 — TFT_DC — D/C
2 — TFT_RST — RST
15 — TFT_CS — CS
GND — GND
3V3 — VDD

```

