


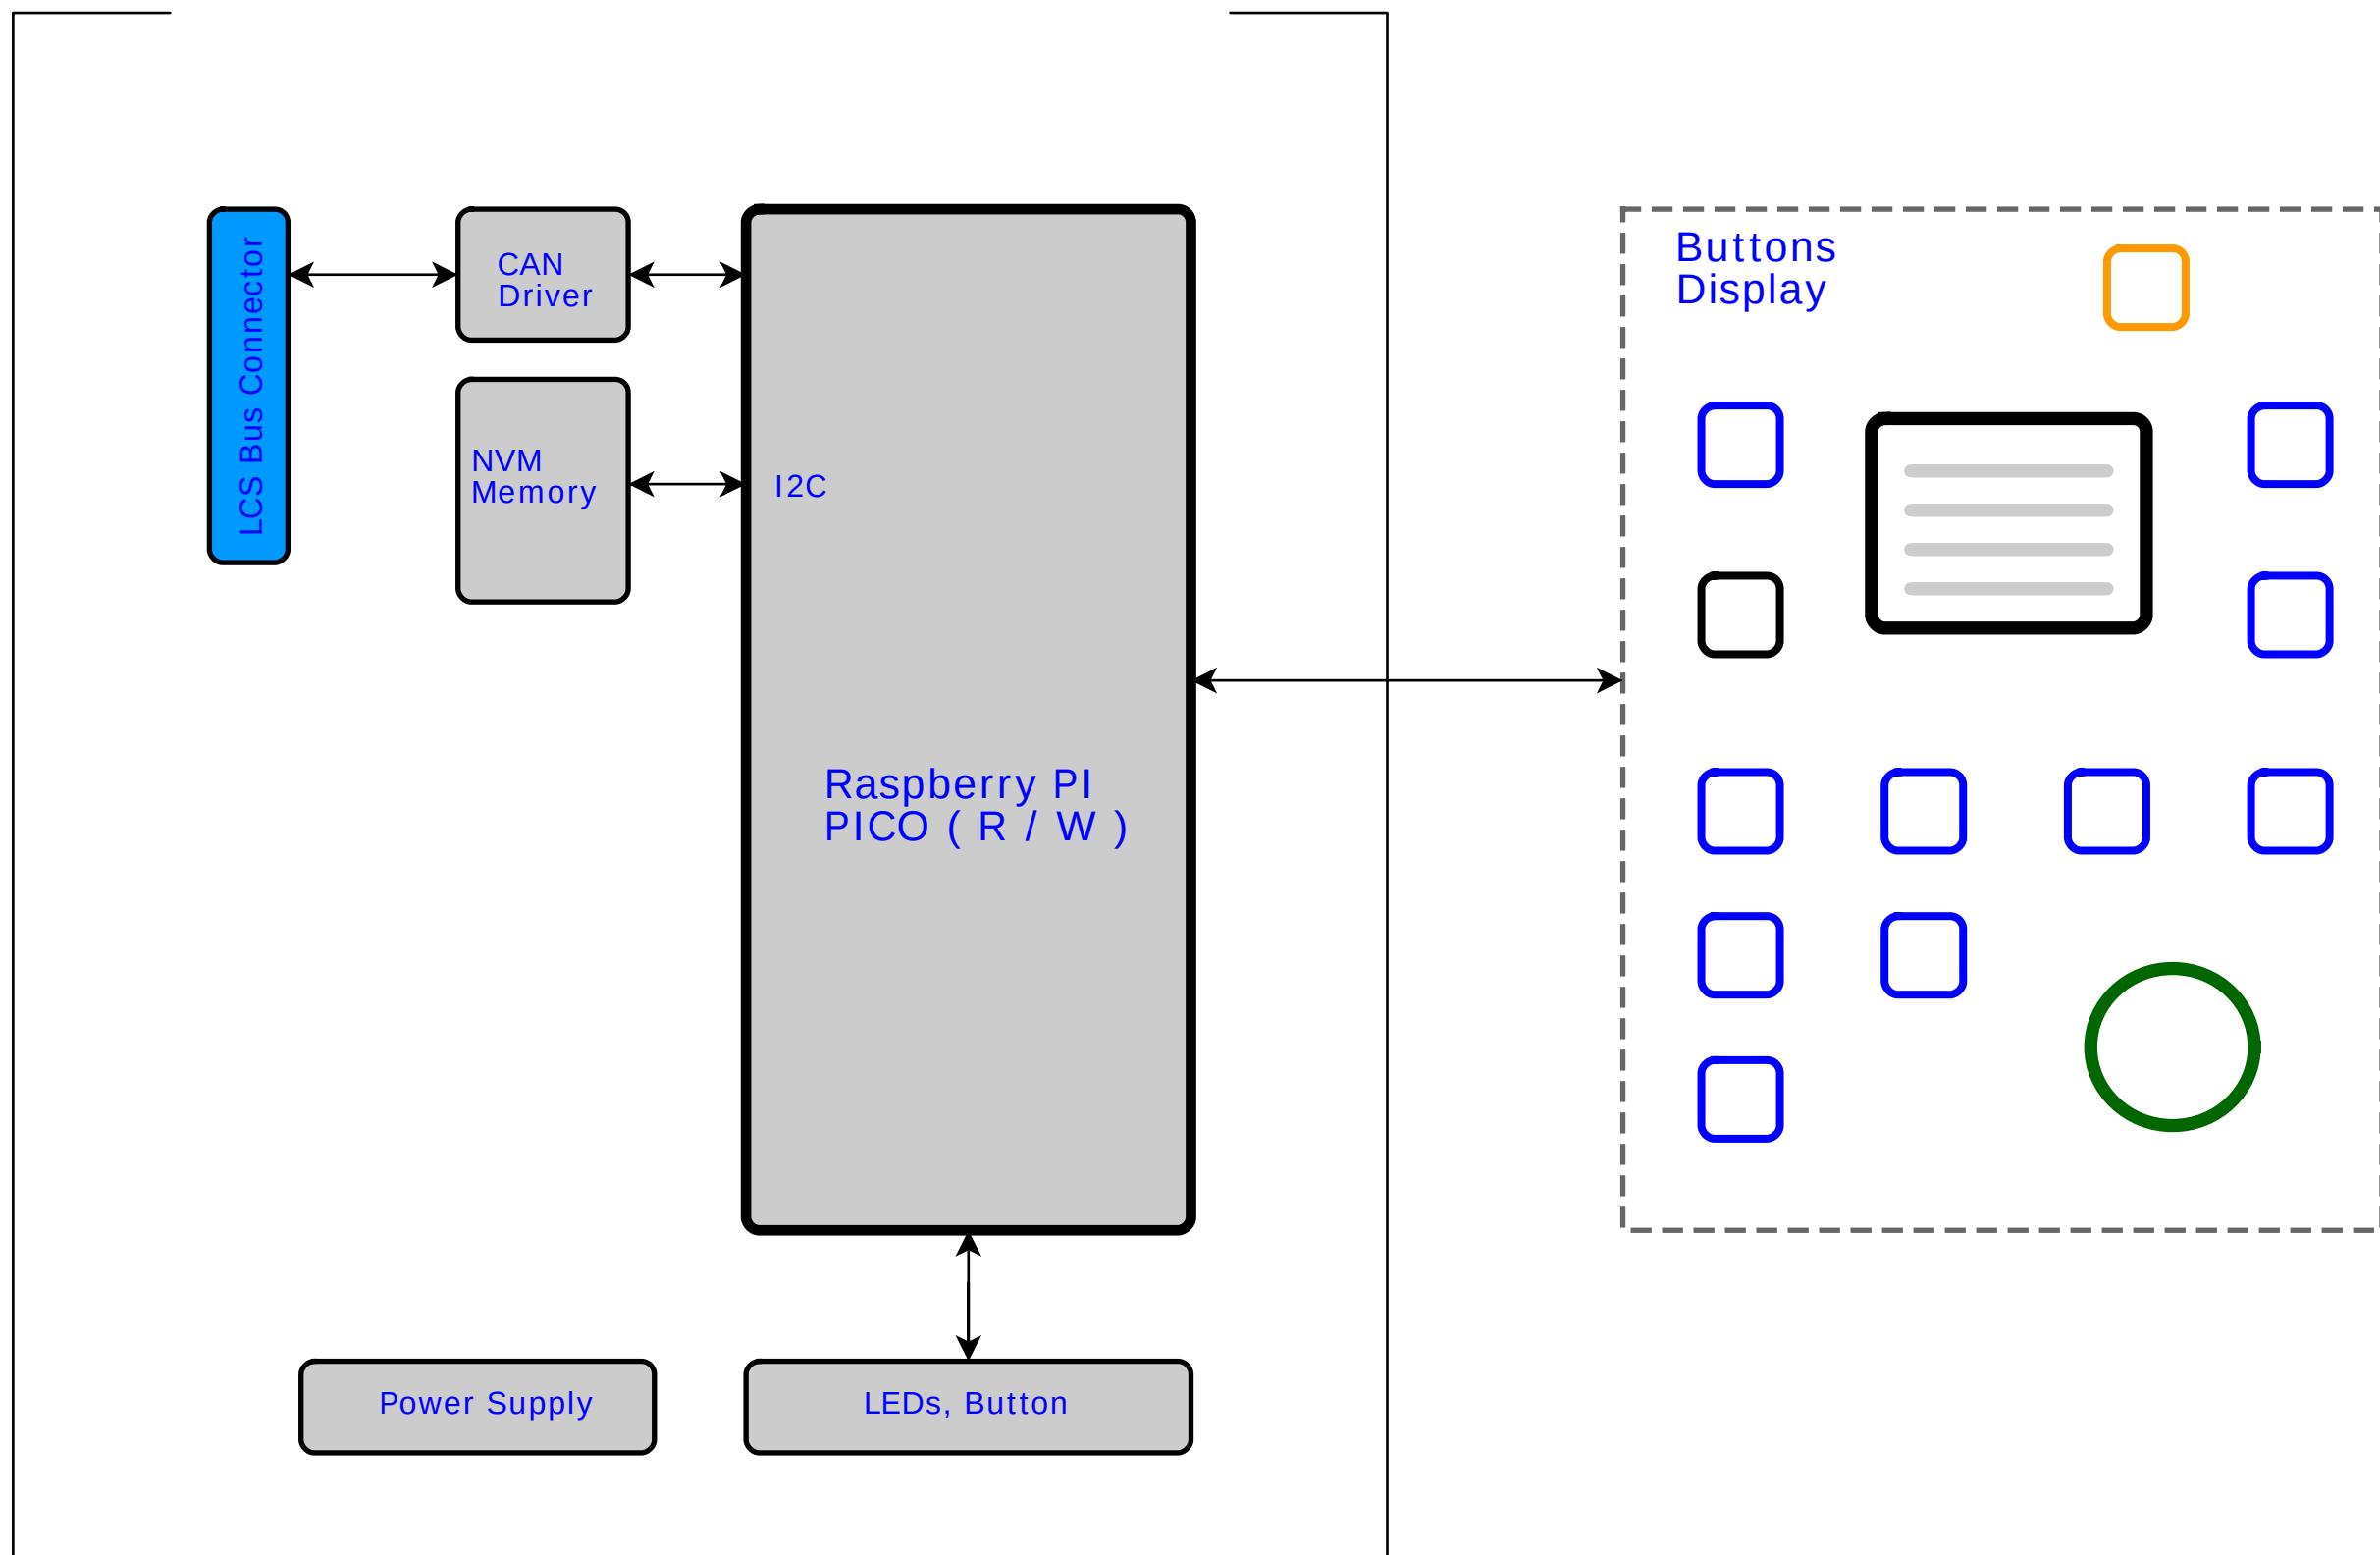

The diagram shows the MCP2562-H/P CAN transceiver (U1) connected to a 3V3 supply and a CAN bus. The VCC-MB pin is connected to VCC-3V3. The VSS pin is connected to GND. The TXD pin is connected to CAN-TX. The RXD pin is connected to CAN-RX. The STBY pin is connected to GND. The CANH and CANL pins are connected to the CAN-H and CAN-L bus lines. Two 100nF capacitors, C1 and C2, are connected between the VCC-MB and VSS pins, and between the CANH and CANL pins, respectively.

VCC-3V3

GND

C3
100n

U3 24FCXXX-I/SN

1 A0
2 A1
3 A2
8 VCC
4 VSS
7 WP
6 SCL
5 SDA

NVM-SCL
NVM-SDA

I2C Adr: 1010_000

* optional, only for PFAIL option

The diagram illustrates the wiring of a Raspberry Pi Pico Through Holes microcontroller. The Pico's pins are connected to various components as follows:

- VCC-3V3** and **GND** are connected to the power pins of the Pico.
- CAN-RX** and **CAN-TX** are connected to the RX and TX pins of the CAN module (U1).
- NVM-SDA** and **NVM-SCL** are connected to the SDA and SCL pins of the NVM module (U1).
- PFAIL** is connected to the PFAIL pin of the Pico.
- BT-MENU**, **BT-UP**, **BT-SELECT**, and **BT-DOWN** are connected to the BT pins of the Pico.
- SW-DIR1**, **SW-DIR2**, **ENC-A**, and **ENC-B** are connected to the SW and ENC pins of the Pico.
- ENC-BT** and **BT-BELL** are connected to the BT pins of the Pico.
- LED1** is connected to the LED pin of the Pico through a 470Ω resistor (R6).
- Reset** button (B1) is connected to the RESET pin of the Pico.
- The Pico is connected to a display module (U2) via I2C (SCL and SDA) and power (V-USB and VCC-MB).

RJ1 UXCELL 8P8C RJ45 PCB

The diagram shows a red outline of a PCB with an 8-pin connector. The pins are numbered 1 through 8. Pins 8, 7, 6, and 5 are connected to CAN-H, CAN-L, VS, and GND respectively, indicated by green lines. Pins 4, 3, 2, and 1 are marked with green 'X's, indicating they are not connected.

