HHVB

HHVB aims to make home fitness funny and healthier for global fans!

PRODUCT INFORMATION

Product Name: HHVB Vibration Plate

Product Type : HHVB-001

Product Color: HHVB-001-bule、HHVB-001-black

Motor Power: 150W

Product Voltage: 110V

N.W./G.W.: 5.6KG/6.7KG

Package Dimensions: 23.15*13.98*5.91inches

Product Dimensions: 19.09*11.89*5.04inches

Auto Programs: P1-P5

Max Weight: 330Lbs



Kind Remind :If you encounter any problems or have any questions while using the HHVB Vibration plate, Please send an email to hzcljkj@163.com Contact our customer support team!We will respond and handle it promptly!

HHVB WHY CHOOISE HHVB-001?

1.Low-Threshold Home Weight Loss, Easy to Stick To No complicated fitness skills or heavy equipment required.
Just stand on the vibration plate for 10–15 minutes daily, equivalent to 1 hour of jogging calorie burn. Perfect for busy office workers, fitness beginners and people who hate intense workouts, eliminating excuses to skip weight loss plans.

2.Boost Metabolism to Prevent Fat Rebound After Weight Loss Regular vibration stimulation improves blood circulation and basal metabolic rate. Your body keeps burning calories faster at rest, avoiding the common rebound weight gain seen with crash dieting alone. Pair with light calorie control for long-lasting slim results.

3.Reduce Water Retention & Edema for Visible Slimmer Look Fast Vibration eases lymphatic drainage, flushing excess water waste from limbs. Swollen legs and bloated belly fade quickly, letting you see immediate slimmer visual effects while working on long-term fat loss.


4.High-Performance Motor for Consistent Vibration Output
Delivers stable and steady vibration power throughout your session. No power drop during long-time use. Just stand on the vibration plate for 10–15 minutes daily. Perfect for busy office workers, fitness beginners and people who prefer gentle low-impact training, eliminating excuses to skip daily workout plans.

5.Ultra-Quiet Operation for Undisturbed Home Use
Advanced noise reduction structure suppresses running sound effectively. You can enjoy vibration training while watching TV or resting, without disturbing your family or neighbours. Ideal for daytime and late-night home workouts.




HHVB What's inside the box?

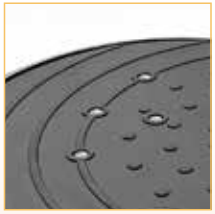


Magnetic massage


LED display

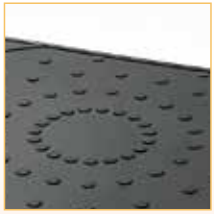
Rubber Suction Cup.1


Rubber Suction Cup.2



Power Switch


Elastic Rope Hook


Remote control

Attention: Batteries not included. Please purchase 2 AAA batteries separately.

HHVB Product usage steps

1. Unpack and Setup

- Unpack the vibration plate from its packaging. Choose a flat, solid, level ground and reserve an open area of 3.5ft × 3ft around the device. This sufficient space ensures safe standing, body shifting and movement during vibration workouts.

2. Manual & Remote Prep

- Read the entire user manual carefully before first-time operation to fully understand all button functions, adjustment modes and safety precautions.
- Prepare two AAA batteries. Open the remote control's battery compartment cover, then insert the batteries strictly following the positive (+) and negative (-) polarity labels printed inside the compartment. Close the cover securely afterward.

3. Connect & Power On

- Connect the oam. Flip the main power switch on the front of the unit to the "I" position to power on the device. Step onto the vibration plate slowly and maintain a stable standing posture. Do not jump or stamp hard on the unit to avoid equipment damage or personal injury.

4. Operation & Adjustments

- Operate via the physical buttons on the vibration plate or the included remote control to adjust workout time and vibration speed, and select automatic programs as needed.

5. Finish & Power Off

- After finishing your workout, press the Start/Stop button to halt vibration operation. Flip the main power switch to the "O" position and unplug the power cord if the device will not be used for an extended period.



150W
High Power

Kind Remind :If you encounter any problems or have any questions while using the HHVB Vibration plate,
Please send an email to hzcljkj@163.com Contact our customer support team!We will respond and handle it promptly!

Vibration Intensity Zones on the Plate

The vibration plate surface is divided into 3 areas with different vibration intensities.
You can switch vibration strength simply by adjusting your standing position:

Front Area (Light Vibration)

Low vibration power, ideal for new users, warm-up, calf and foot relaxation. Recommended for 1-5 minutes for first use.

Middle Area (Medium Vibration)

Balanced vibration strength, perfect for daily fat loss, body shaping and core exercise. Suitable for daily routine workouts.

Rear Area (Strong Vibration)

Maximum vibration output, targets deep muscle tension, intensive slimming and cellulite reduction. Not recommended for complete beginners.

Beginner Usage Tips

New users shall start with the front light vibration zone at low speed (1-5 mins each time).
Gradually move to the middle zone and extend workout time as your body adapts.
Avoid standing on the strong vibration zone for over 10 minutes if you are a first-time user.
Keep knees slightly bent while exercising to reduce joint pressure.





How to control the machine through the screen?



1. Start/Stop
2. Program Mood Button
3. Time/Speed+
4. Time/Speed-


Start/Stop: This single button controls the start and stop operations of the vibration plate.

P: The P key is the function selection button for the vibration plate and controls its core adjustment function. When the vibration plate powers on, a red indicator dot appears above the TIME label. This dot means the TIME parameter is active and ready for adjustment.

When the red dot is shown above TIME, press the + button to extend the operation duration under manual mode, or press the - button to shorten it.
Press the P key again to switch to the SPEED setting, and a red dot will display above SPEED to mark the active parameter. Long-press the + or - button to adjust the vibration speed of the plate.

Attention: Automatic program parameters cannot be adjusted directly on the vibration plate. To use automatic mode, access the relevant settings via the remote control. Please refer to Page 7 for the remote control operation guide.

HHVB How to Operte the Vibration Plate with the Remote Control?

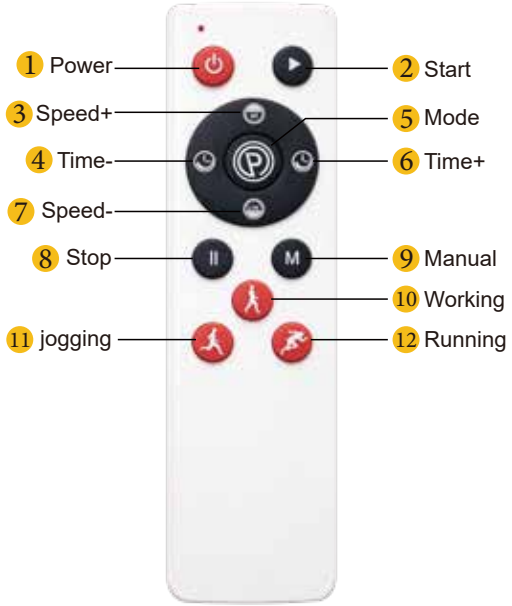

Attention

Automatic modes P1–P5 come with a fixed 10-minute runtime which cannot be modified.
If you press the pause button while running an automatic program, the vibration will stop, and the time and speed values will reset to zero.

Manual mode P0 Settings
The default runtime for manual mode P0 is 10 minutes. The adjustable time range is 1–20 minutes, and you may freely set the duration before starting P0. Time adjustment is unavailable for automatic modes P1–P5.

1 **Power Button:**
After your workout, press this button on the remote control to power off the unit.

2 **Start button:**
Select your desired mode first, then press this button to start operation.

3 7 **Speed+/Speed-**
While the vibration plate is running, long-press 3 or 7 to adjust vibration speed. If you adjust speed under automatic mode, the unit will exit automatic mode and switch to manual mode automatically.

4 6 **Time+/Time-**
To be used together with the P button on the vibration plate. When the red indicator dot appears above the TIME label, long-press 4 or 6 to adjust workout duration.

5 **Program Selection Button**
After powering on the vibration plate, press this button to cycle through five automatic modes (P1 to P5). Once you have selected your desired mode, press button 2 to start the automatic workout.

8 **STOP Button:**
Pressing the Stop button during operation resets the speed to zero. Re-select the mode to restart if needed.

9 **Manual:**
The M button works only while the unit is operating in manual mode. It will not respond when the machine is stopped. Each press switches to the next vibration level.

10 **Working:**
Press this button to activate walking mode with preset vibration program. Suitable for beginners, seniors and warm-up before exercise. Use this low-intensity mode to activate muscles and improve blood circulation.

11 **Jogging:**
Press this button to activate jogging mode with preset vibration program. Suitable for daily fitness users. Use this medium-intensity mode for fat burning and muscle relaxation after long-time sitting.

12 **Running:**
Press this button to activate running mode with preset vibration program. Suitable for experienced fitness enthusiasts. This high-intensity mode helps strengthen muscle training and boost metabolism.

3 Intensity Automatic Modes Introduction

The vibration plate comes with 5 built-in automatic programs (P1-P5), divided into three intensity levels for different fitness goals. Choose the matching mode according to your physical condition and training demands.

LOW INTENSITY *(P1-P2)*

Suitable for beginners Low vibration intensity Boost blood circulation & lymphatic drainage

MEDIUM INTENSITY *(P3-P4)*

Improve body posture and joint health Maintain whole-body joint flexibility Enhance physical balance ability

HIGH INTENSITY *(P5)*

Efficient fat burning & weight loss Fully activate full-body muscle fibers Elevate basal metabolic rate

Mode Selection Tips

1.First-time users are recommended to start with Low Intensity P1/P2 to let your body adapt to vibration.
2.After 1–2 weeks of regular training, switch to Medium Intensity P3/P4 for daily body shaping and joint care.
3.High Intensity P5 is for users with fitness foundations; do not use it continuously for more than 10 minutes to avoid joint discomfort.
4.You can adjust standing position on the vibration plate to further increase or decrease the actual vibration feeling during operation.

HHVB Automatic Program Speed Parameter Table

SPEED	PROGRAM	10	9	8	7	6	5	4	3	2	1
LOW	P01	18	36	54	72	90	72	54	36	18	6
	P02	6	12	18	22	24	30	24	36	24	6
MED	P03	5	10	24	7	24	5	24	2	24	10
	P04	12	24	12	36	54	72	54	24	18	24
HIGH	P05	36	54	36	90	72	54	90	54	24	12

Program Fat Burning & Weight Loss Introduction

Low Intensity (P01 & P02)
Gentle fluctuating vibration speeds, suitable for beginners. Promote blood circulation, relieve muscle soreness, lay a foundation for long-term fat burning and steady weight loss without excessive joint pressure.

Medium Intensity (P03 & P04)
Balanced alternating speed changes, activate whole-body muscle groups continuously. Sustain stable calorie consumption, achieve mild fat burning and gradual weight loss for daily body shaping.

High Intensity (P05)
Large-range speed jumps provide strong vibration stimulation. Deeply activate muscle fibers, boost basal metabolism, realize efficient fat burning and rapid weight loss for users with workout experience.

Important Tips

All automatic programs have a fixed 10-minute runtime, which cannot be adjusted manually.
If you press pause during operation, all speed values will reset to zero, and the fat burning timing will restart.
For better weight loss results, combine regular vibration training with healthy diet control.

Kind Remind :If you encounter any problems or have any questions while using the HHVB Vibration plate, Please send an email to hzcljkj@163.com Contact our customer support team!We will respond and handle it promptly!


HHVB Precautions for using **HHVB**

General Safety Warnings

This vibration plate is only for indoor fitness use; do not use it outdoors, in damp bathrooms or near water sources to avoid electric leakage risks.
Check the power cord, plug and main unit before each workout. Stop using immediately if wires are frayed, loose or damaged.
Only use the matched original power adapter. Do not replace with mismatched voltage chargers, which may burn out the machine or cause safety hazards.
Reserve a minimum 3.5ft × 3ft open flat space around the unit. Remove stools, tables, sharp objects to prevent collision during vibration workouts.
Keep children, pregnant women, people with limited mobility away from the machine when it is powered on. Do not let kids operate or stand on the device unattended.

Physical Fitness Safety Notes (Fat Burning & Weight Loss Training)

First-time users must start with low-intensity P01/P02 programs. Do not directly select high-speed P05 mode to avoid joint strain, dizziness or muscle soreness.
Keep knees slightly bent while standing on the plate; locked straight knees will bring heavy impact to knees and spine during vibration.
Do not stand on the edge of the vibration plate or jump/stomp hard on the surface, which may cause slipping, falling or equipment deformation.
Stop exercising right away if you feel dizziness, chest tightness, joint pain or numb limbs. Do not force training for fat burning and weight loss purposes.
Do not use the device for more than 10 minutes per single automatic program. Overlong continuous vibration may cause excessive body fatigue.

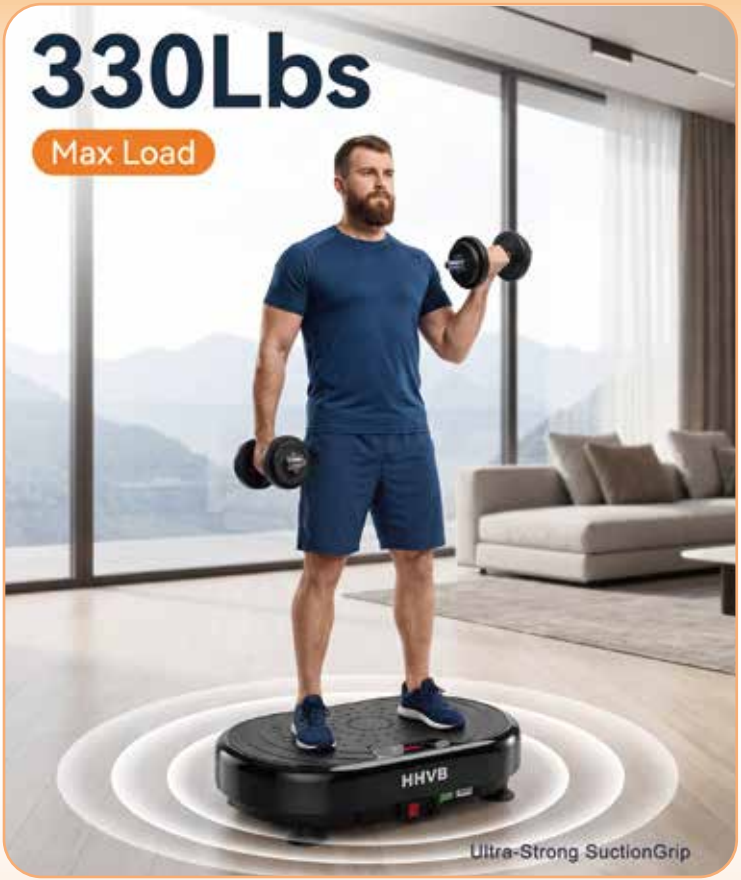

Kind Remind :If you encounter any problems or have any questions while using the HHVB Vibration plate, Please send an email to hzcljkj@163.com Contact our customer support team!We will respond and handle it promptly!

Safety precautions

Crowd Restrictions

The following groups are prohibited from using this vibration plate: Pregnant women, people with heart disease, hypertension, severe osteoporosis,Patients with joint injuries, bone fractures, implanted metal stents or internal surgical devices People with acute inflammation, epilepsy, vertigo disorders Elderly over 70 years old without professional fitness guidance

Operation & Maintenance Precautions

Automatic modes P1-P5 have fixed 10-minute runtime that cannot be modified. Do not repeatedly pause and restart frequently during fat loss training, as frequent resets will burden the motor.

After finishing workout: press Start/Stop to halt vibration first, then turn off the main power switch and unplug the cord if long-term disuse.
Wipe the plate surface with a dry soft cloth after use. Do not rinse the whole machine with water or spray liquid cleaner directly on the control panel.

Do not disassemble the motor or internal components privately. All maintenance must be handled by official after-sales staff.

Emergency Reminder

If abnormal noise, smoke or sudden power failure occurs during use, cut off the po wer supply immediately and contact customer service; do not continue operating for fat burning and weight loss training.




HHVB

Cleaning & Storage Guide
HHVB Vibration Plate Care Instructions

Cleaning Instructions

1



Stop vibration, turn off power and unplug before cleaning

2



Wipe plate surface, control panel and remote control with a soft dry cloth

3



Use a slightly damp cloth with mild neutral detergent for stubborn marks

4



Do not spray liquid onto buttons, power port or motor area

Storage Precautions

1



Ensure the unit is fully dry and store in a cool, dry indoor area

2



Neatly wrap the power cord and place it in the wire slot

3



Remove AAA batteries from the remote control if unused for over 1 month

4



Do not stack heavy objects on top and keep children away

Never rinse the whole machine with water. Keep flat during storage.

HHVB

Troubleshooting Common Issues

Fault Phenomenon	Possible Cause	Solution
Machine fails to power on	1.Plug loose or disconnected 2.Main power switch at "O" 3.Damaged power cord	1.Reinsert the power plug tightly 2.Flip power switch to "I" 3.Stop use and contact after-sales for cord replacement
No vibration after startup	1.Time parameter set to 2.Overheat protection triggered by long continuous use	1.Adjust workout time via host P button 2.Power off and cool the machine for 15–30 mins before restart
Remote control does not respond	1.Remote batteries dead or installed with reversed polarity 2.Remote blocked by obstacles 3.Remote signal receiver blocked	1.Replace AAA batteries and follow +/- polarity marks 2.Remove barriers between remote and host 3.Wipe the signal receiver window clean
Abnormal loud vibration noise	1.Machine placed on uneven ground 2.Foreign objects stuck under the base 3.Internal motor loose	1.Move to flat solid ground 2.Clear debris under the unit 3.Stop using and contact after-sales service
Speed/time resets automatically	Pause button pressed during automatic mode (P1-P5)	Automatic programs will reset parameters after pausing; reselect your program and restart

Kind Remind :If you encounter any problems or have any questions while using the HHVB Vibration plate,
Please send an email to hzcljkj@163.com Contact our customer support team!We will respond and handle it promptly!

HHVB Full Body Relaxation



1.STRAIGHT ARMPLANK



2.NECK STRETCH



3.HAMSTRING STRETCH



4.GLUTE BRIDGE



5.DIP



6.SPLIT SQUAT



7.GLUTE STRETCH



8.QUAD STRETCH



9.SQUAT



10.SIDE LUNGE



11.REVERSE FLY



12.ALTERNATE SHOULDER PRESS

Kind Remind :If you encounter any problems or have any questions while using the HHVB Vibration plate,
Please send an email to hzcljkj@163.com Contact our customer support team!We will respond and handle it promptly!

After-Sales Service & Support

Reliable Protection for Your Home Fitness Journey

HHVB

First of all, thank you very much to every fan and friend for their support and trust! We value product quality and the after-sales issues of every fan!
If you encounter any problems or have any questions while using the HHVB vibration plate, please send an email to hzcljkj@163.com
Contact our customer support team! We will reply and handle your questions promptly from 8:30 am to 18:00 pm from Monday to Saturday!
Kind reminder: Before contacting customer support, please prepare your order information: (order number, complete shipping address, purchased product model); So that we can solve your problems more effectively!



Kind Remind :If you encounter any problems or have any questions while using the HHVB Vibration plate, Please send an email to hzcljkj@163.com Contact our customer support team!We will respond and handle it promptly!