

Customer Support:
First of all, thank you very much to every fan and friend for their support and trust! We value product quality and the after-sales issues of every fan!
If you encounter any problems or have any questions while using the HHVB vibration plate, please send an email to **scshenchikeji@163.com** Contact our customer support team!
We will reply and handle your questions promptly from 8:30 am to 18:00 pm from Monday to Saturday!
Kind reminder: Before contacting customer support, please prepare your order information: (order number, complete shipping address, purchased product model); So that we can solve your problems more effectively!

HHVB

Vibration plate



Product Name: HHVB Vibration Plate
Product Model: HHVB-777
Color: Black, Grey, Blue
Power: 180W (measured)
Voltage: 110V

HHVB Product Information


Product Name: Vibration Plate
Product Type: HHVB-777
Product Size: 22.05*12.99*5.12 inches
Color: Black Blue Grey
Power: 180W , Voltage: 110V
Max Weight: 440 lbs
Speed Levels: 120
Auto Programs: P1-P5

HHVB focuses on high-quality vibration plate machines and other sports equipment, combining intelligent technology with fitness equipment to create an immersive family experience of happy sports and fitness! Effectively assists every user in solving muscle rehabilitation, activating physical rehabilitation, relieving various tissue pains, and promoting blood circulation!



HHVB Product Structure



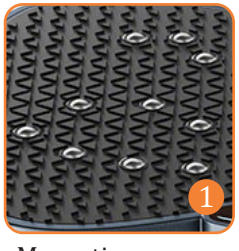

Magnetic massage



LED display




Rubber Suction Cup



Interface



Power Switch

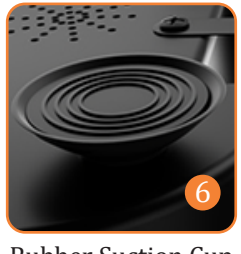

Rubber Suction Cup



Elastic Rope Hook



Remote control

HHVB Packaging Information

1.Vibration Plate *1
2.Resistance Bands *2
Mount the bands on the vibration plate to turn passive vibration into active resistance training. . Ideal for squats, bends, rows, etc. Vibration stimulation doubles muscle activation—15 minutes equals an hour of standard workouts.
3.Power Cord *1
Extended anti-slip design ensures stable power supply while preventing easy loosening during intense exercise, allowing you to focus on every movement.
4.Remote Control *1
No bending. Light grip adjusts vibration strength/modes; one tap shifts warm-up to intense fat burn for easy workout control.
5.Instruction Mannual *1
It includes 10+ official accessory combination action diagrams for safe and correct use.



HHVB High power silent motor




Relieve soreness and burn fat


Tested 180W high-power silent motor

10% Motor Speed Increase
Feel the deeper and stronger vibration fat burning effect
At present, conventional standard power motors are commonly used on the market, while HHVB use tested 180W high-power, upgraded silent motors with more stable and safe performance, which can provide users with a stronger natural fat burning effect!

HHVB Battery installation

Instructions Before Use

GET STARTED
Now, let us get started.
Read the user manual to understand how to use the HHVB vibration plate.

FIRST STEPS
1. Take your HHVB vibration plate out of the shipping box and remove all packaging.
2.Read carefully through this user manual and all safety instructions before using the HHVB Vibration plate.
3.Complete the steps in the EASY-START SETUP GUIDE below to begin using our HHVB vibration plate.

EASY-START SETUP GUIDE
Battery Installation
- Remove the back of the remote control and insert two AAA batteries into the battery compartment
- The positive and negative poles of the battery should correspond to the positive and negative poles of the remote control
- Reminder: Due to overseas transportation, for safety reasons, batteries are not provided. You need to purchase standard batteries from nearby legitimate retailers.







HHVB Resistance Band Installation



BE CAREFUL
When using the resistance bands, please open the bottom metal sheet to the maximum position, and avoid excessive rubbing between the resistance bands and the machine.to avoid damaging the machine and cutting off the resistance bands.



PRECAUTIONS
After installation, check hook tightness to prevent the resistance band from springing out and hurting people. When using the rope, pull steadily instead of yanking suddenly hard to avoid straining shoulder and arm muscles.



CONNECT TO POWER
Insert the power cord firmly into the front of the plate.
NOTE: Press forcefully until you feel a click which indicates that the cord is securely connected. The power cord fits tightly so it will not loosen during use.
Plug the power cord into an AC outlet.



POWER ON THE HHVB
Flip the power switch on the front of the HHVB to the ON position.
Press the power button on the HHVB 's display.

HHVB Use the remote control to select programs for exercise

1. Press the power button to start the machine,
2. Press the program button to switch programs in order. The default program is manual mode P0. Click again to select automatic modes P1-P5. The selected program will be displayed on the screen. Please read the chart below for more information about the five programs
3. After selecting the desired program, press the start/stop button to start the selected program, and the display screen will countdown to show the exercise time and the set speed level.After the 15-minute preset program ends, you can click the start button again to start a new round of exercise
4. After exercising, press the power button to turn off the device, and unplug the HHVB plug after each use

Note: Selecting the preset program does not allow for the adjustment of speed and time.The strength of the preset program:

LOW INTENSITY (P1-P2)	MEDIUM INTENSITY (P3-P4)	HIGH INTENSITY (P5)
Suitable for beginners; Low; intensity vibration; promotes blood; circulation and lymphatic drainage	Optimize body posture and joint health; Whole body joint maintenance Optimize body posture and balance ability to advance	Efficient weight loss Efficiently activate muscle fibers throughout the body and increase basal metabolic rate


HHVB Display screen operation

SPEED	PROGRAM	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1
LOW	P01	6	22	12	26	14	24	35	18	32	13	20	29	24	17	6
	P02	18	34	24	38	26	36	47	30	44	25	32	41	36	29	18
MED	P03	30	46	36	50	38	48	59	42	56	37	44	53	48	41	30
	P04	42	58	48	62	50	60	71	54	68	49	56	65	60	53	42
HIGH	P05	54	70	60	74	62	72	83	66	80	61	68	77	72	65	54


Exercise in manual mode
In manual mode, you can freely choose a workout time of 1-20 minutes, with a default of 15 minutes, or choose a speed range of 1-120 levels
How to use remote control to operate manual mode
1. Press the power button to start the machine, and the screen will display "15". After turning on, the default mode is manual mode
2. Press the time increase or decrease button to adjust the exercise time in 1-minute increments, and the selected time will be displayed on the screen
3. Press the start/stop button, and the vibration speed will start from level 1 After starting the exercise, you can press (long press) the speed increase and decrease buttons to adjust the vibration speed 1-120, or adjust the time. The exercise speed will be displayed on the screen
5. After the countdown ends, the vibrating plate will stop moving, or you can press the start/stop button on the remote control to stop the movement
6.After the exercise is over, press the power button to turn off the display screen, and turn the power button on the front of the product to the OFF position, and unplug the plug

HHVB Display screen operation

1.The "time and speed" composite buttons on both sides
Short press to toggle between runtime and vibration speed; repeated presses adjust the selected parameter's value.
2.Power button
Whole machine control switch:
Short press to power on, the display screen lights up and enters standby mode.Short press in working state to directly shut down the entire machine and clear the current set parameters.
3.Start/Stop button (middle button)
Equipment start/stop core button:
After setting the standby time, speed/program, press this key to start the vibration work; During machine operation, short press to pause the device and retain the set parameters.
4.Program key positions
Built-in automatic mode switching:
Press during standby or operation to cycle through the preset fully automatic vibration program of the body (different programs come with segmented speed and timing schemes, no need for manual speed regulation and timing, one-click to enable fixed fat reduction vibration mode).
5.Display Screen Numbers
The digital screen displays the currently selected parameters in real-time (timed minutes/vibration gear value), with 999 as the default initial standby value.

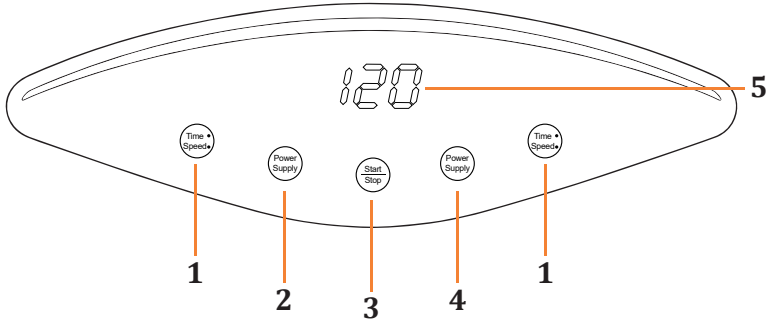

HHVB Remote control operation

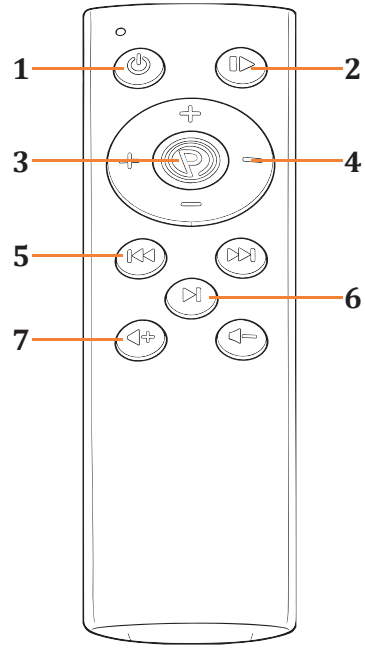

1.Power button: Controls power on/off. Press this button to start the device in standby mode.
2.Single Arrow Play Button: Start / Pause the currently running program. On some models, it can also serve as the "Start" button for manual mode
3.Central "P" Key: Program/Mode Switch Key, used to switch between different preset vibration modes of the machine (such as fat loss, relaxation, body shaping, and other automatic programs)
4."+" key (up/right): increase vibration intensity / gear level
"-" key (down/left): reduce vibration intensity / gear level
5.Double arrow rewind / fast forward: Quickly switch between different preset programs or adjust the program's execution progress
6.Single Arrow Play Button: In some models, it serves as a confirmation button or to restart the paused program
7.Horn + Add/Subtract Key: Adjust the volume of the machine's built-in music

CHOOSING A WORKOUT PROGRAM
You can choose from the preset exercise plans of the product, or create a custom exercise plan in manual mode.To get the best results, alternate between the preset programs and custom workouts created in manual mode to keep your body guessing.Your body tends to adapt to a workout routine over time, so you want to change up your workouts to keep improving your fitness.

HHVB The health benefits of the product



1.Burn More Calories: Vibrate to boost calorie burning, break down fat efficiently and shape your body easily at home.
2.Relieve Joint Stress & Pains: Gentle vibration eases joint soreness and muscle stiffness, relaxes your body, and relieves daily stress.
3.Recover & Regain Strength: Help the body quickly rest and recover after exercise, gradually improving overall endurance and physical fitness
4.Building Core Strength: Deeply stimulate the muscles in core areas such as the waist, abdomen, and trunk, tighten relaxed lines, and create a firm and stable core strength
5.Increase Muscle Strength: Apply to all muscle groups throughout the body, awaken muscle vitality, gradually improve muscle firmness and limb strength
6.Improve Blood Circulation: Dynamic rhythm connects the whole body circulation, accelerates blood flow, improves metabolic disorders, and makes the body lighter and healthier

HHVB Full Body Relaxation



STRAIGHT ARM PLANK



NECK STRETCH



HAMSTRING STRETCH



GLUTE STRETCH



QUAD STRETCH



SQUAT



GLUTE BRIDGE



DIP



SPLIT SQUAT



SIDE LUNGE



REVERSE FLY



ALTERNATE SHOULDER PRESS

Safety Notice and Usage Specification

General safety warning

1.Study the functions and make sure you know how to operate the machine to avoid malfunction or injury

2.1.You may feel slightly dizzy when using it for the first time; this will disappear after several uses.

3.If you have joint problems, hypertension, heart disease, diabetes, are pregnant or extremely obese, consult a doctor before use.

4.Keep children under the age of 12 away from the machine at all times.

Exercising

1.Recommended usage time is 10–20 minutes per session.

2.Only one person at a time may use the device.

3.Wear appropriate clothing and athletic shoes or thick socks when using the machine.

4.Get into position before powering on the machine.

5.This product is for exercising only. Other uses are prohibited.

Attention

1. It is forbidden to operate the machine near the environment where spray products are used and the oxygen supply equipment.

2. Do not step on the pedal forcefully to avoid equipment damage and personal injury.

3. It is prohibited to lean the body weight towards one side of the device.

4. The user's weight should not exceed 440 Lbs (199.5kg).

5. Do not insert foreign objects into the gaps of the device, nor allow them to fall into the device.

6. Do not touch powered devices with wet hands.

7. Do not leave the device unattended during operation; after use, unplug the power cord.