


Dynamo for CJ

This dynamo uses to split element by model line, model line be the blade for separate reference. Model line only can split the target once.

It allows to select Wall, Floor and Beam 3 type element split to 2 elements.

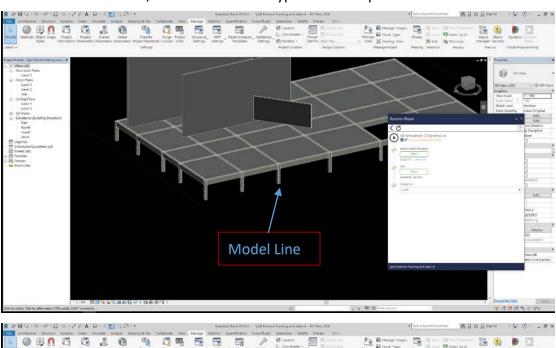


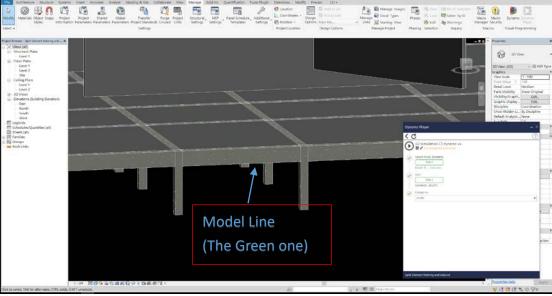

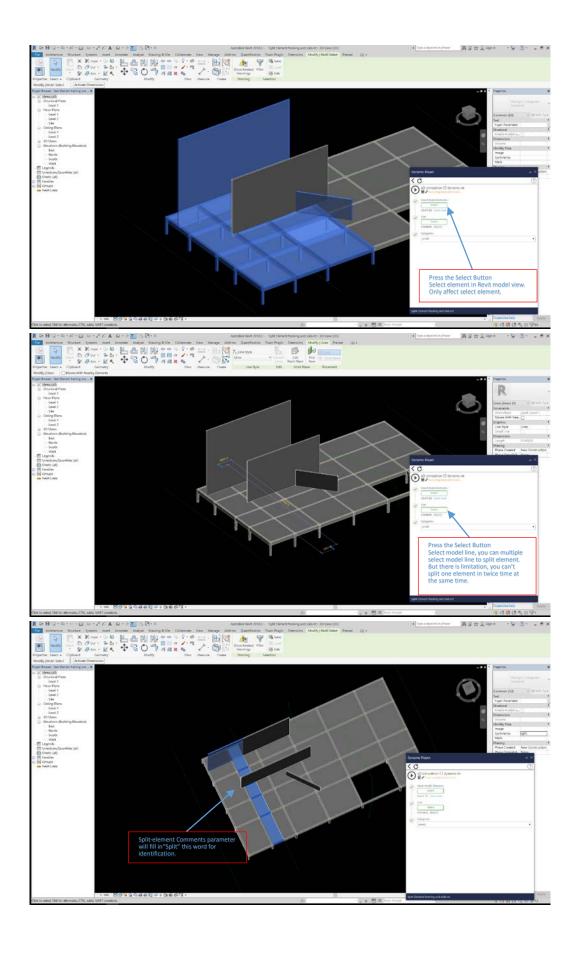

Different Scenario

This dynamo support Spline, please check the following example.

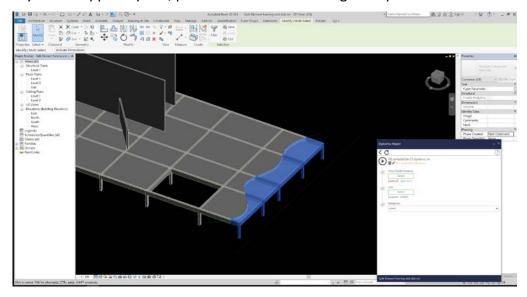

Although split to 2 elements, they will locate on the previous location.

