


Inflateble Bed

Instruction

Manual

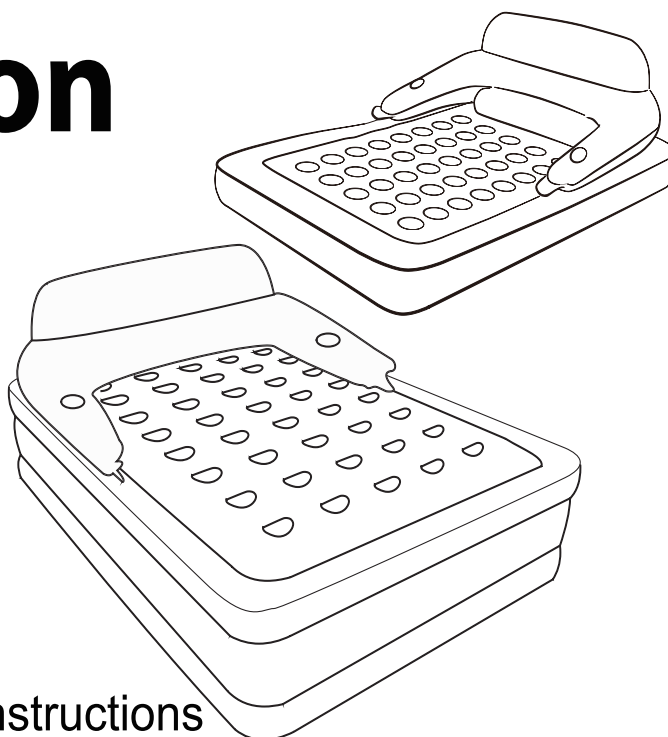

Tables of Contents

- Package Contents
- Safety Instructions
- Inflating And Deflating Instructions
- Folding Instructions
- Troubleshooting Guide
- Cleaning And Maintenance
- Customer Support

**Instant comfort,
no effort required**

READ AND SAVE THESE INSTRUCTIONS

CAUTION



WARNING

CHOKING HAZARD - Small parts.
Not for children under 3yrs

1. PACKAGE CONTENTS

Air Mattress

Air Headboard **(if applicable)**

Pump **(built in or external, depending on your model)**

Air Nozzles

Repair Patch Kit

Storage Bag

Note: Product configurations vary. Please check your specific model for included components.

2. SAFETY INSTRUCTIONS

WARNING

- Keep away from fire sources.Never place any flammable substances on inflatable mattresses,such as aerosol tire repair products,as this may cause fire or explosion.
- This is not a toy.Children must not be left unattended when using inflatable mattresses.
- If a storage bag is included,keep it away from infants and children.The storage bag is not a toy.When not in use,fold the bag neatly and store it in a place out of reach of children.
- Do not walk,stand,jump,or use the air mattress as a trampoline.
- Do not use on or near water.This is not a life raft.
- Ensure there is sufficient space between the mattress and surrounding objects to prevent pinching.
- Ensure the area is flat,smooth,even,and free of sharp objects to prevent puncturing the mattress.
- Keep pets away from the inflatable mattress,as they may puncture the surface.
- Avoid lying on the edges of the inflatable mattress,as the edges have less support than the center.

- Do not block the air holes or insert any objects into them.
- To reduce the risk of electric shock,do not expose this product to rain.Store it indoors.
- This product is suitable for children aged 8 and above,as well as individuals with physical,sensory,or mental limitations,or those lacking experience and knowledge in using the product,provided they have received supervision or guidance on safe use and are aware of the associated risks.
- Children should not play with this product.Cleaning and user maintenance should not be performed by children without supervision.

3. INFLATING AND DEFLATING INSTRUCTIONS

Models:Air mattress with Built-in Pump

Mattress Inflation

Press the "Inflate" button for one-touch inflation. While inflating, monitor the mattress to avoid over-inflation. Press the "Off" button to stop inflation or deflation. Press and hold the "Off" button to add a small amount of air.

Headboard Inflation (if applicable)

Remove the pump from the mattress. Attach the appropriate pump nozzle, connect to the headboard valve and inflate quickly.

Mattress Deflation

Press the "Deflate" button for one-touch deflation, or open the spare valve for slow deflation.

Headboard Deflation (if applicable)



Open the valve to deflate slowly, or remove the pump from the mattress, attach the nozzle and connect to the headboard valve, then press the "Deflate" button for one-touch deflation.

Notes:

To ensure safe transport, the built-in pump is not fully charged before shipment. Please fully charge the pump before first use.For proper pump operation, do not run the pump continuously for more than 5 minutes. If the pump overheats due to prolonged use, the power will automatically cut off and reset. Allow the motor to cool for at least 5 minutes before


using again. If the mattress will not be used for a long time, we recommend charging the built-in pump every 3 months.

How to inflate or deflate

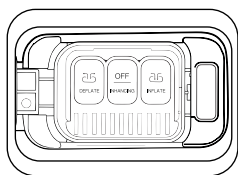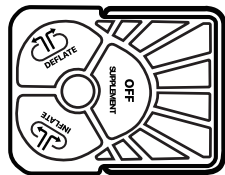


Built-in Pump


OR

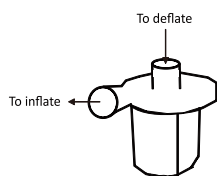

External Pump

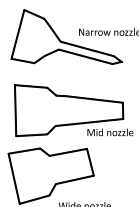

Air Nozzles

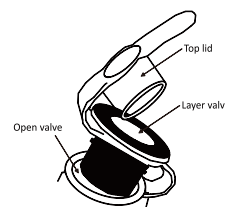

Double-Sealed
Air Valve

Model: Air Mattress with External Pump

Mattress Inflation

Firmly insert the selected nozzle into the inflation port of the external pump. Connect it to the mattress valve, then turn on the pump to inflate quickly. Monitor the mattress to avoid over-inflation.

Headboard Inflation (if applicable)

Attach the nozzle to the pump, connect to the headboard valve, then turn on the pump to inflate quickly.

Mattress Deflation

Firmly insert the selected nozzle into the deflation port of the external pump. Connect it to the mattress valve, then turn on the pump to quickly release air.

Headboard Deflation (if applicable)

Attach the nozzle to the pump, connect to the headboard valve, then turn on the pump to quickly release air.

Notes:

After inflation is complete, quickly remove the pump nozzle and tighten the sealing plug of the mattress valve. Ensure the valve is fully closed to prevent air leaks. For proper pump operation, do not run the pump continuously for more than 5 minutes. If the pump overheats due to prolonged use, the power will automatically cut off and reset. Allow the motor to cool for at least 5 minutes before using again.

4. FOLDING INSTRUCTIONS

If you are using a twin/single bed start from step 4.3

4.1 Ensure the mattress is flat and fully deflated


4.2 Fold over a side by one quarter

4.3 Fold over the same side again by one quarter

4.4 Do the same as steps 4.2 and 4.3 on the other side

4.5 Fold from the end side and carefully pushing out any remaining air as you fold toward the deflation valve

4.6 Put into bag

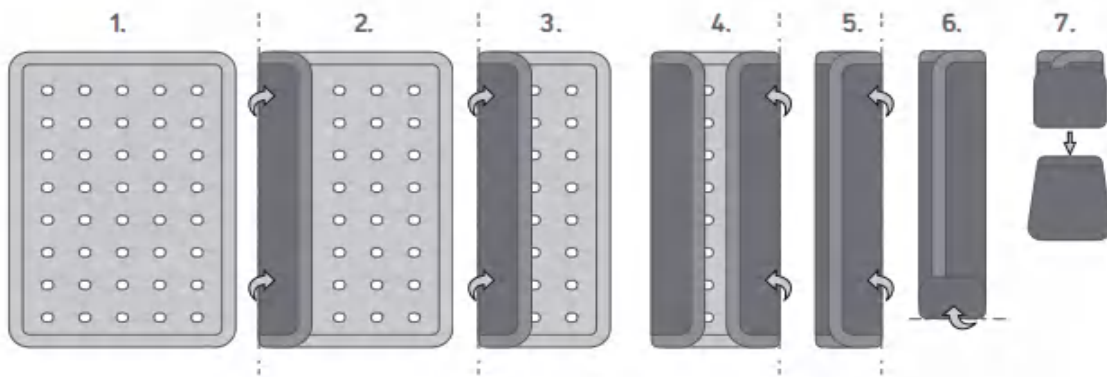

5. TROUBLESHOOTING GUIDE

5.1 Air mattress gets soft after inflate

5.1.1 Air mattress material may stretch during first use and air inside of the air mattress may expand and contract with varying temperatures potentially leading to reduced pressure inside of the air mattress. If this occurs, simply add more air using the pump to achieve desired firmness.

5.1.2 Carefully check whether the valve sealing plug is tightened, and whether the inner sealing ring of the valve is deformed or damaged. If the sealing plug is not tightened, tighten it again.

5.1.3 It is normal for the air mattress to lose a small amount of air after long term use, supplement the mattress each day with 10-15 seconds of air to maintain its firmness.

5.2 Air pump does not work

5.2.1 Electric Air Pump: Check whether the power plug is properly inserted, whether the power socket is energized, whether the power cord of the air pump is damaged or broken.

5.2.2 Built in Battery Pump: Check whether the battery pump is

charged, if the internal air pump defective, remove it from the air bed and contact service center for an internal air pump replacement.

5.2.3 Overheat protection: Let the pump rest for more than 5 minutes to cool before resume the use of the pump.

5.3 How to locate the leak

Make sure the mattress is fully inflated before inspecting. Mark the leak with a permanent marker once you locate it.

5.3.1 Locate the leak by listening. Place your ear 5-7cm/2-3in away from the mattress. Press upon the air mattress which is fully inflated until you find the source of the hissing sound.

5.3.2 Locate the leak by wet hand. Press and move your wet palm around the surface of the fully-inflated mattress and feel for the escaping rush of air.

5.3.3 Locate the air leak by using soap bubbles. Add a little liquid dish soap to a spray bottle of warm water. Mix thoroughly and spray around the whole mattress. Escaping air will cause bubbles to form on the surface.

Tips: Spray the surface of the mattress systematically. The leak will reveal itself with soap bubbles. Don't worry about getting soap on the mattress. This can be wiped off later and the mattress will dry.

5.4 How to repair accidental punctures

5.4.1 Completely deflate the mattress before repair your mattress, it must be 100% dry.

5.4.2 Clean and dry the area around your leak. Gently press the center with your thumb to push out any wrinkles. Use the glue in the repair kit, apply an even layer around the hole, then attach the repair patch, press it flat.

5.4.3 Place a heavy object on top of the patch and wait for the glue to dry completely (about 24 hours).

Note: If the above solutions cannot resolve your issue, please contact us via email: yiping@jeasong.com, and we will assist you promptly.

6. CLEANING AND MAINTENANCE

6.1 Fold the air mattress gently to prevent sharp bends, corners, and creases that may cause the damage.

6.2 Make sure the mattress clean and dry before storage.

6.3 Place the mattress in its storage bag and store in a cool and dry location away from chemicals and heavy or sharp objects.

6.4 Use soapy water to clean the surface of the mattress. Don't use any chemicals, solvents or harsh detergents.

6.5 For better protection of this product, never unfold or inflate the airbed in temperatures below freezing, avoid extensive exposure to the sun and protect from contact with sharp objects and rough ground.

6.6 Avoid pounding and jumping to prevent damage to the airbed material.

7. CUSTOMER SUPPORT

7.1 1-Year Limited Warranty

7.2 Lifetime Support

7.3 24-Hour Fast Response

7.4 Replacement for quality issues

Please contact us through the platform where you purchased the product or via email at ***yiping@jeasong.com***.

Whether you need help with setup, require replacement parts, or have any questions about product performance, our dedicated support team is ready to assist you 24/7.

We promise to respond quickly and provide the best solution to ensure your complete satisfaction. Your happiness with our product is our top priority.

Other Inflatable Products

