


JEASONG[®]

Inflatable sofa bed guide

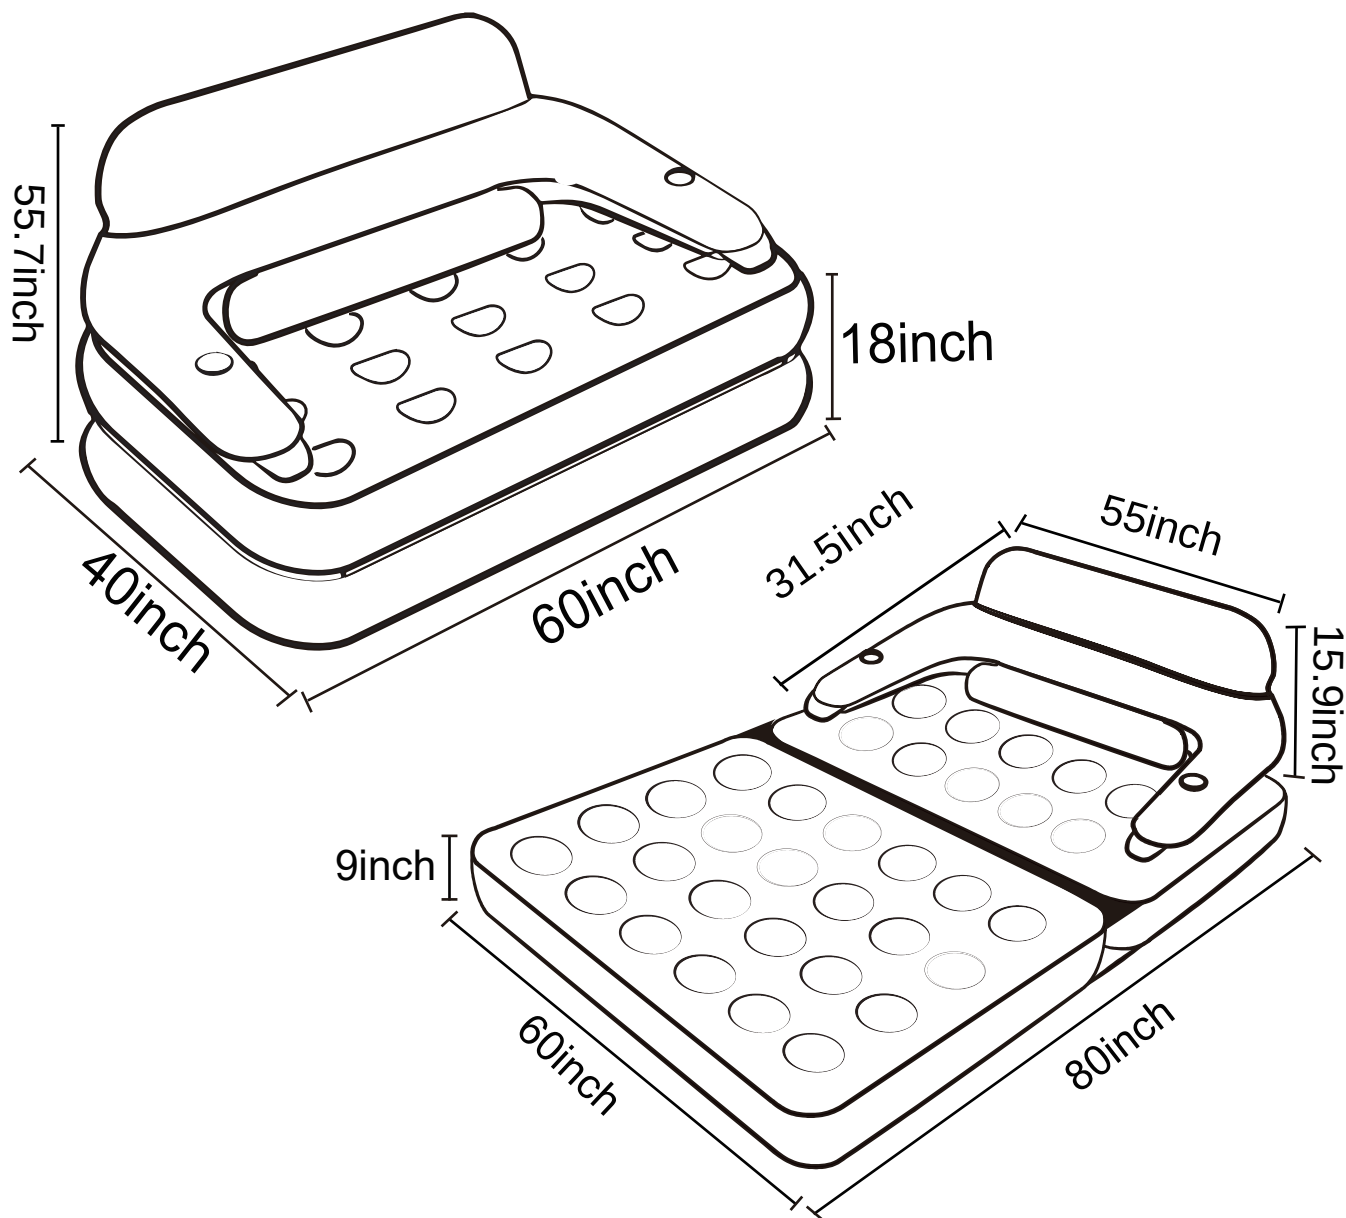

Inflatable sofa bed Size


CAUTION



WARNING

CHOKING HAZARD-Small parts.
Not for children under 3yrs


Backrest Installation Tutorial

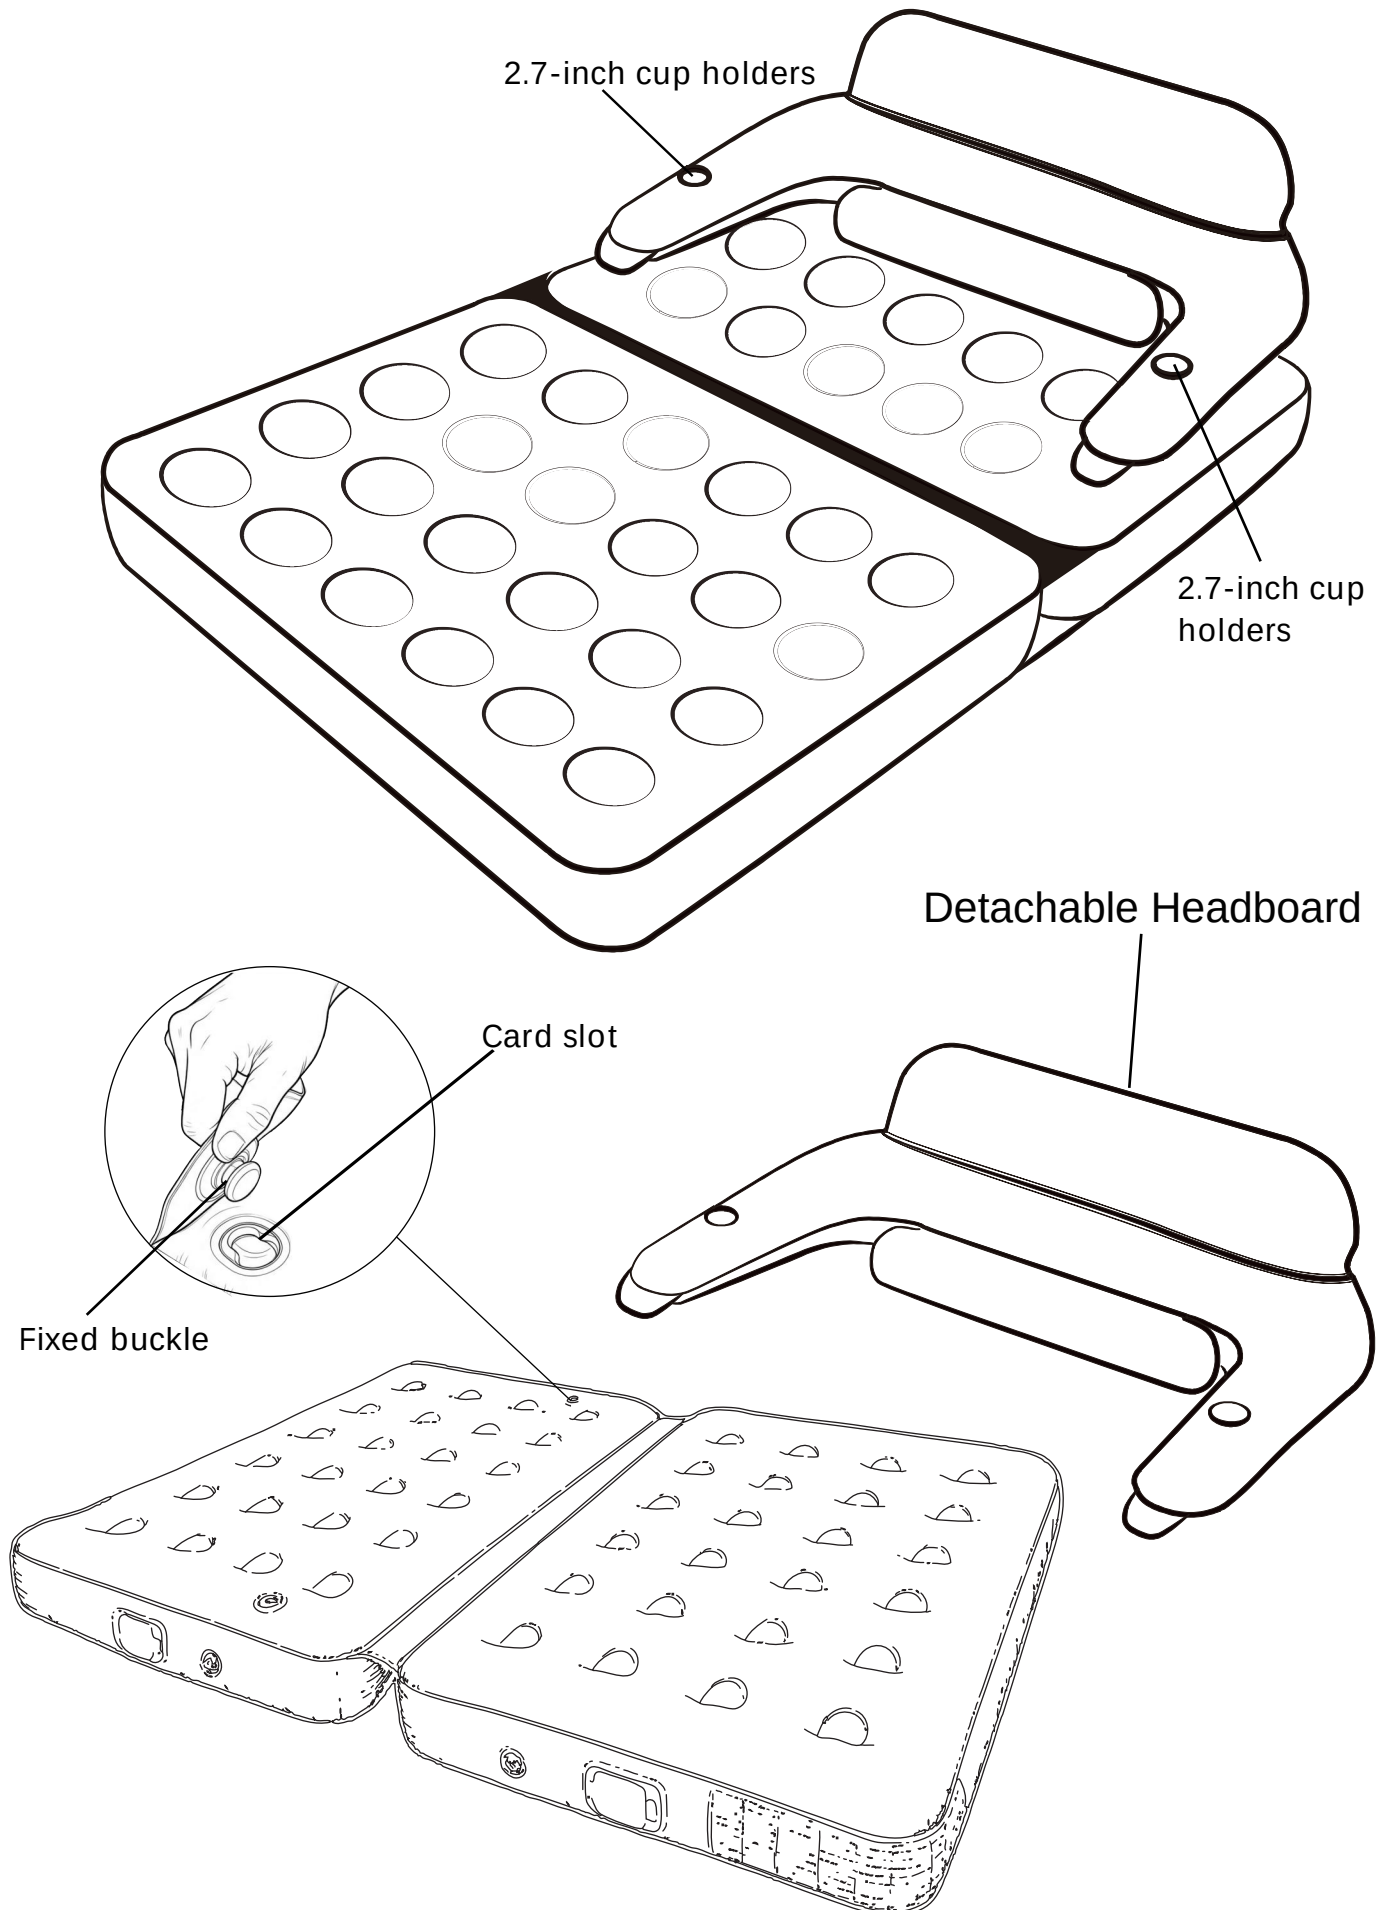

SET UP GUIDE VALVE USAGE GUIDELINES




Built-in Pump




Nozzles



Carrying bag

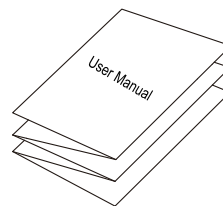

User Manual

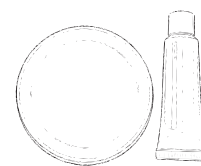

Repair patch



NOTE: Drawings for illustration purpose only. May not reflect actual product.
Not to scale.

SET UP GUIDE

Your air bed has a built in air pump as well as a 2 stage valve, both for optional inflation and deflation.

The valve is composed of three parts:


- ① Upper cap
- ② Middle valve with valve lip
- ③ Bleeder valve

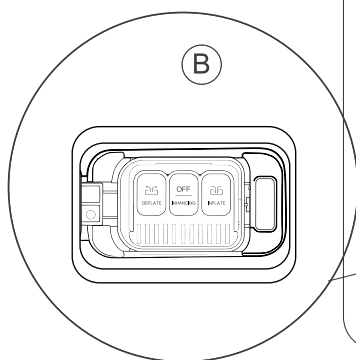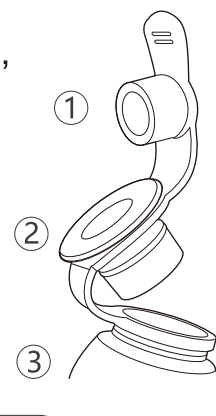

(A) 2 Stage Valve

(B) Built-in Air Pump



VALVE USAGE GUIDELINES

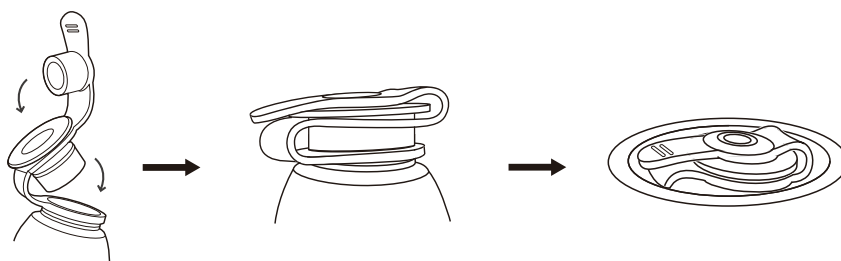


Electric Pump How To Use

Due to transportation reasons, the electric pump needs to be charged for 2 hours before first use.

1 Please make sure the floor is clean and free of sharp objects that may puncture the inflatable bed.

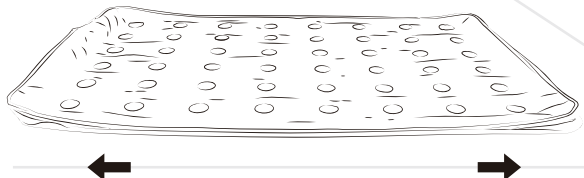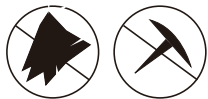


2 Before inflating, please ensure that the two-stage valve covers are tightly closed.

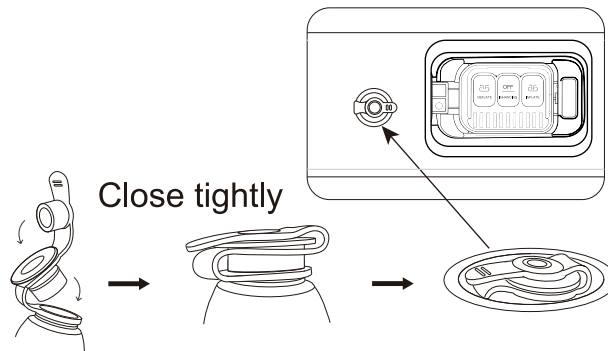


Deflate


Inflate

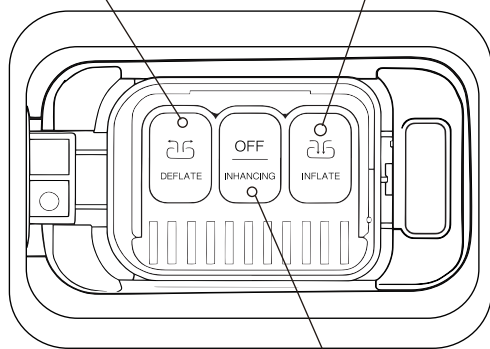


off

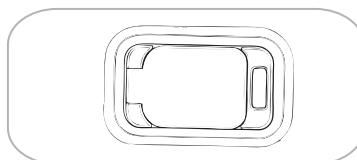


A. Open the air pump cap

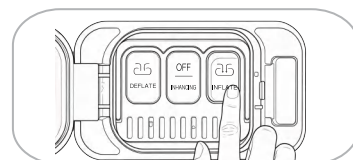


B. Press INFLATE to start inflating

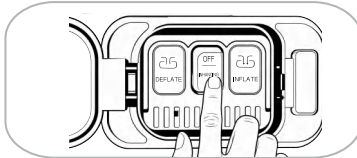


C. Press OFF to stop inflating when full

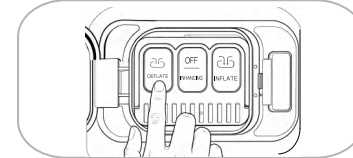

D. Press DEFLATE to extract air for storage

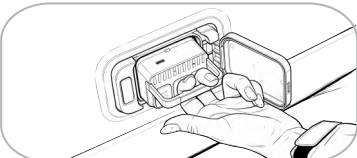

E. The air pump can be removed for battery charging

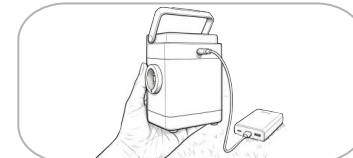


F. Type-C charging port



This inflatable bed comes with a valve to support outdoor inflation without 110V power supply with a 2600mAh handheld inflatable pump. Please refer to the following inflation steps:

1 Please make sure the built-in pump is off before using the external pump.

OFF

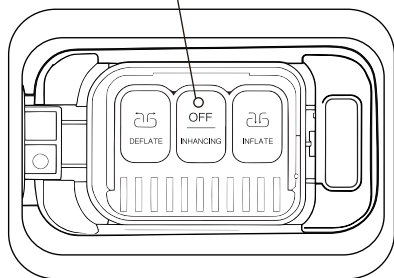


2 Inflate the bed to nearly 80% using the first layer of valves.

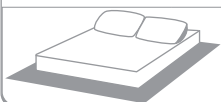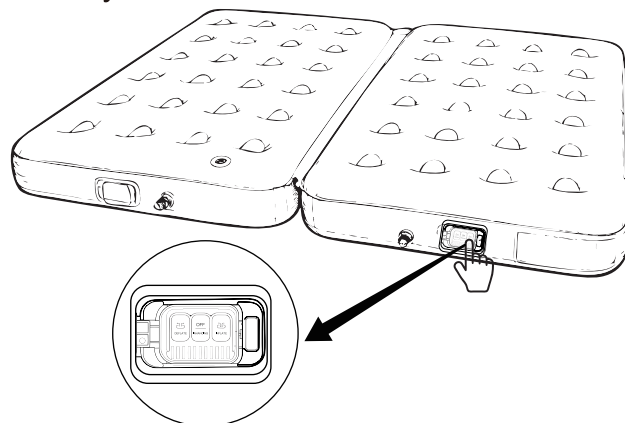


It's best to use your air mattress on a carpet—this cuts down on the friction noise between the mattress and the floor.

DEFLATION


- 1** Note that the valve needs to be closed when releasing air so that the electric pump can quickly remove the internal air.

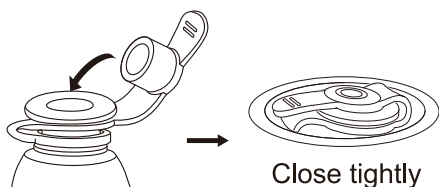

- 2** 100%

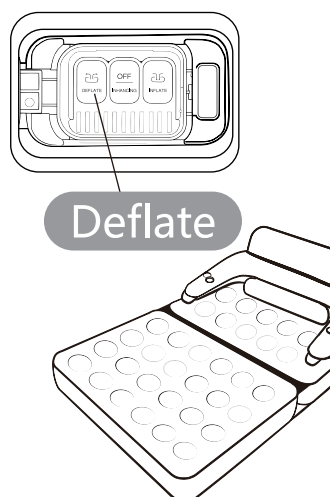

- 3**

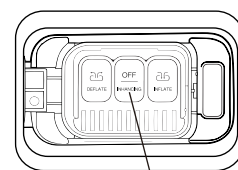


After 3-4 minutes


FOLDING INSTRUCTIONS

Steps for storage: Inflatable products are not resistant to folding, and excessive folding is not recommended when there is sufficient storage space.


1

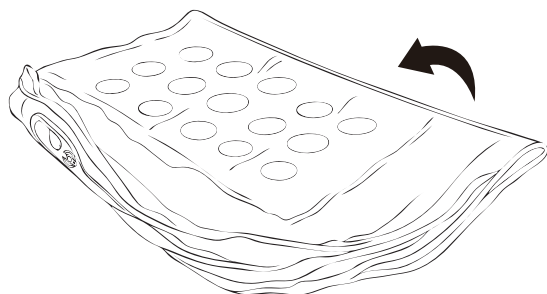


2

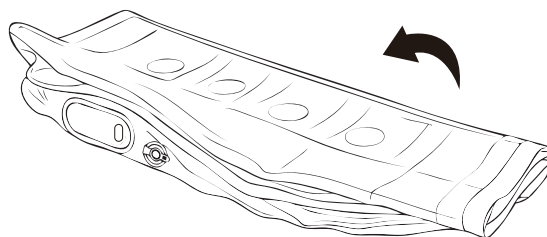


3

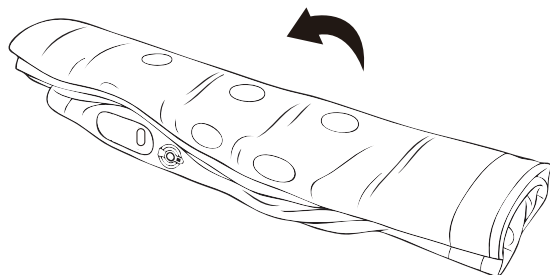


4

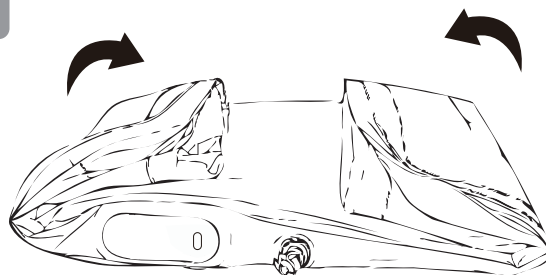


5

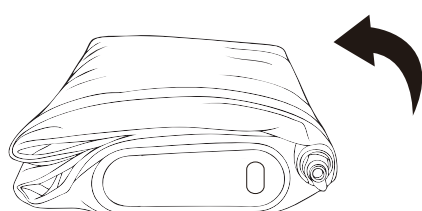

6

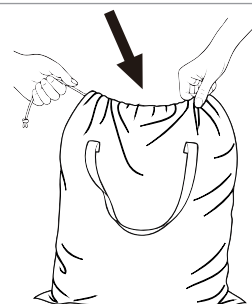

First inflation

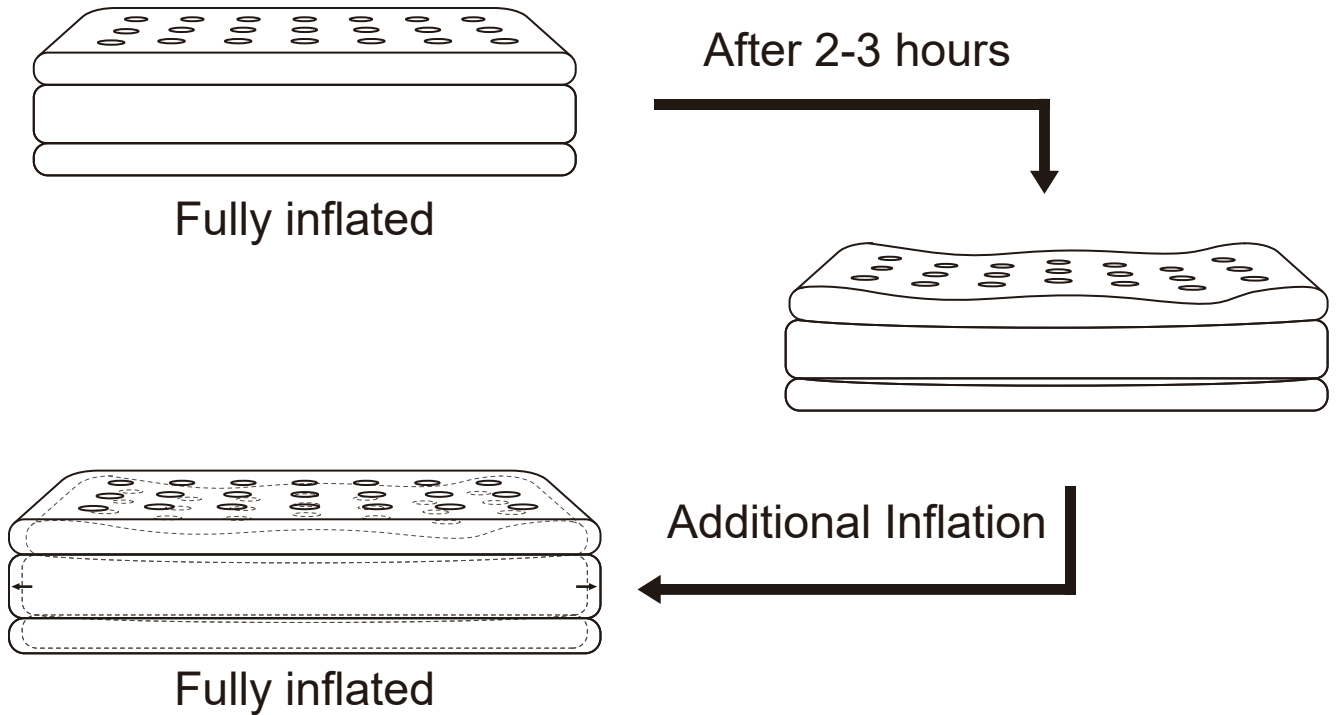

Tips: Before using your bed

- When using the bed for the first time, please leave the bed for **2 hours** after inflation to let the material stretch out and then **top up** the air.
- After inflation, make sure the pump is off and the manual valve is fully closed.
- After long-term use, you may find that the material becomes more stretched and you may need to inflate the bed for additional time before using it.
- All inflatable beds have some natural leakage. Top up the air **once per week** to keep the same level of firmness.