

HON.PREC

Multi EP

RD5 lfor
2025.05.08



© Hon. Precision, Inc. All Rights Reserved.

Multi EP Control

Multi EP 參數設定

Handler System

Com Port
Handler

Customer Code
Loader / Unloader

ION Fan
In & Out Arm

Search Function
Index Items

Shuttle

Other Items

Electron Pressure

Un Install

Install (Analog)

Install (Digital)

Install (Digital and Encoding)

PISO ET-7226

Two EP

EP Setting for Output

Max KPA: 499

Min MPA: 0.001

EP Setting for Feedback

Max VDC: 5.013

Min VDC: 0.968

Index Pressure Type

Normal

240KG

120KG

500KG

260KG

400KG

360KG

160KG

640KG

800KG

Weight Calibration

Old Method

New Method

Dual EP Control

Un Install

Normal

Individual EP

Multi EP (Max Qual Site)

Ind. EP Count: 16

Heater Type

TC401

Panasonic KT4H

Omron E5DC

No Heater

DTK4848

Heater Counts

4 Heaters

16 Heaters

16 Heaters with Omron EJ1

32 Heaters with Omron EJ1

32 Heaters with KT4H

16 Heaters with DTME08

32 Heaters with DTME08

ATC Mode

Un Install

ATC 6.0

ATC 3.0 (Air Cooling)

Silicon Type

Hontech Type

No Chamber

NewATCSystem

WinWay

ATC Setting

IP: 172.16.8.90

Port: 5001

Use Heat: 4

RTC Temp.

Un Install

0

1

2

RTC Temp No

0

1

2

Dut Heater Count

1 EA

4 EA

2 EA

Clean Air

Un Install

Install

L/B Temp

Un Install

Install

Index Vacuum Type

Positive (+)

Negative (-)

Index ESD Temp

Un Install

Install

Index Motor Type

Panasonic A4

Mitsubishi

Panasonic A5

One Touch Docking

Type 0 (2 Sensor)

Install Software control

Install Hardware control

SLK and Socket Clamp

Un Install

Install

Air Conditioner

Un Install

Install

Install with RS232

I/O Change Toque

Un Install

Install

ATC Heat Gun

Un Install

Install

Use Fine Pitch

Un Install

Install

Index Arm Motor Axis

Use 4 Axis

Use 3 Axis

High Temperature Set 150

Un Install

Install

High Temperature Set 175

Un Install

Install

Heat Gun

Un Install

Install

Install with CDA Function

Hot Gun Flow

Un Install

Install

Gun 1 ChannelNo: 0 LineNo: 0

Gun 2 ChannelNo: 0 DevNo: 0

User Define Index Z SafePos

User Define Index Z SafePos Enable

200 mm

User define max contact height

User define maximum contact height

-135.0 mm

Dew Point Detect

Un Install

CAEL-DPA-136-2SA(-60~+60)

Tekhn TK-80 TR(-80~+20)

Load

Save

Close


Search Customer Code



Multi EP Control

APAX 指撥開關設定

(設定完成需斷電，目前是獨立電源需關閉機台上延長線的電源，有些配線不在延長線上，目前暫先斷大電處理)

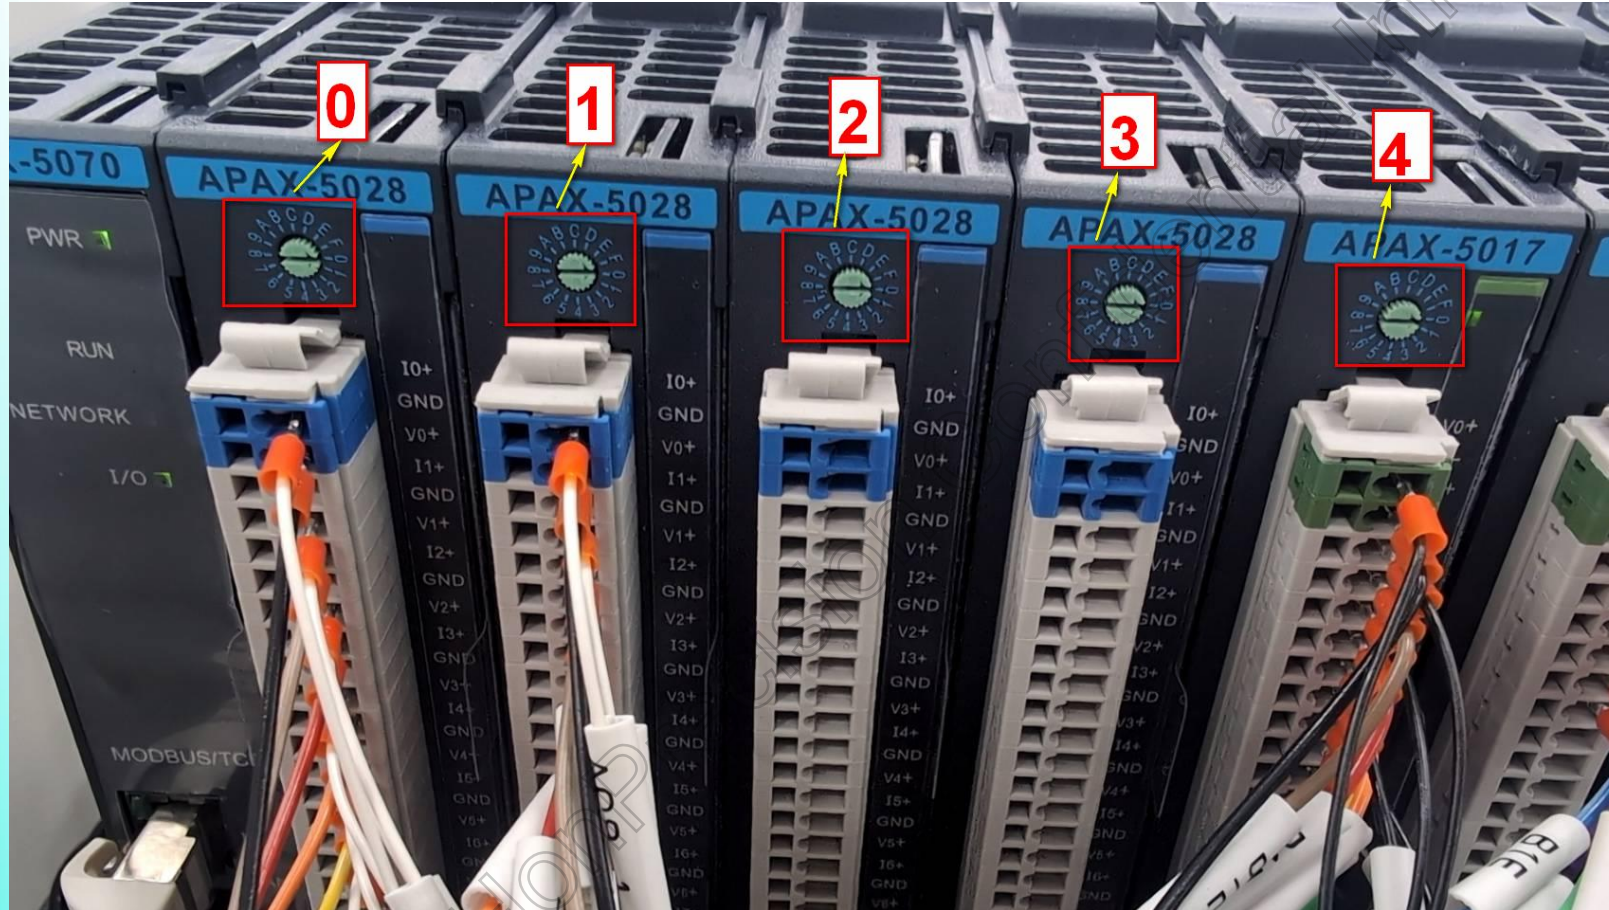


指撥開關由左到右 依序為
0、1、2、3、4、5、6、7



Multi EP Control


APAX IP 設定 (IP 設定 172.16.8.112)

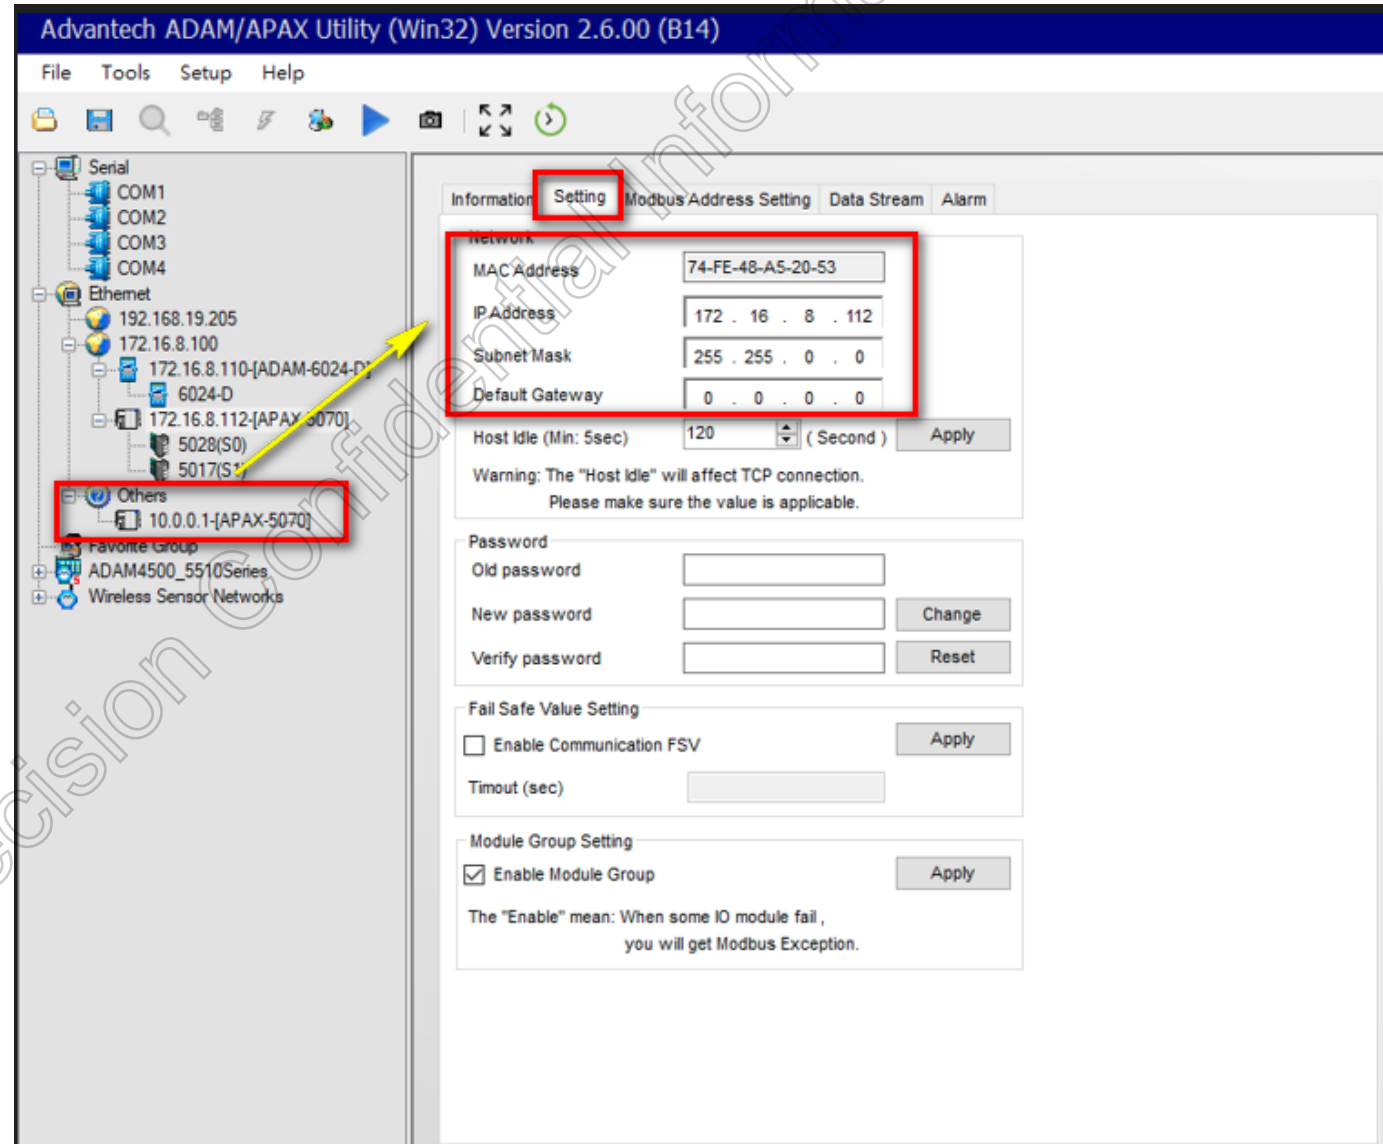

Multi EP Control

APAX 模組確認

5028 X4、5017 X4

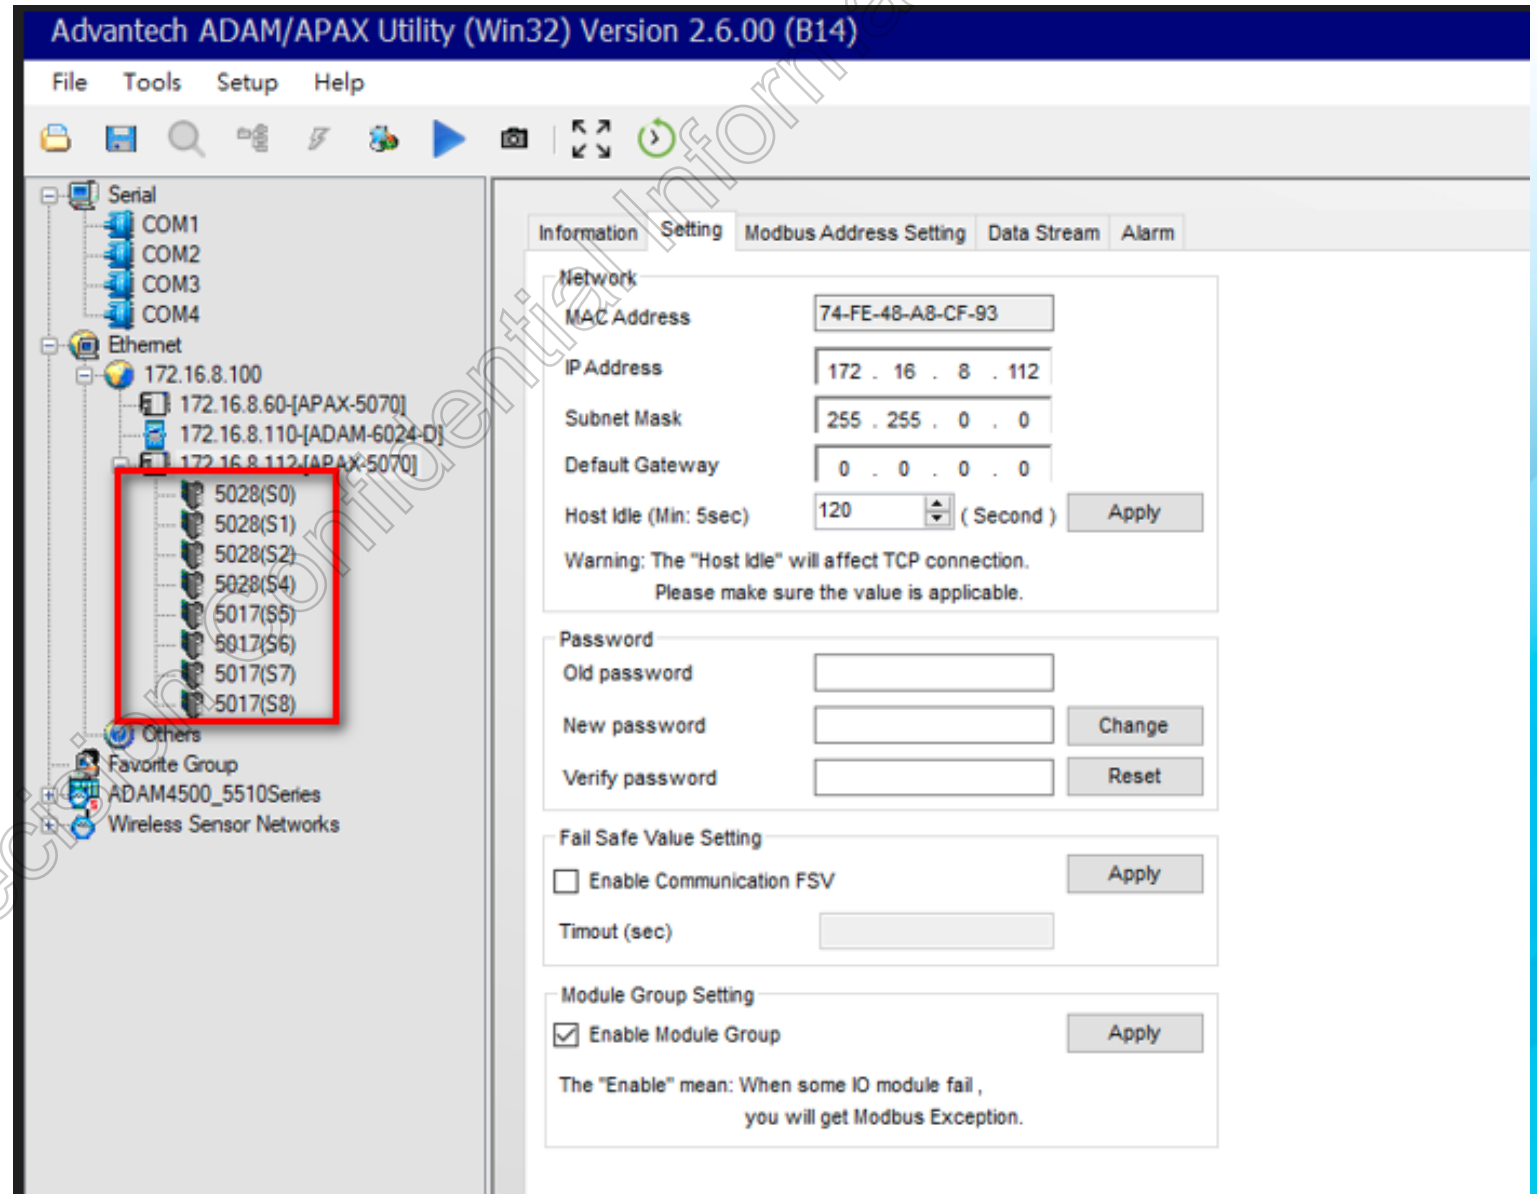

Multi EP Control

APAX Range 設定

1. 點選AO
2. 勾選 Apply to All Channels
3. Range 選擇 4-20mA
4. 按下Apply 設定
5. 確認所有CH Range 均為4-20mA
6. 依序選擇APAX IO 卡 設定所有卡片

The screenshot shows the APAX-5028 software interface. On the left, a tree view lists various modules, including APAX-5070 and APAX-5070 IO cards. A red box highlights the APAX-5070 IO cards, with a yellow arrow pointing to the main configuration panel. The main panel shows the 'Selected Items' section with 'Apply to All Channels' checked and 'Range' set to '4~20 mA'. A red box highlights this section, with a yellow arrow pointing to the 'Channel Information' table at the bottom. The table lists channels 0 through 7, all with a 'Range' of '4~20 mA'. A red box highlights the 'Range' column in the table, with a yellow arrow pointing to the 'Range' dropdown in the 'Selected Items' section. A red box at the bottom right contains the text '確認所有CH Range 已修改成4-20mA'.

依序設定APAX IO卡

確認所有CH Range 已修改成4-20mA



Multi EP Control

切換EP 來源至 EP (Individual)



Multi EP Control

APAX 5028(S0) Arm1 充氣驗證

1. 點選AO
2. 依序點選下方CH
3. 調整Value 拉霸至最大值並按下Output
4. 確認Multi EP 對應的位置是否有輸出
5. 調整Value 拉霸至最小值並按下Output
6. 重複 2-5 步驟驗證CH0~CH7

Advantech ADAM/APAX Utility (Win32) Version 2.6.00 (B14)

File Tools Setup Help

Serial
COM1
COM2
COM3
COM4

Ethernet
172.16.8.100
172.16.8.60-[APAX-5070]
172.16.8.110-[ADAM-6024-D]
172.16.8.112-[APAX-5070]
5028(S0)
5028(S1)
5028(S2)
5028(S4)
5017(S5)
5017(S6)
5017(S7)
5017(S8)

Others
Favorite Group
ADAM4500_5510Series
Wireless Sensor Networks

APAX-5028 Locate Enable

Module Information AO

☐ Hide Setting Panel ☐ Show Raw Data

Selected Items

☒ Apply to All Channels

Range: 4~20 mA Apply

Channel: 0

Value: 4.000 Output

Calibration Trim Zero Trim Span

Safety Function ☐ Enable Set Value

4 20 Set Startup Set Safety

Channel Information

Type	Ch	Modbus Addr	Value	Range	Safety Value
AO	0	40001	4.000	4~20 mA	Disable
AO	1	40002	4.000	4~20 mA	Disable
AO	2	40003	4.000	4~20 mA	Disable
AO	3	40004	4.000	4~20 mA	Disable
AO	4	40005	4.000	4~20 mA	Disable
AO	5	40006	4.000	4~20 mA	Disable
AO	6	40007	4.000	4~20 mA	Disable
AO	7	40008	4.000	4~20 mA	Disable

Arm1 Dual 1
Arm1 Dual 2
Arm1 Site 1
Arm1 Site 2
Arm1 Site 3
Arm1 Site 4
Arm1 Dual 3
Arm1 Dual 4



Multi EP Control

APAX 5028(S1) Arm2 充氣驗證

1. 點選AO
2. 依序點選下方CH
3. 調整Value 拉霸至最大值並按下Output
4. 確認Multi EP 對應的位置是否有輸出
5. 調整Value 拉霸至最小值並按下Output
6. 重複 2-5 步驟驗證CH0~CH7

Advantech ADAM/APAX Utility (Win32) Version 2.6.00 (B14)

File Tools Setup Help

Serial
COM1
COM2
COM3
COM4

Ethernet
172.16.8.100
172.16.8.60-[APAX-5070]
172.16.8.110-[ADAM-6024-D]
172.16.8.112-[APAX-5070]
5028(S0)
5028(S1)
5028(S2)
5028(S4)
5017(S5)
5017(S6)
5017(S7)
5017(S8)

Others
Favorite Group
ADAM4500_5510Series
Wireless Sensor Networks

APAX-5028 Locate Enable

Module Information AO

☐ Hide Setting Panel ☐ Show Raw Data

Selected Items

☒ Apply to All Channels

Range: 4~20 mA Apply

Channel: 0 Value: 4.000 Output

Calibration Trim Zero Trim Span

Safety Function ☐ Enable Set Value

Set Startup Set Safety

Channel Information

Type	Ch	Modbus Addr	Value	Range	Safety Value
AO	0	40033	4.000	4~20 mA	Disable
AO	1	40034	4.000	4~20 mA	Disable
AO	2	40035	4.000	4~20 mA	Disable
AO	3	40036	4.000	4~20 mA	Disable
AO	4	40037	4.000	4~20 mA	Disable
AO	5	40038	4.000	4~20 mA	Disable
AO	6	40039	4.000	4~20 mA	Disable
AO	7	40040	4.000	4~20 mA	Disable


Arm2 Dual 1
Arm2 Dual 2
Arm2 Site 1
Arm2 Site 2
Arm2 Site 3
Arm2 Site 4
Arm2 Dual 3
Arm2 Dual 4



Multi EP Control

獨立EP 功能開啟

1. 開啟獨立E(需切換EP來源至EP (Individual))
2. 關閉獨立EP需切換EP來源至EP (Common)

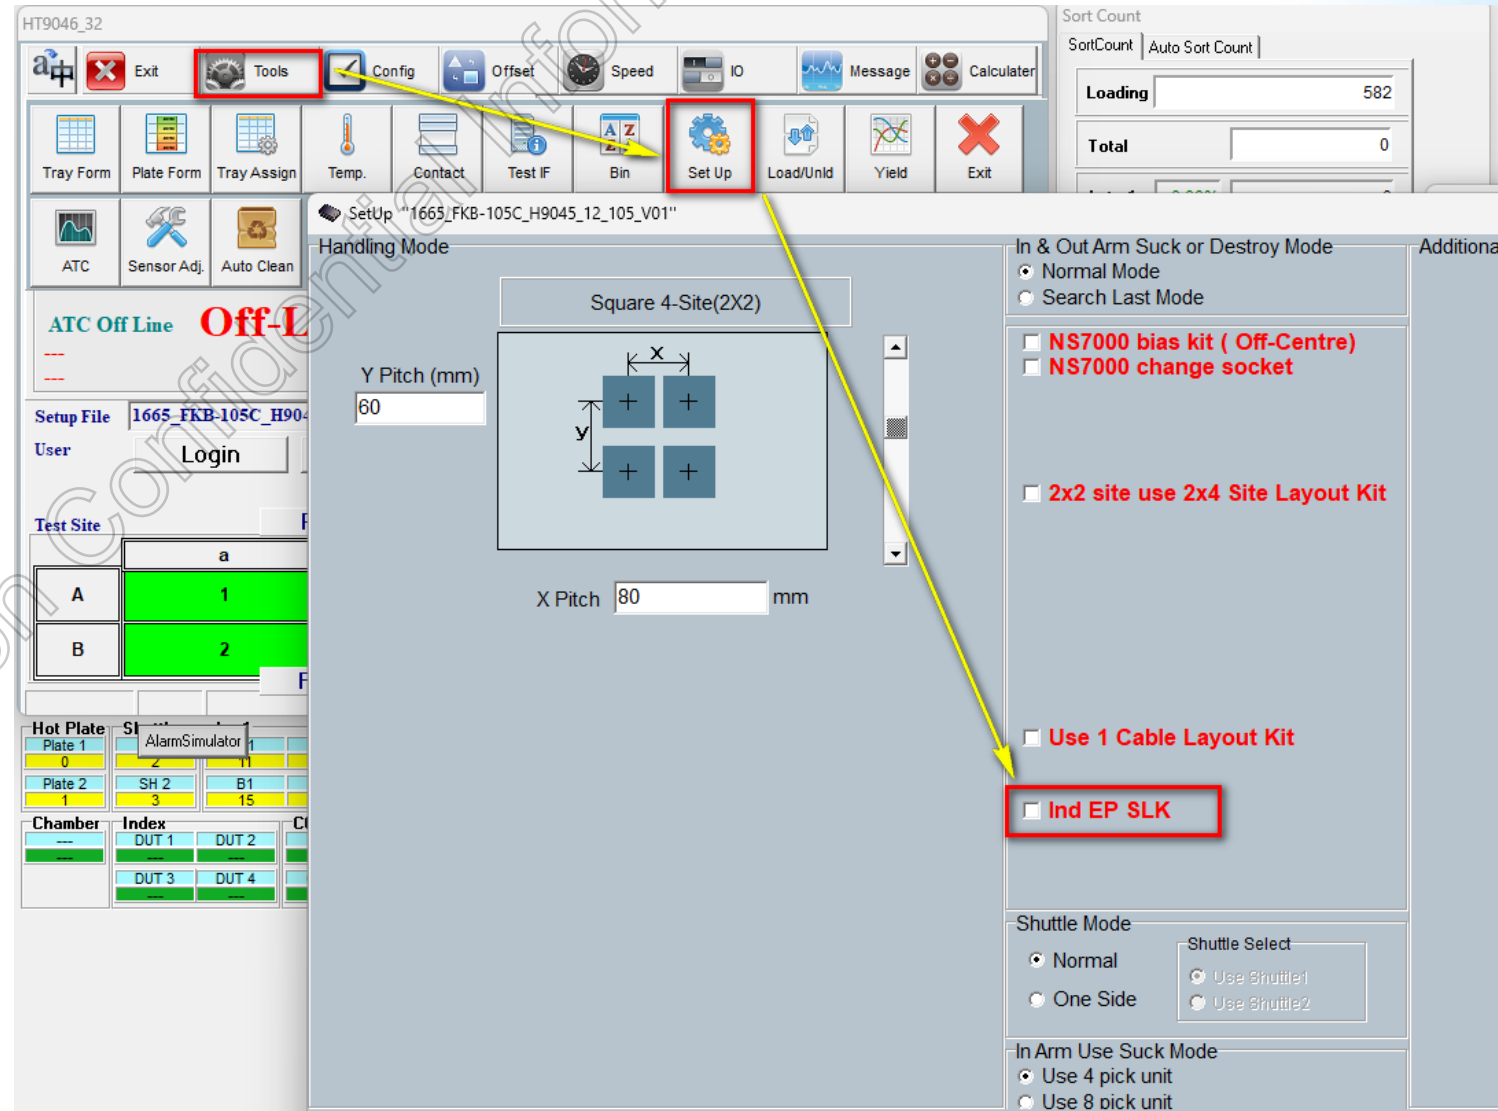

Multi EP Control

獨立EP Contact Force Calibration

Contact Force Setting

EP Calibration **EP load rate one by one** **外缸徑EP** Die Force One By One Kit

Load rate of 28 mm Arm1_1
28 mm 1_1: 1 28 mm contact offset 1_1:

Arm1 Site 1

Load rate of 28 mm Arm1_2
28 mm 1_2: 1 28 mm contact offset 1_2:

Arm1 Site 2

Load rate of 28 mm Arm1_3
28 mm 1_3: 1 28 mm contact offset 1_3:

Arm1 Site 3

Load rate of 28 mm Arm1_4
28 mm 1_4: 1 28 mm contact offset 1_4:

Arm1 Site 4

Load rate of 28 mm Arm2_1
28 mm 2_1: 1 28 mm contact offset 2_1:

Arm2 Site 1

Load rate of 28 mm Arm2_2
28 mm 2_2: 1 28 mm contact offset 2_2:

Arm2 Site 2

Save Exit



Multi EP Control

獨立EP Dual Force Calibration

Contact Force Setting

EP Calibration EP load rate one by one ContactHighOffset **Die Force One By One Kit** **內缸徑EP**

DieForce One By One Load rate of 20 mm Arm1_1

20 mm 1_1: 1 20 mm contact offset 1_1: 0

Arm1 Dual 1

DieForce One By One Load rate of 20 mm Arm1_2

20 mm 1_2: 1 20 mm contact offset 1_2: 0

Arm1 Dual 2

DieForce One By One Load rate of 20 mm Arm1_3

20 mm 1_3: 1 20 mm contact offset 1_3: 0

Arm1 Dual 3

DieForce One By One Load rate of 20 mm Arm1_4

20 mm 1_4: 1 20 mm contact offset 1_4: 0

Arm1 Dual 4

DieForce One By One Load rate of 20 mm Arm2_1

20 mm 2_1: 1 20 mm contact offset 2_1: 0

Arm2 Dual 1

DieForce One By One Load rate of 20 mm Arm2_2

20 mm 2_2: 1 20 mm contact offset 2_2: 0

Arm2 Dual 2

Save Exit





HON.PREC
WWW.HONPRECISION.COM

Taichung Headquarters

No. 11, Ln. 758, Sec. 3, Zhongqing Rd. Daya Dist., Taichung City, Taiwan 42862

Mail: sales@hontech.com.tw TEL: 886-4-25608752 / FAX: 886-4-25608755